

When servicing this unit use only genuine General Power OEM replacement parts that are specifically designed and engineered for this particular model.
Do not operate unit unless all parts are properly attached and in good working order.
Parts are right or left hand as viewed from the operator's position.
Specifications are subject to change without notice.