

		Qty	Description Description
	33311B		Cylinder (Incl. 2, 3, 4 & 41)(2-5/8" Bore)
	27652		Pin, Dowel
	27642		Pipe plug, 1/4-18
	27876B		Seal, Oil
5	29536		Blower Housing Baffle (Without electric starter knock out) (Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
6	650561		Screw, 1/4-20 x 5/8"
7	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
	30813		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
11	27884		Gear, Crankshaft (Used on early production) This
			gear is serviceable ONLY when it is pinned to the crankshaft.
13	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
	34533		Piston, Pin & Ring Set (.020" OS)
13A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
13A	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
13A	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	31295C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034 33156		Lifter, Valve Camshaft
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	30684		Gasket Cylinder Cover
	31303B		Cover, Cylinder (Incl. 26 & 34)
	31546		Bushing, Crankshaft
26	28427		Seal, Oil
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642		Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A 35479		Spool, Governor Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	32783		Intake Valve (Std.)
	32784		Intake Valve (1/32" OS)
	27878A		Exhaust Valve (Std.)

Dof #	Part Number C	\ +\./	Description
		λιλ	•
	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
	27881		Spring, valve
	32581		Cap, Lower valve spring
46	33876		Gasket, Stator
47	650489		Screw, 1/4-20 x 5/8"
48	34240		Ground Wire
	30884		Key, Flywheel
	28938C		Gasket, Cylinder head
	30938A		Head, Cylinder
	33636		Resistor Spark Plug (RJ-8C)
	610118		· · · · · · · · · · · · · · · · · · ·
			Cover, Spark plug (Use as required)
	30939A		Cover Assy., Cylinder head
	650690		Washer, Belleville (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
56	650694A		Screw, 5/16-18 x 2" (Use as required)
56	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
57A	30322		Locknut, 8-32
57	29916		Clamp, Governor lever (Use as require d)
	33454		Lever Assy., Governor
	29918		Washer, Lock, No. 8 E.T.
	650548		Screw, 8-32 x 5/16"
	29216		Locknut, 10-32
	29826		
			Screw, 10-32 x 3/4"
	34661		Link, Governor
	34662		Link, Throttle
	34664		Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342		Spring, Compression
69	650549		Screw, 5-40 x 7/16"
70	27793		Clip, Conduit
71	28942		Screw, 10-32 x 3/8"
72	610973		Terminal Assy. (Use as required)
74	27896A		Gasket, Valve chamber cover
75	28423		Breather Assy., Valve
	28424		Element, Breather
	28425		Cover, Valve spring box
	650128		Screw, 10-24 x 1/2"
	35350		Tube Breather
	27915A		* Gasket, Intake pipe to cylinder
	34712		Flange, Carburetor (Incl. 86A)
	30196		Screw, 5/16-18 x 3/4"
	31688A		* Gasket, Carburetor
	650517		Screw, 1/4-20 x 13/16"
	27272A		* Air Cleaner Gasket (Use as required)
87	30767		Spacer, Cleaner (Use as required)
94A	34819		Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)
			(Use in 730561 assembly only)
101	34158		Bracket, Fuel tank
	650665		Screw, 1/4-14 x 7/8"
	34159		Plate, Fuel tank mounting
. 30			,

		Qty Description
104	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
	410144B 33032	Fuel Cap (White Plastic)(Std.)(As req uired) Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105 106 107 108 109 110 111 111C 111D 111E 113 114 115 116 117 118 119 137 138 139 143A 143B 143A 144A 144A 145 146 147	35355 29774 30962 26460 35260 29747B 27930A 32401 391026 33714 34390 30196 26073 650694A 32125 35009 650815 8116 29716 35438 34663 650821 33171 33185 650578 33700 33323 34011A 33590 33893A 34814 32180C	(Use as required) Fuel Cap (Red plastic) (Use as requir ed) Fuel Line (Braided, 8 1/4") (Use as required) Fuel Line (Braided, 32") (Use as required) Clamp, Fuel line (Use as required) Blower Housing Screw, 5/16-24 x 21/32" * Gasket, Exhaust flange Muffler Opt.Spark Arrest Muf.(Incl.143,143A,1 43B) Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A) Deflector, Exhaust (Optional) Screw, 5/16-18 x 3/4" Washer, Flat Screw, 5/16 - 18 x 2" Cup, Starter Screen, Starter cup Washer, Belleville Nut, Hex Screw, 1/4-28 x 7/16" Knob, Speed control Spring, Speed control Spring, Speed control Screw, 10-32 x 1/2" Screen, Muffler (Use as required) Cover & tube, Muffler (Use as required) Cover & Tube, Muffler (Use as required) Dipstick (Incl. 146) "O" Ring Oil Fill Tube Primer Assy. Line, Primer
151 153 154	34672 650764 650760	Cover, Carburetor Nut, "U" Clip Screw, 8-32 x 3/8"
156 157 158 159 160	34126 650257 650765 28820 32398 650760	Bracket, Grommet mounting Screw, 8-32 x 5/16" Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Bracket, Choke Screw, 8-32 x 3/8" Grommet Plastic
162	28545 34127 32576	Grommet, Plastic Guard, Starter Seal, Snow Guard

201A	Part Number 730130 730164	Qty	Description Muffler Adapter Kit (Incl.110,112)(As req.) Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164		Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
201B	730561		Air Cleaner Kit (Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
230F 230 230 231 231A 232A 240 241 242 242 243 244 250	34144 34414 34346 34416 550223 30547A 30548B 631021 611077 650868 611078 611079 590610 590613 631927		Decal, Primer Decal, Warning Decal, Instruction Decal, Instruction Decal, Name Breaker Assy (Used on Std. Point igni tion) Condenser Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt.) Connector, A.C. Lighting (Optional) Connector, D.C. Charging (Optional) Tube, Centering (Optional) Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 140 for breakdown)
251	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
252	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)