

Ref #	Part Number Qty	Description
	34919A	Cylinder (Incl. 2,3 & 4) (2-5/8" Bore)
	27652	Pin, Dowel
	27642	Pipe plug, 1/4-18
	32630	Seal, Oil
5	29536	Blower Housing Baffle (Without electric starter knock out) (Use as required)
5	35256A	Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
6	650561	Screw, 1/4-20 x 5/8"
	29538	Base, Engine mounting
	650542	Screw, 5/16-18 x 3/4"
9	34987	Crankshaft
	29783	Pin, Crankshaft gear (Used on early p rod.)
11	27884	Gear, Crankshaft (Used on early production) This gear is serviceable ONLY when it is pinned to the crankshaft.
13Δ	33312B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
	33313B	Piston & Pin Ass'y. (0.10" OS) (Incl. 14)
	33314B	Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	34531	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532	Piston, Pin & Ring Set (.010" OS)
	34533	Piston, Pin & Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
15	34854	Ring Set (Std.) (2-5/8" Bore)
15	34855	Ring Set (.010" OS)
15	34856	Ring Set (.020" OS)
16	31295C	Rod Assy., Connecting (Incl. 17)
17	650662C	Bolt, Connecting rod (Incl. 2 pieces)
	34034	Lifter, Valve
	33156	Camshaft
	30622A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	30684	Gasket Cylinder Cover
	31303B 31546	Cover, Cylinder (Incl. 26 & 34)
	28427	Bushing, Crankshaft Seal, Oil
	650488	Screw, 1/4-20 x 1-1/4"
	650493	Screw, 1/4-20 x 1-3/4"
	30699C	Rod Assy., Governor (Incl. 30 & 31)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29642	Ring, Retaining
	31845	Shaft, Mechanical governor
35	30588A	Spool, Governor
36	35479	Washer, Flat
	29193	Ring, Retaining
	30591	Gear Assy., Governor
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	32783	Intake Valve (Std.)
	32784	Intake Valve (1/32" OS)
42	27878A	Exhaust Valve (Std.)

Dof #	Dort Number	Ot /	Description
	Part Number	Qty	
	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
	27881		Spring, valve
	32581		Cap, Lower valve spring
46	33876		Gasket, Stator
47	650489		Screw, 1/4-20 x 5/8"
48	34240		Ground Wire
49	32589		Key, Flywheel
51	28938C		Gasket, Cylinder head
	30938A		Head, Cylinder
	33636		Resistor Spark Plug (RJ-8C)
	610118		Cover, Spark plug (Use as required)
	30939A		Cover Assy., Cylinder head
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
			•
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	30322		Locknut, 8-32
	29916		Clamp, Governor lever (Use as require d)
58	33454		Lever Assy., Governor
59	29918		Washer, Lock, No. 8 E.T.
61	650548		Screw, 8-32 x 5/16"
62	29216		Locknut, 10-32
63	29826		Screw, 10-32 x 3/4"
65A	34661		Link, Governor
65	34662		Link, Throttle
67A	34664		Control Bracket (Incl. 68, 69, 72 & 1 38)
68	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	610973		Terminal Assy. (Use as required)
	27896A		Gasket, Valve chamber cover
	28423		Breather Assy., Valve
	28424		Element, Breather
	28425		
			Cover, Valve spring box
	650128		Screw, 10-24 x 1/2"
	35350		Tube Breather
	27915A		* Gasket, Intake pipe to cylinder
	34712		Flange, Carburetor (Incl. 86A)
	30196		Screw, 5/16-18 x 3/4"
	31688A		* Gasket, Carburetor
	650517		Screw, 1/4-20 x 13/16"
	27272A		* Air Cleaner Gasket (Use as required)
87	30767		Spacer, Cleaner (Use as required)
94A	34819		Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)
			(Use in 730561 assembly only)
101	24150		
	34158		Bracket, Fuel tank
	650665		Screw, 1/4-14 x 7/8"
103	34159		Plate, Fuel tank mounting

	Part Number	Qty	Description
104	34186A		Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
	410144B 33032		Fuel Cap (White Plastic)(Std.)(As req uired) Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105 106 107 108 109 110 111E 111C 111 111D 112 113 114 115 116 117 118 119 137 138 139 143B 143A 144A 144 145 146 147	35355 29774 30962 26460 35260 29747B 27930A 34390 391026 32401 33714 30196 26073 650694A 32125 35009 650815 8116 29716 35438 34663 650821 33185 33171 650578 33323 33700 34011A 33590 33893A 34814 32180C		(Use as required) Fuel Cap (Red plastic) (Use as required) Fuel Line (Braided, 8 1/4") (Use as r equired) Fuel Line (Braided, 32") (Use as required) Clamp, Fuel line (Use as required) Blower Housing Screw, 5/16-24 x 21/32" * Gasket, Exhaust flange Deflector, Exhaust (Optional) Opt.Spark Arrest Muf.(Incl.143,143A,1 43B) Muffler Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A) Screw, 5/16-18 x 3/4" Washer, Flat Screw, 5/16 - 18 x 2" Cup, Starter Screen, Starter cup Washer, Belleville Nut, Hex Screw, 1/4-28 x 7/16" Knob, Speed control Spring, Speed control Spring, Speed control Screw, 10-32 x 1/2" Cover & tube, Muffler (Use as required) Screen, Muffler (Use as required) Screen, Muffler (Use as required) Cover & Tube, Muffler (Use as required) Cover & Tube, Muffler (Use as required) Dipstick (Incl. 146) "O" Ring Oil Fill Tube Primer Assy. Line, Primer
153 154	35060 650764 650760		Cover, Carburetor Nut, "U" Clip Screw, 8-32 x 3/8"
156 157 158 159 160	34126 650257 650765 28820 32398 650760 28545		Bracket, Grommet mounting Screw, 8-32 x 5/16" Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Bracket, Choke Screw, 8-32 x 3/8" Grommet, Plastic
162	34127 32576		Guard, Starter Seal, Snow Guard

201A	Part Number 730130 730561	Qty	Description Muffler Adapter Kit (Incl.110,112)(As req.) Air Cleaner Kit
			(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
201	730164		Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164		Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
230F	34144 34414		Decal, Primer Decal, Warning
	34346		Decal, Instruction
	34416		Decal, Instruction
	550223		Decal, Name
	30547A		Breaker Assy (Used on Std. Point igni tion) Condenser
	30548B 631021		Inlet, Needle Seat & Clip Assy.
	611077		Alternator (Optional)
	650868		Screw, 8-18 x 1-1/8" (3 required)(Opt .)
	611078		Connector, A.C. Lighting (Optional)
	611079		Connector, D.C. Charging (Optional)
243	590610		Tube, Centering (Optional)
	590613		Alternator Shaft (Optional)
250	631927		Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 140 for breakdown)
251	611038		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
252	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)