

		Qty	Description (1) (2) 7 (2) 7
	34919A		Cylinder (Incl. 2,3 & 4) (2-5/8" Bore)
	27652		Pin, Dowel
	27642 32630		Pipe plug, 1/4-18
	29536		Seal, Oil Blower Housing Baffle (Without electric starter knock
3	29330		out) (Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
6	650561		Screw, 1/4-20 x 5/8"
7	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
	34876		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
11	27884		Gear, Crankshaft (Used on early production) This
			gear is serviceable ONLY when it is pinned to the crankshaft.
13A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
13	34533		Piston, Pin & Ring Set (.020" OS)
14	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	31295C		Rod Assy., Connecting (Incl. 17)
	650662C 34034		Bolt, Connecting rod (Incl. 2 pieces) Lifter, Valve
	33156		Camshaft
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561		Screw, 1/4-20 x 5/8" (Use as required)
22	30063		Screw, 1/4-20 x 1/2" (Use as required)
23	30684		Gasket Cylinder Cover
	31303B		Cover, Cylinder (Incl. 26 & 34)
	31546		Bushing, Crankshaft
	28427		Seal, Oil
	650488 650493		Screw, 1/4-20 x 1-1/4" Screw, 1/4-20 x 1-3/4"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642		Ring, Retaining
34	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836 32783		Screw, 10-24 x 1/2" Intake Valve (Std.)
	32763 32784		Intake Valve (3ld.) Intake Valve (1/32" OS)
	27878A		Exhaust Valve (Std.)
42	LIUIUM		Exhibition (Old.)

Ref #	Part Number	Qty	Description
42	27880A		Exhaust Valve (1/32" OS)
43	27882		Cap, Upper valve spring
44	27881		Spring, valve
45	32581		Cap, Lower valve spring
46	33876		Gasket, Stator
	650489		Screw, 1/4-20 x 5/8"
	35182		Ground Wire
	32589		Key, Flywheel
	28938C		Gasket, Cylinder head
	30938A		Head, Cylinder
	33636		Resistor Spark Plug (RJ-8C)
	610118		Cover, Spark plug (Use as required)
	30939A		Cover Assy., Cylinder head
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	29916		Clamp, Governor lever (Use as require d)
	30322		Locknut, 8-32
	33454		Lever Assy., Governor
	29918		Washer, Lock, No. 8 E.T.
	650548		Screw, 8-32 x 5/16"
	29216		Locknut, 10-32
	29826		Screw, 10-32 x 3/4"
	34661		Link, Governor
	34662		Link, Throttle
	34677		Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610973		Terminal Assy. (Use as required)
	27896A		Gasket, Valve chamber cover
	28423		Breather Assy., Valve
	28424		Element, Breather
	28425		Cover, Valve spring box
	650128		Screw, 10-24 x 1/2"
	35350		Tube Breather
	27915A		* Gasket, Intake pipe to cylinder
	34712		Flange, Carburetor (Incl. 86A)
	30196		Screw, 5/16-18 x 3/4"
	31688A		* Gasket, Carburetor
	650517		Screw, 1/4-20 x 13/16"
	27272A		* Air Cleaner Gasket (Use as required)
	30767		Spacer, Cleaner (Use as required)
	34819		Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)
0 17 (0.10.10		(Use in 730561 assembly only)
			• • • • • • • • • • • • • • • • • • • •
	34158		Bracket, Fuel tank
	650665		Screw, 1/4-14 x 7/8"
	34159		Plate, Fuel tank mounting
104	34186A		Fuel Tank (Incl. 105 & 107) NOTE: These tanks
			were built with different size fuel inlet openings.
			Tanks with the 1-3/16" I.D. opening use fuel cap
			33032 or 34210. Tanks with the 1-1/2" I.D. opening
			use fuel cap 35355.

Ref #	Part Number Qty	
105	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
105	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
106	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
106	30962	Fuel Line (Braided, 32") (Use as required)
107	26460	Clamp, Fuel line (Use as required)
	32158E	Blower Housing (For electric starter)
	29747B	Screw, 5/16-24 x 21/32"
	27930A	* Gasket, Exhaust flange
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	34390	Deflector, Exhaust (Optional)
	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	30196	Screw, 5/16-18 x 3/4"
	32125	Cup, Starter
	35009	Screen, Starter cup
	650815	Washer, Belleville
	8116 29716	Nut, Hex Screw, 1/4-28 x 7/16"
	31691	Bracket, Air cleaner
	28820	Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	650152	Screw, 8-32 x 3/8"
	32410	Knob, Speed control
	34663	Spring, Speed control
	650821	Screw, 10-32 x 1/2"
143	650578	Screw, 8-18 x 3/8" (Use as required)
143B	33185	Cover & tube, Muffler (Use as require d)
143A	33171	Screen, Muffler (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
	33323	Screen, Muffler (Use as required)
	34011A	Dipstick (Incl. 146)
	33590	"O" Ring
	33893A	Oil Fill Tube
201B	730561	Air Cleaner Kit
		(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100
		& 230C) (Used only on engine with an externally vented fully adjustable carburetor)
		vertied fully adjustable carburetor)
201	730164	Air Cleaner Ass'y. (Red
		Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 &
201	700101	124) (Use as required)
0044	700400	, ,
	730130	Muffler Adapter Kit (Incl.110,112)(As req.)
	34144	Decal, Control
	34346	Decal, Instruction
	550223 30547A	Decal, Name Broaker Assy (Used on Std. Point igni tion)
	30547A 30548B	Breaker Assy (Used on Std. Point igni tion) Condenser
	631021	Inlet, Needle Seat & Clip Assy.
	611077	Alternator (Optional)
240	ULIULI	Automator (Optional)

Ref #	Part Number	Qty	Description
241	650868		Screw, 8-18 x 1-1/8" (3 required)(Opt .)
242	611078		Connector, A.C. Lighting (Optional)
242	611079		Connector, D.C. Charging (Optional)
	590610		Tube, Centering (Optional)
	590613		Alternator Shaft (Optional)
250	632230		Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 182 for breakdown)
251	611038		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
252	590420A		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)