

Page 2 of 9


H50-65452M Engine Parts List #1

1 2 3 4 5 5 6 6 7 8 9	Part Number 33311B 27652 27642 27876B 32783 32784 27878A 27880A 27882 27881 32581 30813 29783	Qty	Description Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore) Pin, Dowel Plug, Oil drain, 1/4-18 Seal, Oil Intake Valve (Std.) (Incl. 9) Intake Valve (1/32" OS) (Incl. 9) Exhaust Valve (Std.) Exhaust Valve (1/32" OS) (Incl. 9) Cap, Upper valve spring Spring, Valve Cap, Lower valve spring Crankshaft (Incl. 12 & 13) Pin, Crankshaft gear Used in early production. This gear is serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is serviceable ONLY when itis pinned to the crankshaft.
14A 14A 14 14 15 15 15 16 17 18A 18 19 20 21 22 23 24 26 27 28 29 30 31 32 33 34 35 35	33312B 33314B 34531 34532 34533 34854 34855 34856 27888 31295C 30682 650662C 26073 28264 33156 34034 31303B 28427 30684 31546 650488 650493 650489 30939A 28938C 30938A 33636 26073 650570 650691 650697A		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16) Piston & Pin Ass'y. (.010" OS) (Incl. 16) Piston & Pin Ass'y. (.020" OS) (Incl. 16) Piston & Pin Ass'y. (.020" OS) (Incl. 16) Piston, Pin & Ring Set (Std.) (2-5/8" Bore) Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Ring Set (Std.) (2-5/8" Bore) Ring Set (.010" OS) Ring Set (.020" OS) Ring, Piston pin retaining Rod Assy., Connecting (Incl. 18) Bolt, Connecting rod (Early productio n) Screw, Connecting rod (Late productio n) Connecting rod bolt washer (Early pro duction) Connecting rod nut (Used on early pro duction) Camshaft Lifter, Valve Cover, Cylinder (Incl. 24, 27 & 105) Seal, Oil * Gasket, Cylinder cover Bushing, Crankshaft Screw, 1/4-20 x 1-1/4" Screw, 1/4-20 x 1-3/4" Screw, 1/4-20 x 5/8" Cover, Cylinder head * Gasket, Cylinder head Head, Cylinder (Incl. 3 of 36) Resistor Spark Plug Washer, Flat (Use as required) Washer, Flat (Use as required) Washer, Flat (Use as required) Screw, 5/16-18 x 2-1/2" (Use as requi red)
36 37	650695A 650694A 650128 650597		Screw, 5/16-18 x 2-1/4" (Use as required) Screw, 5/16-18 x 2" (Use as required) Screw, 10-24 x 1/2" (Use as required) Screw, 10-24 x 5/8" (Use as required)


D ("	D (N)	
	Part Number Qty	
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
41	28425	Cover, Valve spring
45	27915A	* Gasket, Intake
46	34712	Flange, Carburetor (Incl. 60)
48	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used on early productio n)
	33454	Lever Assy., Governor
	30322	Lock Nut, 8-32 (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	34662	Link, Throttle
		·
	29216	Locknut, 10-32
	650517	Screw, 1/4-20 x 13/16"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
63	30699B	Rod Assy., Governor (This one piece gov. rod is no
		longer used. It is replaced by 30699C assy.,
		Ref.#63A)
631	30699C	Pod Assy, Covernor (Incl. 64 & 65)
		Rod Assy., Governor (Incl. 64 & 65)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	31297	Dipstick (Incl. 68)
	29673	* Gasket, Dipstick
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
71	33876	Gasket, Stator
73	29536	Baffle, Blower housing
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
81A	650152	Screw, 8-32 x 3/8"
81	30196	Screw, 5/16-18 x 3/4" (Use as require d)
81	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G &
69	130121	298B) (Use as required)
98	28569	Compression Spring (Used with 29500 screw)(Use as required)
98	32924	Compression Spring (Used with 650688 screw) (Use as required)
98	31342	Compression Spring (Used with 650549 screw) (Use as required)
ga	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 3/4 (Use as required)
		• • • • • • • • • • • • • • • • • • • •
	30884 31843A	Key, Flywheel Bracket, Governor gear

Ref #	Part Number	Qtv	Description
	650836	⊸ .y	Screw, 10-24 x 1/2"
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	30591		Gear Assy., Governor (Incl. 106)
	30588A		Spool, Governor
	29193		Ring, Retaining
	34158		Bracket, Lower fuel tank
	34159		Plate, Upper fuel tank mtg.
	650665		Screw, 1/4-15 x 3/4"
	650561		Screw, 1/4-20 x 5/8"
	34186A		Fuel Tank (Incl. 115 & 120)
	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile)
113	33032		, , , , , , , , , , , , , , , , , , , ,
			(Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
			(Use as required)
119	29774		Fuel Line (Braided 8.25") (Use as req uired)
119	30705		Fuel Line (Braided 16") (Use as required)
119	30962		Fuel Line (Braided 32") (Use as required)
120	26460		Clamp, Fuel line (Use as required)
121	32401		Muffler
125	27930A		* Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer, Flat
	650694A		Screw, 5/16-18 x 2"
	650548		Screw, 8-32 x 5/16" (Early production)
	650139		Screw, 8-32 x 1/2" (Early production)
	650542		Screw, 5/16-18 x 3/4"
	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
	30622A		Extension, Blower housing
	30747		Clip, Shorting
	650890		Lockwasher
	27275		Clip, Wire (Use as required)
	29443		Clip, Fuel line (Use as required)
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	29716		Screw, 1/4-28 x 7/16"
	32125		Cup, Starter
	590417		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	34346		Decal, Instruction
	550223		Decal, Name
	33310		Decal, Name Decal, 5 HP Mini-Bike (Use as require d)
			•
	31517 32173		Decal, H.P. (5 H.P.) (Use as required) Decal, H.P. (6 H.P.) (Use as required)
	30547A		. , , , , , , , , , , , , , , , , , , ,
			Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
303	632178		Carburetor (Incl. 75 & 301) (Refer to Division 5,
			Section A, page 176 for breakdown)

Ref #	Part Number	Qty	Description
304	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
310	33235A		* Gasket Set (Incl. items marked *)

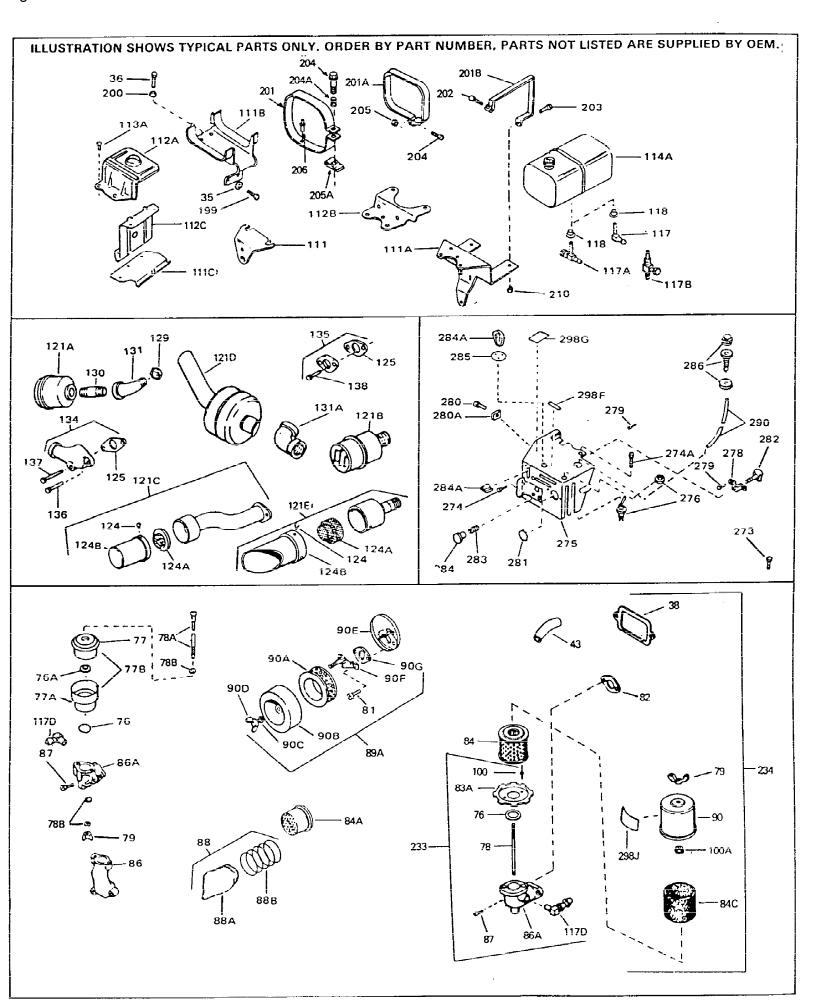

D. ("	Dout Nivershore	<u> </u>	December
		Qty	Description
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
81	650521		Screw, 10-32 x 1-1/8" (Use as require d)
	27272A		* Gasket, Air cleaner
86A	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97
			& 298B) (Use as req.)
113Δ	650665		Screw, 1/4-15 x 3/4"
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
1212	001020		mufflercan be used on any model)
			• ,
	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
233	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use
			in 730561 ass'y. only)
234	730561		Air Cleaner Kit
204	700001		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100 <i>A</i>
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
			•
273	650687		Screw, 10-32 x 5/16" (Use as required)

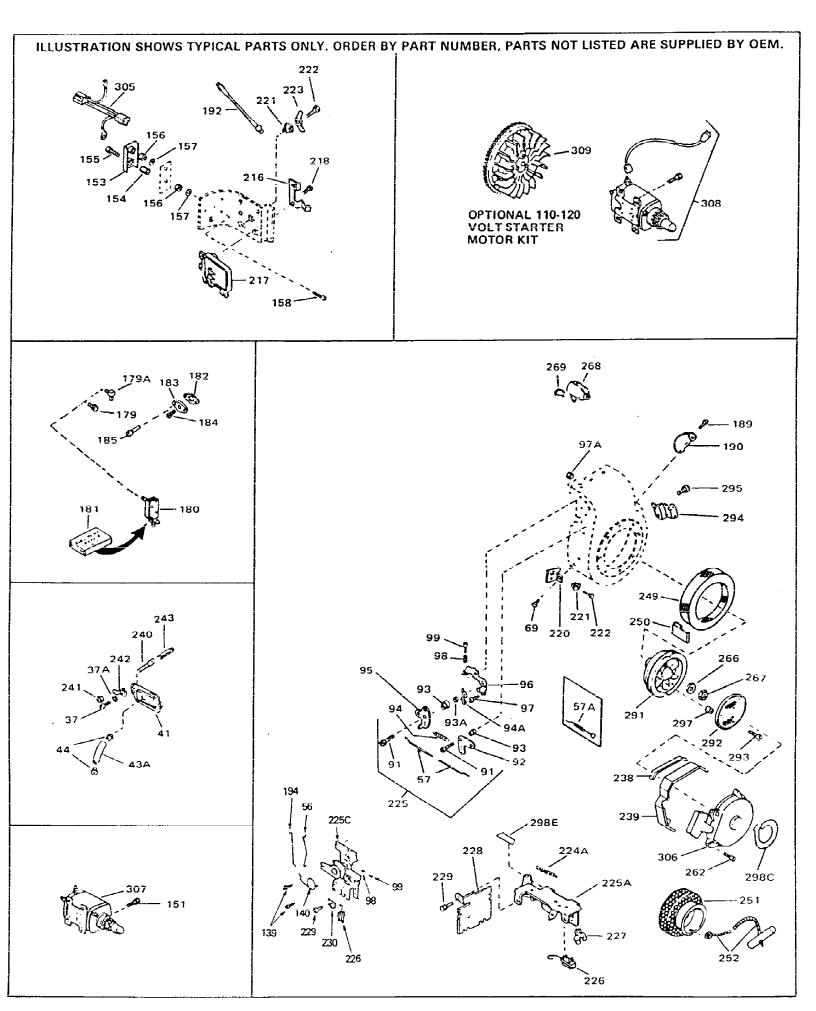

37A 37 37 41 56 69	Part Number 27261 650128 650597 28425 34662 29747B 28569	Qty	Description Washer, Flat (Use as required) Screw, 10-24 x 1/2" (Use as required) Screw, 10-24 x 5/8" (Use as required) Cover, Valve spring Link, Throttle Screw, 5/16-24 x 21/32" Compression Spring (Used with 29500 screw)(Use as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
99 99 139 140 182 183 184 185 194 225 225C 227 229 230 262 266 267 305	650549 29500 650688 650821 34663 32683A 32955 9556 30063 34661 730152 34664 33177 28942 27793 29716 650815 8116 33018 590420		Screw, 5-40 x 7/16" (Use as required) Screw, 8-32 x 3/4" (Use as required) Screw, 10-32 x 1 (Use as required) Screw, 10-32 x 1/2" Spring, Speed control Gasket, Fuel pump cover (Use as required) Cover, Fuel pump pad (Use as required) Plug, Pipe 1/8-27 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Link, Governor Control Bracket(Incl.91 thru 97)(As r eq.) Control Bracket (Incl. 98, 99, 140 & 226) Terminal (Use as required) Screw, 10-32 x 3/8" Clip, Conduit Screw, 1/4-28 x 7/16" Washer, Belleville Nut, Hex Harness Assy., Adapter (Use as requir ed) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)