


Ref #	Part Number	Qty	Description
2 3 4 5 5 6 6 7 8 9 11 12	33311B 27652 27642 27876B 32783 32784 27878A 27880A 27882 27881 32581 31856A 29783		Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore) Pin, Dowel Plug, Oil drain, 1/4-18 Seal, Oil Intake Valve (Std.) (Incl. 9) Intake Valve (1/32" OS) (Incl. 9) Exhaust Valve (Std.) Exhaust Valve (1/32" OS) (Incl. 9) Cap, Upper valve spring Spring, Valve Cap, Lower valve spring Crankshaft (Incl. 12 & 13) Pin, Crankshaft gear Used in early production. This gear is serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is serviceable ONLY when itis pinned to the crankshaft.
14A 14A 14 14 15 15 15 16 17 18A 18 19 20 21 22 23 24 24A 26 27 28 29 30 31 32 33 34 35	33312B 33314B 34531 34532 34533 34854 34855 34856 27888 31380C 30682 650662C 26073 28264 33985 34034 31720A 28427 28926 30684 31546 650488 650493 650489 30939A 28938C 30938A 33636 26073 650570		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16) Piston & Pin Ass'y. (.010" OS) (Incl. 16) Piston & Pin Ass'y. (.020" OS) (Incl. 16) Piston & Pin Ass'y. (.020" OS) (Incl. 16) Piston, Pin & Ring Set (Std.) (2-5/8" Bore) Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Ring Set (Std.) (2-5/8" Bore) Ring Set (.010" OS) Ring Set (.020" OS) Ring, Piston pin retaining Rod Assy., Connecting (Incl. 18) Bolt, Connecting rod (Early production) Connecting rod bolt washer (Early pro duction) Connecting rod nut (Used on early pro duction) Camshaft (Extended) Lifter, Valve Cylinder Cover (Incl. 24, 24A, 27 & 1 05) Seal, Oil * Gasket, Cylinder cover Bushing, Crankshaft Screw, 1/4-20 x 1-1/4" Screw, 1/4-20 x 1-3/4" Screw, 1/4-20 x 5/8" Cover, Cylinder head * Gasket, Cylinder head Head, Cylinder (Incl. 3 of 36) Resistor Spark Plug Washer, Flat (Use as required) Washer, Flat (Use as required)
36 36	650697A 650695A 650694A 650128		Screw, 5/16-18 x 2-1/2" (Use as requi red) Screw, 5/16-18 x 2-1/4" (Use as requi red) Screw, 5/16-18 x 2" (Use as required) Screw, 10-24 x 1/2" (Use as required)

H60-75379K Engine Parts List #1


Ref #	Part Number	Qty Description
37 38 39 40 41 43 45 46 48 49 50	650597 27896A 28423 28424 28425 32447 27915A 30195A 30196 29918 650548 30319 32326A	Screw, 10-24 x 5/8" (Use as required) * Gasket, Breather cover Body, Breather Element, Breather Cover, Valve spring Tube, Breather * Gasket, Intake Flange, Carburetor (Incl. 79 & 80) Screw, 5/16-18 x 3/4" Lockwasher Screw, 8-32 x 5/16" Rivet, Split (Used on early productio n) Lever, Governor (New lever does not need 1 of Ref #49,51,53,54,132,133)
54 55 56 58 59 60 61 62 63A	30322 29916 30205 31710 29216 29752 650572 29826 29642 30699C 30699B	Lock Nut, 8-32 (Use as required) Clamp, Governor lever (Use as require d) Bracket, Adjusting Link, Throttle Locknut, 10-32 Nut & Lockwasher, 1/4-28 Screw, 1/4-28 x 1-1/8" Screw, 10-32 x 3/4" Ring, Retaining Rod Assy., Governor (Incl. 64 & 65) Rod Assy., Governor (This one piece gov. rod is no longer used. It is replaced by 30699C assy., Ref.#63A)
65 66A 68 69 70 73 74 75 81 81 81 81 82 83	30700 650494 31297 29673 29747B 32158E 29536 650561 31688A 30196 28820 650521 650152 27272A 31708 31715 730127	Yoke, Governor Screw, 6-40 x 5/16" Dipstick (Incl. 68) * Gasket, Dipstick Screw, 5/16-24 x 21/32" Blower Hsg. (For elec.starter)(Incl.1 89,190) Baffle, Blower housing Screw, 1/4-20 x 5/8" * Gasket, Carburetor Screw, 5/16-18 x 3/4" (Use as require d) Screw, 10-32 x 1/2" (Use as required) Screw, 10-32 x 1-1/8" (Use as require d) Screw, 8-32 x 3/8" * Gasket, Air cleaner Bracket, Air cleaner Body, Air cleaner Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B) (Use as required)
98	28569	Compression Spring (Used with 29500 screw)(Use as required)
	32924	Compression Spring (Used with 650688 screw) (Use as required)
	31342	Compression Spring (Used with 650549 screw) (Use as required)
99	29500	Screw, 8-32 x 3/4" (Use as required)

	•	Description
99 65		Screw, 10-32 x 1 (Use as required)
99 65		Screw, 5-40 x 7/16" (Use as required)
102 30		Key, Flywheel
103 31		Bracket, Governor gear
104 65		Screw, 10-24 x 1/2"
105 31		Shaft, Mechanical governor
106 30		Washer, Flat
107 30		Gear Assy., Governor (Incl. 106)
108 30		Spool, Governor
109 29		Ring, Retaining
111D 34		Bracket, Lower fuel tank
112 34		Plate, Upper fuel tank mtg.
113 65		Screw, 1/4-20 x 5/8"
113A 65		Screw, 1/4-15 x 3/4"
114 34		Fuel Can (Incl. 115 & 120)
115 41		Fuel Cap (White Plastic)(Standard)(As req.)
115 33	3032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required)
115 34	1210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
110 0	1210	(Use as required)
119 29	9774	Fuel Line (Braided 8.25") (Use as req uired)
119 30	0705	Fuel Line (Braided 16") (Úse as requirred)
119 30	0962	Fuel Line (Braided 32") (Use as requi red)
120 26	6460	Clamp, Fuel line (Use as required)
121 32	2401	Muffler
125 27	7930A	* Gasket, Exhaust
126 30	0196	Screw, 5/16-18 x 3/4"
127 26	6073	Washer, Flat
128 65	50694A	Screw, 5/16-18 x 2"
132 65	50548	Screw, 8-32 x 5/16" (Early production)
132 65		Screw, 8-32 x 1/2" (Early production)
144 65		Screw, 5/16-18 x 3/4"
146 29		Base, Engine mounting
147 65		Screw, 10-24 x 1/2"
148 30		Extension, Blower housing
149A 30		Clip, Shorting
150 65		Lockwasher
186 27		Clip, Wire (Use as required)
186 29		Clip, Fuel line (Use as required)
224 31		Spring, Extension
225B 31		Control Bracket (Incl. 98, 99 & 226)
226 61		Terminal Assy.
229 28		Screw, 10-32 x 3/8"
230 27		Clip, Conduit
262 29		Screw, 1/4-28 x 7/16"
264 32		Cup, Starter
265 59 266 65		Screen, Starter cup
266 65 267 81		Washer, Belleville
267 81		Nut, Hex
298 34		Decal, Instruction
298A 55		Decal, Name
298A 33		Decal, 5 HP Mini-Bike (Use as required)
298A 31		Decal, H.P. (5 H.P.) (Use as required)
298A 32	2113	Decal, H.P. (6 H.P.) (Use as required)

Ref #	Part Number	Qty	Description
299	30547A		Contact Assy., Breaker
300	30548B		Condenser
301	631021		Inlet Needle, Seat & Clip Assy.
303	631828		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown)
304	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
310	33235A		* Gasket Set (Incl. items marked *)

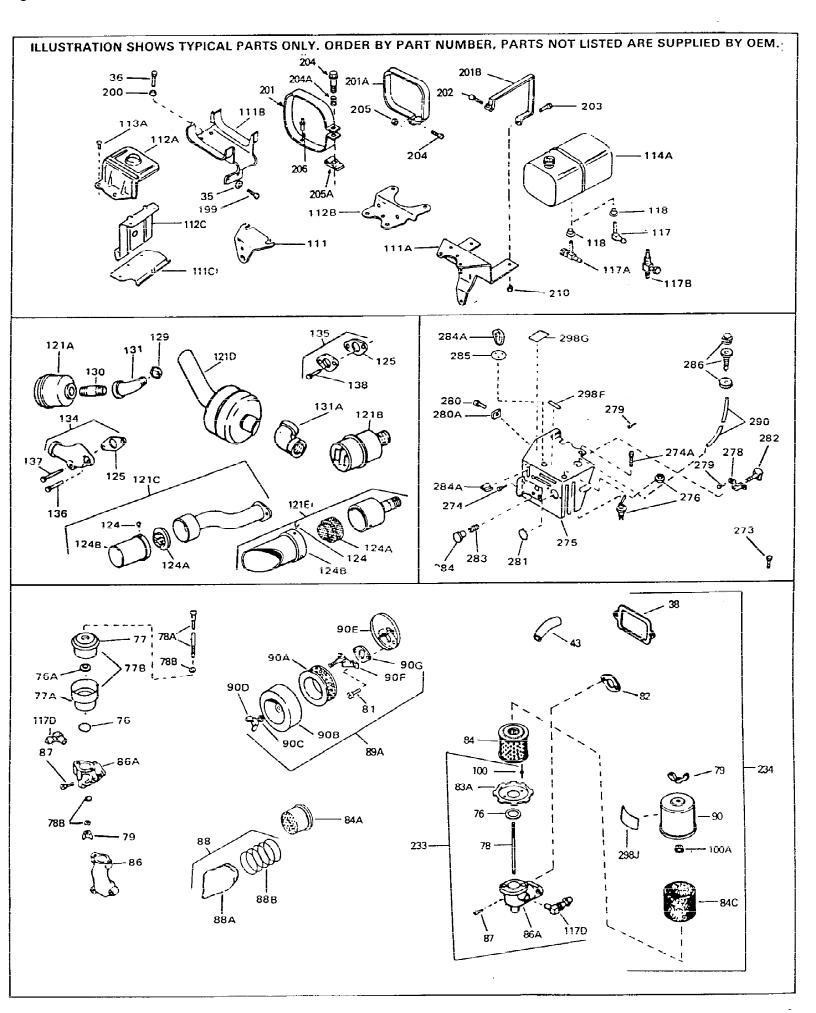

Pof #	Part Number	Otv	Description
	26073	Qty	
			Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	32447		Tube, Breather
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
	27272A		* Gasket, Air cleaner
	31700		Element, Air cleaner
86A	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97
			& 298B) (Use as req.)
1121	650665		Screw, 1/4-15 x 3/4"
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
IZIL	391020		mufflercan be used on any model)
			, ,
	33171		Muffler Screen (Use as required)
124B	33185		Cover & Tube, Muffler (Use as require d)
124	650578		Screw, 8-18 x 3/8"
125	27930A		* Gasket, Exhaust
134	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use
			in 730561 ass'y. only)
004			, ,,
234	730561		Air Cleaner Kit
			(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
273	650687		Screw, 10-32 x 5/16" (Use as required)
2.0	000007		(000 do 10 quilou)

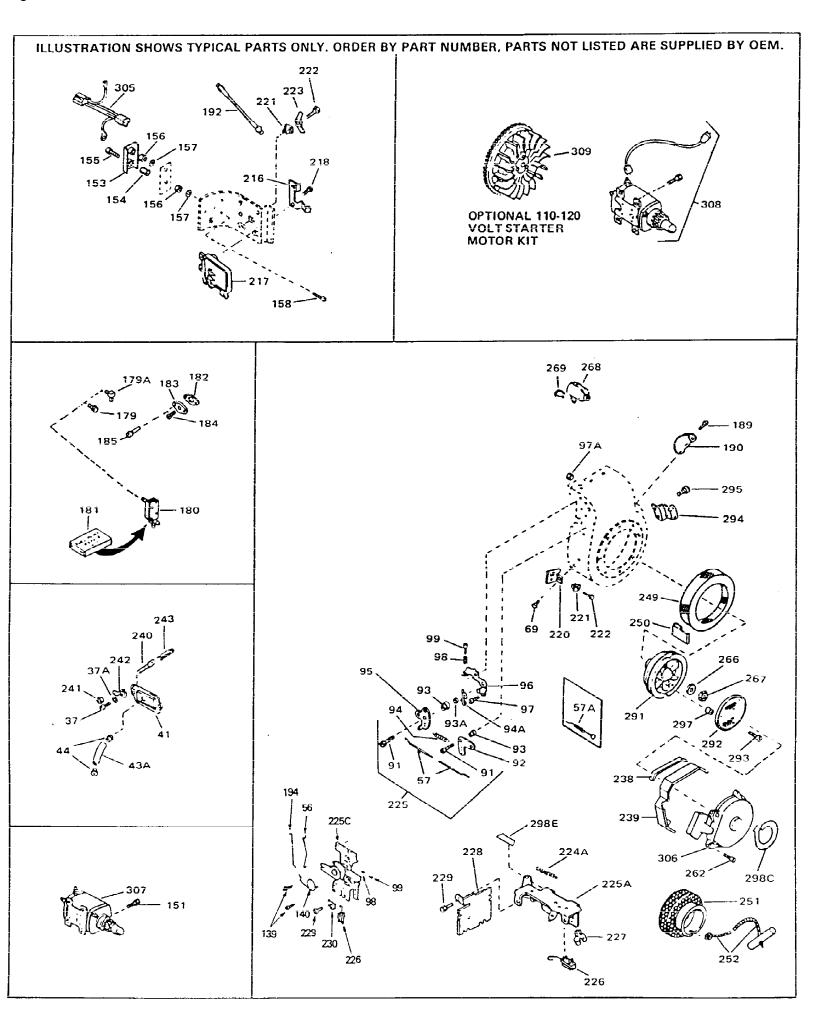

Ref #	Part Number	Qty	
37	650128		Screw, 10-24 x 1/2" (Use as required)
37	650597		Screw, 10-24 x 5/8" (Use as required)
37A	27261		Washer, Flat (Use as required)
41	28425		Cover, Valve spring
	32446		Grommet, Breather tube
	31710		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
	28569		Compression Spring (Used with 29500 screw)(Use
			as required)
0.0	00004		• ,
98	32924		Compression Spring (Used with 650688 screw) (Use
			as required)
98	31342		Compression Spring (Used with 650549 screw) (Use
			as required)
			• •
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	650549		Screw, 5-40 x 7/16" (Use as required)
	32683A		Gasket, Fuel pump cover (Use as required)
	32955		Cover, Fuel pump pad (Use as required)
	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required)
225	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
226	610973		Terminal Assy.
227	33177		Terminal (Use as required)
229	28942		Screw, 10-32 x 3/8"
230	27793		Clip, Conduit
262	29716		Screw, 1/4-28 x 7/16"
266	650815		Washer, Belleville
267	8116		Nut, Hex
305	33018		Harness Assy., Adapter (Use as requir ed)
306	590420		Rewind Starter (Refer to Division 5, Section C, page
			25 for breakdown)
200	22220D		Starter Meter Vit /110 120 Volt NOTE: This 110 120
306	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120
			volt starter motor kit may have been added to this
			engine. This can be added only if cylinder has drilled
			and tapped starter mounting bosses and a ring gear
			flywheel has been added (see #309). Refer to
			service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines
			using 110-120 volt starter motor kits listed above.)