

		Qty	Description Description
	33311B		Cylinder (Incl. 2, 3, 4 & 41)(2-5/8" Bore)
	27652 27642		Pin, Dowel Pipe plug, 1/4-18
	27876B		Seal, Oil
	29536		Blower Housing Baffle (Without electric starter knock
3	23300		out) (Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
6	650561		Screw, 1/4-20 x 5/8"
	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
9	30799		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
11	27884		Gear, Crankshaft (Used on early production) This
			gear is serviceable ONLY when it is pinned to the crankshaft.
13A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
13A	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
13	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
	34533		Piston, Pin & Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855 34856		Ring Set (.010" OS) Ring Set (.020" OS)
	31380C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		Lifter, Valve
19	33156		Camshaft
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561		Screw, 1/4-20 x 5/8" (Use as required )
	30063 30684		Screw, 1/4-20 x 1/2" (Use as required ) Gasket Cylinder Cover
	31303B		Cover, Cylinder (Incl. 26 & 34)
	31546		Bushing, Crankshaft
	28427		Seal, Oil
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642 31845		Ring, Retaining
	30588A		Shaft, Mechanical governor Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	32783		Intake Valve (Std.)
	32784		Intake Valve (1/32" OS)
42	27878A		Exhaust Valve (Std.)

Dof #	Part Number (	<b>1</b> +1/	Description
	27880A	чıy	Exhaust Valve (1/32" OS)
			· · · · · · · · · · · · · · · · · · ·
	27882		Cap, Upper valve spring
	27881		Spring, valve
	32581		Cap, Lower valve spring
	33876		Gasket, Stator
	650489		Screw, 1/4-20 x 5/8"
	34240		Ground Wire
	30884		Key, Flywheel
	28938C		Gasket, Cylinder head
	30938A		Head, Cylinder
	33636		Resistor Spark Plug (RJ-8C)
54	610118		Cover, Spark plug (Use as required)
55	30939A		Cover Assy., Cylinder head
56B	650690		Washer, Belleville (Use as required)
56A	650691		Washer, Flat (Use as required)
56	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
56	650694A		Screw, 5/16-18 x 2" (Use as required)
56	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
57A	30322		Locknut, 8-32
	29916		Clamp, Governor lever (Use as require d)
	32326A		Lever, Governor
	29918		Washer, Lock, No. 8 E.T.
	30205		Bracket, Governor adjusting
	650548		Screw, 8-32 x 5/16"
	29216		Locknut, 10-32
	29826		Screw, 10-32 x 3/4"
	31386		Spring, Extension
	30824		Link, Throttle
	33108A		•
	27793		Control Assy., Remote Speed (Incl. 64 & 72)
			Clip, Conduit
	28942		Screw, 10-32 x 3/8" Terminal Apply (Head of required)
	610973		Terminal Assy. (Use as required)
	27896A		Gasket, Valve chamber cover
	28423		Breather Assy., Valve
	28424		Element, Breather
	28425		Cover, Valve spring box
	650128		Screw, 10-24 x 1/2"
	35350		Tube Breather
	29752		Nut & Lockwasher, 1/4-28
	27915A		* Gasket, Intake pipe to cylinder
	30195A		Flange, Carburetor (Incl. 81 & 86)
	30196		Screw, 5/16-18 x 3/4"
	31688A		* Gasket, Carburetor
86	650572		Screw, 1/4-28 x 1-1/8"
87	27272A		* Air Cleaner Gasket (Use as required)
87	30767		Spacer, Cleaner (Use as required)
94A	34819		Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)
			(Use in 730561 assembly only)
101	34158		Bracket, Fuel tank
	650665		Screw, 1/4-14 x 7/8"
	34159		Plate, Fuel tank mounting
. 30			,

Ref #	Part Number	Qty	Description
104	34186A		Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
	410144B 33032		Fuel Cap (White Plastic)(Std.)(As req uired) Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105 106 107 108 109 110 111E 111 111D 111C 112 113 114 115 116 117 118 119 137 143 143A 143B 144 144A 145 146A 148A 149 151 152	35355 29774 30962 26460 32158E 29747B 27930A 34390 32401 33714 391026 30196 26073 650694A 32125 590417 650815 8116 29716 35438 650578 33171 33185 33700 33323 31297 29673 570629A 32180C 34581 31291 650764		(Use as required)  Fuel Cap (Red plastic) (Use as required) Fuel Line (Braided, 8 1/4") (Use as r equired) Fuel Line (Braided, 32") (Use as required) Clamp, Fuel line (Use as required) Blower Housing (For electric starter) Screw, 5/16-24 x 21/32"  * Gasket, Exhaust flange Deflector, Exhaust (Optional) Muffler Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A) Opt.Spark Arrest Muf.(Incl.143,143A,1 43B) Screw, 5/16-18 x 3/4" Washer, Flat Screw, 5/16 - 18 x 2" Cup, Starter Screen, Starter cup Washer, Belleville Nut, Hex Screw, 1/4-28 x 7/16" Knob, Speed control Screw, 8-18 x 3/8" (Use as required) Screen, Muffler (Use as required) Cover & tube, Muffler (Use as required) Cover & Tube, Muffler (Use as required) Dipstick (Incl. 146A)  * Gasket, Oil fill Primer Assy. Line, Primer Cover, Carburetor Plug, Cover Nut, "U" Clip
155 156	650760 34126 650257 650765		Screw, 8-32 x 3/8" Bracket, Grommet mounting Screw, 8-32 x 5/16" Screw, 10-32 x 1/2"
158 159 160 161	28820 32398 650760 28545		Screw, 10-32 x 1/2" Bracket, Choke Screw, 8-32 x 3/8" Grommet, Plastic
	34127 32576		Guard, Starter Seal, Snow Guard

	Part Number 730561	Qty	Description Air Cleaner Kit (Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
201	730164		Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164		Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
230 230 230B 230F 231F 231A 232A 240 241 242 242 242 243 244 250	730130 34346 34416 550223 34144 34414 30547A 30548B 631021 611077 650868 611078 611079 590610 590613 631927		Muffler Adapter Kit (Incl.110,112)(As req.) Decal, Instruction Decal, Instruction Decal, Name Decal, Primer Decal, Warning Breaker Assy (Used on Std. Point igni tion) Condenser Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt.) Connector, A.C. Lighting (Optional) Connector, D.C. Charging (Optional) Tube, Centering (Optional) Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 140 for breakdown)
251	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
252	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)