


	Part Number	Qty	Description
1	33311B		Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
2	27652		Pin, Dowel
3	27642		Plug, Oil drain, 1/4-18
	9556		Pipe Plug, 1/8-27
	27876B		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
8	27881		Spring, Valve
	32581		Cap, Lower valve spring
	30799		Crankshaft (Incl. 12 & 13)
	29783		Pin, Crankshaft gear Used in early production. This
12	29703		
			gear is serviceable ONLY when itis pinned to the
			crankshaft.
12	27884		Gear, Crankshaft Used in early production. This
13	21 UUT		gear is serviceable ONLY when itis pinned to the
			•
			crankshaft.
14A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
			• • • • • • • • • • • • • • • • • • • •
	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
	34533		Piston, Pin & Ring Set (.020" OS)
15	34854		Ring Set (Std.) (2-5/8" Bore)
15	34855		Ring Set (.010" OS)
15	34856		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
	31380C		Rod Assy., Connecting (Incl. 18)
	650662C		Screw, Connecting rod (Late productio n)
	30682		Bolt, Connecting rod (Early production)
	26073		Connecting rod bolt washer (Early pro duction)
			` ; '
	28264		Connecting rod nut (Used on early pro duction)
	33156		Camshaft
	34034_		Lifter, Valve
23	31303B		Cover, Cylinder (Incl. 24, 27 & 105)
	28427		Seal, Oil
26	30684		* Gasket, Cylinder cover
27	31546		Bushing, Crankshaft
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
31	000120		Ociew, 10-24 x 1/2 (USE as required)


Ref #	Part Number	Qty	Description
37	650597		Screw, 10-24 x 5/8" (Use as required)
38	27896A		* Gasket, Breather cover
39	28423		Body, Breather
40	28424		Element, Breather
	28425		Cover, Valve spring
	27915A		* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
	30196		Screw, 5/16-18 x 3/4"
			Lockwasher
	29918		
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used on early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of Ref
			#49,51,53,54,132,133)
53	30322		Lock Nut. 8-32 (Uso as required)
			Lock Nut, 8-32 (Use as required)
	29916		Clamp, Governor lever (Use as require d)
	30205		Bracket, Adjusting
	30824		Link, Throttle
	29216		Locknut, 10-32
60	650517		Screw, 1/4-20 x 13/16"
61	29826		Screw, 10-32 x 3/4"
62	29642		Ring, Retaining
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30699B		Rod Assy., Governor (This one piece gov. rod is no
	000002		longer used. It is replaced by 30699C assy.,
			Ref.#63A)
			Nel.#03A)
64	30700		Yoke, Governor
65	650494		Screw, 6-40 x 5/16"
66A	34011A		Dipstick (Incl. 68)
	33893A		Oil Fill Tube
	33590		"O" Ring
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876		Gasket, Stator
	29536		•
			Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
81A	650152		Screw, 8-32 x 3/8"
82	27272A		* Gasket, Air cleaner
83	31691		Bracket, Air cleaner
	30727		Element, Air cleaner
	31715		Body, Air cleaner
	730127		Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G &
03	130121		298B) (Use as required)
			230D) (Ose as required)
98	28569		Compression Spring (Used with 29500 screw)(Use
			as required)
<u>-</u> -	00004		. ,
98	32924		Compression Spring (Used with 650688 screw) (Use
			as required)
QΩ	31342		Compression Spring (Used with 650549 screw) (Use
90	01072		as required)
			as requireuj

Ref #	Part Number	Qty	Description
99	29500		Screw, 8-32 x 3/4" (Use as required)
99	650688		Screw, 10-32 x 1 (Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
102	30884		Key, Flywheel
103	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	30591		Gear Assy., Governor (Incl. 106)
	30588A		Spool, Governor
	29193		Ring, Retaining
			<u> </u>
	34158		Bracket, Lower fuel tank
	34159		Plate, Upper fuel tank mtg.
	650665		Screw, 1/4-15 x 3/4"
	650561		Screw, 1/4-20 x 5/8"
	34186A		Fuel Tank (Incl. 115 & 120)
	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
115	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile)
			(Use as required)
445	0.4040		First Con (Dod Dioatic) (Count Decistant High Drofile)
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
			(Use as required)
119	29774		Fuel Line (Braided 8.25") (Use as req uired)
	30705		Fuel Line (Braided 16") (Use as required)
	30962		Fuel Line (Braided 32") (Use as required)
	26460		Clamp, Fuel line (Use as required)
			• • • • • • • • • • • • • • • • • • • •
	27930A		* Gasket, Exhaust
	650548		Screw, 8-32 x 5/16" (Early production)
	650139		Screw, 8-32 x 1/2" (Early production)
	650542		Screw, 5/16-18 x 3/4"
	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
	30622A		Extension, Blower housing
186	27275		Clip, Wire (Use as required)
186	29443		Clip, Fuel line (Use as required)
226	610973		Terminal Assy.
229	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	34235		Ground Wire
	29716		Screw, 1/4-28 x 7/16"
	32125		Cup, Starter
	35009		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	34346		Decal, Instruction
	550223		Decal, Name
	33310		Decal, 5 HP Mini-Bike (Use as require d)
	31517		Decal, H.P. (5 H.P.) (Use as required)
	32173		Decal, H.P. (6 H.P.) (Use as required)
	30547A		Contact Assy., Breaker
300	30548B		Condenser
301	631021		Inlet Needle, Seat & Clip Assy.
	631824		Carburetor (Incl. 75 & 301) (Refer to Division 5,
			Section A, page 206for breakdown)

Ref #	Part Number	Qty	Description
304	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
306	590559		Recoil Starter (Refer to Division 5, Section C, page 25 for breakdown)
310	33235A		* Gasket Set (Incl. items marked *)

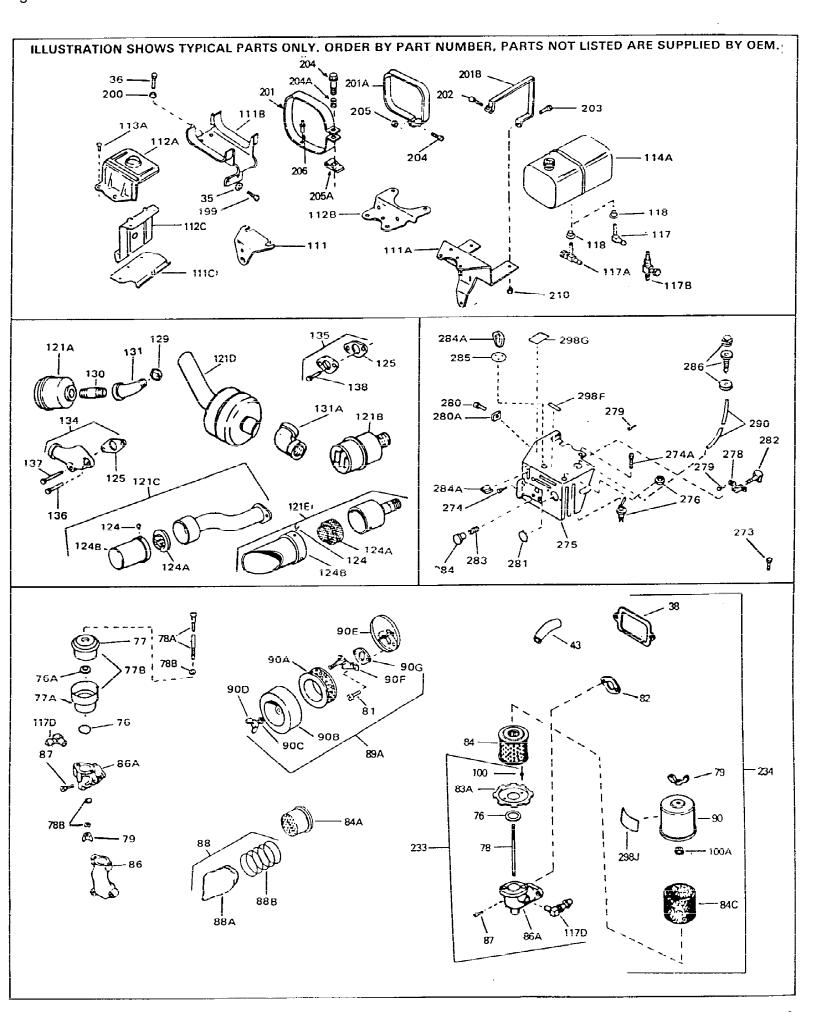

Ref #	Part Number	Qty	Description
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
81	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A		* Gasket, Air cleaner
86A	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 & 298B) (Use as req.)
			, ,
	650665		Screw, 1/4-15 x 3/4"
	29633		Muffler
121E	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester mufflercan be used on any model)
124A	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	32862		Nut, Conduit (1/4" thick)
	30209		Elbow, Exhaust (45 degree)
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use
			in 730561 ass'y. only)
234	730561		Air Cleaner Kit (Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A (Use only on engines with an externally ventedfully adjustable carburetor.)
273	650687		Screw, 10-32 x 5/16" (Use as required)

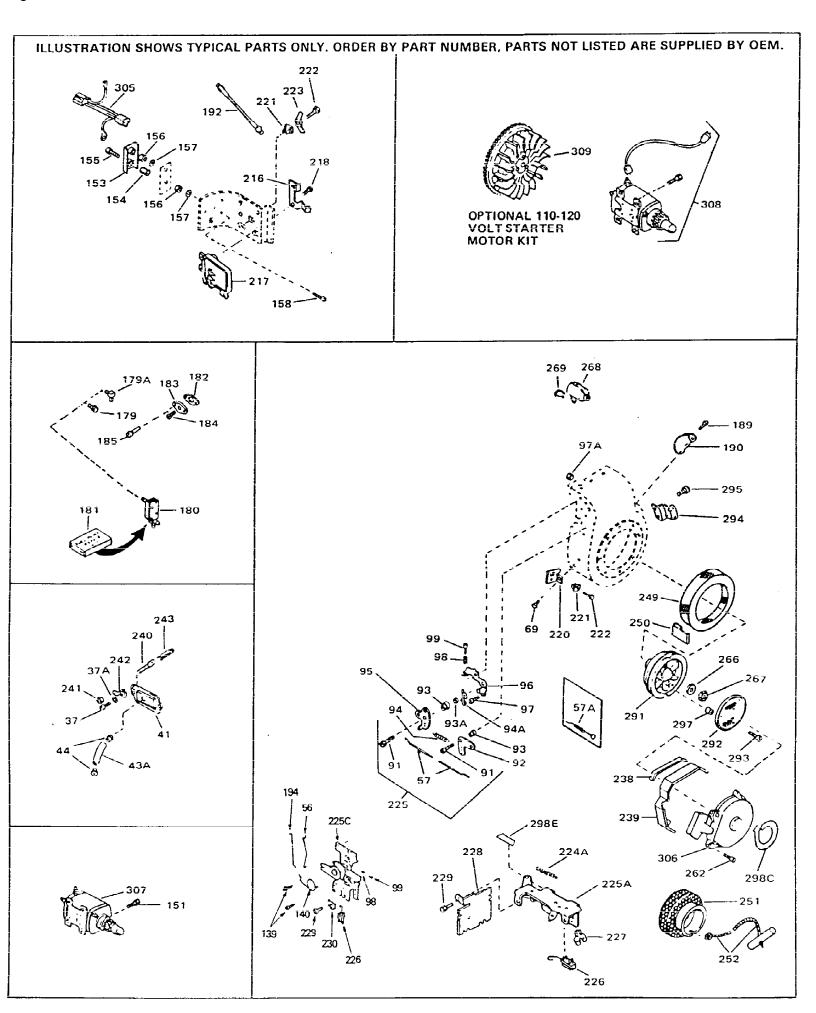

	Part Number	Qty	
	27261		Washer, Flat (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	28425		Cover, Valve spring
43A	35350		Tube, Breather
56	30824		Link, Throttle
69	29747B		Screw, 5/16-24 x 21/32"
98	28569		Compression Spring (Used with 29500 screw)(Use
			as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
99	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	650549		Screw, 5-40 x 7/16" (Use as required)
	32683A		Gasket, Fuel pump cover (Use as requi red)
183	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required)
225C	34664		Control Bracket (Incl. 98, 99, 140 & 226)
225	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
226	610973		Terminal Assy.
227	33177		Terminal (Use as required)
229	28942		Screw, 10-32 x 3/8"
230	27793		Clip, Conduit
262	29716		Screw, 1/4-28 x 7/16"
266	650815		Washer, Belleville
267	8116		Nut, Hex
298C	34870		Decal, Starter
305	33018		Harness Assy., Adapter (Use as requir ed)
306	590559		Recoil Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120
			volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)