
H70-130022 Engine Parts List #1

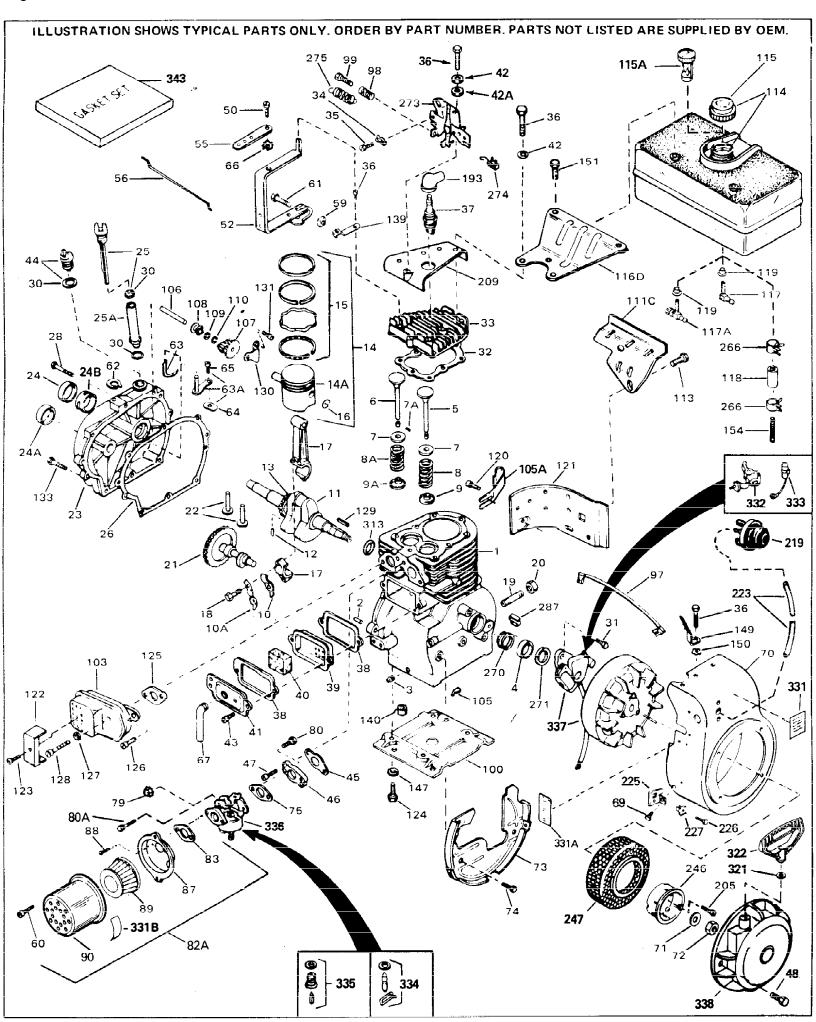


Ref #	Part Number	Qty	Description
1 2 3 4 5 5 6 6 7 7 7 8 8 8 9 9 9 9	Part Number 32586C 27652 27642 28582 32630 32783 32784 31469A 31470A 27882 20810 27881 32581 32581 32590	Qty	Description Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore) Pin, Dowel Plug, Oil drain Plug, Oil drain Seal, Oil Intake Valve (Std.) (Incl. 9) Intake Valve (Std.) (Incl. 9) Exhaust Valve (Std.) (Incl. 9) Exhaust Valve (Std.) (Incl. 9) Exhaust Valve (1/32" OS) (Incl. 9) Cap, Upper valve spring Pin, Valve spring retainer (Use as re quired) Spring, Valve Spring, Valve Cap, Lower valve spring Plate, Lock & Oil dipper (This plate may be replaced by 34242 oil dipper but 650662C screw must be
11 12	34242 32782 29783 27884		used.) Dipper, Oil Crankshaft (Incl. 12 &13) Crankshaft Gear Pin (Early production) Gear, Crankshaft (Used in early production) This gear is servicable onlywhen it is pinned to the crankshaft.
$\begin{array}{c} 14\\ 14\\ 14A\\ 14A\\ 14A\\ 14A\\ 15\\ 15\\ 15\\ 16\\ 17\\ 18\\ 21\\ 22\\ 23\\ 24\\ 24B\\ 25\\ 26\\ 28\\ 30\\ 31\\ 31\\ 31\\ 32\\ 33\\ 34\\ 35\end{array}$	34517 34518 34519 32592B 32593B 32594B 32595 32596 32597 27888 32597 27888 32591C 650662C 32115 34034 31451A 28460 31546 29668 30684 650488 29673 650489 650516 32631A 30938A 27793 28942 650697A		Piston, Pin & Ring Set (Std.) (2-3/4" Bore) Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16) Piston & Pin Ass'y. (.020" OS) (Incl. 16) Ring Set (Std.) (2-3/4" Bore) Ring Set (.010" OS) Ring Set (.020" OS) Ring Set (.020" OS) Ring, Piston pin retaining Rod Assy., Connecting (Incl. 10 & 18) Screw, Connecting rod (2 each) Camshaft (MCR) Lifter, Valve Cylinder Cover (Incl.24, 106, 309, 31 0 & 311) Seal, Oil Bushing, Crankshaft (Use as required) Dipstick, Oil (Incl. 30) * Gasket, Cylinder cover Screw, 1/4-20 x 1-1/4" * Gasket, Oil filler Screw, 1/4-20 x 1-1/8" * Gasket, Cylinder head Head, Cylinder Clip, Conduit (Use as required) Screw, 10-32 x 3/8" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as required)


		Qty	Description
37	33636		Resistor Spark Plug (RJ-8C)
37	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	650690		Washer, Belleville (Use as required)
	26073		
			Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650128		Screw, 10-24 x 1/2"
	27915A		* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
	30196		Screw, 5/16-18 x 3/4"
48	29716		Screw, 1/4-28 x 7/16"
50	650548		Screw, 8-32 x 5/16"
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
56	31710		Link, Throttle
	29216		Nut, Lock, 10-32
	650152		Screw, 8-32 x 3/8"
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30699B		
03	200990		Governor Rod Ass'y. (This one-piece governor rodis
			no longer used. It is replaced by 30699C ass'y.,Ref.
			no. 63A)
64	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
	8116		
			Nut, Hex Blower Housing Boffle (without electric starter
/3	29536		Blower Housing Baffle (without electric starter
			knock-out) (Use as required)
73	35256A		Blower Housing Baffle (with electric starter
			knock-out) (Use as required) (Point Ignition)
- 74	050504		, (· · · · · · · · · · · · · · · · · ·
	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	29752		Nut & Lockwasher Assy., 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
82A	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A &
			331B) (Use as required)
83	27272A		* Gasket, Air cleaner
	31691		Bracket, Air cleaner NOTE: 130010 thru 10C & 11
			used in early production only.
	00000		
	28820		Screw, 10-32 x 1/2"
	30727		Element, Air cleaner
	31715		Body, Air cleaner
97	30831		Ground Wire (Incl. 137)

Ref #	Part Number	Qty	Description
98	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
	29538		Base, Engine mounting
	32401		Muffler
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
	29193		Ring, Retaining
	30063		Screw, 1/4-20 x 1/2"
115	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low
			profile) (Use as required)
445	0.404.0		
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile)
			(Use as required)
115	35355		Fuel Cap (Use as required)
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128		Screw, 10-24 x 1/2" (Use as required)
	30622A		Extension, Blower housing
	650542		Screw, 5/16-18 x 3/4"
125	27930A		Gasket, Exhaust
126	30196		Screw, 5/16-18 x 3/4"
127	26073		Washer (Use as required)
128	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	650493		Screw, 1/4-20 x 1-3/4"
	30747		Clip, Shorting
	610118		Cover, Spark plug (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30939A		Cover, Cylinder head
246	32125		Cup, Starter
247	590417		Screen, Starter cup
266	26460		Clamp, Fuel line
270	31461		Bushing, Crankshaft (Use as required)
	31711B		Copntrol Bracket (Incl. 98, 99 & 274)
	610973		Terminal Ass'y. (As req. on late prod uction)
	34043		Spring, Control lever
	27275		Clip, Hi-tension wire (Use as require d)
	34246		Clip, Ground wire (Use as required)
	550223		Decal, Name
	31752		Decal, Air cleaner
	34346		Decal, Instruction
	30547A		Contact Assy., Breaker
	30548B		Condenser
334	631021		Inlet Needle, Seat & Clip Assy.
336	631453		Carburetor (Incl. 75) (Refer to Division 5, Section A,
			page 100 for breakdown)

Ref #	Part Number	Qty	Description
337	610753		Magneto (12 Volt) (3 Amp) (2 Circuit) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 23 for breakdown)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)

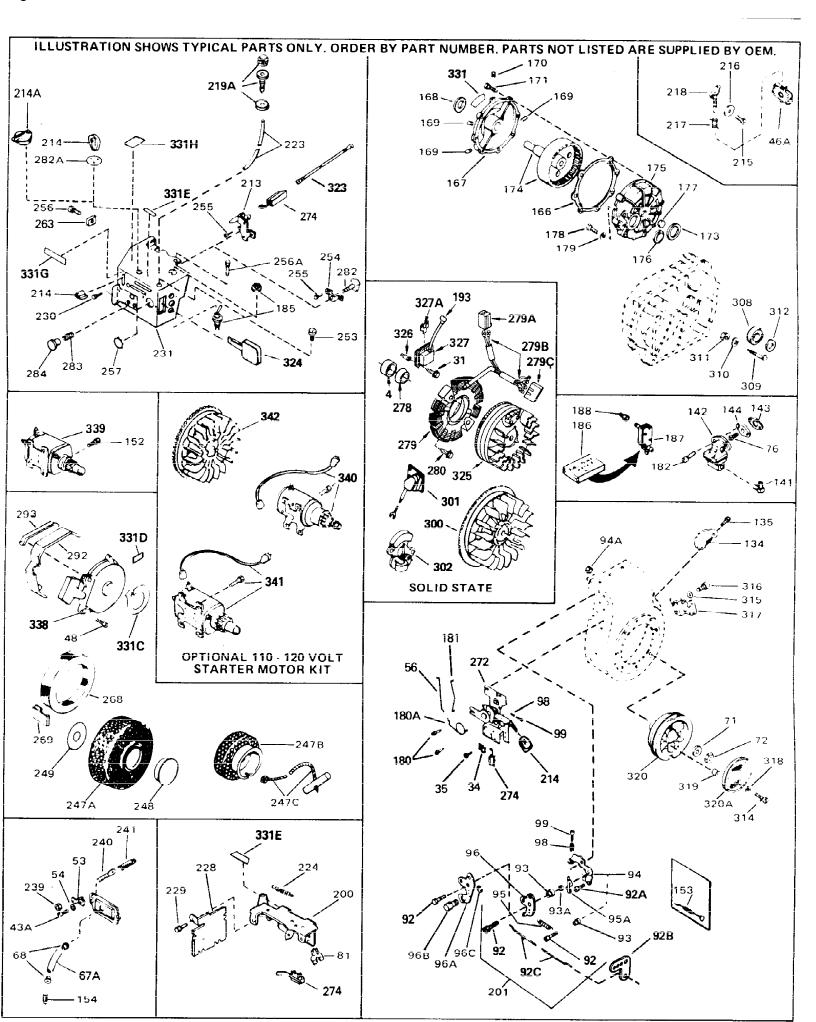

Ref #	Part Number Qty	
31	650489	Screw, 1/4-20 x 5/8"
31	650516	Screw, 1/4-20 x 1-1/8"
34	27793	Clip, Conduit (Use as required)
35	28942	Screw, 10-32 x 3/8" (Use as required)
43A	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	31710	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	610118	Cover, Spark plug (Use as required)
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	31793	Bearing, Ball
	31855	Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
	31792	Washer, Thrust
	550223	Decal, Name
338	590420	Rewind Starter (Refer to Division 5, Section C, page
		25 for breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt
		starter motor kit may have been added to this engine.
		It can be added only if cylinder hasdrilled and tapped
		starter mounting bosses and a ring gear flywheel
		(see#342). Refer to service number stamped on end
		cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines
012	0001177	using 110-120 volt starter kits listed above)
0.40	044040	
342	611042	Flywheel (Used on Type letters H and above) (Std.
		Point ignition) (Ring gear flywheel required on
		engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on
		engines using 110-120 volt starter kits listed above)
		(Use withSolid State ignition)
		- /

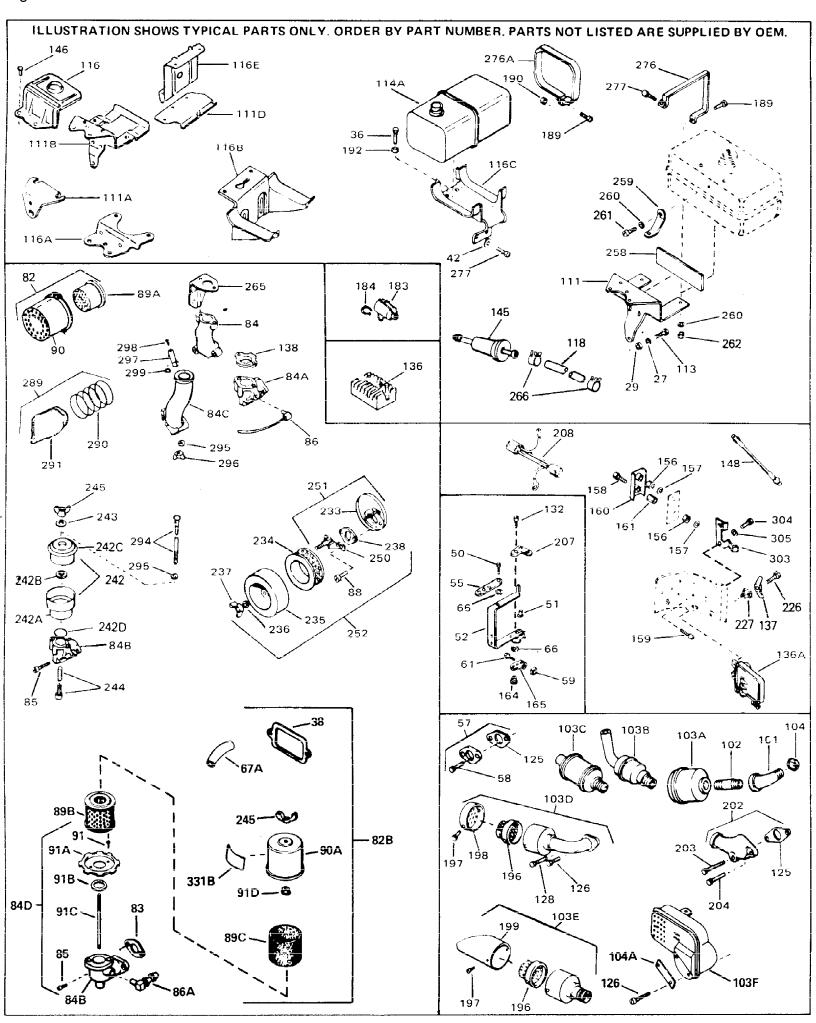

		Qty Description
36 36 38 42 42 50 51	27513 650697A 650695A 650694A 27896A 26073 650691 650548 30319 32326A	Lockwasher, 1/4" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 2-1/4" (Use as required) Screw, 5/16-18 x 2" (Use as required) * Gasket, Breather cover Washer (Use as required) Washer, Flat (Use as required) Screw, 8-32 x 5/16" Rivet, Split (Used in early productio n) Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
57 58 59 61 66	30205 730130 30196 29216 29826 29918 730127	Bracket, Adjusting Exh.Adap.Kit (Incl. 58 & 125) (Use as req.) Screw, 5/16-18 x 3/4" (Use as require d) Nut, Lock, 10-32 Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
	27272A 34819	* Gasket, Air cleaner Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only)
90 103E 113 118 118 118 125 126 128 132 148 132 148 148 202 203 204 266	28820 31715 391026 30063 29774 30705 30962 27930A 30196 650694A 650548 34067 34069 31288 650697A 6021A 26460 31752	Screw, 10-32 x 1/2" Body, Air cleaner Opt. Spark Arrest Muffler (Incl.196,1 97,199) Screw, 1/4-20 x 1/2" Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Gasket, Exhaust Screw, 5/16-18 x 3/4" Screw, 5/16-18 x 2" (Use as required) Screw, 8-32 x 5/16" (Early production) Wire Assy., Alternator adapter (4-1/4 ") Wire Assy., Alternator adapter (6-3/4 ") Exh. Adaptor Kit (Incl.125,203,204) (As req.) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 1-1/2" (Use as required) Clamp, Fuel line Decal, Air cleaner