

	Part Number	Qty	Description
	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.) (Incl. 9)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
7A	20810		Pin, Valve spring retainer (Use as re quired)
8A	27881		Spring, Valve
8	27881		Spring, Valve
9A	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	32590		Plate, Lock & Oil dipper (This plate may be replaced
			by 34242 oil dipper but 650662C screw must be
			used.)
			,
	34242		Dipper, Oil
	32670		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production )
13	27884		Gear, Crankshaft (Used in early production) This
			gear is servicable onlywhen it is pinned to the
			crankshaft.
14Δ	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (3td.) (2-3/4 Bore)
	34519		Piston, Pin & Ring Set (.010 OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (3id.) (2-3/4 Bore)
	32597		Ring Set (.010 'OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting (incl. 10 & 10)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	29668		Dipstick, Oil (Incl. 30)
	30684		•
	650488		* Gasket, Cylinder cover
			Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
37	34251		Resistor Spark Plug

Page 3 of 8


H70-130029A Engine Parts List #1

Ref #	Part Number	Qty	Description
39 40 41 42A 42 42 43 45 46 47 48 50	27896A 28423 28424 28425 650690 26073 650691 650128 27915A 30195A 30196 29716 650548 32326A		* Gasket, Breather cover Body, Breather Element, Breather Cover, Valve spring Washer, Belleville (Use as required) Washer (Use as required) Washer, Flat (Use as required) Screw, 10-24 x 1/2" * Gasket, Intake Flange, Carburetor (Incl. 79 & 80) Screw, 5/16-18 x 3/4" Screw, 1/4-28 x 7/16" Screw, 8-32 x 5/16" Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
56 59 60 61 62 63A	30205 31710 29216 650152 29826 29642 30699C 30699B		Bracket, Adjusting Link, Throttle Nut, Lock, 10-32 Screw, 8-32 x 3/8" Screw, 10-32 x 3/4" Ring, Retaining Rod Assy., Governor (Incl. 64 & 65) Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
65 66 67 69 70 71 72 73	30700 650494 29918 35350 29747B 32158E 650815 8116 29536		Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Blower Housing (For elec.star.)(Incl. 134,135) Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
74 75 79 80	35256A 650561 31688A 29752 650572 730164		Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)  Screw, 1/4-20 x 5/8"  * Gasket, Carburetor  Nut & Lockwasher Assy., 1/4-28  Screw, 1/4-28 x 1-1/8"  Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
	27272A 31691		* Gasket, Air cleaner Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
89 90 97 100	28820 30727 31715 31582 29538 31845		Screw, 10-32 x 1/2" Element, Air cleaner Body, Air cleaner Ground Wire Base, Engine mounting Shaft, Mechanical governor


343 33239A

Ref #	Part Number Qt	y Description
107	30591	Gear Assy., Governor (Incl. 109)
108	30588A	Spool, Governor
109	30590A	Washer, Flat
110	29193	Ring, Retaining
	650561	Screw, 1/4-20 x 5/8"
	31301	Fuel Tank (Incl. 115)
	410144B	Fuel Cap (White Plastic)(Std)(As regu ired)
	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low
110	33332	profile) (Use as required)
		, , , ,
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile)
		(Use as required)
115	35355	Fuel Cap (Use as required)
	28584	Fitting, Fuel strainer & elbow
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128	Screw, 10-24 x 1/2" (Use as required)
	30622A	Extension, Blower housing
	650542	Screw, 5/16-18 x 3/4"
	26073	,
		Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493	Screw, 1/4-20 x 1-3/4"
	30747	Clip, Shorting
	610118	Cover, Spark plug (Use as required)
	27276	Cover, Spark plug
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30939A	Cover, Cylinder head
	32125	Cup, Starter
	590417	Screen, Starter cup
	26460	Clamp, Fuel line
	31461	Bushing, Crankshaft (Use as required)
274	610973	Terminal Ass'y. (As req. on late prod uction)
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
331A	34346	Decal, Instruction
331B	31752	Decal, Air cleaner
332	30547A	Contact Assy., Breaker
333	30548B	Condenser
334	631021	Inlet Needle, Seat & Clip Assy.
	631453	Carburetor (Incl. 75) (Refer to Division 5, Section A,
		page 100 for breakdown)
007	0400044	,
337	610694A	Magneto (w/ring gear for 110 volt sta rter) NOTE:
		The complete magneto is not available as an
		assembly. The magneto number is shown for
		reference purposes only. Order component parts
		individually, as show in parts list. (Refer to Division 5,
		Section B, page 24 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page
		25 for breakdown)
0.40	000004	,

Gasket Set (Incl. items marked\*)

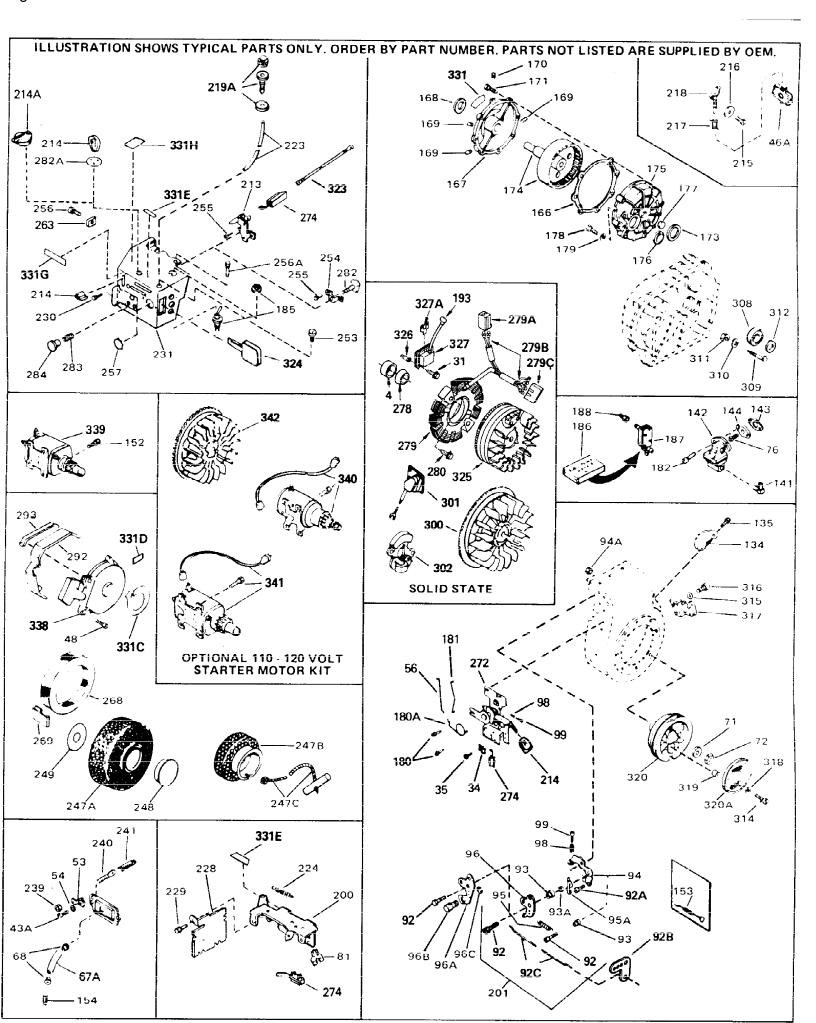

Ref #	Part Number	Qty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	31710		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
152	30063		Screw, 1/4-20 x 1/2"
193	610118		Cover, Spark plug (Use as required)
193	27276		Cover, Spark plug
239	33450		Nut, Lock
240	30845A		Bolt, Governor adjusting
241	30886A		Spring, Governor bolt
263	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
338	590420		Rewind Starter (Refer to Division 5, Section C, page
			25 for breakdown)
339	35765A		Electric Starter Motor (12 Volt) NOTE: The 29965, 32468, 32468B, 33606, 35765 and 35765A startermotors are used interchangeably on these models. Refer to service number stamped on end cap of motor, or on decal, for identification. Refer to Division 5, Section D for breakdown.
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

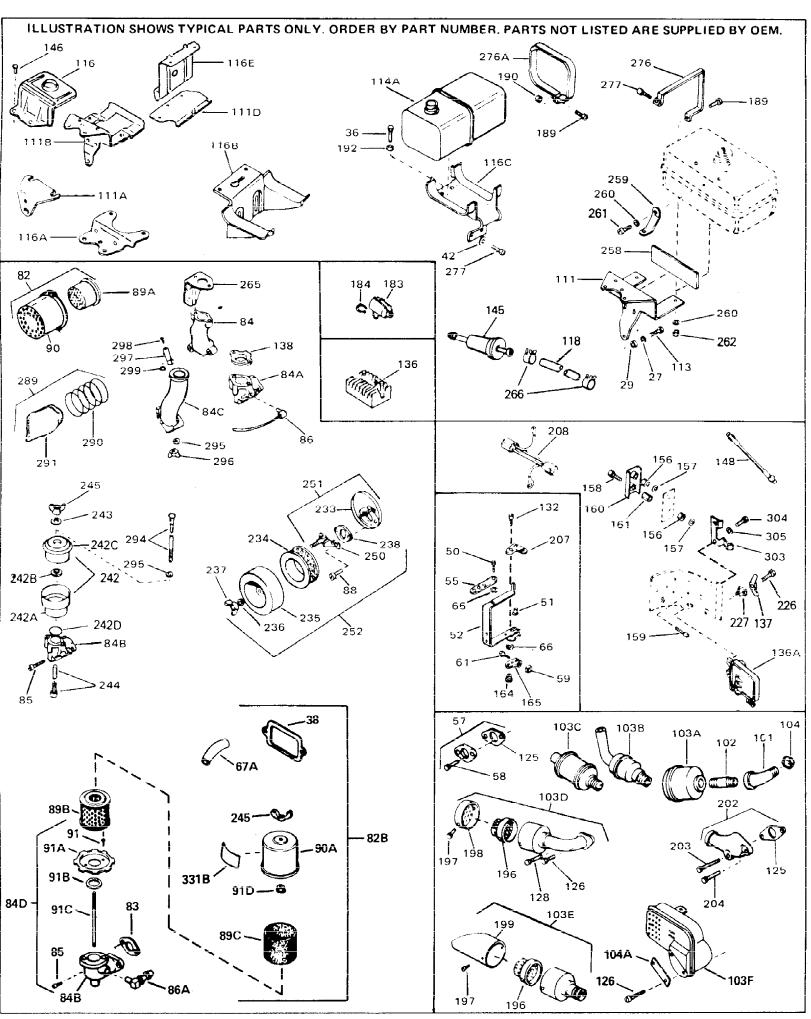

27 36 36 36 38 42 42 50 51	Part Number 27513 650697A 650695A 650694A 27896A 26073 650691 650548 30319 32326A	Qty	Description Lockwasher, 1/4" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 2-1/4" (Use as required) Screw, 5/16-18 x 2" (Use as required) * Gasket, Breather cover Washer (Use as required) Washer, Flat (Use as required) Screw, 8-32 x 5/16" Rivet, Split (Used in early production) Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
57 58 59 61 66	30205 730130 30196 29216 29826 29918 730127		Bracket, Adjusting Exh.Adap.Kit (Incl. 58 & 125) (Use as req.) Screw, 5/16-18 x 3/4" (Use as require d) Nut, Lock, 10-32 Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
	27272A 34819		* Gasket, Air cleaner Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only)
90 101 103E 104 111 113 118 118 118 128 132 132 148 148 148 202 203 204 207 262 266 276	28820 31715 29574 391026 32862 31694 650561 29774 30705 30962 650694A 650548 650139 34067 34069 6201 31288 650697A 6021A 31725A 29752 26460 31697 29212		Screw, 10-32 x 1/2" Body, Air cleaner Muffler Elbow Opt. Spark Arrest Muffler (Incl.196,1 97,199) Conduit Nut Bracket, Fuel tank Screw, 1/4-20 x 5/8" Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 5/16-18 x 2" (Use as required) Screw, 8-32 x 5/16" (Early production ) Screw, 8-32 x 1/2" Wire Assy., Alternator adapter (4-1/4") Wire Assy., Alternator adapter (6-3/4") Screw, 1/4-28 x 7/8" Exh. Adaptor Kit (Incl.125,203,204) ( As req.) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 1-1/2" (Use as required) Extension, Governor lever Nut, Lock Clamp, Fuel line Strap, Fuel tank Screw, Hex hd. Sems, 1/4-28 x 7/16
	31752		Decal, Air cleaner