

H70-130139A Engine Parts List #1

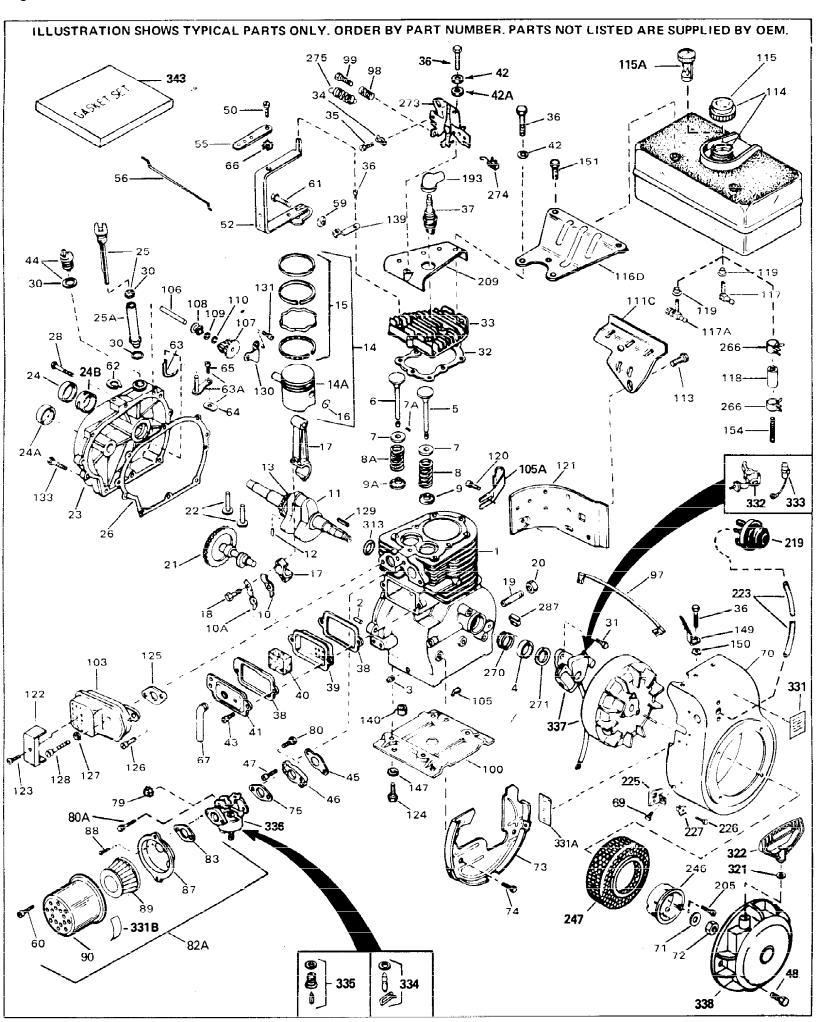


1 2 3 4 5 5 6 6 7 7A 8A 8A 8 9 9	Part Number 32586C 27652 27642 32630 32783 32784 27878A 27880A 27880A 27882 20810 27881 32581 32581 32590	Qty	Description Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore) Pin, Dowel Plug, Oil drain Seal, Oil Intake Valve (Std.) (Incl. 9) Intake Valve (Std.) (Incl. 9) Exhaust Valve (Std.) (Incl. 9) Exhaust Valve (Std.) (Incl. 9) Exhaust Valve (1/32" OS) (Incl. 9) Cap, Upper valve spring Pin, Valve spring retainer (Use as re quired) Spring, Valve Spring, Valve Cap, Lower valve spring Plate, Lock & Oil dipper (This plate may be replaced by 34242 oil dipper but 650662C screw must be used.)
11 12	34242 32680A 29783 27884		Dipper, Oil Crankshaft (Incl. 12 & 13) Crankshaft Gear Pin (Early production) Gear, Crankshaft (Used in early production) This gear is servicable onlywhen it is pinned to the crankshaft.
$\begin{array}{c} 14\\ 14\\ 14A\\ 14A\\ 14A\\ 14A\\ 15\\ 15\\ 15\\ 15\\ 16\\ 17\\ 18\\ 19\\ 20\\ 21\\ 22\\ 23\\ 24B\\ 24\\ 25\\ 26\\ 28\\ 30\\ 31\\ 32\\ 33\end{array}$	34517 34518 34519 32592B 32593B 32594B 32595 32596 32597 27888 32597 27888 32591C 650662C 31857 30969 32115 34034 31303B 31546 28427 31297 30684 650488 29673 650489 32631A 30938A 27793		Piston, Pin & Ring Set (Std.) (2-3/4" Bore) Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16) Piston & Pin Ass'y. (.020" OS) (Incl. 16) Piston & Pin Ass'y. (.020" OS) (Incl. 16) Ring Set (Std.) (2-3/4" Bore) Ring Set (.010" OS) Ring Set (.020" OS) Ring, Piston pin retaining Rod Assy., Connecting (Incl. 10 & 18) Screw, Connecting rod (2 each) Nipple, Oil drain Cap, Oil drain Camshaft (MCR) Lifter, Valve Cover, Cylinder (Incl. 24, 106 & 279) Bushing, Crankshaft (Use as required) Seal, Oil Dipstick, Oil (Incl. 30) * Gasket, Cylinder cover Screw, 1/4-20 x 1-1/4" * Gasket, Oil filler Screw, 1/4-20 x 5/8" * Gasket, Cylinder head Head, Cylinder Clip, Conduit (Use as required)
36	650697A 650695A 650694A		Screw, 5/16-18 x 2-1/2" (Use as requi red) Screw, 5/16-18 x 2-1/4" (Use as requi red) Screw, 5/16-18 x 2" (Use as required)

	Part Number Qty	
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
38	27896A	* Gasket, Breather cover
39	28423	Body, Breather
40	28424	Element, Breather
41	28425	Cover, Valve spring
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
42A	650690	Washer, Belleville (Use as required)
43	650128	Screw, 10-24 x 1/2"
45	27915A	* Gasket, Intake
46	30195A	Flange, Carburetor (Incl. 79 & 80)
47	30196	Screw, 5/16-18 x 3/4"
48	29716	Screw, 1/4-28 x 7/16"
50	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
	30205	Bracket, Adjusting
56	30824	Link, Throttle
59	29216	Nut, Lock, 10-32
61	29826	Screw, 10-32 x 3/4"
62	29642	Ring, Retaining
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis
		no longer used. It is replaced by 30699C ass'y.,Ref.
		no. 63Ă)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
	29536	Blower Housing Baffle (without electric starter
10	20000	knock-out) (Use as required)
70	050504	
73	35256A	Blower Housing Baffle (with electric starter
		knock-out) (Use as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
79	29752	Nut & Lockwasher Assy., 1/4-28
80	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A &
		331B) (Use as required)
97	35349	Ground Wire
100	29538	Base, Engine mounting
	32401	Muffler
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	650561	Screw, 1/4-20 x 5/8"
110		

		Qty Description
	33350	Fuel Tank (Incl. 115 & 117A)
	410144B	Fuel Cap (White Plastic)(Std)(As required)
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low
		profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile)
115	34210	(Use as required)
115	35355	Fuel Cap (Use as required)
117A	33351	Valve, Fuel strainer & shut-off (Incl 119)
118	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
119	33679	Bushing, Fuel fitting
120	650128	Screw, 10-24 x 1/2" (Use as required)
121	30622A	Extension, Blower housing
124	650542	Screw, 5/16-18 x 3/4"
	27930A	Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493	Screw, 1/4-20 x 1-3/4"
	30747	Clip, Shorting
	610118	Cover, Spark plug (Use as required)
	650561	Screw, $1/4-20 \times 5/8$ " (Use as required)
	30939A	Cover, Cylinder head
	32125	Cup, Starter
	590417	Screen, Starter cup
	26460	Clamp, Fuel line
	31461	Bushing, Crankshaft (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	27275	Clip, Hi-tension wire (Use as require d)
	34246	Clip, Ground wire (Use as required)
	550223	Decal, Name
	34346	Decal, Instruction
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
	631459	Carburetor (Incl. 75) (Refer to Division 5, Section A,
000		page 100 for breakdown)
		, ,
337	610694A	Magneto (w/ring gear for 110 volt sta rter) NOTE:
		The complete magneto is not available as an
		assembly. The magneto number is shown for
		reference purposes only. Order component parts
		individually, as show in parts list. (Refer to Division 5,
		Section B, page 24 for breakdown)
228	590473	Rewind Starter (Refer to Division 5, Section C, page
550	000770	29 for breakdown)
		,
343	33239A	Gasket Set (Incl. items marked*)

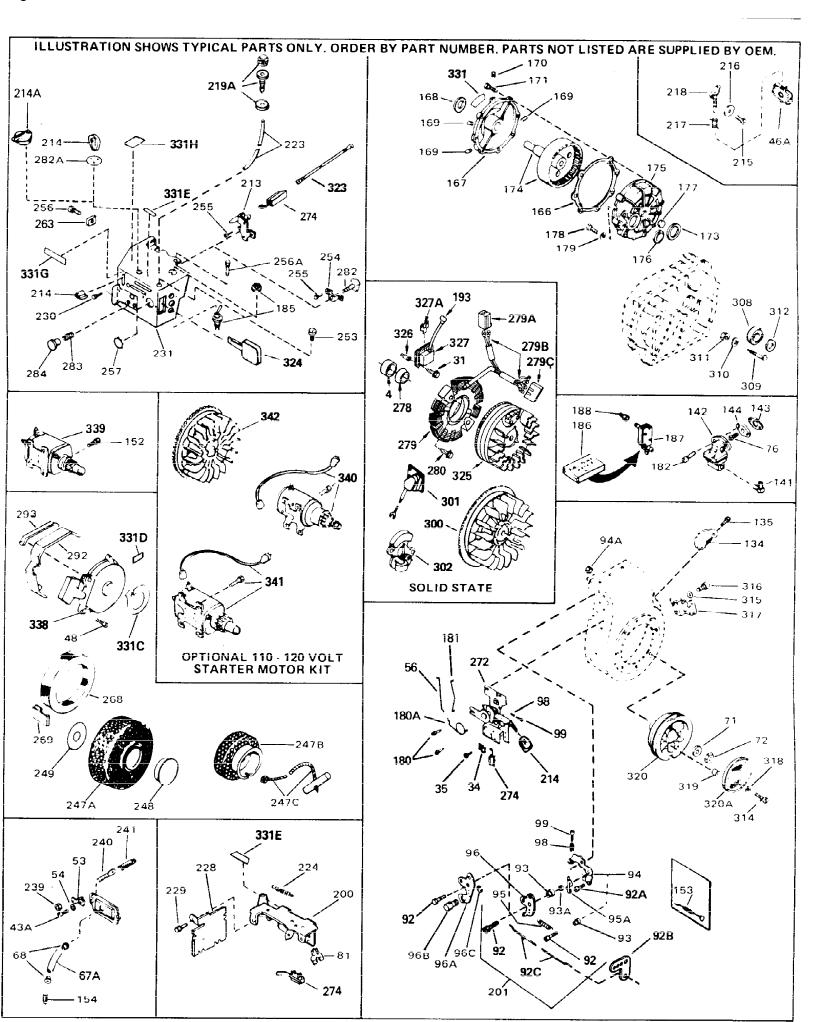

Ref #	Part Number	Qty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
	30824		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	33013		Cover, Bubble
	650736		Screw, 10-16 x 3/8"
	610118		Cover, Spark plug (Use as required)
	33109A		Control Bracket (Incl. 224 & 274)
	30826		Spring, Extension
	650257		Screw, 8-32 x 5/16"
	33134		Cover, Carburetor
	32398		Bracket, Choke
	28820		Screw, 10-32 x 1/2"
	650765		Screw, 10-32 x 1/2"
	650760		Screw, 8-32 x 3/8"
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	32397		Plate Assy., Choke
	32399		Spring, Choke stop
	32400		Knob, Choke
	31680		Guard, Starter
	32576		Seal, Snow guard
	31683		Decal, Choke
	550223		Decal, Name
	31844		Decal, Instruction
	35344		Decal, Control
	590473		Rewind Starter (Refer to Division 5, Section C, page
550	390473		29 for breakdown)
			29 IOI DIEakuowii)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

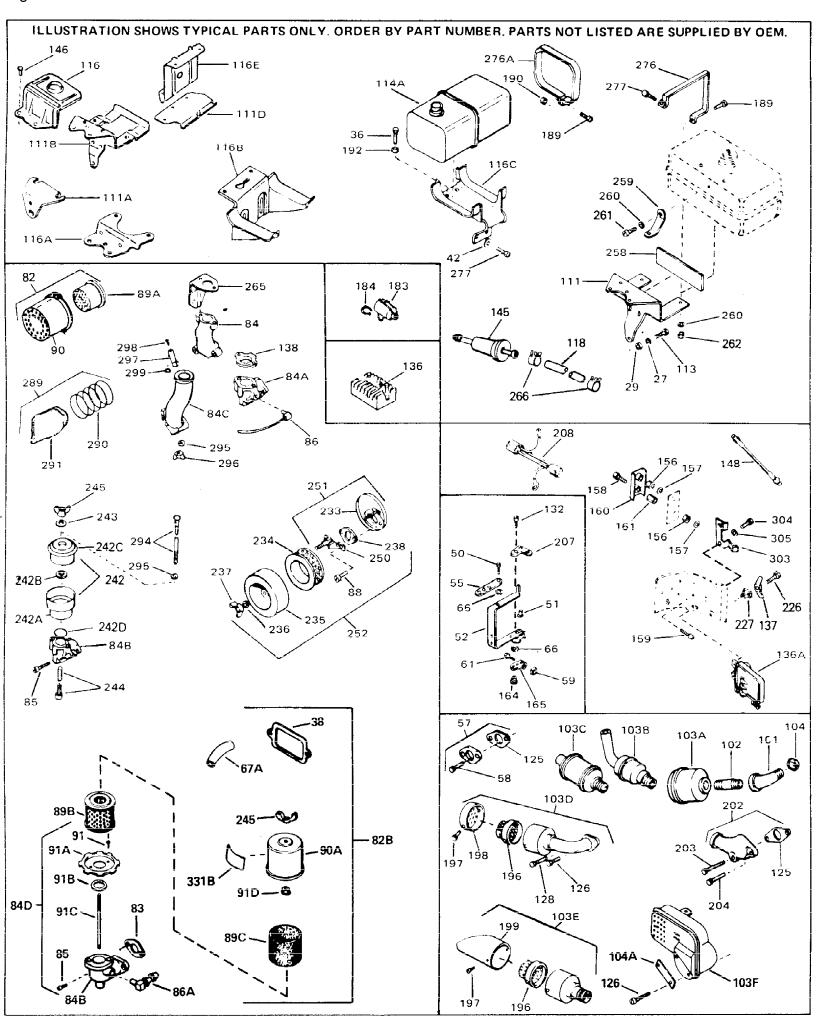

Ref #	Part Number	Qty	
27	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
42	26073		Washer (Use as required)
42	650691		Washer, Flat (Use as required)
50	650548		Screw, 8-32 x 5/16"
51	30319		Rivet, Split (Used in early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, $5/16-18 \ge 3/4$ " (Use as require d)
	29216		
	29826		Nut, Lock, 10-32 Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C,
020	750501		90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only
			on engines with an externally vented fully adjustable
			carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238
			& 331B) (Use as required)
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B &
040	0-1010		91C) (Use in 730561 assembly only) NOTE: 130010
			thru 10C & 11 used in early production only.
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	33353		Bracket, Lower fuel tank
	650561		Screw, 1/4-20 x 5/8"
	33352A		Plate, Upper fuel tank mounting
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	792020		Screw, 1/4-20 x 2-1/4"
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
266	26460		Clamp, Fuel line