

Ref #	Part Number	Qty	Description
1	32586C	•	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
2	27652		Pin, Dowel
	27642		Plug, Oil drain
_	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (3/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10	34242		Dipper, Oil
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced
			by 34242 oil dipper but 650662C screw must be
			used.)
4.4	20507		,
	32587		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This
			gear is servicable onlywhen it is pinned to the
			crankshaft.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
30	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
32	32631A		* Gasket, Cylinder head
33	30938A		Head, Cylinder
34	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
31	UTLU I		Nesisioi opaiki lug


Page 3 of 9

H70-130208E Engine Parts List #1


	Part Number	Qty	Description
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	26073		Washer (Use as required)
42	650691		Washer, Flat (Use as required)
42A	650690		Washer, Belleville (Use as required)
43	650128		Screw, 10-24 x 1/2"
45	27915A		* Gasket, Intake
46	30195A		Flange, Carburetor (Incl. 79 & 80)
47	30196		Screw, 5/16-18 x 3/4"
48	29716		Screw, 1/4-28 x 7/16"
50	650548		Screw, 8-32 x 5/16"
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
56	30824		Link, Throttle
	29216		Nut, Lock, 10-32
61	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
63	30699B		Governor Rod Ass'y. (This one-piece governor rodis
			no longer used. It is replaced by 30699C ass'y., Ref.
			no. 63A)
634	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
	8116		Nut, Hex
	29536		Blower Housing Baffle (without electric starter
73	23330		knock-out) (Use as required)
70	050504		, (
/3	35256A		Blower Housing Baffle (with electric starter
			knock-out) (Use as required) (Point Ignition)
	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
79	29752		Nut & Lockwasher Assy., 1/4-28
80	650572		Screw, 1/4-28 x 1-1/8"
82A	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A &
			331B) (Use as required)
97	34240		Ground Wire
	29538		Base, Engine mounting
	32401		Muffler
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
	29193		Ring, Retaining
	34158		Bracket, Fuel tank
	650561		Screw, 1/4-20 x 5/8"
110	333001		55.5.1, 17 1 25 X 6/6

	Part Number 34186A	Qty	Description Fuel Tank (Incl. 115 & 266) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap
			33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355 or 35650.
_	410144B 33032		Fuel Cap (White Plastic)(Std)(As requ ired) Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115 116D 118 118 118 118 120 121 124 125 126 127 128 129 130 131 133 149 151 193 205 209 223 225 226 227 246 247 266 270 271 274 287 331	35355 34159 29774 30705 30962 650128 30622A 650542 27930A 30196 26073 650694A 32589 31843A 650836 650493 30747 650665 610118 650561 30939A 32180C 34126 650760 28545 32125 590417 26460 31461 33876 610973 27275 34246 550223		(Use as required) Fuel Cap (Use as required) Plate, Fuel tank mounting Fuel Line (Braided 8-1/4" 21 cm) (Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Gasket, Exhaust Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Screw, 1/4-15 x 7/8" Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Line, Primer Bracket, Grommet mounting Screw, 8-32 x 3/8" Grommet Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Gasket, Stator Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Decal, Name
332 333 334	34346 30547A 30548B 631021 631920		Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75) (Refer to Division 5, Section A,
330	00.020		page 138 for breakdown)

Ref #	Part Number	Qty	Description
337	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)

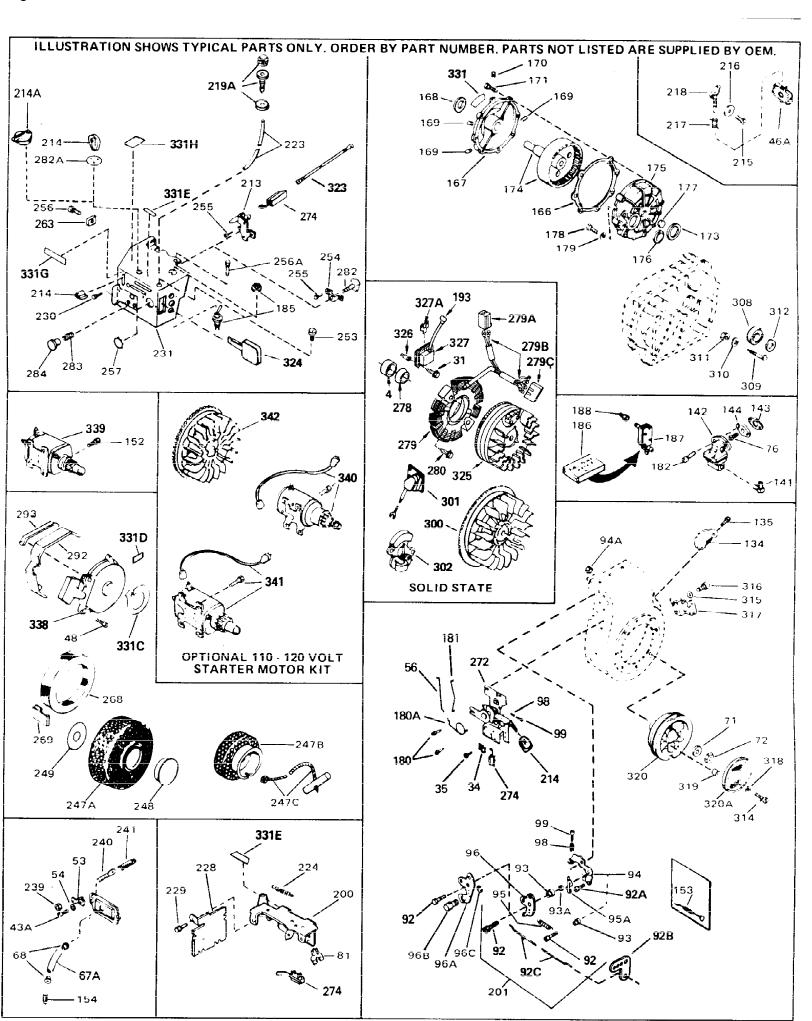

Ref #	Part Number Qty	Description
31	650489	Screw, 1/4-20 x 5/8"
34	27793	Clip, Conduit (Use as required)
35	28942	Screw, 10-32 x 3/8" (Use as required)
43A	650128	Screw, 10-24 x 1/2"
48	29716	Screw, 1/4-28 x 7/16"
56	30824	Link, Throttle
71	650815	Washer, Belleville
72	8116	Nut, Hex
193	610118	Cover, Spark plug (Use as required)
200	33108A	Control Bracket (Incl. 224 & 274)
214A	35438	Knob, Control
219A	570629A	Primer Assy.
	32180C	Line, Primer
	30826	Spring, Extension
	650257	Screw, 8-32 x 5/16"
	34581	Cover, Carburetor
	32398	Bracket, Choke
	28820	Screw, 10-32 x 1/2"
	650760	Screw, 8-32 x 3/8"
	650765	Screw, 10-32 x 1/2"
	31291	Plug, Cover
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	34127	Guard Starter
	32576	Seal, Snow guard
	550223	Decal, Name
	34416	Decal, Choke
	34414	Decal, Warning
	34144	Decal, Primer
	590473	Rewind Starter (Refer to Division 5, Section C, page
		29 for breakdown)
240	222200	Ctartar Matar Kit (110 120 Valt) This 110 120 valt
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt
		starter motor kit may have been added to this engine.
		It can be added only if cylinder hasdrilled and tapped
		starter mounting bosses and a ring gear flywheel
		(see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
		cap of motor, of our decai, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines
		using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std.
0 1 2	011042	Point ignition) (Ring gear flywheel required on
		engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on
		engines using 110-120 volt starter kits listed above)
		(Use withSolid State ignition)

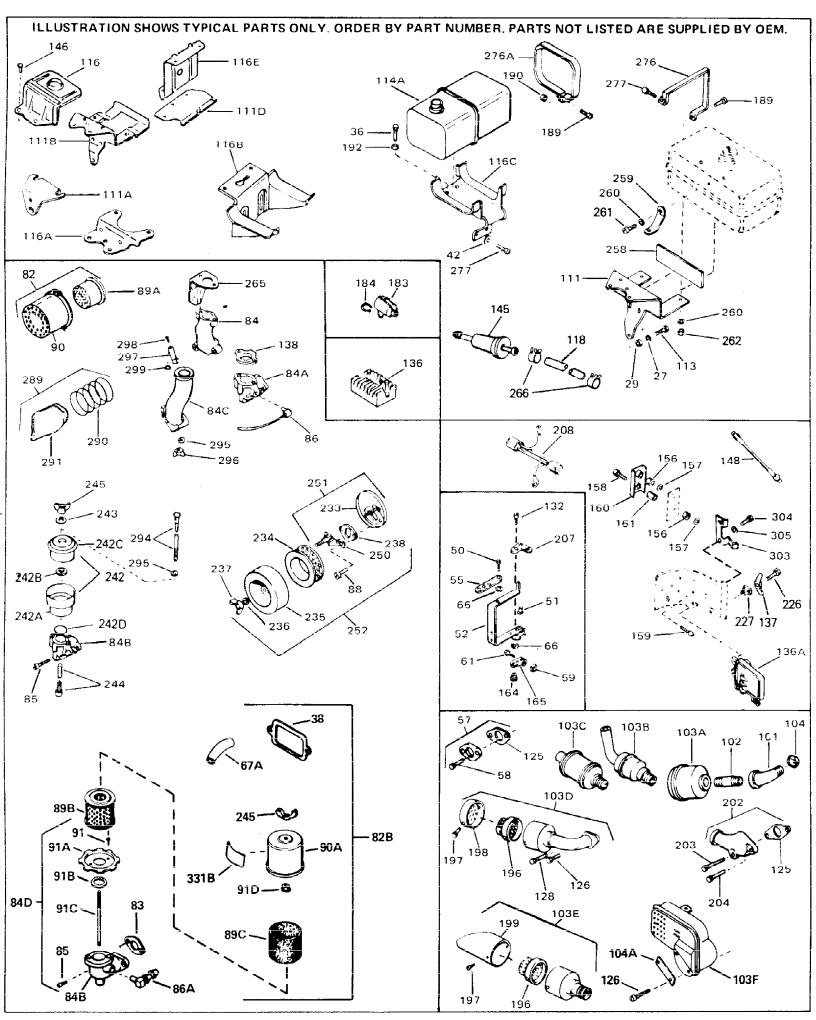

Dof #	Dort Number	Ot /	Description
27 36 36 38 42 42 50 51	Part Number 27513 650697A 650695A 650694A 27896A 26073 650691 650548 30319 32326A	Qiy	Description Lockwasher, 1/4" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as requi red) Screw, 5/16-18 x 2-1/4" (Use as requi red) Screw, 5/16-18 x 2" (Use as required) * Gasket, Breather cover Washer (Use as required) Washer, Flat (Use as required) Screw, 8-32 x 5/16" Rivet, Split (Used in early productio n) Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
57 58 59 61 66	30205 730130 30196 29216 29826 29918 730561		Bracket, Adjusting Exh.Adap.Kit (Incl. 58 & 125) (Use as req.) Screw, 5/16-18 x 3/4" (Use as require d) Nut, Lock, 10-32 Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only) NOTE: 130010 thru 10C & 11 used in early production only.
113 118 118 118 125 126 128 132 148 148 202 203 204 226 227	391026 650561 29774 30705 30962 27930A 30196 650694A 650548 34067 34069 31288 650697A 6021A 650760 28545 26460		Opt. Spark Arrest Muffler (Incl.196,1 97,199) Screw, 1/4-20 x 5/8" Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Gasket, Exhaust Screw, 5/16-18 x 3/4" Screw, 5/16-18 x 2" (Use as required) Screw, 8-32 x 5/16" (Early production) Wire Assy., Alternator adapter (4-1/4") Wire Assy., Alternator adapter (6-3/4") Exh. Adaptor Kit (Incl.125,203,204) (As req.) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 1-1/2" (Use as required) Screw, 8-32 x 3/8" Grommet Clamp, Fuel line