


Ref #	Part Number	Qtv E	Description
1	32586C	·	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
5	32783	lı	ntake Valve (Std.) (Incl. 9)
5	32784	lı	ntake Valve (1/32" OS) (Incl. 9)
6	27878A	Е	Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	27881		
			Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	34242		Dipper, Oil
10A	32590	F	Plate, Lock & Oil dipper (This plate may be replaced
		b	by 34242 oil dipper but 650662C screw must be
		U	used.)
11	32587	c	Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This
		_	gear is servicable onlywhen it is pinned to the
		С	crankshaft.
14A	32592B	F	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.010 OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C	S	Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034	L	Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	28427		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	34011A		Dipstick, Oil (Incl. 30)
	33893A		Fube, Oil filler
	30684		Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	33590		O" Ring
	650489	S	Screw, 1/4-20 x 5/8"
32	32631A	*	Gasket, Cylinder head
33	30938A	H	Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
3/	33636	F	Resistor Spark Plug (RJ-8C)


	Part Number	Qty	Description
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
39	28423		Body, Breather
40	28424		Element, Breather
41	28425		Cover, Valve spring
42A	650690		Washer, Belleville (Use as required)
42	26073		Washer (Use as required)
42	650691		Washer, Flat (Use as required)
43	650128		Screw, 10-24 x 1/2"
45	27915A		* Gasket, Intake
46	34712		Flange Carburetor
47	30196		Screw, 5/16-18 x 3/4"
48	29716		Screw, 1/4-28 x 7/16"
50	650548		Screw, 8-32 x 5/16"
	33454		Lever Assy., Governor
	34662		Link, Throttle
59	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
	30699B		Governor Rod Ass'y. (This one-piece governor rodis
			no longer used. It is replaced by 30699C ass'y.,Ref.
			no. 63A)
			•
	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	35260		Blower Housing (For electric starter)
	650815		Washer, Belleville
	8116		Nut, Hex
73	29536		Blower Housing Baffle (without electric starter
			knock-out) (Use as required)
73	35256A		Blower Housing Baffle (with electric starter
. 0	002007.		knock-out) (Use as required) (Point Ignition)
	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	650517		Screw, 1/4-20 x 27/32"
82A	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A &
			331B) (Use as required)
97	34240		Ground Wire
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	29538		Base, Engine mounting
	32401		Muffler
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
	29193		Ring, Retaining
	34158		Bracket, Fuel tank
	650561 410144B		Screw, 1/4-20 x 5/8" Fuel Cap (Milita Plactic)(Std)(As required)
115	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)

D ("	D. (A)	O 1	
	Part Number	Qty	Description Final Cap (Charged Plantia) (Spurt registers Law)
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355		Fuel Cap (Use as required)
116D	34159		Plate, Fuel tank mounting
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128		Screw, 10-24 x 1/2" (Use as required)
	30622A		Extension, Blower housing
	650542		Screw, 5/16-18 x 3/4"
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	650493 30747		Screw, 1/4-20 x 1-3/4" Clip, Shorting
	650665		Screw, 1/4-15 x 7/8"
	610118		Cover, Spark plug (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30939A		Cover, Cylinder head
	34814		Primer Assy.
	32180C		Line, Primer
	34126		Bracket, Grommet mounting
	650760		Screw, 8-32 x 3/8"
227	28545		Grommet
	32125		Cup, Starter
	590417		Screen, Starter cup
	26460		Clamp, Fuel line
	31461		Bushing, Crankshaft (Use as required)
	33876		Gasket, Stator
	610973		Terminal Ass'y. (As req. on late prod uction)
	27275		Clip, Hi-tension wire (Use as require d)
	34246 34346		Clip, Ground wire (Use as required) Decal, Instruction
	550223		Decal, Name
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
	631920		Carburetor (Incl. 75) (Refer to Division 5, Section A,
			page 138 for breakdown)
337	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)

Ref # Part Number	Qty Description
343 33239A	Gasket Set (Incl. items marked*)

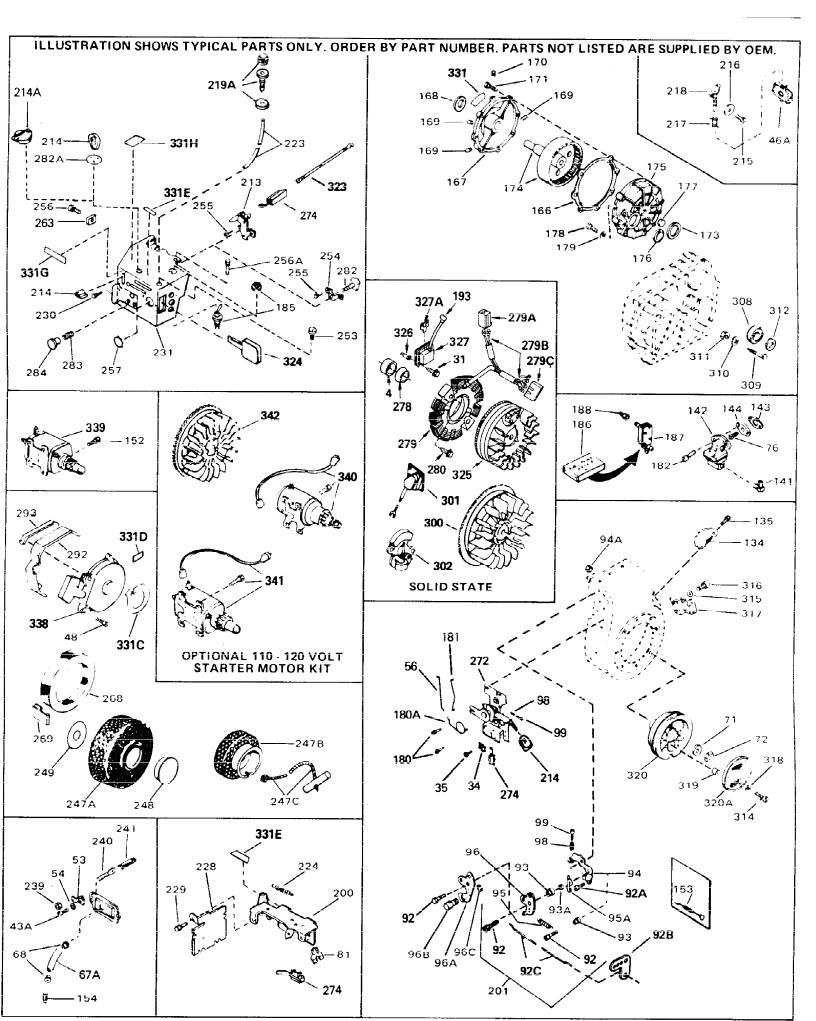

Ref #	Part Number Q	ty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
	34662		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	650821		Screw, 10-32 x 1/2"
	34663		Spring, Speed control
	34661		Link, Governor
	610118		Cover, Spark plug (Use as required)
	35438		Knob, Control
	32180C		Line, Primer
	650257		Screw, 8-32 x 5/16"
	34672		Cover, Carburetor
	32398		Bracket, Choke
	28820		Screw, 10-32 x 1/2"
	650760		Screw, 8-32 x 3/8"
	650765		Screw, 10-32 x 1/2"
	650764		Nut, "U" Type (Use as required)
	34664		Control Bracket (Incl. 98, 99, 180A & 274)
	610973		Terminal Ass'y. (As req. on late prod uction)
	34127		Guard Starter
	32576		Seal, Snow guard
	34414		Decal, Warning
	34416		Decal, Choke
	34144		Decal, Primer
	550223		Decal, Name
	590473		Rewind Starter (Refer to Division 5, Section C, page
000	000170		29 for breakdown)
			•
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt
			starter motor kit may have been added to this engine.
			It can be added only if cylinder hasdrilled and tapped
			starter mounting bosses and a ring gear flywheel
			(see#342). Refer to service number stamped on end
			cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines
_			using 110-120 volt starter kits listed above)
0.40	014040		,
342	611042		Flywheel (Used on Type letters H and above) (Std.
			Point ignition) (Ring gear flywheel required on
			engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on
			engines using 110-120 volt starter kits listed above)
			(Use withSolid State ignition)
			- ·

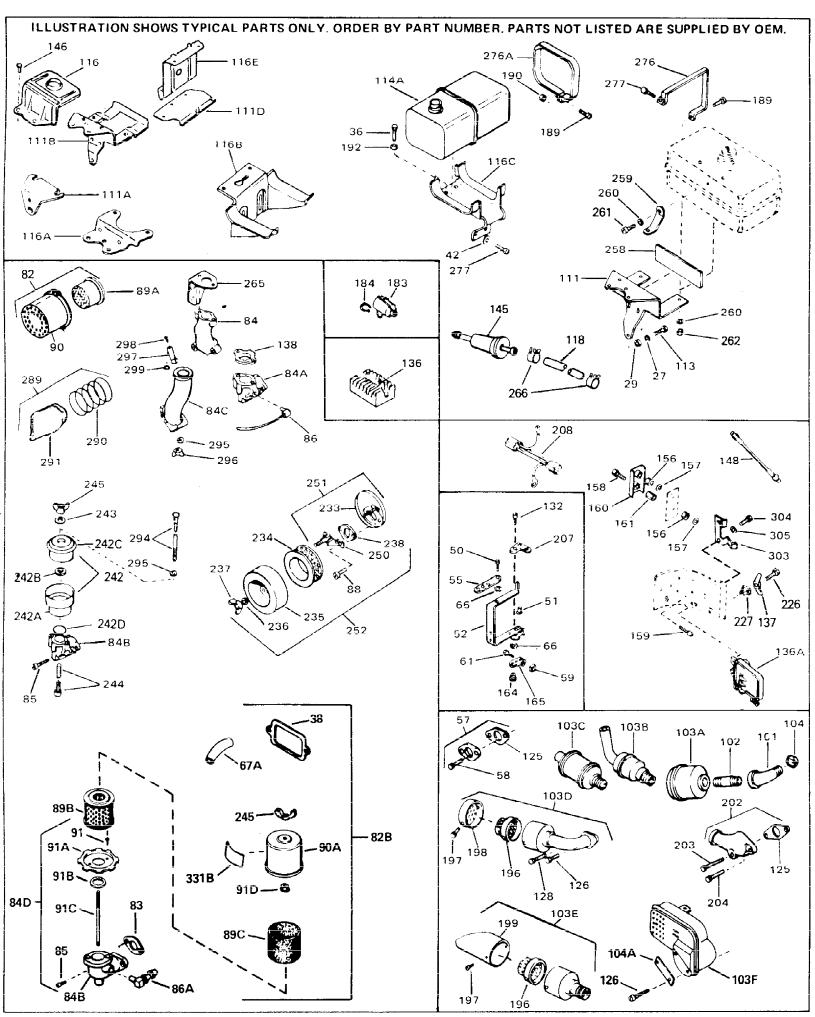

Ref #	Part Number	Qty	Description
27	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
	33454		Lever Assy., Governor
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C,
			90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only
			on engines with an externally vented fully adjustable
			carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238
			& 331B) (Use as required)
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B &
015	0.10.10		91C) (Use in 730561 assembly only) NOTE: 130010
			thru 10C & 11 used in early production only.
400	204.000		
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	650561		Screw, 1/4-20 x 5/8" Fuel Line (Preided 8 1/4" 21 em)(Line en reg.)
	29774 30705		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
_	650548		Screw, 8-32 x 5/16" (Early production)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	30322		Nut & Lockwasher (Early Prod. Only)
	29916		Clamp, Governor lever (Early Prod. On ly)
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650760		Screw, 8-32 x 3/8"
	28545		Grommet
266	26460		Clamp, Fuel line