
ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

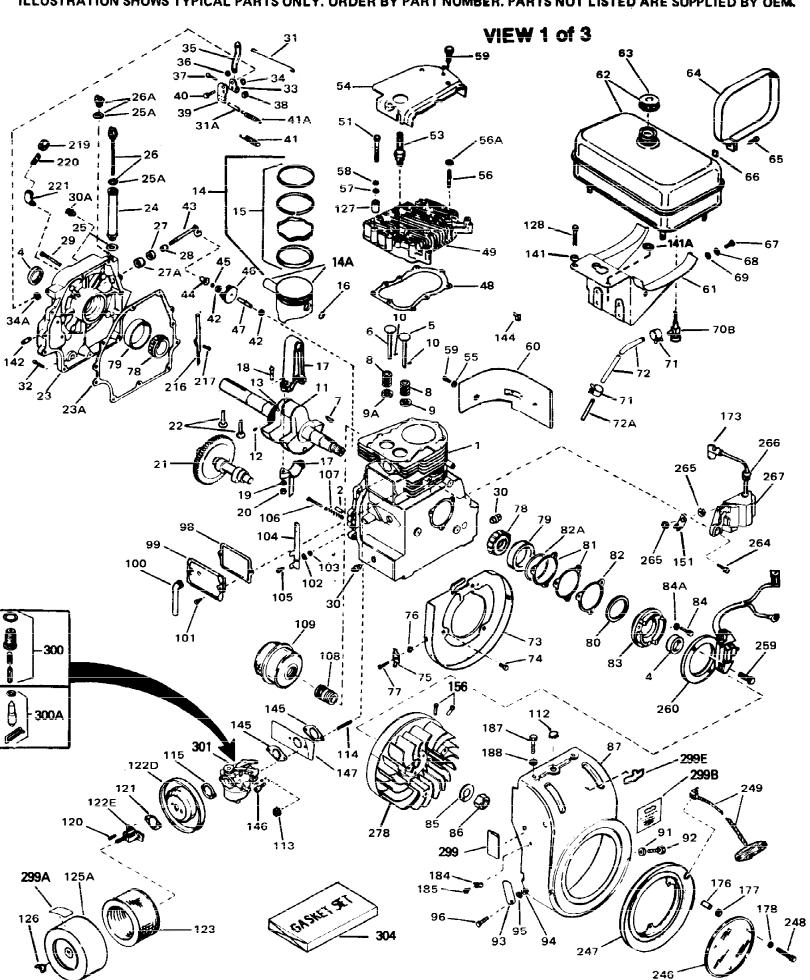


Ref #	Part Number	Otv	Description
1	33039	Qty	Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
	27652		Pin, Dowel
	31950		Seal, Oil
5	31940		Intake Valve (Std.)
	31941		Intake Valve (1/32" OS) (Incl. 9)
6	31942		Exhaust Valve (Std.)
6	31943		Exhaust Valve (1/32" OS) (Incl. 9)
7	650592		Key, Flywheel
8	31944		Spring, Valve
9A	31945		Cap, Lower valve spring (Std.)
9A	31946		Cap, Lower valve spring (1/32" OS)
	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
	20810		Pin, Valve spring retainer
	34278B		Crankshaft (Incl. 12, 13, 78 & 79)
	29783		Pin, Crankshaft gear
	31931		Gear, Crankshaft
	32001C		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
	32002B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32003B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32619B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	34508		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
	34509 34510		Piston, Pin & Ring Set (.010" OS)
	34850		Piston, Pin & Ring Set (.020" OS) Piston, Pin & Ring Set (.030" OS)
	34523		Piston, Pin & Ring Set (.030 '03) Piston, Pin & Ring Set (.040" OS)
	32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	32004		Ring Set (Std.) (3-5/16" Bore)
	32005		Ring Set (.010" OS)
	32006		Ring Set (.020" OS)
	32623		Ring Set (.030" OS)
	32624		Ring Set (.040" OS)
	32321		Re-Ringing Set, Piston
16	31919		Ring, Piston pin retaining
17	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
17	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18	32077		Bolt, Connecting rod
19	26073		Washer, Connecting rod
	28264		Nut Assy., Lock
	32150		Camshaft (MCR)
	31939		Lifter, Valve
	32580A		Cover, Cylinder (Incl. 4, 28, 30, 34, & 43)
	31956A		* Gasket, Cylinder cover
	33992A		Oil Fill Tube
	33590		"O" Ring
	33993A		Dipstick (Incl. 25A)
	32426		Spacer, Governor rod
	650588		Screw, 1/4-20 x 2"
	31927		Oil Drain Plug
	31968 650451		Link, Governor
	650451 31964		Screw, 1/4-20 x 1"
	29193		Clamp, Governor lever Ring, Retaining
	31963		Lever, Governor adjusting
33	01300		Level, Governor adjusting


Rof #	Part Number	Qty	Description
	650518	Qty	Lockwasher
	650544		Screw, 10-24 x 7/8"
	7975		
			Nut, 10-24
	31965		Plate, Governor spring
	30312		Screw, 10-32 x 1/2"
	31967		Spring, Governor
	30590A		Washer, Flat
	32425		Rod Assy., Governor
	31948		Spool, Governor
	29193		Ring, Retaining
	31947		Gear Assy., Governor
	31930		Shaft, Mechanical Governor
	32000A		* Gasket, Cylinder head
	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650711		Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650628A		Screw, 5/16-18 x 2-3/8" (Use as requi red)
51	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
51	650714		Screw, 5/16-18 x 1-5/8" (Use as requi red)
51	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
51	650692		Screw, 5/16-18 x 1-3/4" (Use as requi red)
51	650603		Screw, 5/16-18 x 5/8" (Use as require d)
53	33636		Resistor Spark Plug (RJ-8C)
53	34251		Resistor Spark Plug (RJ-17LM)
54	33035		Cover, Cylinder head
55	28537		Washer, Plain
57	650691		Washer, Flat (Use as required)
58	650690		Washer, Belleville (Use as required)
58	8274		Washer, Lock (Use as required)
59	650128		Screw, 10-24 x 1/2"
60	31976		Extension, Blower housing
61	31978		Bracket, Fuel tank
63	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile)
			(Use as required)
6.4	31979		Stron Fuel tonk
			Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		Nut, Flange whiz-lock, 1/4-20
	650517		Screw, 1/4-20 x 27/32" (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	29683		Strainer & Shut-off, Fuel
	26460		Clamp, Fuel line (Use as required)
	30705		Fuel Line (Braided) (16") (Use as req uired)
	30962		Fuel Line (Braided) (32") (Use as required)
	30965		Fuel Line (Braided) (48") (Use as required)
	29774		Fuel Line (Braided) (8.25") (Use as r equired)
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31932		Bearing, Tapered roller
79	31928		Cup, Bearing

Spacer, Steel (.010" thicky NOTE: Determin gap between the cover and the machined su the cylinder which can be from .001"up to .00 which case no shim gaskets will be required gasket must be limited to a combined total of thick. Steel spacersmust be used as required gasket must be limited to a combined total of thick. Steel spacersmust be used as required gasket must be limited to a combined total of thick case no shim gaskets will be required gasket must be limited to a combined total of thick. Steel spacersmust be used as required gasket must be limited to a combined total of thick. Steel spacersmust be used as required gasket must be limited to a combined total of thick. Steel spacersmust be used as required gasket must be limited to a combined total of thick. Steel spacersmust be used as required gasket must be limited to a combined total of thick. Steel spacersmust be used as required gasket must be limited to a combined total of thick. Steel spacersmust be used as required gasket must be limited to a combined total of thick. Steel spacersmust be used as required spacersmust be used as required spacersmust be used as required to a combined total of .010" in which shim gaskets will be required. Use of gasket limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminate the cover and the machined surface on the cover and the machined surface o	rface on 07" in Use of f.010" d ermine d surface 0.007" in Use of f.010" ermine d surface d surface
the gap between the cover and the machine on the cylinder which can be from .001"up to which case no shim gaskets will be required gasket must be limited to a combined total of thick. Steel spacersmust be used as req * Gasket, Shim (.005/.007 thick) NOTE: Det the gap between the cover and the machine on the cylinder which can be from .001"up to which case no shim gaskets will be required gasket must be limited to a combined total of thick. Steel spacersmust be used as req * Gasket, Shim (.005/.007 thick) NOTE: Determine on the cylinder which can be from .001"up to .001"up to .001"up to .007" in which shim gaskets will be required. Use of gasket limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat spacersmust be used as required to eliminat spacersmust be used as required to eliminat Section S	d surface .007" in . Use of f .010" ermine d surface
the gap between the cover and the machine on the cylinder which can be from .001"up to which case no shim gaskets will be required gasket must be limited to a combined total of thick. Steel spacersmust be used as req 82A 32599 83 32577 Cover, Cylinder NOTE: Determine the gap to the cover and the machined surface on the cover and the	d surface
83 32577 Cover, Cylinder NOTE: Determine the gap to the cover and the machined surface on the cover and the machined surface of the cover and the	Use of
84A 650679	cylinder case no t must be eel
99 31957 100 35350 Tube, Breather 101 650128 Screw, 10-24 x 1/2" 102 28558 Washer, Wave 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 Spring 108 32042 Nipple, Exhaust pipe 112 33038 Plug, Button (Use as required) 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32810 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 5/8" (Use as require d)	


Ref #	Part Number	Qty	Description
128	792028		Screw, 5/16-18 x 7/8" (Use as require d)
141A	8274		Lockwasher, Split (Use as required)
141	26073		Washer, Flat (Use as required)
145	33263		* Gasket, Carburetor
146	650451		Screw, 1/4-20 x 1"
147	34061		Baffle, Air
151	610908		Terminal, Female
156	730201		Trigger Pin Kit (Use as required)
173	610118		Cover, Spark plug (Use as required)
176	31992		Spacer, Screen
177	8345		Washer, 1/4 plain (Use as required)
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
187	650713		Screw, 5/16-18 x 5/8"
188	26073		Washer, Flat
246	33776		Screen, Starter pulley
247	31980		Pulley, Starter
248	650680		Screw, 1/4-20 x 1-1/2"
249	32046		Rope Assy., Starter (Use as required)
264	650661		Screw, 1/4-20 x 3/4"
265	610408		Nut, Hex
266	610750		Grommet, Lead wire
267	610906		Solid State Magneto (Incl.151,173,265,266)(20 Amp)
278	610901		Solid State Flywheel
299B	550223		Decal, Name
299B	32676		Decal, Solid State
299	34346		Decal, Instruction
299A	31752		Decal, Air cleaner
300A	631021		Inlet Needle, Seat & Clip Assy.
301	631975		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 150 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

This illustration may not depict actual equipment and is for reference only! **VIEW 2 of 3** 132 133 175 135 129 262 268 257A 270A 260A 255 235 252 275 299C 165

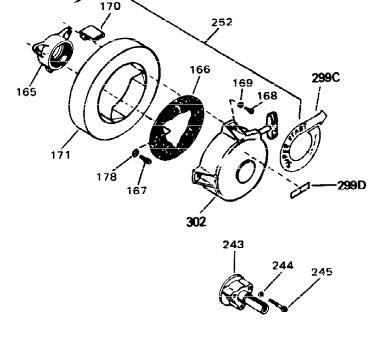

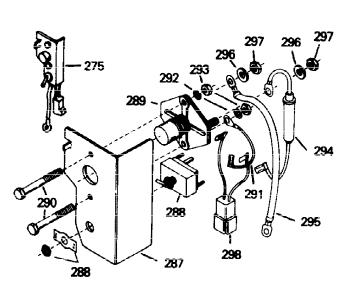

Ref #	Part Number	Qty	Description
	27070		Washer, Lock 1/4 E.T. (Use as require d)
	650675		Washer, Flat 1/4 (Use as required)
	650701		Screw, 8-18 x 7/16" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736		Screw, 10-16 x 3/8" (Use as required)
	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 &
202	700101		291) (Use as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
254A	610902		Alternator Coil (20 Amp)(Incl.256,257,258)
255	650521		Screw, 10-32 x 1-1/8"
	610905		Terminal
	610904		Terminal
	610824		Flat Connector (Female terminals) (As req.)
	610903		Connector, Flat
	610750		Grommet, Lead wire
	610996		Regulator (20 Amp) (Incl. 270 thru 27 4)
	30063		Screw, 1/4-20 x 1/2"
	610921		Connector
	610990		Connector, Male
	610992		Terminal, Female
	610989		Terminal, Female
	610992		Terminal, Female
	610991		Terminal, Female
	730198		Starter Switch Kit(Incl. 287-298) (As req.)
303	33835		Electric Starter Motor (12 Volt) NOTE: The 32817
			and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped
			on end cap of motor, or on decal for identification.
			Refer to Division 5, Section D for breakdown.
			Telef to Division 3, Section D for breakdown.

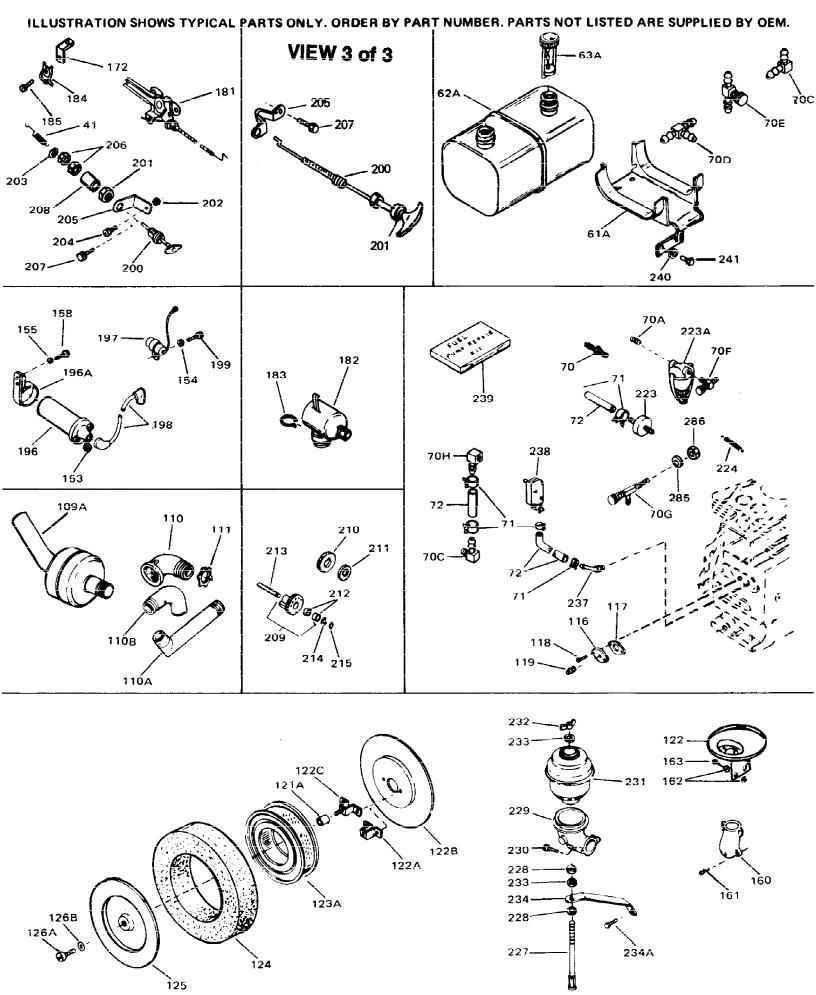

Ref #	Part Number	Qty	Description
41	31967		Spring, Governor
62A	31977		Fuel Tank (Incl. 63)
71	26460		Clamp, Fuel line (Use as required)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
111	650590		Nut, Conduit
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
122B	34065		Bracket, Air cleaner
122C	32907B		Bracket, Air cleaner
123A	32008		Element, Air cleaner
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"