
ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

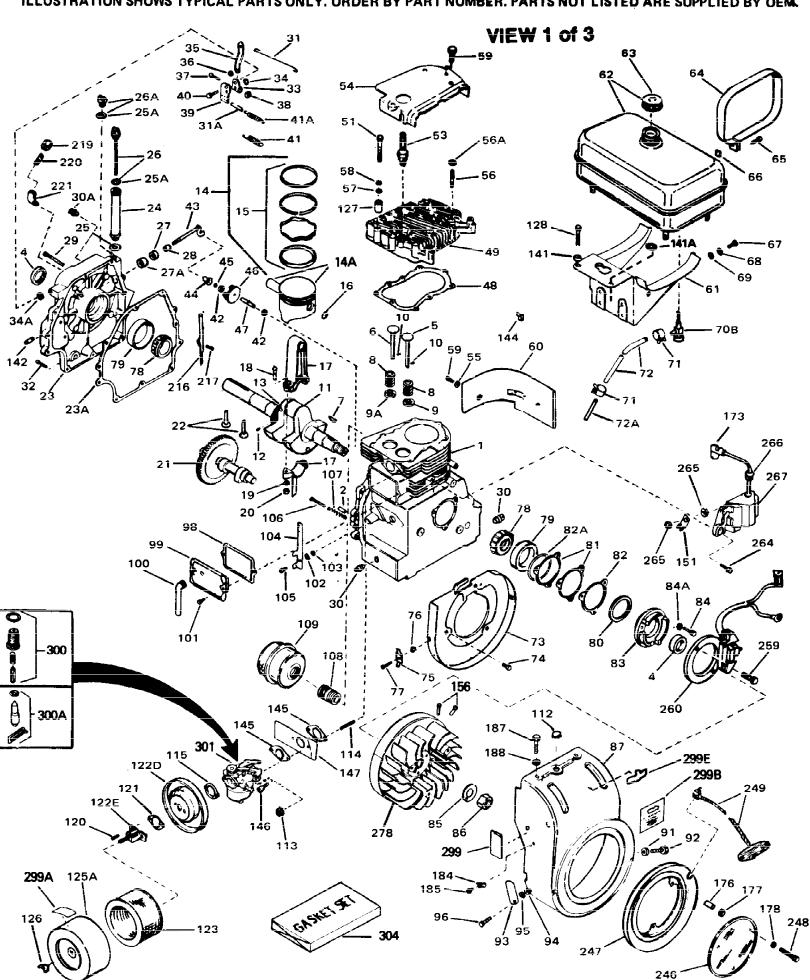


Ref #	Part Number	Qty	Description
1	33039		Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
=	27652		Pin, Dowel
	31950		Seal, Oil
	31940		Intake Valve (Std.)
	31941		Intake Valve (1/32" OS) (Incl. 9)
	31942		Exhaust Valve (Std.)
	31943		Exhaust Valve (1/32" OS) (Incl. 9)
	650592		Key, Flywheel
8	31944		Spring, Valve
9A	31945		Cap, Lower valve spring (Std.)
9A	31946		Cap, Lower valve spring (1/32" OS)
9	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
	20810		Pin, Valve spring retainer
	33821B		Crankshaft (Incl. 12, 13, 78 & 79)
	29783		Pin, Crankshaft gear
	34692		Gear, Crankshaft
	32001C		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
	32002B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32003B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32619B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	34508		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
	34509		Piston, Pin & Ring Set (.010" OS)
	34510		Piston, Pin & Ring Set (.020" OS)
14	34850		Piston, Pin & Ring Set (.030" OS)
	34523		Piston, Pin & Ring Set (.040" OS)
14	32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
15	32004		Ring Set (Std.) (3-5/16" Bore)
15	32005		Ring Set (.010" OS)
15	32006		Ring Set (.020" OS)
15	32623		Ring Set (.030" OS)
	32624		Ring Set (.040" OS)
	32321		Re-Ringing Set, Piston
	31919		Ring, Piston pin retaining
	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
	32077		Bolt, Connecting rod
			Washer, Connecting rod
	26073		•
	28264		Nut Assy., Lock
	34752		Camshaft (MCR) (Helical)
	31939		Lifter, Valve
	31956A		* Gasket, Cylinder cover
	33466		Cover, Cylinder (Incl. 4 & 213)
	29673		* Gasket, Oil fill
26	33069		Dipstick (Incl. 25A)
28	32426		Spacer, Governor rod
29	650492		Screw, 1/4-20 x 2-1/4"
30	31927		Oil Drain Plug
	28483		Oil Drain Plug
	31968		Link, Governor
	650451		Screw, 1/4-20 x 1"
	31964		Clamp, Governor lever
	29193		Ring, Retaining
			o o
35	31963		Lever, Governor adjusting


Ref #	Part Number	Qty	Description
36	650518	-	Lockwasher
37	650544		Screw, 10-24 x 7/8"
38	7975		Nut, 10-24
	31965		Plate, Governor spring
	30312		Screw, 10-32 x 1/2"
	31967		Spring, Governor
	30590A		Washer, Flat
	32425		Rod Assy., Governor
	31948		Spool, Governor
	29193		Ring, Retaining
	34691		Governor Gear Ass'y. (Helical)
	31930		Shaft, Mechanical Governor
	32000A		* Gasket, Cylinder head
	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650711		Screw, 5/16-18 x 1-5/8" (Use as required)
			• • • • • • • • • • • • • • • • • • • •
	650628A		Screw, 5/16-18 x 2-3/8" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650714		Screw, 5/16-18 x 1-5/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650692		Screw, 5/16-18 x 1-3/4" (Use as required)
	650603		Screw, 5/16-18 x 5/8" (Use as require d)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug (RJ-17LM)
	33035		Cover, Cylinder head
	28537		Washer, Plain
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	8274		Washer, Lock (Use as required)
	650128		Screw, 10-24 x 1/2"
	31976		Extension, Blower housing
	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile)
			(Use as required)
67	650517		Screw, 1/4-20 x 27/32" (Use as requir ed)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	26460		Clamp, Fuel line (Use as required)
	29774		Fuel Line (Braided) (8.25") (Use as r equired)
	30705		Fuel Line (Braided) (0.23) (03e as required)
	30962		Fuel Line (Braided) (10) (Use as req uired)
	30965		Fuel Line (Braided) (32) (Use as req uired)
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31932		•
	31928		Bearing, Tapered roller
			Cup, Bearing
80	32031		Spacer, Steel (.010" thick) NOTE: Determine the
			gap between the cover and the machined surface on
			the cylinder which can be from .001"up to .007" in
			which case no shim gaskets will be required. Use of
			gasket must be limited to a combined total of .010"
			thick. Steel spacersmust be used as required

on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be captured. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req. 82 31972	Ref #	Part Number	Qty Description
the gap between the cover and the machined surface on the volinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req 82A 32599 "O" Ring Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat 84 792028 85 crew, 5/16-18 x 7/8" 84 650679 85 650666 86 650594 87 33044A 81 Sover, Lock 86 650594 87 33044A 81 Sover Hsg. (Incl.73) (For electric s tarter) 91 8274 92 650595 95 8274 96 650595 97 Sorew, 5/16-24 x 3/8" 98 31958 98 31958 99 31957 100 35350 101 650128 102 28558 103 31966 104 31984A 105 650597 106 650591 107 33099 112 33038 115 27272 107 33099 112 30767 128 32810 128 650429 129 50793 128 650429 129 50793 128 650419 128 792028 129 50793 120 50793 121 30767 1226 32810 126 650513 127 127 Gasket, Air cleaner 128 792028 129 50793 120 50793 121 10767 1226 350399 122 650513 123 650429 124 74 125 650451 126 650451 127 30767 128 50702 129 50703 120 650399 121 30767 1226 505039 122 50703 123 50704 124 127 (Lockwasher, Sylic (Use as require d) 126 650513 127 128 650429 128 792028 129 50703 129 50703 120 650451 121 30767 1226 505039 122 50703 123 50704 124 660451 125 650451 126 650451 127 474 128 650451 129 650451 120 650451 121 121 121 121 121 121 121 121 121 1	81	31971	the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010"
Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001" up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat Second	82	31972	the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010"
84A 650679			Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel
145 33263 * Gasket, Carburetor 146 650451 Screw, 1/4-20 x 1" 147 34061 Baffle, Air 151 610908 Terminal, Female	84A 85 86 87 91 92 95 96 98 99 100 101 102 103 104 105 106 107 112 115 120 121 125A 126 128 128	650679 650666 650594 33044A 8274 650595 8274 650595 31958 31957 35350 650128 28558 31966 31984A 650597 650591 33099 33038 27272 650399 30767 32810 650513 650713 650429 792028	Screw, 5/16-18 x 7/8" Lockwasher, 5/16" (Use as required) Washer, Lock Nut, Flywheel, 3/4-16 Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock Screw, 5/16-24 x 3/8" Washer, Lock Screw, 5/16-24 x 3/8" * Gasket, Breather Breather Assy. Tube, Breather Screw, 10-24 x 1/2" Washer, Wave Bushing, Control lever Lever, Control Screw, 10-24 x 5/8" Screw, 10-24 x 2" Spring Plug, Button (Use as required) * Gasket, Air cleaner Screw, 10-32 x 5/8" Spacer, Air cleaner Cover, Air cleaner Nut, Wing Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 3/4" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d)
LOD A SUZEE	145 146 147 151	33263 650451 34061 610908	* Gasket, Carburetor Screw, 1/4-20 x 1" Baffle, Air


Ref #	Part Number	Qty	Description
173	610118		Cover, Spark plug (Use as required)
176	32426		Spacer, Screen
177	650675		Washer, Flat 1/4"
177	8345		Washer, 1/4 plain (Use as required)
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
187	650713		Screw, 5/16-18 x 5/8"
188	26073		Washer, Flat
216	33467		Tube, Extension, Oil fill
217	650744		Screw, 10-24 x 7/8"
246	33776		Screen, Starter pulley
	650670		Screw, 1/4-20 x 3/4"
	32046		Rope Assy., Starter (Use as required)
264	650661		Screw, 1/4-20 x 3/4"
265	610408		Nut, Hex
266	610750		Grommet, Lead wire
267	610906		Solid State Magneto (Incl.151,173,265,266)(20 Amp)
	610901		Solid State Flywheel
	34346		Decal, Instruction
	631725		Inlet Needle, Seat & Clip Assy.
301	631969		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 150 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

This illustration may not depict actual equipment and is for reference only! **VIEW 2 of 3** 132 133 175 135 129 262 268 257A 270A 260A 255 235

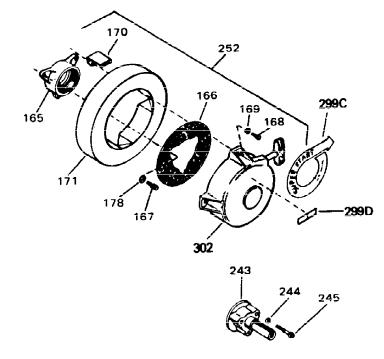

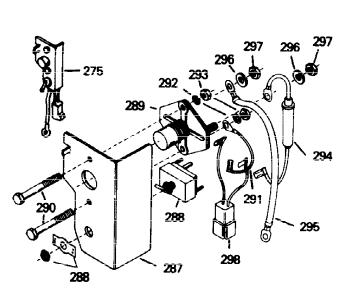

Ref #	Part Number	Qty	Description
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
180	650701		Screw, 8-18 x 7/16" (Use as required)
222	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
222	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736		Screw, 10-16 x 3/8" (Use as required)
	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
254A	610902		Alternator Coil (20 Amp)(Incl.256,257,258)
255	650521		Screw, 10-32 x 1-1/8"
256	610905		Terminal
257	610904		Terminal
	610824		Flat Connector (Female terminals) (As req.)
	610903		Connector, Flat
	610750		Grommet, Lead wire
	730198		Starter Switch Kit(Incl. 287-298) (As req.)
303	33835		Electric Starter Motor (12 Volt) NOTE: The 32817
			and 33835 starter motors are used interchangeably
			on the se models. Refer to service numberstamped
			on end cap of motor, or on decal for identification.
			Refer to Division 5, Section D for breakdown.

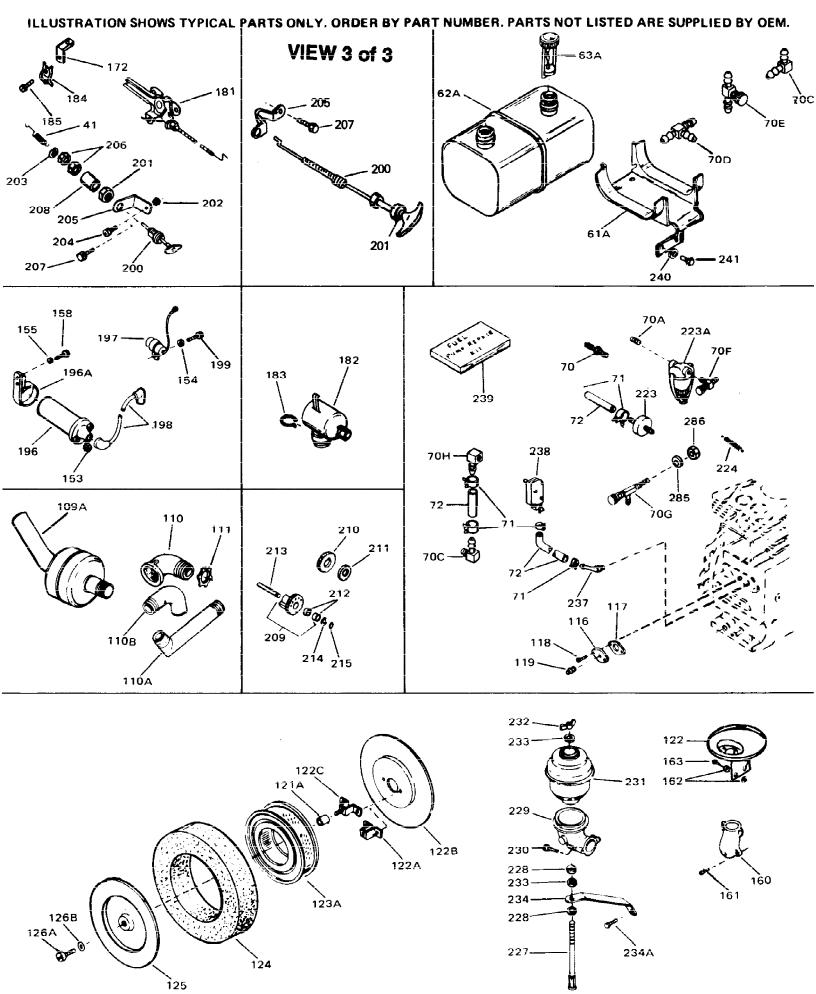

Ref #	Part Number	Qty	Description
41	31967		Spring, Governor
71	26460		Clamp, Fuel line (Use as required)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
122C	32907B		Bracket, Air cleaner
122B	34065		Bracket, Air cleaner
123A	32008		Element, Air cleaner
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
209	33964		Weight Assy., Counterbalance (Helical teeth) (Incl. 2
			of 212)
210	33963		Gear, Counterbalance Weight
211	33499		Spacer
212	33501		Bearing, Needle
213	33502		Shaft, Counterbalance
214	33503		Washer, Thrust
215	792017		Ring, Retaining
237	32958		Fitting, Fuel
238	32959		Fuel Pump, Impulse
239	33010		Repair Kit, Impulse fuel pump