
ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

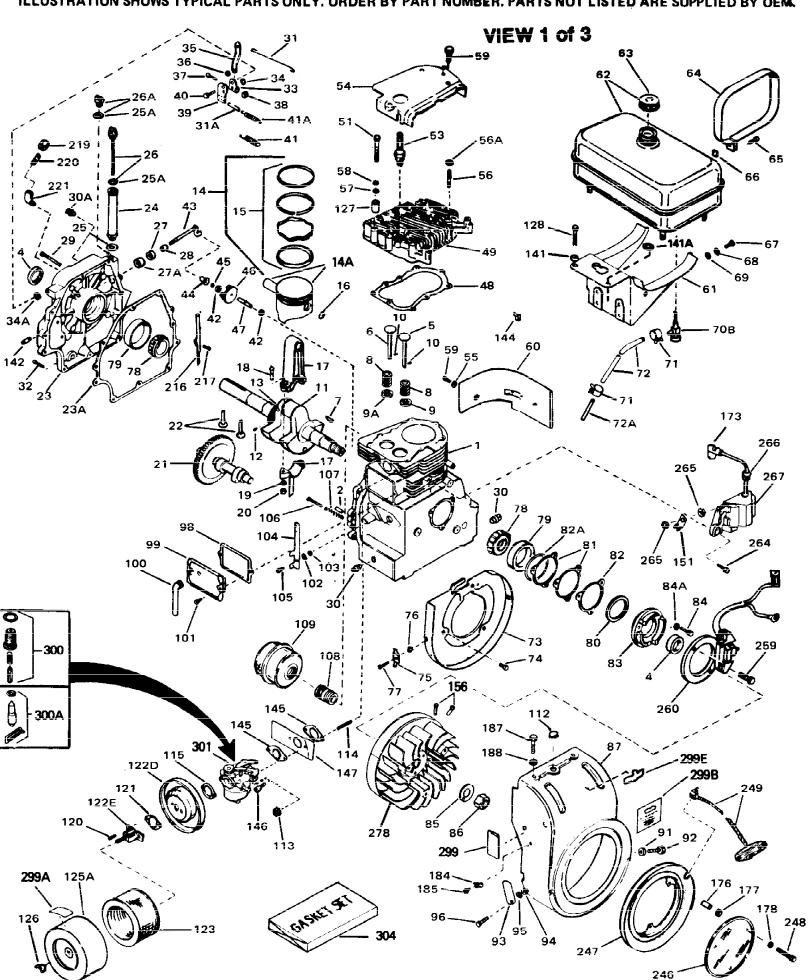

HH120-120012D Engine Parts List #1

Ref #	Part Number	Qty	Description
1	33042	·	Cylinder (Incl. 2, 4, 30 & 47) (3-1/2 " Bore)
2	27652		Pin, Dowel
	31950		Seal, Oil
	31940		Intake Valve (Std.)
	31941		Intake Valve (1/32" OS) (Incl. 9)
	31942		Exhaust Valve (Std.)
			` ,
	31943		Exhaust Valve (1/32" OS) (Incl. 9)
	650592		Key, Flywheel
	31944		Spring, Valve
	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
9A	31945		Cap, Lower valve spring (Std.)
9A	31946		Cap, Lower valve spring (1/32" OS)
10	20810		Pin, Valve spring retainer
11	33392A		Crankshaft (Incl. 12, 13, 78 & 79)
12	29783		Pin, Crankshaft gear
13	31931		Gear, Crankshaft
	34511		Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
	34512		Piston, Pin & Ring Set (.010" OS)
	34513		Piston, Pin & Ring Set (.020" OS)
	34524		Piston, Pin & Ring Set (.030" OS)
	34525		Piston, Pin & Ring Set (.040" OS)
	32238B		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -1/2")
	32239B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32240B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32621B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	32622B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	32241		Ring Set (Std.) (3-1/2" Bore)
	32242		Ring Set (.010" OS)
	32243		Ring Set (.020" OS)
	32625		Ring Set (.030" OS)
	32626		Ring Set (.040" OS)
	32336		Re-Ringing Set, Piston
16	31919		Ring, Piston pin retaining
17	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
17	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18	32077		Bolt, Connecting rod
19	26073		Washer, Connecting rod
	28264		Nut Assy., Lock
	32150		Camshaft (MCR)
	31939		Lifter, Valve
	31956A		* Gasket, Cylinder cover
	32685		Cylinder Cover (Incl.4,25,26A,28,30,3 4 & 43)
	31985		Oil Fill Tube
	29673		* Gasket, Oil fill tube
	29673		•
			* Gasket, Oil fill
	33070		Dipstick (Incl. 25A)
	32426		Spacer, Governor rod
	650588		Screw, 1/4-20 x 2"
	31927		Oil Drain Plug
	31968		Link, Governor
	650451		Screw, 1/4-20 x 1"
	31964		Clamp, Governor lever
34	29193		Ring, Retaining


Lever, Governor adjusting Lockwasher Screw, 10-24 x 178"	Ref #	Part Number	Qty	Description
36 650518 37 650544 38 7975 Nut, 10-24 38 7975 Nut, 10-24 39 31965 Plate, Governor spring 40 30312 Screw, 10-32 x 1/2" 57 Spring, Governor 42 30590A Washer, Flat 43 31948 Spool, Governor 44 31948 Spool, Governor 45 29193 Ring, Retaining 46 31947 Gear Assy., Governor 58 31947 Gear Assy., Governor 59 Shaft, Mechanical Governor 59 Shaft, Mechanical Governor 50 Shaft, Mechanical Governor 50 Screw, 5716-18 x 2" (Use as required) 51 650694A 51 650695A 51 650695A 51 650695A 51 650695A 51 650695A 51 650697A 51 650697 51 650697 51 650692 51 650693 52 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	35	31963		Lever, Governor adjusting
37 650544 38 7975 Nut 10-24 30 31965 Plate, Governor spring 40 30312 Screw, 10-32 x 1/2" 41 31967 Spring, Governor 42 30590A Washer, Flat 43 32425 Rod Assy., Governor 44 31948 Spool, Governor 45 29193 Ring, Retaining 46 31947 Gear Assy, Governor 48 32246A 49 33034 Flate, Cylinder head Fl	36	650518		
38 7975 39 31965 Plate, Governor spring 40 30312 Screw, 10-32 x 1/2" 41 31987 Spring, Governor 42 30590A Washer, Flat 43 32425 Rod Assy, Governor 45 29193 Ring, Retaining 46 31947 Gear Assy, Governor 58 48 32246A 69 33034 Respect of Spring Spring Governor 59 48 32246A 69 33034 Respect of Spring Governor 51 650694A 51 650691 51 650694A 52 650711 Screw, 5/16-18 x 2-1/2" (Use as required) 51 650695A 53 650895A 53 650895A 54 55 650895 55 650897 56 650897 56 650897 56 650897 57 650899 58 650899 59 650128 50 650890 50 65090 50 65				Screw. 10-24 x 7/8"
39 31965 40 30312 5crew, 10-23 x 1/2* 41 31987 5pring, Governor 42 30590A Washer, Flat 43 32425 Rod Assy, Governor 44 31948 Spool, Governor 45 29193 Ring, Retaining 46 31947 Gear Assy, Governor 47 31930 Shaft, Mechanical Governor 48 32246A 49 33034 Fead, Cylinder head 51 650694A Screw, 5/16-18 x 2-3/8* (Use as required) 51 650695A Screw, 5/16-18 x 2-3/8* (Use as required) 51 650695A Screw, 5/16-18 x 2-3/8* (Use as required) 51 650695A Screw, 5/16-18 x 2-3/8* (Use as required) 51 650697 Screw, 5/16-18 x 2-1/4* (Use as required) 51 650697 Screw, 5/16-18 x 2-1/4* (Use as required) 52 650697 Screw, 5/16-18 x 2-1/4* (Use as required) 53 33636 Resistor Spark Plug (RJ-87LM) 54 33035 Screw, 5/16-18 x 5/8* (Use as required) 58 650691 Washer, Plain 59 650691 Washer, Plain 60 31976 Fead, Flat (Use as required) 61 31978 Gardinary 63 34210 Fead Resistor Spark Plug (RJ-17LM) Cover, Cylinder head Washer, Plain 63 34210 Fead Resistor Spark Plug (RJ-17LM) 64 31978 Gardinary 65 650456 Nut, Flat (Use as required) Fead Resistor Spark Plug (RJ-17LM) 65 650456 Nut, Flat (Use as required) Fead Resistor Spark Plug (RJ-17LM) 66 650456 Nut, Flat (Use as required) Fead Resistor Spark Plug (RJ-17LM) 67 650561 Screw, 1/4-20 x 2/7/2* (Use as required) Fead Resistor Spark Plug (RJ-17LM) 68 650456 Nut, Flat (Use as required) Fead Resistor Spark Plug (RJ-17LM) 69 650456 Screw, 1/4-20 x 2/7/32* (Use as required) Fead Resistor Spark Plug (RJ-17LM) 69 650456 Screw, 1/4-20 x 5/8* (Use as required) Fead Resistor Spark Plug (RJ-17LM) 72 30705 Fead Resistor Spark Plug (RJ-17LM) 73 31975 Baffle, Blewille (Use as required) Fead Resistor Spark Plug (RJ-17LM) 74 500681 Fead Resistor Spark Plug (RJ-17LM) 75 30366 Fead Resistor Spark Plug (RJ-17LM) 76 650561 Screw, 1/4-20 x 5/8* (Use as required) Fead Resistor Spark Plug (RJ-17LM) Fe				
40 30312				·
41 31967 42 30590A 43 32425 44 31948 45 3990A 45 39183 46 31947 46 31947 47 31930 48 32246A 49 33034 49 33034 40 31930 51 6506934 51 650628A 51 650628A 51 650694 51 6506962 51 650692 51 650692 51 650692 51 650692 51 650692 51 650693 52 67688 53 34251 54 33035 55 26537 56 650691 58 274 59 650128 50 650690 50 70076 51 650691 51 650691 52 650691 53 34251 54 33035 55 26537 56 650691 58 274 59 650128 50 31976 51 31978 51 61 31978 52 650128 53 34210 54 31978 55 26517 56 560513 57 560561 57 57 57 57 57 57 57 57 57 57 57 57 57 5				
42 30590A 43 32425 ASSY,, Governor 44 31948 ASPASY,, Governor 5500, Governor ASSY,, Gerler ASSY,, Governor ASSY,, Governor ASSY,, Gerler ASSY,, Glorer ASSY,, Glorer ASSY, Cluster ASS				·
43 32425 44 31948 45 29193 46 31947 47 31930 48 32246A 49 33034 4				1 0,
44 31948				
45 29193 46 31947 47 31930 48 32246A 49 33034 51 650694A 51 650694A 51 650695A 51 650695A 51 650695A 51 650696A 51 650696A 52 650695A 53 3363 54 650696A 51 650696A 52 650696 53 33636 54 650697A 55 650697A 55 650697 56 650692 56 650692 57 650693 58 34251 59 650693 59 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34251 50 650693 50 34254 50 650693 50 34274 50 650693 50 34274 50 650693 50 34274 50 650693 51 34274 52 660693 53 34210 54 31978 55 34210 55 560426 56 560426 57 92028 58 560426 58 560426 59 560426 50 560426				•
46 31947 Gear Assy., Gövernor 47 31930 Shaft, Mechanical Governor 48 32246A "Gasket, Cylinder head 49 33034 Head. Cylinder head 51 650694A Screw, 5/16-18 x 2" (Use as required) 51 6506711 Screw, 5/16-18 x 2-3/8" (Use as required) 51 650628A Screw, 5/16-18 x 2-3/8" (Use as required) 51 650695A Screw, 5/16-18 x 2-3/8" (Use as required) 51 650696A Screw, 5/16-18 x 2-1/4" (Use as required) 51 650697A Screw, 5/16-18 x 2-1/4" (Use as required) 51 650692 Screw, 5/16-18 x 2-1/2" (Use as required) 51 650692 Screw, 5/16-18 x 5/8" (Use as required) 51 650693 Screw, 5/16-18 x 5/8" (Use as required) 53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-17LM) 53 33636 Resistor Spark Plug (RJ-17LM) 54 33035 Cover, Cylinder head 55 28537 Washer, Flati (Use as required) 58 650691 Washer, Flati (Use as required) 58 8274 Washer, Belleville (Use as required) 58 8274 Washer, Belleville (Use as required) 58 8274 Washer, Lock (Use as required) 58 8274 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.) (As req uired) 64 31978 Extension, Blower housing 63 34210 Fuel Cap (White Plastic) (Std.) (As req uired) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650561 Screw, 1/4-20 x 1" 67 650561 Screw, 1/4-20 x 1" 68 650683 Screw, 1/4-20 x 1/8" (Use as required) 79 2028 Screw, 1/4-20 x 1/8" (Use as required) 70 29774 Fuel Line (Braided) (8.25") (Use as required) 71 26460 Clamp, Fuel line (Use as required) 72 30705 Fuel Line (Braided) (8.25") (Use as required) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 1/8" (Use as required) 79 30865 Fuel Line (Braided) (16") (Use as required) 70 30356 Fuel Line (Braided) (16") (Use as required) 70 30366 Fuel Line (Braided) (16") (Use as required) 71 62845 Grown, 1/4-20 x 5/8" 72 30366 Screw, 1/4-20 x 5/8" 73 3356 Grown, 1/4-20 x 5/8"				
47 31930 Shaft, Mechanical Governor 48 32246A "Gasket, Cylinder head 49 33034 Head, Cylinder 51 650694A Screw, 5/16-18 x 2° (Use as required) 51 650628A Screw, 5/16-18 x 1-5/8" (Use as required) 51 650628A Screw, 5/16-18 x 2-3/8" (Use as required) 51 650628A Screw, 5/16-18 x 2-3/8" (Use as required) 51 650695A Screw, 5/16-18 x 2-1/4" (Use as required) 51 650697A Screw, 5/16-18 x 1-5/8" (Use as required) 51 650692 Screw, 5/16-18 x 1-5/8" (Use as required) 51 650603 Screw, 5/16-18 x 1-5/8" (Use as required) 53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-8C) 54 3035 Cover, Cylinder head 55 28537 Washer, Plain 56 650690 Washer, Plain 58 8274 Washer, Plat (Use as required) 58 8274 Washer, Elat (Use as required) 58 8274 Washer, Belleville (Use as required) 58 8274 Washer, Belleville (Use as required) 58 8274 Washer, Belleville (Use as required) 58 8274 Barbard				-
## 8 32246A # 9 33034 # Head, Cylinder # 1 650094A # 1 650094A # 1 650094A # 1 6500711 # 1 650028A # 2 650028A # 2 650028A # 3 650028A # 6				•
Head. Cylin/der				
51 650694A Screw, 5/16-18 x 2" (Use as required) 51 650711 Screw, 5/16-18 x 1-5/8" (Use as required) 51 650695A Screw, 5/16-18 x 2-3/8" (Use as requi red) 51 650695A Screw, 5/16-18 x 2-1/4" (Use as requi red) 51 6506974 Screw, 5/16-18 x 1-5/8" (Use as requi red) 51 650692 Screw, 5/16-18 x 1-3/4" (Use as requi red) 51 650603 Screw, 5/16-18 x 1-3/4" (Use as requi red) 53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-17LM) 54 33035 Cover, Cylinder head 55 28537 Washer, Plain 56 50691 Washer, Flat (Use as required) 58 8274 Washer, Belleville (Use as required) 58 8274 Washer, Belleville (Use as required) 61 31978 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.) (As req uired) 64 31979 Stray, Fuel tank				· · ·
51 650711 Screw, 5/16-18 x 1-5/8" (Use as requi red) 51 650628A Screw, 5/16-18 x 2-3/8" (Use as requi red) 51 650695A Screw, 5/16-18 x 2-1/4" (Use as requi red) 51 650714 Screw, 5/16-18 x 2-1/2" (Use as requi red) 51 650697A Screw, 5/16-18 x 1-3/4" (Use as requi red) 51 650603 Screw, 5/16-18 x 1-3/4" (Use as requi red) 53 33636 Resistor Spark Plug (RJ-9) 53 34251 Resistor Spark Plug (RJ-9) 54 33035 Cover, Cylinder head 55 28537 Washer, Plain 56 650690 Washer, Flat (Use as required) 58 8274 Washer, Lock (Use as required) 58 8274 Washer, Lock (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 4210 Fuel Cap (Red Plastic) (Std.)(As req uired) 64 31979 Screw, 1/4-20 x 1/2" (Use as required) 65 <td></td> <td></td> <td></td> <td></td>				
51 650628A Screw, 5/16-18 x 2-3/8" (Use as requi red) 51 650695A Screw, 5/16-18 x 2-1/4" (Use as requi red) 51 650714 Screw, 5/16-18 x 1-3/8" (Use as requi red) 51 650697A Screw, 5/16-18 x 1-3/4" (Use as requi red) 51 650602 Screw, 5/16-18 x 1-3/4" (Use as require d) 53 34251 Screw, 5/16-18 x 1-3/4" (Use as require d) 53 34251 Resistor Spark Plug (RJ-17LM) 54 33035 Cover, Cylinder head 55 28537 Washer, Plain 650691 Washer, Flat (Use as required) 58 650690 Washer, Belleville (Use as required) 58 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 34210 Fuel Cap (White Plastic) (Std.)(As req uired) 64 31979 Strap, Fuel tank 65 Scots1 Screw, 1/4-20 x 1" 66 50561 Screw, 1/4-20 x 1" 66 505051 Screw, 1				
51 650695A Screw, 5/16-18 x 2-1/4" (Use as requi red) 51 650714 Screw, 5/16-18 x 1-5/8" (Use as requi red) 51 650697A Screw, 5/16-18 x 2-1/2" (Use as requi red) 51 650692 Screw, 5/16-18 x 1-3/4" (Use as requi red) 51 650603 Screw, 5/16-18 x 5/8" (Use as require d) 53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-17LM) 54 33035 Cover, Cylinder head 55 28537 Washer, Plain 57 650691 Washer, Flat (Use as required) 58 65049 Washer, Belleville (Use as required) 58 8274 Washer, Lock (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (Red Plastic) (Std.) (As req uired) 64 31979 Strap, Fuel tank 65 Scotal Screw, 1/4-20 x 1" 66 650456 Nut, Flange				` ' '
51 650714 Screw, 5/16-18 x 1-5/8" (Use as requi red) 51 650697A Screw, 5/16-18 x 2-1/2" (Use as requi red) 51 650692 Screw, 5/16-18 x 2-1/2" (Use as requi red) 51 650603 Screw, 5/16-18 x 5/8" (Use as require d) 53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-8C) 54 33035 Cover, Cylinder head 55 28537 Washer, Plain 57 650691 Washer, Plain 58 650690 Washer, Flat (Use as required) 58 8274 Washer, Lock (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Fracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.) (As req uired) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 1" 68 650456 Screw, 1/4-20 x 1" 69 650561 Screw, 1/4-20 x 5/8" (Use as required) 69 30063 Screw, 1/4-20 x 5/8" (Use as required) 60 Clamp, Fuel line (Use as required) 61 Fuel Line (Braided) (8.25") (Use as required) 62 9983 Screw, 5/16-18 x 7/8" (Use as required) 63 30962 Fuel Line (Braided) (32") (Use as req uired) 64 Fuel Line (Braided) (48") (Use as req uired) 65 33366 Fuel Line (Braided) (48") (Use as req uired) 67 30063 Fuel Line (Braided) (48") (Use as req uired) 68 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 69 Fuel Line (Braided) (48") (Use as req uired) 60 Fuel Line (Braided) (48") (Use as req uired) 60 Fuel Line (Braided) (48") (Use as req u	51	650628A		• • • • • • • • • • • • • • • • • • • •
51 650697A Screw, 5/16-18 x 2-1/2" (Use as requi red) 51 650602 Screw, 5/16-18 x 1-3/4" (Use as requi red) 51 650603 Screw, 5/16-18 x 5/8" (Use as require d) 53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-17LM) 54 33035 Cover, Cylinder head 55 28537 Washer, Plain 56 650691 Washer, Belleville (Use as required) 58 850690 Washer, Belleville (Use as required) 58 8274 Washer, Belleville (Use as required) 58 8274 Washer, Belleville (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 34210 Fuel Cap (White Plastic) (Std.) (As req uired) 64 31979 Strap, Fuel tank 65 Sc50451 Screw, 1/4-20 x 1/2" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 S	51	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
51 650692 Screw, 5/16-18 x 1/3/" (Use as requir ed) 51 650603 Screw, 5/16-18 x 5/8" (Use as require d) 53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-17LM) 54 33035 Cover, Cylinder head 55 28537 Washer, Plair 57 650691 Washer, Belleville (Use as required) 58 650690 Washer, Lock (Use as required) 58 8274 Washer, Lock (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (Red Plastic) (Std.) (As req uired) 63 34210 Fuel Cap (Red Plastic) (Std.) (As req uired) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650561 Screw, 1/4-20 x 27/32" (Use as required) 67 650561 Screw, 1/4-	51	650714		Screw, 5/16-18 x 1-5/8" (Use as requi red)
51 650603 Screw, 5/16-18 x 5/8" (Use as require d) 53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-17LM) 54 33035 Cover, Cylinder head 55 28537 Washer, Platin 56 560691 Washer, Flat (Use as required) 58 650690 Washer, Lock (Use as required) 58 8274 Washer, Lock (Use as required) 58 8274 Washer, Lock (Use as required) 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.) (As req uired) 63 34210 Fuel Cap (White Plastic) (Spurt resistant, High profile) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650561 Screw, 1/4-20 x 27/32" (Use as required) 67 650561 Screw, 1/4-20 x 27/32" (Use as required) 67 792028 Screw, 1/4-20 x 5/8" (Use as required) 70 29674 </td <td>51</td> <td>650697A</td> <td></td> <td>Screw, 5/16-18 x 2-1/2" (Use as requi red)</td>	51	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
51 650603 Screw, 5/16-18 x 5/8" (Use as require d) 53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-17LM) 54 33035 Cover, Cylinder head 55 28537 Washer, Platin 56 560691 Washer, Flat (Use as required) 58 650690 Washer, Lock (Use as required) 58 8274 Washer, Lock (Use as required) 58 8274 Washer, Lock (Use as required) 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.) (As req uired) 63 34210 Fuel Cap (White Plastic) (Spurt resistant, High profile) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650561 Screw, 1/4-20 x 27/32" (Use as required) 67 650561 Screw, 1/4-20 x 27/32" (Use as required) 67 792028 Screw, 1/4-20 x 5/8" (Use as required) 70 29674 </td <td>51</td> <td>650692</td> <td></td> <td>Screw, 5/16-18 x 1-3/4" (Use as required)</td>	51	650692		Screw, 5/16-18 x 1-3/4" (Use as required)
53 33636 Resistor Spark Plug (RJ-8C) 53 34251 Resistor Spark Plug (RJ-17LM) 54 33035 Cover, Cylinder head 55 28537 Washer, Plain 57 650691 Washer, Flat (Use as required) 58 650690 Washer, Belleville (Use as required) 58 8274 Washer, Lock (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic)(Std.)(As req uired) 63 34210 Fuel Cap (White Plastic) (Spurt resistant, High profile) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 65051 Screw, 1/4-20 x 5/8" (Use as required) 67 650561 Screw, 1/4-20 x 5/8" (Use as required) 67 792028 Screw, 1/4-20 x 1/2" (Use as required) 70 299683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel	51	650603		• • • • • • • • • • • • • • • • • • • •
53 34251	53	33636		• • • • • • • • • • • • • • • • • • • •
54 33035 55 28537 Washer, Plain 57 650691 Washer, Plait (Use as required) Washer, Belleville (Use as required) Washer, Belleville (Use as required) Washer, Lock (Use as required) Washer, Plain Washer, Lock (Use as required) Washer, Plain Washer, Delevited) Washer, Plain Washer, Delevited) Washer, Plain Washer, Delevited) Washer,				. ,
55 28537 Washer, Plain 57 650691 Washer, Flat (Use as required) 58 650690 Washer, Flat (Use as required) 58 8274 Washer, Lock (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.)(As req uired) 63 34210 Fuel Cap (Red Plastic) (Spurt resistant, High profile) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1/2" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 27/32" (Use as require d) 67 650561 Screw, 1/4-20 x 5/8" (Use as required) 67 792028 Screw, 1/4-20 x 1/2" (Use as required) 70 792028 Screw, 1/4-20 x 1/2" (Use as required) 70 792028 Screw, 5/16-18 x 7/8" (Use as required) 70 792028 Screw, 1/4-20 x 1/2" (Use as required) 70 792028 Screw, 5/16-18 x 7/8" (Use as required)				• • • • • • • • • • • • • • • • • • • •
57 650691 Washer, Flat (Use as required) 58 650690 Washer, Belleville (Use as required) 58 8274 Washer, Lock (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing Bracket, Fuel tank 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.) (As req uired) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 27/32" (Use as require d) 67 30063 Screw, 1/4-20 x 1/2" (Use as require d) 68 792028 Screw, 1/4-20 x 1/2" (Use as require d) 59 Strainer & Shut-off, Fuel Clamp, Fuel line (Use as require d) 50 Clamp, Fuel line (Use as required) 51 Sured (16-1) 52 Sured (16-1) 53 Sured (16-1) 54 Sured (16-1) 55 Fuel Line (Braided) (8.25") (Use as required) 57 30965 Fuel Line (Braided) (32") (Use as required) 58 Surew, 1/4-20 x 5/8" 59 Surew, 1/4-20 x 5/8" 50 Surew, 1/4-20 x 5/8" 50 Surew, 1/4-20 x 5/8" 51 Sured (16-1) 55 Fuel Line (Braided) (32") (Use as required) 57 Sured (16-1) 56 Surew, 1/4-20 x 5/8" 57 Surew, 1/4-20 x 5/8" 58 Surew, 1/4-20 x 5/8" 59 Surew, 1/4-20 x 5/8" 50 Surew, 1/4-20 x 5/8" 50 Surew, 1/4-20 x 5/8" 51 Surew, 1/4-20 x 5/8" 52 Surew, 1/4-20 x 5/8" 53 Surew, 1/4-20 x 5/8" 54 Gooffoo 55 Surew, 1/4-20 x 5/8" 56 Surew, 1/4-20 x 5/8" 56 Surew, 1/4-20 x 5/8" 57 Gooffoo				· ·
58 650690 Washer, Belleville (Use as required) 58 8274 Washer, Lock (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.) (As req uired) 63 34210 Fuel Cap (Red Plastic) (Spurt resistant, High profile) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650561 Screw, 1/4-20 x 5/8" (Use as require d) 67 750561 Screw, 1/4-20 x 5/8" (Use as required) 67 792028 Screw, 1/4-20 x 1/2" (Use as required) 70B 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30965 Fuel Line (Braided) (32") (Use as required) 72 30965 Fuel Line (Braided) (32") (Use as required)				·
58 8274 Washer, Lock (Use as required) 59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.)(As req uired) 63 34210 Fuel Cap (Red Plastic) (Spurt resistant, High profile) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 27/32" (Use as require d) 67 650561 Screw, 1/4-20 x 5/8" (Use as required) 67 30063 Screw, 1/4-20 x 1/2" (Use as required) 67 792028 Screw, 5/16-18 x 7/8" (Use as required) 70B 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30962 Fuel Line (Braided) (16") (Use as required) 72 30965 Fuel Line (Braided) (16") (Use as required) 73 31975 Baffle, Blower housing <td></td> <td></td> <td></td> <td></td>				
59 650128 Screw, 10-24 x 1/2" 60 31976 Extension, Blower housing 61 31978 Bracket, Fuel tank 63 410144B Fuel Cap (White Plastic) (Std.) (As req uired) 63 34210 Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 27/32" (Use as required) 67 650561 Screw, 1/4-20 x 5/8" (Use as required) 67 792028 Screw, 1/4-20 x 1/2" (Use as required) 67 792028 Screw, 5/16-18 x 7/8" (Use as required) 70 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30962 Fuel Line (Braided) (32") (Use as req uired) 72 30965 Fuel Line (Braided) (48") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" </td <td></td> <td></td> <td></td> <td>• • • • • • • • • • • • • • • • • • • •</td>				• • • • • • • • • • • • • • • • • • • •
60 31976 61 31978 63 410144B 63 410144B 63 34210 64 31979 65 650451 66 650456 67 650561 67 30063 67 792028 67 792028 67 29774 72 30705 72 30705 72 30962 73 30965 74 650561 75 30356 76 28545 76 650561 76 30962 76 30965 77 30965 78 30965 79 30965 7				• • • • • • • • • • • • • • • • • • • •
61 31978 63 410144B 63 4210 Fuel Cap (White Plastic) (Std.) (As req uired) Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 27/32" (Use as required) 67 30063 Screw, 1/4-20 x 1/2" (Use as required) 67 792028 Screw, 1/4-20 x 1/2" (Use as required) 708 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30705 Fuel Line (Braided) (16") (Use as req uired) 72 30962 Fuel Line (Braided) (32") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic Screw, 8-32 x 3/8"				
63 410144B 63 34210 Fuel Cap (White Plastic) (Std.) (As req uired) Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 5/8" (Use as required) 67 650561 Screw, 1/4-20 x 5/8" (Use as required) 67 30063 Screw, 1/4-20 x 1/2" (Use as required) 67 792028 Screw, 5/16-18 x 7/8" (Use as required) 70B 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30705 Fuel Line (Braided) (16") (Use as req uired) 72 30962 Fuel Line (Braided) (32") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" Terminal 76 28545 Grommet, Plastic Screw, 8-32 x 3/8"				,
Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required) 64 31979				•
(Use as required) 64 31979 Strap, Fuel tank 65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 27/32" (Use as required) 67 650561 Screw, 1/4-20 x 1/2" (Use as required) 67 30063 Screw, 1/4-20 x 1/2" (Use as required) 67 792028 Screw, 5/16-18 x 7/8" (Use as required) 70B 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30705 Fuel Line (Braided) (16") (Use as required) 72 30962 Fuel Line (Braided) (48") (Use as required) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				, , , , , , , , , , , , , , , , , ,
64 31979 65 650451 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 27/32" (Use as require d) 67 650561 Screw, 1/4-20 x 5/8" (Use as required) 67 30063 Screw, 1/4-20 x 1/2" (Use as required) 67 792028 Screw, 5/16-18 x 7/8" (Use as required d) 70B 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 73 30962 Fuel Line (Braided) (32") (Use as required) 72 30965 Fuel Line (Braided) (48") (Use as required) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"	63	34210		, , , , , , , , , , , , , , , , , , , ,
65 650451 Screw, 1/4-20 x 1" 66 650456 Nut, Flange whiz-lock, 1/4-20 67 650517 Screw, 1/4-20 x 27/32" (Use as require d) 67 650561 Screw, 1/4-20 x 5/8" (Use as required) 67 30063 Screw, 1/4-20 x 1/2" (Use as required) 67 792028 Screw, 5/16-18 x 7/8" (Use as require d) 70B 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30705 Fuel Line (Braided) (16") (Use as req uired) 72 30962 Fuel Line (Braided) (32") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				(Use as required)
66 650456 67 650517 67 650561 67 650561 67 792028 68 Screw, 1/4-20 x 27/32" (Use as required) 69 792028 60 792028 61 Screw, 1/4-20 x 1/2" (Use as required) 69 29683 60 Clamp, Fuel line (Use as required) 60 Clamp, Fuel line (Use as required) 61 29774 61 Fuel Line (Braided) (8.25") (Use as required) 62 30962 63 Fuel Line (Braided) (32") (Use as required) 64 Fuel Line (Braided) (48") (Use as required) 65 Screw, 1/4-20 x 5/8" 65 33356 65 Terminal 66 28545 66 Grommet, Plastic 65 Screw, 8-32 x 3/8"	64	31979		Strap, Fuel tank
66 650456 67 650517 67 650561 67 650561 67 792028 68 Screw, 1/4-20 x 27/32" (Use as required) 69 792028 60 792028 61 Screw, 1/4-20 x 1/2" (Use as required) 69 29683 60 Clamp, Fuel line (Use as required) 60 Clamp, Fuel line (Use as required) 61 29774 61 Fuel Line (Braided) (8.25") (Use as required) 62 30962 63 Fuel Line (Braided) (32") (Use as required) 64 Fuel Line (Braided) (48") (Use as required) 65 Screw, 1/4-20 x 5/8" 65 33356 65 Terminal 66 28545 66 Grommet, Plastic 65 Screw, 8-32 x 3/8"	65	650451		Screw, 1/4-20 x 1"
67 650517	66	650456		Nut. Flange whiz-lock, 1/4-20
67 650561 Screw, 1/4-20 x 5/8" (Use as required) 67 30063 Screw, 1/4-20 x 1/2" (Use as required) 67 792028 Screw, 5/16-18 x 7/8" (Use as require d) 70B 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30705 Fuel Line (Braided) (16") (Use as req uired) 72 30962 Fuel Line (Braided) (32") (Use as req uired) 72 30965 Fuel Line (Braided) (48") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				
67 30063 67 792028 67 792028 70B 29683 71 26460 72 29774 72 30705 73 30962 74 650561 75 33356 76 28545 77 650760 Screw, 1/4-20 x 1/2" (Use as required) Screw, 5/16-18 x 7/8" (Use as required) Strainer & Shut-off, Fuel Clamp, Fuel line (Use as required) Fuel Line (Braided) (8.25") (Use as required) Fuel Line (Braided) (32") (Use as required) Fuel Line (Braided) (48") (Use as required) Fuel Line (Braided) (16") (Use as required) Fu				
67 792028 Screw, 5/16-18 x 7/8" (Use as require d) 70B 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30965 Fuel Line (Braided) (32") (Use as req uired) 72 30965 Fuel Line (Braided) (48") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				,
70B 29683 Strainer & Shut-off, Fuel 71 26460 Clamp, Fuel line (Use as required) 72 29774 Fuel Line (Braided) (8.25") (Use as required) 72 30705 Fuel Line (Braided) (16") (Use as req uired) 72 30962 Fuel Line (Braided) (32") (Use as req uired) 72 30965 Fuel Line (Braided) (48") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				
71 26460				. ,
72 29774 Fuel Line (Braided) (8.25") (Use as r equired) 72 30705 Fuel Line (Braided) (16") (Use as req uired) 72 30962 Fuel Line (Braided) (32") (Use as req uired) 72 30965 Fuel Line (Braided) (48") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				·
72 30705 Fuel Line (Braided) (16") (Use as req uired) 72 30962 Fuel Line (Braided) (32") (Use as req uired) 72 30965 Fuel Line (Braided) (48") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				
72 30962 Fuel Line (Braided) (32") (Use as req uired) 72 30965 Fuel Line (Braided) (48") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				
72 30965 Fuel Line (Braided) (48") (Use as req uired) 73 31975 Baffle, Blower housing 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				
73 31975 Baffle, Blower housing 7 74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				, , , , , , , , , , , , , , , , , , , ,
74 650561 Screw, 1/4-20 x 5/8" 75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				, , , , , , , , , , , , , , , , , , , ,
75 33356 Terminal 76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				· · · · · · · · · · · · · · · ·
76 28545 Grommet, Plastic 77 650760 Screw, 8-32 x 3/8"				
77 650760 Screw, 8-32 x 3/8"				
78 31932 Bearing, Tapered roller				
	78	31932		Bearing, Tapered roller

D ("	D (N)	<u> </u>	
	Part Number 31928	Qty	Description Cup, Bearing
	32031		Spacer, Steel (.010" thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required
81	31971		* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 31972		"O" Ring * Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
83	32677		Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
	650668		Screw, 10-32 x 1"
	650679 650666		Lockwasher, 5/16" (Use as required) Washer, Lock
	650594		Nut, Flywheel, 3/4-16
	33037		Blower Housing
	8274		Washer, Lock
	650595 32039		Screw, 5/16-24 x 3/8" Switch, Stop
	650890		Washer, Shakeproof
	26073		Washer, Flat
	650624 31958		Screw, 5/16-24 x 9/16" * Gasket, Breather
	31957		Breather Assy.
100	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	28558 31966		Washer, Wave Bushing, Control lever
	31984A		Lever, Control
	650597		Screw, 10-24 x 5/8"
	650591		Screw, 10-24 x 2"
	33099 33038		Spring Plug, Button (Use as required)
	29752		Nut & Lockwasher Assy.
	650587		Stud, Carburetor
	27272 650300		* Gasket, Air cleaner
	650399 30767		Screw, 10-32 x 5/8" Spacer, Air cleaner
	-		1

	Part Number	Qty	Description
122E	32376		Bracket, Air cleaner
122D	32378		Bracket, Air cleaner
125A	32009		Cover, Air cleaner
126	650513		Nut, Wing
128	650713		Screw, 5/16-18 x 5/8" (Use as require d)
128	650429		Screw, 5/16-18 x 3/4" (Use as require d)
128	792028		Screw, 5/16-18 x 7/8" (Use as require d)
141A	8274		Lockwasher, Split (Use as required)
141	26073		Washer, Flat (Use as required)
145	31960		* Gasket, Carburetor
147	31959		Baffle, Air
156	730201		Trigger Pin Kit (Use as required)
173	610118		Cover, Spark plug (Use as required)
176	31992		Spacer, Screen
177	8345		Washer, 1/4 plain (Use as required)
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
187	650713		Screw, 5/16-18 x 5/8"
188	26073		Washer, Flat
246	33776		Screen, Starter pulley
247	31980		Pulley, Starter
248	650680		Screw, 1/4-20 x 1-1/2"
249	32046		Rope Assy., Starter (Use as required)
266	610750		Grommet, Lead wire
278	610758		Flywheel
299	34346		Decal, Instruction
299B	550223		Decal, Name
299B	32676		Decal, Solid State
299A	31752		Decal, Air cleaner
300	32255A		Valve, Seat, Spring & Gasket Assy.
301	631533		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

This illustration may not depict actual equipment and is for reference only! **VIEW 2 of 3** 257A 270A 260A 299C

Ref #	Part Number	Qty	Description
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
180	650701		Screw, 8-18 x 7/16" (Use as required)
222	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736		Screw, 10-16 x 3/8" (Use as required)
252	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
257B	610824		Flat Connector (Female terminals) (As req.)
260A	610759		Solid State Magneto
261	650489		Screw, 1/4-20 x 5/8"
261A	650669		Screw, 5/16-18 x 1-1/4"
262	610760		Solid State Transformer Ass'y.(Incl.1 73,266)
	650561		Screw, 1/4-20 x 5/8"
	610750		Grommet, Lead wire
	730198		Starter Switch Kit(Incl. 287-298) (As req.)
	30831		Ground Wire (Incl. 75)
299D	32187		Decal, "Super Start"

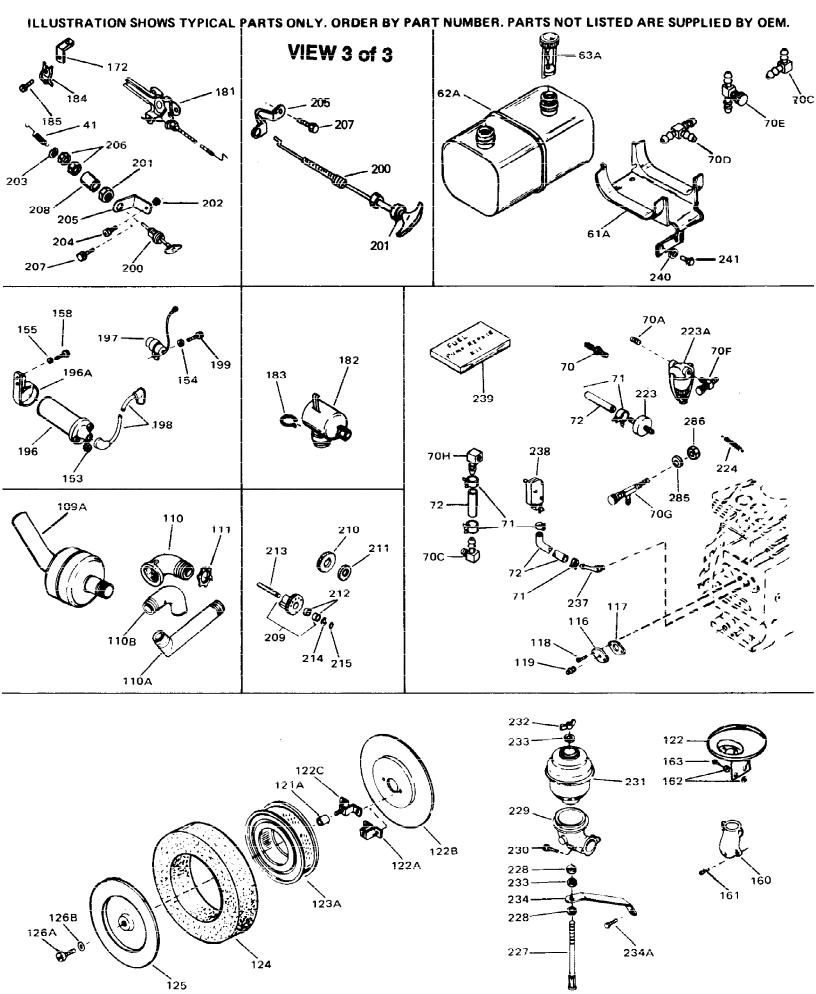

Ref #	Part Number	Qty	Description
41	31967		Spring, Governor
62A	31977		Fuel Tank (Incl. 63)
70	29634		Fitting, Fuel line
71	26460		Clamp, Fuel line (Use as required)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
123A	32008		Element, Air cleaner