
## ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

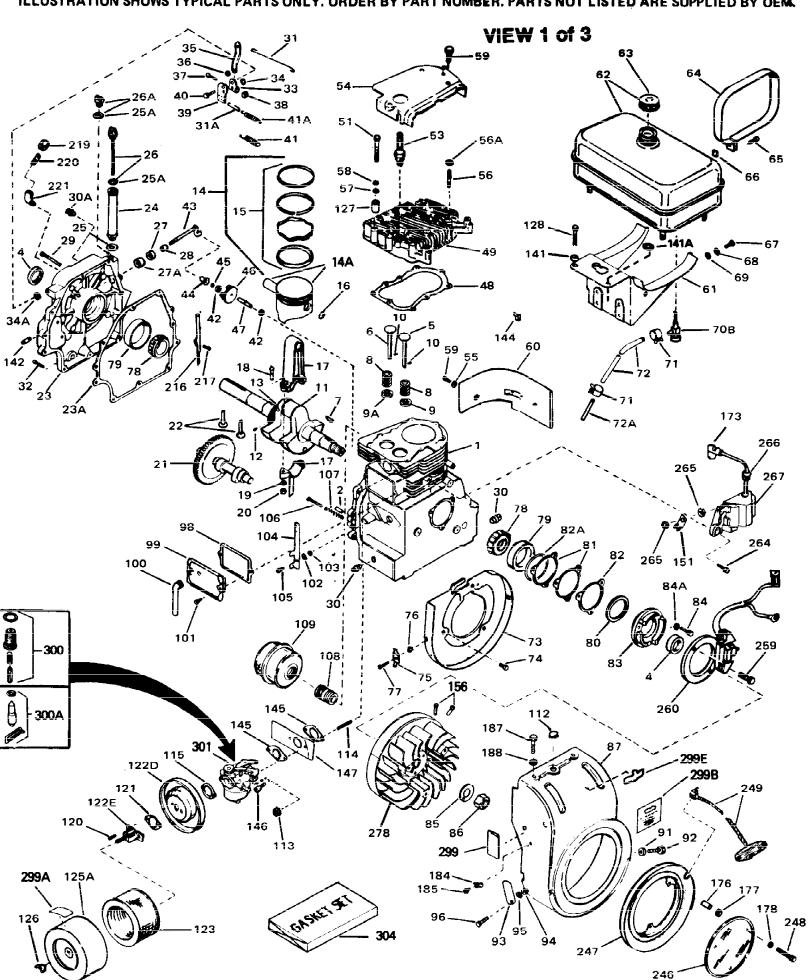


Ref #	Part Number	Qty	Description
1	33042		Cylinder (Incl. 2, 4, 30 & 47) (3-1/2 " Bore)
2	27652		Pin, Dowel
	31950		Seal, Oil
	31940		Intake Valve (Std.)
	31941		Intake Valve (1/32" OS) (Incl. 9)
	31942		Exhaust Valve (Std.)
	31943		Exhaust Valve (3/32" OS) (Incl. 9)
	650592		, , ,
			Key, Flywheel
	31944		Spring, Valve
	32475		Cap, Lower valve spring (Rotator)
	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
	20810		Pin, Valve spring retainer
	33392A		Crankshaft (Incl. 12, 13, 78 & 79)
	29783		Pin, Crankshaft gear
	31931		Gear, Crankshaft
14A	32238B		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -1/2")
14A	32239B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32240B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14A	32621B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
14A	32622B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
14	34511		Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
14	34512		Piston, Pin & Ring Set (.010" OS)
14	34513		Piston, Pin & Ring Set (.020" OS)
	34524		Piston, Pin & Ring Set (.030" OS)
	34525		Piston, Pin & Ring Set (.040" OS)
	32241		Ring Set (Std.) (3-1/2" Bore)
	32242		Ring Set (.010" OS)
	32243		Ring Set (.020" OS)
	32625		Ring Set (.030" OS)
	32626		Ring Set (.040" OS)
	32336		Re-Ringing Set, Piston
	31919		Ring, Piston pin retaining
	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
	32077		Bolt, Connecting rod
	26073		Washer, Connecting rod
	28264		Nut Assy., Lock
	32150		Camshaft (MCR)
	31939		Lifter, Valve
	31956A		•
			* Gasket, Cylinder cover
	32685		Cylinder Cover (Incl.4,25,26A,28,30,3 4 & 43)
	29673		* Gasket, Oil fill
	27625		Oil Fill Plug (Incl. 25A)
	32426		Spacer, Governor rod
	650588		Screw, 1/4-20 x 2"
	31927		Oil Drain Plug
	31968		Link, Governor
	650451		Screw, 1/4-20 x 1"
	31964		Clamp, Governor lever
	29193		Ring, Retaining
	31963		Lever, Governor adjusting
	650518		Lockwasher
37	650544		Screw, 10-24 x 7/8"


Ref #	Part Number	Otv	Description
	7975	Qty	Nut, 10-24
	31965		Plate, Governor spring
	30312		Screw, 10-32 x 1/2"
	31967		
	30590A		Spring, Governor
			Washer, Flat
	32425		Rod Assy., Governor
	31948		Spool, Governor
	29193		Ring, Retaining
	31947		Gear Assy., Governor
	31930		Shaft, Mechanical Governor
	32246A		* Gasket, Cylinder head
	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650711		Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650628A		Screw, 5/16-18 x 2-3/8" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650714		Screw, 5/16-18 x 1-5/8" (Use as requi red)
51	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
51	650692		Screw, 5/16-18 x 1-3/4" (Use as requi red)
51	650603		Screw, 5/16-18 x 5/8" (Use as require d)
53	33636		Resistor Spark Plug (RJ-8C)
53	34251		Resistor Spark Plug (RJ-17LM)
54	33035		Cover, Cylinder head
55	28537		Washer, Plain
57	650691		Washer, Flat (Use as required)
58	650690		Washer, Belleville (Use as required)
58	8274		Washer, Lock (Use as required)
59	650128		Screw, 10-24 x 1/2"
60	31976		Extension, Blower housing
61	31978		Bracket, Fuel tank
63	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile)
			(Use as required)
64	21070		
	31979		Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		Nut, Flange whiz-lock, 1/4-20
	650517		Screw, 1/4-20 x 27/32" (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required )
	30063		Screw, 1/4-20 x 1/2" (Use as required )
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	29683		Strainer & Shut-off, Fuel
	26460		Clamp, Fuel line (Use as required)
	30965		Fuel Line (Braided) (48") (Use as req uired)
	29774		Fuel Line (Braided) (8.25") (Use as r equired)
	30705		Fuel Line (Braided) (16") (Use as req uired)
	30962		Fuel Line (Braided) (32") (Use as req uired)
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	33356		Terminal
	28545		Grommet, Plastic
	650760		Screw, 8-32 x 3/8"
	31932		Bearing, Tapered roller
79	31928		Cup, Bearing

		Qty	Description
80	32031		Spacer, Steel (.010" thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required
81	31971		* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
82	31972		* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 32677		"O" Ring Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84	650668		Screw, 10-32 x 1"
	650679		Lockwasher, 5/16" (Use as required)
85	650666		Washer, Lock
86	650594		Nut, Flywheel, 3/4-16
	33044A		Blower Hsg. (Incl.73) (For electric s tarter)
	8274		Washer, Lock
	650595		Screw, 5/16-24 x 3/8"
	32039		Switch, Stop
	650890		Washer, Shakeproof
	26073 650624		Washer, Flat Screw, 5/16-24 x 9/16"
	31958		* Gasket, Breather
	31957		Breather Assy.
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	28558		Washer, Wave
	31966		Bushing, Control lever
	31984A		Lever, Control
	650597		Screw, 10-24 x 5/8"
	650591		Screw, 10-24 x 2"
	33099		Spring
	32042 32043B		Nipple, Exhaust pipe Muffler
	33038		Plug, Button (Use as required)
	27272		* Gasket, Air cleaner
	650399		Screw, 10-32 x 5/8"
	30767		Spacer, Air cleaner
	32810		Cover, Air cleaner

Ref #	Part Number	Qty	Description
126	650513		Nut, Wing
128	650713		Screw, 5/16-18 x 5/8" (Use as require d)
128	650429		Screw, 5/16-18 x 3/4" (Use as require d)
128	792028		Screw, 5/16-18 x 7/8" (Use as require d)
141A	8274		Lockwasher, Split (Use as required)
141	26073		Washer, Flat (Use as required)
145	33263		* Gasket, Carburetor
146	650451		Screw, 1/4-20 x 1"
147	34061		Baffle, Air
156	730201		Trigger Pin Kit (Use as required)
173	610118		Cover, Spark plug (Use as required)
176	31992		Spacer, Screen
177	8345		Washer, 1/4 plain (Use as required)
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
187	650713		Screw, 5/16-18 x 5/8"
	26073		Washer, Flat
	33776		Screen, Starter pulley
	31980		Pulley, Starter
	650680		Screw, 1/4-20 x 1-1/2"
	32046		Rope Assy., Starter (Use as required)
	610750		Grommet, Lead wire
	610773		Solid State Flywheel
	550223		Decal, Name
	34768		Decal, Name
	32676		Decal, Solid State
	31752		Decal, Air cleaner
	34346		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
301	631877		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 134 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

## This illustration may not depict actual equipment and is for reference only! **VIEW 2 of 3** 132 133 175 135 129 262 268 257A 270A 260A 255 235 252

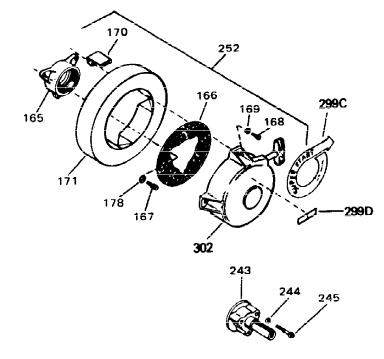

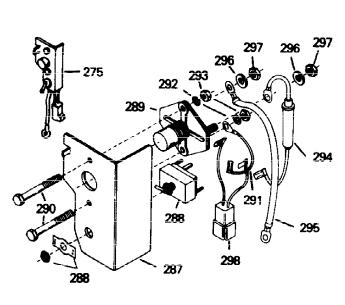

Ref #	Part Number	Qty	Description
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
180	650701		Screw, 8-18 x 7/16" (Use as required)
222	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
222	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736		Screw, 10-16 x 3/8" (Use as required)
	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
257B	610824		Flat Connector (Female terminals) (As req.)
260A	610759		Solid State Magneto
261	650489		Screw, 1/4-20 x 5/8"
261A	650669		Screw, 5/16-18 x 1-1/4"
262	610760		Solid State Transformer Ass'y.(Incl.1 73,266)
263	650561		Screw, 1/4-20 x 5/8"
266	610750		Grommet, Lead wire
275	730198		Starter Switch Kit(Incl. 287-298) (As req.)
277	30831		Ground Wire (Incl. 75)
303	33835		Electric Starter Motor (12 Volt) NOTE: The 32817
			and 33835 starter motors are used interchangeably
			on the se models. Refer to service numberstamped
			on end cap of motor, or on decal for identification.
			Refer to Division 5, Section D for breakdown.



Ref #	Part Number	Qty	Description
41	31967		Spring, Governor
62A	31977		Fuel Tank (Incl. 63)
71	26460		Clamp, Fuel line (Use as required)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
122C	32907B		Bracket, Air cleaner
122B	34065		Bracket, Air cleaner
123A	32008		Element, Air cleaner