
ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

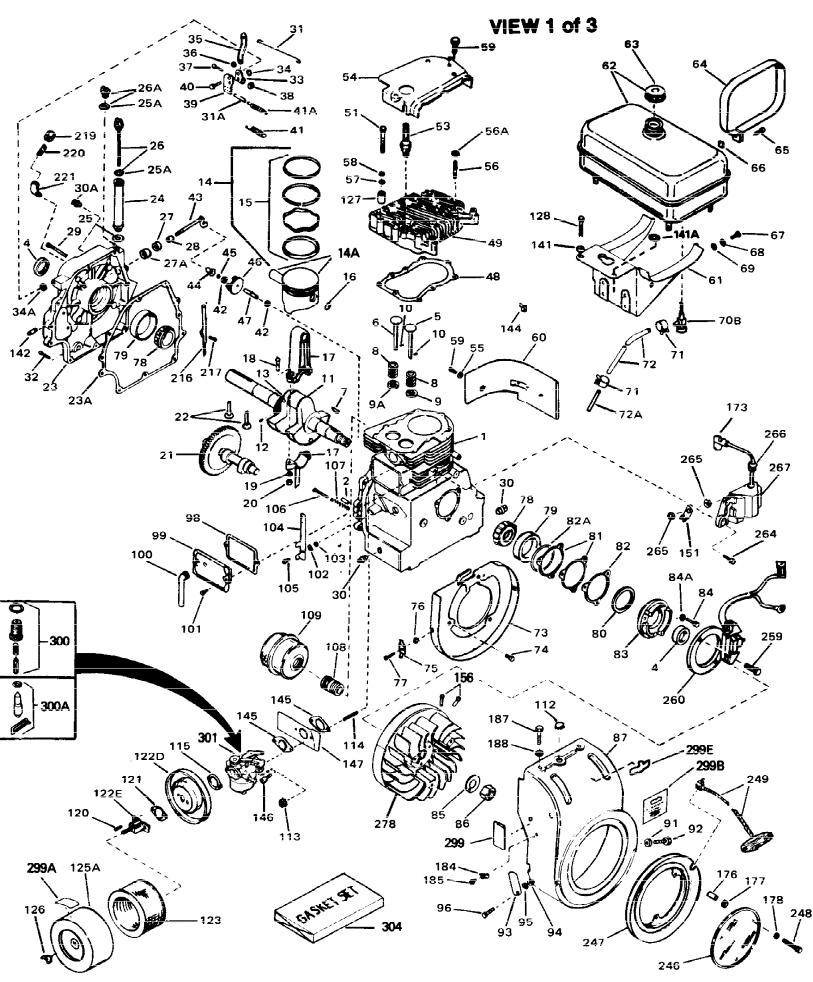


Ref #	Part Number	Qty	Description
1	33042		Cylinder (Incl. 2, 4, 30 & 47) (3-1/2 " Bore)
2	27652		Pin, Dowel
	31950		Seal, Oil
	31940		
			Intake Valve (Std.)
	31941		Intake Valve (1/32" OS) (Incl. 9)
	31942		Exhaust Valve (Std.)
6	31943		Exhaust Valve (1/32" OS) (Incl. 9)
7	650592		Key, Flywheel
	31944		Spring, Valve
	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
	31945		Cap, Lower valve spring (Std.)
	31946		Cap, Lower valve spring (1/32" OS)
10	20810		Pin, Valve spring retainer
11	32978A		Crankshaft (Incl. 12, 13, 17, 78 & 79)
12	29783		Pin, Crankshaft gear
	31931		Gear, Crankshaft
	32238B		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -1/2")
	32230B		
			Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32240B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14A	32621B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
14A	32622B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
14	34511		Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
	34512		Piston, Pin & Ring Set (.010" OS)
	34513		Piston, Pin & Ring Set (.020" OS)
	34524		Piston, Pin & Ring Set (.030" OS)
	34525		Piston, Pin & Ring Set (.040" OS)
	32241		Ring Set (Std.) (3-1/2" Bore)
15	32242		Ring Set (.010" OS)
15	32243		Ring Set (.020" OS)
15	32625		Ring Set (.030" OS)
	32626		Ring Set (.040" OS)
	32336		Re-Ringing Set, Piston
	31919		Ring, Piston pin retaining
	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18	32077		Bolt, Connecting rod
19	26073		Washer, Connecting rod
20	28264		Nut Assy., Lock
	32150		Camshaft (MCR)
	31939		Lifter, Valve
	31956A		* Gasket, Cylinder cover
	32580A		Cover, Cylinder (Incl. 4, 28, 30, 34, & 43)
	29673		* Gasket, Oil fill
26	33069		Dipstick (Incl. 25A)
28	32426		Spacer, Governor rod
29	650588		Screw, 1/4-20 x 2"
	31927		Oil Drain Plug
	31968		Link, Governor
	650451		Screw, 1/4-20 x 1"
	31964		Clamp, Governor lever
	29193		Ring, Retaining
35	31963		Lever, Governor adjusting
36	650518		Lockwasher
50			

		Qty	
	650544		Screw, 10-24 x 7/8"
	7975		Nut, 10-24
39	31965		Plate, Governor spring
40	30312		Screw, 10-32 x 1/2"
41	31967		Spring, Governor
42	30590A		Washer, Flat
43	32425		Rod Assy., Governor
44	31948		Spool, Governor
45	29193		Ring, Retaining
46	31947		Gear Assy., Governor
47	31930		Shaft, Mechanical Governor
48	32246A		* Gasket, Cylinder head
49	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650711		Screw, 5/16-18 x 1-5/8" (Use as required)
	650628A		Screw, 5/16-18 x 2-3/8" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650714		Screw, 5/16-18 x 1-5/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650692		Screw, 5/16-18 x 1-3/4" (Use as required)
	650603		Screw, 5/16-18 x 5/8" (Use as require d)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug (RJ-17LM)
	33035		Cover, Cylinder head
	28537		Washer, Plain
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	8274		Washer, Lock (Use as required)
	650128		Screw, $10-24 \times 1/2$ "
	31976		
	410144B		Extension, Blower housing Fuel Cap (White Plastic)(Std.)(As req uired)
03	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile)
			(Use as required)
67	650517		Screw, 1/4-20 x 27/32" (Use as requir ed)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	26460		Clamp, Fuel line (Use as required)
	29774		Fuel Line (Braided) (8.25") (Use as r equired)
	30705		Fuel Line (Braided) (16") (Use as req uired)
	30962		Fuel Line (Braided) (32") (Use as req uired)
	30965		Fuel Line (Braided) (48") (Use as req uired)
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31932		Bearing, Tapered roller
	31928		Cup, Bearing
	32031		Spacer, Steel (.010" thick) NOTE: Determine the
00	02001		gap between the cover and the machined surface on
			the cylinder which can be from .001"up to .007" in
			which case no shim gaskets will be required. Use of
			gasket must be limited to a combined total of .010"
			thick. Steel spacersmust be used as required
			แก่อง. อเออาอุคลออาจที่และ มอ นออน สิจาฮินุนแฮน

Dof #	Part Number	Description
	Part Number Qty 31971	Description * Casket Shim (004/ 005 thick) NOTE: Determine
Ø1	51371	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface
		on the cylinder which can be from .001"up to .007" in
		which case no shim gaskets will be required. Use of
		gasket must be limited to a combined total of .010"
		thick. Steel spacersmust be used as req
82	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine
		the gap between the cover and the machined surface
		on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of
		gasket must be limited to a combined total of .010"
		thick. Steel spacersmust be used as req
004	00500	
	32599	"O" Ring
83	32577	Cover, Cylinder NOTE: Determine the gap between
		the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no
		shim gaskets will be required. Use of gasket must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used as required to eliminat
0.4	702028	
	792028 650679	Screw, 5/16-18 x 7/8" Lockwasher, 5/16" (Use as required)
	650666	Washer, Lock
	650594	Nut, Flywheel, 3/4-16
	33044A	Blower Hsg. (Incl.73) (For electric s tarter)
	8274	Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	8274	Washer, Lock
	650624	Screw, 5/16-24 x 9/16"
	31958	* Gasket, Breather
	31957	Breather Assy.
	35350 650128	Tube, Breather Screw, 10-24 x 1/2"
	28558	Washer, Wave
	31966	Bushing, Control lever
	31984A	Lever, Control
	650597	Screw, 10-24 x 5/8"
	650591	Screw, 10-24 x 2"
	33099	Spring
	32042	Nipple, Exhaust pipe
	32043B	Muffler
	33038	Plug, Button (Use as required)
	29752 650587	Nut & Lockwasher Assy.
	650587 27272	Stud, Carburetor * Gasket, Air cleaner
	650399	Screw, 10-32 x 5/8"
	30767	Spacer, Air cleaner
	32376	Bracket, Air cleaner
	32378	Bracket, Air cleaner
	32009	Cover, Áir cleaner
	650513	Nut, Wing
	650713	Screw, 5/16-18 x 5/8" (Use as require d)
	650429	Screw, 5/16-18 x 3/4" (Use as require d)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
141	26073	Washer, Flat (Use as required)


		ty Description
141A		Lockwasher, Split (Use as required)
	31960	* Gasket, Carburetor
	31959	Baffle, Air
	33356	Terminal, Ground
	730201	Trigger Pin Kit (Use as required)
	610118	Cover, Spark plug (Use as required)
-	31992	Spacer, Screen
	8345	Washer, 1/4 plain (Use as required)
-	27070	Washer, Lock 1/4 E.T. (Use as require d)
	650675	Washer, Flat 1/4 (Use as required)
	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"
	650713	Screw, 5/16-18 x 5/8"
	26073	Washer, Flat
	33776	Screen, Starter pulley
	31980	Pulley, Starter
	650680	Screw, 1/4-20 x 1-1/2"
	32046	Rope Assy., Starter (Use as required)
	650661	Screw, 1/4-20 x 3/4"
	610408	Nut, Hex
	610750	Grommet, Lead wire
	610748	Solid State Magneto (Incl.151,173,265,266)
	610746	Solid State Flywheel
	550223	Decal, Name
	32676	Decal, Solid State
	34346	Decal, Instruction
	31752	Decal, Air cleaner
	32411A	Valve, Seat, Spring & Gasket Assy.
301	631498	Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
304	33237A	* Gasket Set (Incl. items marked *)

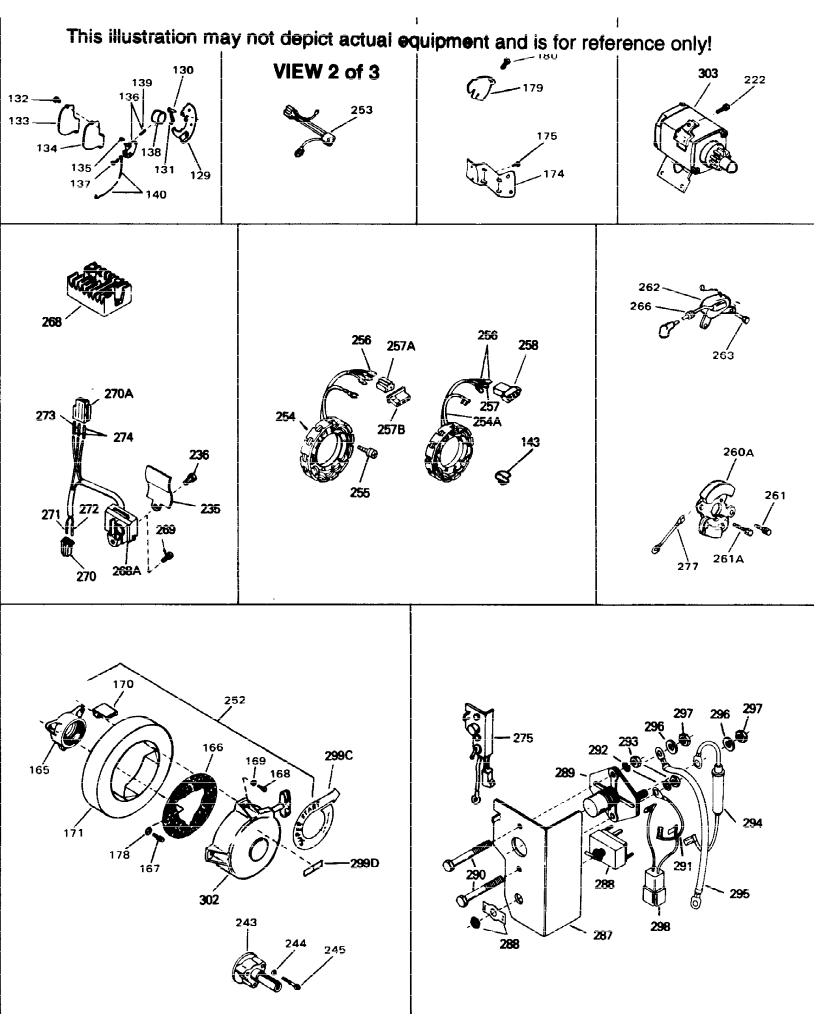

Ref #	Part Number	Qty	
178 180 222 222	27070 650675 650701 792028 650781 34276		Washer, Lock 1/4 E.T. (Use as require d) Washer, Flat 1/4 (Use as required) Screw, 8-18 x 7/16" (Use as required) Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor) Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
	650736 730134		Screw, 10-16 x 3/8" (Use as required) Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
	33018 610761		Harness Assy., Adapter (Use as requir ed) Alternator Coil (Solid State) (10 Amp) (Incl. Nos. 253, 256 & 257A)
256 257B 257A 266 268 275	650416 610922 610824 610819 610750 610749 730198 33835		Screw, 10-32 x 1" Terminal, Female Flat Connector (Female terminals) (As req.) Connector, Pyramid (For female termin als) Grommet, Lead wire Solid State Regulator (10 Amp) Starter Switch Kit(Incl. 287-298) (As req.) Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for breakdown.

HH120-120099C Engine Parts List #3

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

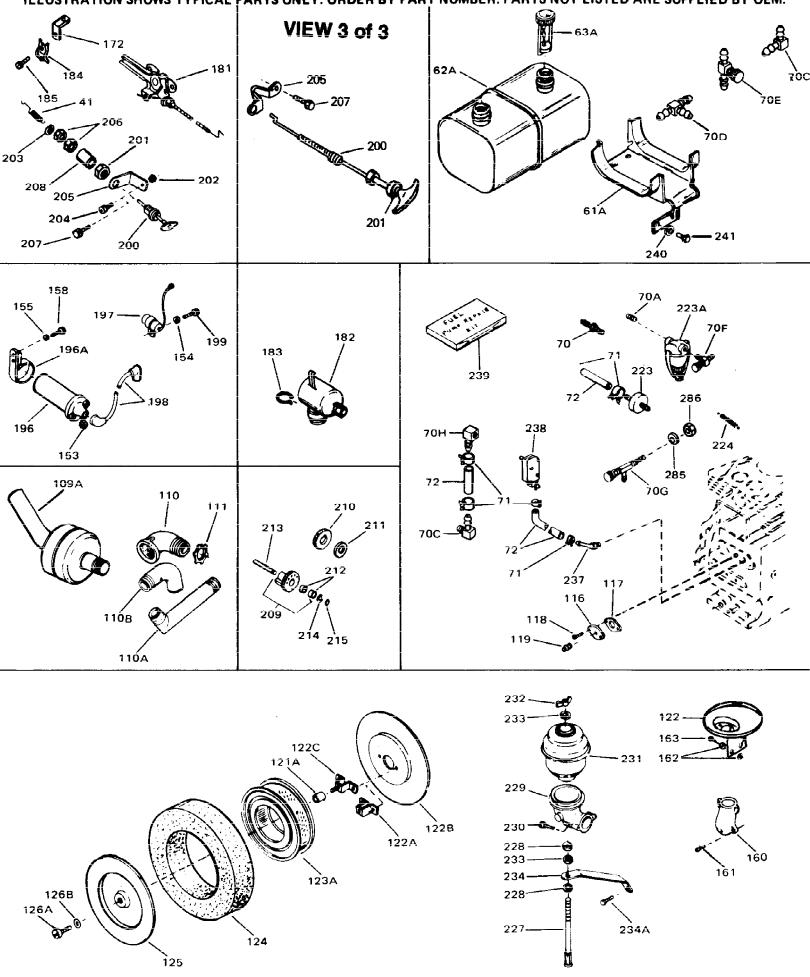

Ref #	Part Number	Qty	Description
41	31967		Spring, Governor
70	29634		Fitting, Fuel line
71	26460		Clamp, Fuel line (Use as required)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
123A	32008		Element, Air cleaner
172	31990		Bracket, Choke control
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"