
ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

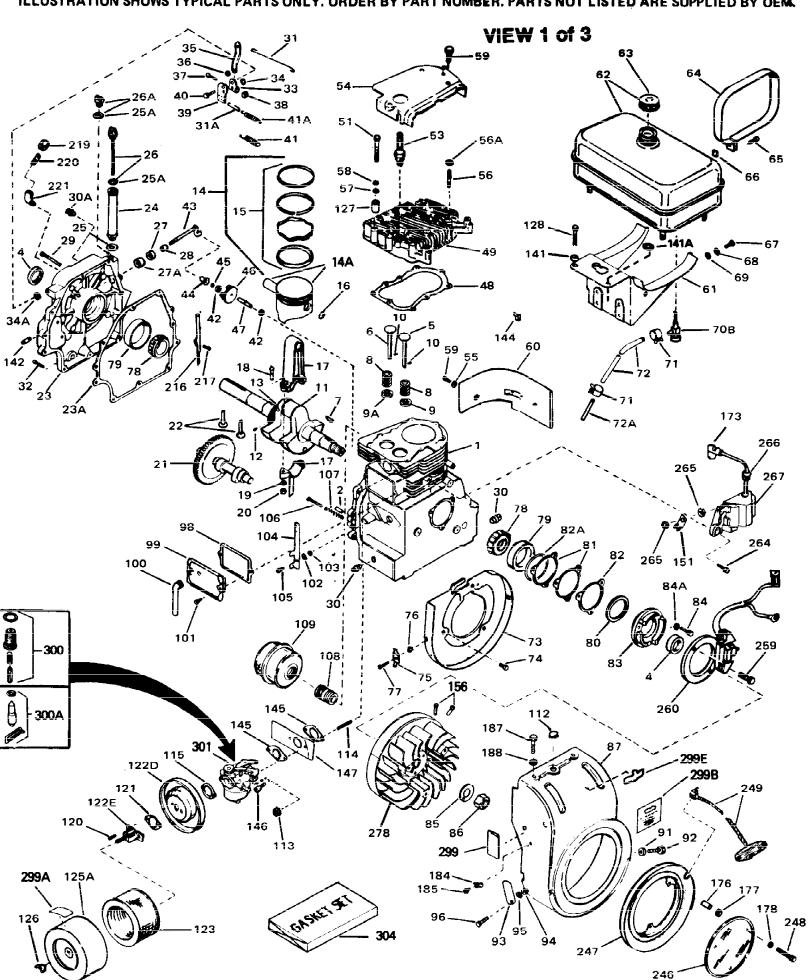


Ref #	Part Number	Qty	Description
1	33043		Cylinder (Incl. 2, 4, 30 & 47) (3-1/2 " Bore)
2	27652		Pin, Dowel
4	31950		Seal, Oil
5	31940		Intake Valve (Std.)
5	31941		Intake Valve (1/32" OS) (Incl. 9)
	31942		Exhaust Valve (Std.)
	31943		Exhaust Valve (1/32" OS) (Incl. 9)
	650592		Key, Flywheel
	31944		Spring, Valve
	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
	31945		Cap, Lower valve spring (Std.)
	31946		Cap, Lower valve spring (1/32" OS)
	20810		Pin, Valve spring retainer
	34019A		Crankshaft (Incl.12,13,78,79,210 & 21 1)
	29783		Pin, Crankshaft gear
	31931		Gear, Crankshaft
	32238B		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -1/2")
	32239B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32240B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32621B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	32622B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	34511		Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
	34512		Piston, Pin & Ring Set (.010" OS)
	34513		Piston, Pin & Ring Set (.020" OS)
	34524		Piston, Pin & Ring Set (.020 OS)
	34525		Piston, Pin & Ring Set (.040" OS)
	32241		Ring Set (Std.) (3-1/2" Bore)
	32242		Ring Set (3td.) (3-1/2 Bole)
	32242		Ring Set (.010 '03) Ring Set (.020" OS)
	32625		Ring Set (.020 '03) Ring Set (.030" OS)
	32626		Ring Set (.030 '03) Ring Set (.040" OS)
	32336		Re-Ringing Set, Piston
	31919		Ring, Piston pin retaining
	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
	32077		Bolt, Connecting rod
	26073		Washer, Connecting rod
	28264		Nut Assy., Lock
	33470		Camshaft (MCR)
	31939		Lifter, Valve
	34002A		
	31956A		Cover, Cylinder (Incl. 4, 30, 119 & 2 13)
	29673		* Gasket, Cylinder cover * Gasket, Oil fill
			·
	33069		Dipstick (Incl. 25A)
	32426		Spacer, Governor rod
	650492		Screw, 1/4-20 x 2-1/4"
	31927		Oil Drain Plug
	31968		Link, Governor
	650451		Screw, 1/4-20 x 1"
	31964		Clamp, Governor lever
	29193		Ring, Retaining
	31963		Lever, Governor adjusting
36	650518		Lockwasher


	Part Number	Qty	Description
37	650544		Screw, 10-24 x 7/8"
38	7975		Nut, 10-24
39	31965		Plate, Governor spring
40	30312		Screw, 10-32 x 1/2"
41	31967		Spring, Governor
42	30590A		Washer, Flat
43	32425		Rod Assy., Governor
	31948		Spool, Governor
45	29193		Ring, Retaining
46	31947		Gear Assy., Governor
	31930		Shaft, Mechanical Governor
	32246A		* Gasket, Cylinder head
49	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
51	650711		Screw, 5/16-18 x 1-5/8" (Use as required)
	650628A		Screw, 5/16-18 x 2-3/8" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650714		Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650692		Screw, 5/16-18 x 1-3/4" (Use as requi red)
	650603		Screw, 5/16-18 x 5/8" (Use as require d)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug (RJ-17LM)
	33035		Cover, Cylinder head
	28537		Washer, Plain
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	8274		Washer, Lock (Use as required)
	650128		Screw, 10-24 x 1/2"
	31976		Extension, Blower housing
	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile)
	0.2.0		(Use as required)
	650517		Screw, 1/4-20 x 27/32" (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	26460		Clamp, Fuel line (Use as required)
	29774		Fuel Line (Braided) (8.25") (Use as r equired)
	30705		Fuel Line (Braided) (16") (Use as req uired)
	30962		Fuel Line (Braided) (32") (Use as req uired)
	30965		Fuel Line (Braided) (48") (Use as req uired)
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31932		Bearing, Tapered roller
	31928		Cup, Bearing
80	32031		Spacer, Steel (.010" thick) NOTE: Determine the
			gap between the cover and the machined surface on
			the cylinder which can be from .001"up to .007" in
			which case no shim gaskets will be required. Use of
			gasket must be limited to a combined total of .010"
			thick. Steel spacersmust be used as required

Ref #	Part Number	Qty	Description
81	31971		* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
82	31972		* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 32577		"O" Ring Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84A 85 86 87 91 92 95 96 98 99 100 101 102 103 104 105 106 107 108 109 112 113 114 115 120 121	792028 650679 650666 650594 33044A 8274 650595 8274 650624 31958 31957 35350 650128 28558 31966 31984A 650597 650591 33099 33853 32043B 33038 29752 650587 27272 650399 30767 32812		Screw, 5/16-18 x 7/8" Lockwasher, 5/16" (Use as required) Washer, Lock Nut, Flywheel, 3/4-16 Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock Screw, 5/16-24 x 3/8" Washer, Lock Screw, 5/16-24 x 9/16" * Gasket, Breather Breather Assy. Tube, Breather Screw, 10-24 x 1/2" Washer, Wave Bushing, Control lever Lever, Control Screw, 10-24 x 5/8" Screw, 10-24 x 2" Spring Nipple, Exhaust pipe Muffler Plug, Button (Use as required) Nut & Lockwasher Assy. Stud, Carburetor * Gasket, Air cleaner Screw, 10-32 x 5/8" Spacer, Air cleaner Bracket, Air cleaner
126 128 128 128 141A	32810 650513 650713 650429 792028 8274		Cover, Air cleaner Nut, Wing Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 3/4" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d) Lockwasher, Split (Use as required)
141	26073		Washer, Flat (Use as required)

Ref #	Part Number	Qty	Description
145	31960	•	* Gasket, Carburetor
147	31959		Baffle, Air
151	610908		Terminal, Female
156	730201		Trigger Pin Kit (Use as required)
173	610118		Cover, Spark plug (Use as required)
177	8345		Washer, 1/4 plain (Use as required)
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
187	650713		Screw, 5/16-18 x 5/8"
188	26073		Washer, Flat
216	33467		Tube, Extension, Oil fill
217	650744		Screw, 10-24 x 7/8"
249	32046		Rope Assy., Starter (Use as required)
264	650661		Screw, 1/4-20 x 3/4"
265	610408		Nut, Hex
266	610750		Grommet, Lead wire
267	610906		Solid State Magneto (Incl.151,173,265,266)(20 Amp)
278	610901		Solid State Flywheel
299	34346		Decal, Instruction
	31752		Decal, Air cleaner
	550223		Decal, Name
	32676		Decal, Solid State
	32411A		Valve, Seat, Spring & Gasket Assy.
301	631498		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

This illustration may not depict actual equipment and is for reference only! **VIEW 2 of 3** 132 133 175 135 129 262 268 257A 270A 260A 255 235

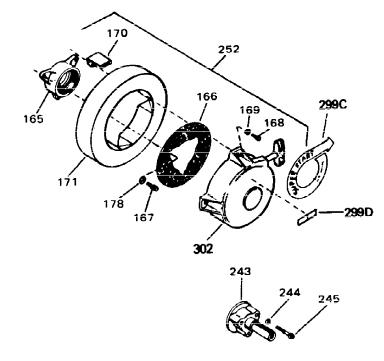

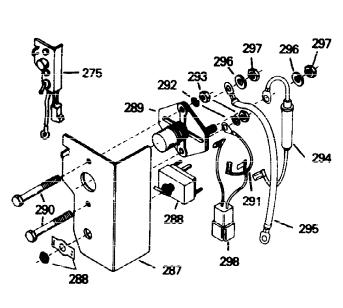

Ref #	Part Number	Qty	Description
	32048		Hub, Starter
	32049		Screen, Starter hub
167	650516		Screw, 1/4-20 x 1-1/8"
168	650598		Screw, 1/4-28 x 3/4"
169	8345		Washer, Flat
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
180	650701		Screw, 8-18 x 7/16" (Use as required)
222	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
222	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator
			mounting hole in blower housing)
236	650736		Screw, 10-16 x 3/8" (Use as required)
252	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 &
			291) (Use as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
254A	610902		Alternator Coil (20 Amp)(Incl.256,257,258)
255	650521		Screw, 10-32 x 1-1/8"
256	610905		Terminal
257	610904		Terminal
257B	610824		Flat Connector (Female terminals) (As req.)
258	610903		Connector, Flat
266	610750		Grommet, Lead wire
	610907A		Regulator (20 Amp) (Incl.268A, 269 & 298)
275	730198		Starter Switch Kit(Incl. 287-298) (As req.)
302	590405		Rewind Starter (Refer to Division 5, Section C, page
			24 for breakdown)
303	33835		Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for breakdown.
			•



Ref #	Part Number	Qty	Description
41	31967		Spring, Governor
71	26460		Clamp, Fuel line (Use as required)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
122C	32907B		Bracket, Air cleaner
123A	32008		Element, Air cleaner
172	31990		Bracket, Choke control
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
209	33965		Weight Assy., Counterbalance (Incl. 2 of 212)
210	33963		Gear, Counterbalance Weight
211	33499		Spacer
212	33501		Bearing, Needle
213	33502		Shaft, Counterbalance
214	33503		Washer, Thrust
215	792017		Ring, Retaining
237	32958		Fitting, Fuel
238	32959		Fuel Pump, Impulse
239	33010		Repair Kit, Impulse fuel pump