
HH50-95000H Engine Parts List

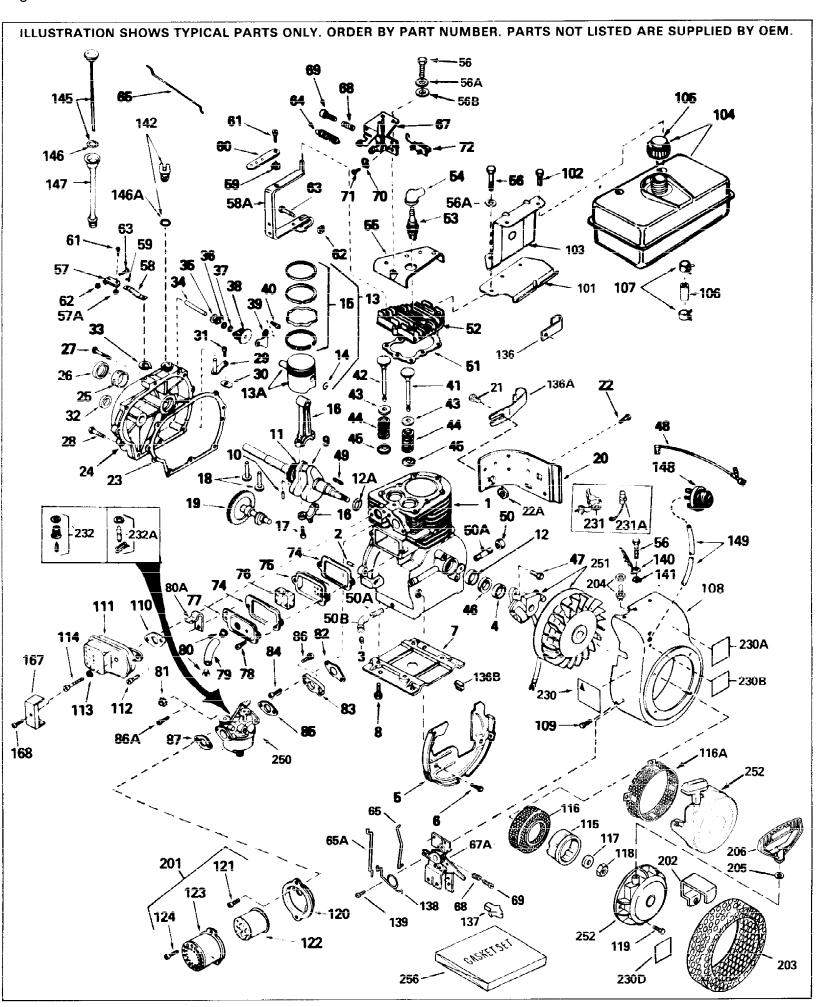

	Part Number	Qty	Description
	34915A		Cylinder (Incl. 2, 3 & 4) (2-5/8" Bor e)
	27652		Pin, Dowel
	27642		Pipe plug, 1/4-18
	32630		Seal, Oil
5	29536		Blower Housing Baffle (Without electric starter knock
			out) (Use as required)
5	35256A		Blower Housing Baffle (With electric starter
			knockout) (As req.)(point ign.)
6	650561		
	650561 29538		Screw, 1/4-20 x 5/8" Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
	34957		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
	27884		Gear, Crankshaft (Used on early production) This
	2.001		gear is serviceable ONLY when it is pinned to the
			crankshaft.
404	650625		
	650625 31461		Washer Thrust Bushing, Crankshaft
	31797B		Piston & Pin Ass'y. (Std.)(2-5/8')(In cl.14)
	31798B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	31799B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	34503		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34504		Piston, Pin & Ring Set (.010" OS)
	34505		Piston, Pin & Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
15	34854		Ring Set (Std.) (2-5/8" Bore)
15	34855		Ring Set (.010" OS)
15	34856		Ring Set (.020" OS)
	31295C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		Lifter, Valve
	33156		Camshaft
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561 30063		Screw, 1/4-20 x 5/8" (Use as required) Screw, 1/4-20 x 1/2" (Use as required)
	30684		Gasket Cylinder Cover
	31451A		Cylinder Cover (Incl.26, 34, 127A, 12 9 & 130)
	28460		Seal, Oil
	650451		Screw, 1/4-20 x 1"
	650599		Screw, 1/4-20 x 1-1/2"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
30	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642		Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A 650836		Bracket, Governor gear
	650836 32783		Screw, 10-24 x 1/2" Intake Valve (Std.)
	32783		
41	52104		Intake Valve (1/32" OS)

Ref # Part Number Oty Description 42 27878A Exhaust Valve (Std.) 42 27878A Exhaust Valve (Std.) 43 27882 Cap. Upper valve spring 44 27881 Spring, valve 45 32581 Cap. Upper valve spring 46 33876 Gasket, Stator 47 650489 Screw, 1/4-20 x 5/8" 49 32589 Key, Flywheel 51 28838C Gasket, Opinder head 53 33636 Resistor Spark Plug (RJ-8C) 54 610118 Cover, Assy, Cylinder head 55 80393A Cover, Assy, Cylinder head 56 80069A Screw, 5/16-18 x 2' (Use as required) 56 80069A Screw, 5/16-18 x 2', Use as required) 57A 30322 Looknu, 8-32 58 33454 Lever Assy, Governor 59 29918 Washer, Eduy 662 Screw, 1-0-32 x 3/4" 67A 34661 Link, Governor <				
42 27880 Exhaust Valve (1/32" OS) 43 27881 Spring, valve 44 27881 Spring, valve 45 32581 Cap, Upper valve spring 46 33876 Gasket, Stator 47 650489 Screw, 1/4-20 x 5/8" 48 32589 Kay, Flywheel 51 28938C Gasket, Stator 53 33636 Resistor Spark Plug (Use as required) 54 610118 Cover, Spark plug (Use as required) 56 650697 Washer, Fell (Use as required) 56 650697A Screw, 5/16-18 x 2'12' (Use as required) 56 650695A Screw, 5/16-18 x 2'14' (Use as required) 56 650695A Screw, 5/16-18 x 2'14' (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 29916 Locknu, 8-32 58 3464 Lever Assy, Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650549 Screw, 5/16'18 62 229	Ref #	Part Number	Qty	Description
43 27882 Cap, Upper valve spring 44 27881 Spring, valve 45 32581 Cap, Lower valve spring 46 33876 Gasket, Stator 47 650489 Key, Flywheel 49 32389 Key, Flywheel 51 28336C Gasket, Cylinder head 53 33363 Resistor Spark Plug (RJ-8C) 54 610118 Cover, Spark Plug (Use as required) 55 30339A Cover Assy, Cylinder head 568 650697A Screw, 5/16-18 x 2.1/2 (Use as required) 56 650695A Screw, 5/16-18 x 2.1/4 (Use as required) 56 650695A Screw, 5/16-18 x 2.1/4 (Use as required) 57 29916 Cabrut, 8-32 58 650694A Screw, 5/16-18 x 2.1/4 (Use as required) 57 29916 Cabrut, 8-32 58 650695A Screw, 5/16-18 x 2.1/4 (Use as required) 57 29216 Locknut, 8-32 58 3454 Lever Assy, Governor 59 29318 Washer, Flat (Use as required) 56 Screw, 5-	42	27878A	, i	
43 27882 Cap, Upper valve spring 44 27881 Cap, Lower valve spring 45 32581 Cap, Lower valve spring 46 33876 Gasket, Stator 47 650489 Screw, 1/4/20 x 5/8" 49 32589 Key, Flywheel 51 28383C Gasket, Cylinder head 53 33336 Resistor Spark Flug (RJ-8C) 54 610118 Cover, Spark Flug (RJ-8C) 55 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650697A Screw, 5/16-18 x 2-1/4" (Use as required) 56 650697A Screw, 5/16-18 x 2-1/4" (Use as required) 56 650697A Screw, 5/16-18 x 2-1/4" (Use as required) 56 650697A Screw, 5/16-18 x 2-1/4" (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 29918 Washer, Iock, No. 8 E.T. 61 6105048 Screw, 5/16-18 52 2918 Washer, Lock, Nu. 10-32 63 392918 Cortor Bracket (Incl. 68, 69, 72 & 1 38) 64 31342 Spring, Compression </td <td>42</td> <td>27880A</td> <td></td> <td>Exhaust Valve (1/32" OS)</td>	42	27880A		Exhaust Valve (1/32" OS)
44 27881 Spring, valve 45 32581 Cap, Lower valve spring 46 33876 Gasket, Stator 47 650489 Screw, 1/4-20 x 5/8" 49 32589 Key, Flywheel 51 28938C Gasket, Cylinder head 52 30338A Head, Cylinder head 53 33636 Resistor Spark Plug (RJ-8C) 54 610118 Cover, Asy, Cylinder head 56 650690 Washer, Belleville (Use as required) 56 650691 Washer, Flat (Use as required) 56 650694A Screw, 5/16-18 x 2'10 (Use as required) 57 29316 Clamp, Governor 58 30322 Looknut, 8-32 58 33454 Levar Asy, Governor 59 29316 Clamp, Governor 51 23926 Screw, 5-10* 62 32926 Screw, 7-10* 63 3342 Spring, Compression 69 650549 Screw, 7-40 x 7/16* 70 27793 Clip, Conduit 71 28423 <	43	27882		
46 32681 Cap, Lower valve spring 46 33876 Gasket, Stator 47 660489 Sorew, 1/4-20 x 5/8" 49 32589 Key, Flywheel 51 28938C Gasket, Cylinder head 52 30336 Resistor Spark Plug (RJ-8C) 54 610118 Cover, Spark Plug (RJ-8C) 55 30339A Cover Assy, Cylinder head 56 50697A Screw, 5/16-18 x 2.1" (Use as required) 56 650697A Screw, 5/16-18 x 2.1" (Use as required) 56 650695A Screw, 5/16-18 x 2.1" (Use as required) 56 650695A Screw, 5/16-18 x 2.1" (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 29918 Washer, Lock, No. 8 E.T. 61 650649 Screw, 5/16*18 62 29216 Locknut, 16-32 63 39826 Screw, 10-32 x 3/4" 64 31342 Spring, Compression 68 650549 Screw, 710-32 x 3/4" 70	44	27881		
46 33876 Gaskel, Stator 47 650489 Screw, 14-20, X36" 49 32589 Kay, Flywheel 51 28938C Gaskel, Cylinder head 52 30938A Head, Cylinder head 53 38636 Resistor Spark Plug (RJ-8C) 56 650697A Screw, Spark Plug (Use as required) 56 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650694A Screw, 5/16-18 x 2-1/3" (Use as required) 56 650695A Screw, 5/16-18 x 2-1/4" (Use as required) 57A 30322 Locknut, 8-32 58 30454 Lever Assy, Governor 59 29916 Clamp, Governor 61 6050548 Screw, 10-32 x 3/4" 62 29216 Locknut, 10-32 63 3484 Lever, 10-32 x 3/4" 64 Screw, 10-32 x 3/4" 65 329826 Screw, 10-32 x 3/4" 65 Screw, 10-32 x 3/4" 70 27793 Clip, Conduit 71	45	32581		
47 650489 Screw, 1/4-20 x 5/8" 49 32589 Key, Flywheel 51 28938C Gasket, Cylinder head 52 30938A Head, Cylinder head 53 33636 Resistor Spark Plug (RJ-8C) 54 610113 Cover, Spark Plug (Use as required) 55 30939A Cover, Spark Plug (Use as required) 56 650690 Washer, Belleville (Use as required) 56 650697A Screw, 5/16-18 x 2" (Use as required) 56 6506957A Screw, 5/16-18 x 2" (Use as required) 56 650691 Washer, Flat (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16" 62 29216 Locknut, 10-32 63 34661 Link, Governor 67 29826 Screw, 10-32 x 3/4" 68 1342 Spring, Compression 69 50549 Screw, 10-32 x 3/4" 70 27733 Clip, Conduit 71 29842				
49 32589 Key, Fjwheel 51 2938C Gasket, Cylinder head 52 30338A Head, Cylinder head 53 33636 Resistor Spark Plug (RJ-8C) 54 610118 Cover, Spark plug (Use as required) 55 30939A Cover Assy, Cylinder head 566 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650696A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650695A Screw, 5/16-18 x 2-1/2" (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 30322 Locknut, 8-32 58 3454 Lever Assy, Governor 59 29918 Washer, Lock, No. 8 E.T. 61 6050548 Screw, 10-32 x 3/4" 63 34661 Link, Governor 64 29216 Locknut, 10-32 65 34661 Link, Governor 64 31342 Spring, Compression 65 650549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-24 x				•
51 28938C Gaskef, Cylinder head 52 3938A Head, Cylinder 53 33636 Resistor Spark Plug (RJ-8C) 54 610118 Cover, Spark plug (Use as required) 56 50690 Washer, Belleville (Use as required) 56 650697A Screw, 5/16-18 x 2" (Use as required) 56 650695A Screw, 5/16-18 x 2" (Use as required) 56 650695A Screw, 5/16-18 x 2" (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16" 29216 Locknut, 10-32 24/4" 62 29216 Locknut, 10-32 63 34661 Link, Governor 67 3942 Screw, 10-32 x 3/4" 68 1342 Spring, Compression 68 60549 Screw, 10-32 x 3/3" 72 610973 Terminal Assy. (Use as required) 74 27896A Casket, Nave chamber cover 75 28423 Breather Assy. Valve 76 28				•
52 30938A Head, Cyfinder 53 33636 Resistor Spark Plug (RJ-8C) 54 610118 Cover, Spark plug (Use as required) 55 30933A Cover, Spark plug (Use as required) 56 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650694A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650695A Screw, 5/16-18 x 2-1/4" (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 30322 Locknut, 8-32 58 33454 Lever Assy., Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 10-32 x 3/4" 63 29826 Screw, 10-32 x 3/4" 64 34661 Link, Governor 69 650549 Screw, 10-32 x 3/8" 72 28926 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve				
53 33636 Resistor Spark Plug (Use as required) 54 610118 Cover, Spark plug (Use as required) 56 650690 Washer, Belleville (Use as required) 56 650697A Screw, 5/16-18 x 2-1/2* (Use as required) 56 650695A Screw, 5/16-18 x 2+1/4* (Use as required) 56 650695A Screw, 5/16-18 x 2+1/4* (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 30322 Locknut, 8-32 58 33454 Lever Assy., Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 10-32 x 3/4* 62 29216 Locknut, 10-32 63 39826 Screw, 10-32 x 3/4* 64 Control Bracket (Incl. 68, 69, 72 & 1 36) 67 34661 Link, Governor 71 28924 Screw, 5-40 x 7/16* 72 610973 Terminal Assy, Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather assy, Valve				
54 610118 Cover, Spärk, plug [Üse as required) 55 30939A Cover Assy, Cylinder head 56 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650695A Screw, 5/16-18 x 2-1/4" (Use as required) 56 650695A Screw, 5/16-18 x 2-1/4" (Use as required) 57 30322 Locknut, 8-32 58 3454 Lever Assy, Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 5/16-18 x 2-1/4" 62 29216 Locknut, 10-32 63 34864 Lorknut, 10-32 653 34864 Control Bracket (Incl. 68, 69, 72 & 1 38) 663 3142 Spring, Compression 670 27793 Clip, Conduit 71 28423 Screw, 10-32 x 3/8" 72 610973 Terminal Assy, Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy, Valve <td< td=""><td></td><td></td><td></td><td></td></td<>				
55 30339A Cover Assy., Cylinder head 56B 650690 Washer, Belleville (Use as required) 56 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650695A Screw, 5/16-18 x 2-1/4" (Use as required) 56A 650691 Washer, Flat (Use as required) 57A 30322 Locknut, 8-32 58 33454 Lever Assy., Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16" 62 29216 Locknut, 10-32 63 29826 Screw, 10-32 x 3/4" 65A Screw, 540 x 7/16" 62 29216 Locknut, 10-32 63 29826 Screw, 10-32 x 3/4" 65A Strew, 540 x 7/16" 70 27793 Clip, Conduit 71 28423 Breather Asy, Valve 72 610973 Terminal Asy, Use as required) 74 27895 Cover, Valve spring box 75 28423 Breather Asy, Valve <t< td=""><td></td><td></td><td></td><td></td></t<>				
568 650697A Washer, Evelleville (Use as required) 56 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 56 650695A Screw, 5/16-18 x 2-1/4" (Use as required) 56 650695A Screw, 5/16-18 x 2-1/4" (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 30322 Locknut, 8-32 58 33454 Lever Assy, Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16" 62 29216 Locknut, 10-32 63 34861 Link, Governor 64 Strew, 5-40 x 7/16" Screw, 5-43 x 3/4" 65 34661 Link, Governor 66 50549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy, Usve carequired) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy, Valve 76 28424 Element, Breather 80 32446				
56 650697A Screw, 5/16-18 x 2" (Use as required) 56 650693A Screw, 5/16-18 x 2" (Use as required) 56A 650693A Screw, 5/16-18 x 2-1/4" (Use as required) 57A 30322 Locknut, 8-32 58 33454 Lever Assy., Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 10-32 63 29826 Screw, 10-32 63 29826 Screw, 10-32 653 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 66 31342 Spring, Compression 67 27919 Screw, 10-32 x 3/4" 71 28942 Screw, 10-32 x 3/4" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy, Valve 76 28424 Element, Breather Hot 77 28425 Cover, Valve spring box 78 850128 Screw, 10-24 x 1/2" 79 35350 <t< td=""><td></td><td></td><td></td><td></td></t<>				
56 650695A Screw, 5/16-18 x 2"1/4" (Use as required) 56 650695A Screw, 5/16-18 x 2"1/4" (Use as required) 57 29916 Clamp, Governor lever (Use as required) 57 30322 Locknut, 8-32 58 33454 Lever Assy., Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 5/16" 62 29216 Locknut, 10-32 63 39826 Screw, 10-32 x 3/4" 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 5-40 x 7/16" 72 260973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 3/4" 83 30196				
56 650695A Screw, 5/16-18 x 2-1/a* (Use as required) 56A 650691 Washer, Flat (Use as required) 57 29916 Clamp, Governor lever (Use as required) 58 33454 Lever Assy., Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16* 62 29216 Locknut, 10-32 63 29826 Screw, 10-32 x 3/4* 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 10-32 x 3/8* 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8* 72 210973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2* 79 33500 Tube, Breather 804 Stofe88A * Gasket, Int				
56A 650691 Washer, Flat (Use as required) 577 30322 Locknut, 8-32 58 33454 Lever Assy, Governor lever (Use as required) 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16° 62 29216 Locknut, 10-32 63 38826 Screw, 10-32 x 3/4* 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube <tr< td=""><td></td><td></td><td></td><td></td></tr<>				
57 29916 Clamp, Governor lever (Use as require d) 57A 30322 Locknut, 8-32 58 33454 Lever Assy., Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16" 62 29216 Locknut, 10-32 63 29826 Screw, 10-32 x 3/4" 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 50549 Screw, 70-32 x 3/6" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/6" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 516-18 x 3/4" 83 34712 Flange, Carburetor 84 30196 Screw, 516-18 x 3/4" 8				
57A 30322 Locknut, 8-32 58 33454 Lever Assy., Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16" 62 29216 Locknut, 10-32 63 39826 Screw, 10-32 x 3/4" 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy., Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 5/16-18 x 3/4" 80 32446 Grommet, Breather tube 81 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor 84<				
58 33454 Lever Asy., Governor 59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16° 62 29216 Locknut, 10-32 63 29826 Screw, 10-32 X 3/4° 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 5-40 x 7/16° 70 27793 Clip, Conduit 71 28942 Screw, 10-32 X 3/8° 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2° 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 31688A * Gasket, Carburetor (Incl. 86A)				• • • • •
59 29918 Washer, Lock, No. 8 E.T. 61 650548 Screw, 8-32 x 5/16" 62 29216 Locknut, 10-32 63 29826 Screw, 10-32 x 3/4" 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 5-40 x 716" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 710-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 8531688A * Gasket, Carburetor				
61 650548 Screw, 8-32 x 5/16" 62 29216 Locknut, 10-32 63 29826 Screw, 10-32 x 3/4" 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 31688A * Gasket, Caburetor (Incl. 86A) 84 30196 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required)				
62 29216 Locknut, 10-32 63 29826 Screw, 10-32 x 3/4" 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather tube 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 37677 Spacer, Cleaner (Incl. 97)<				
63 29826 Screw, 10-32 x 3/4" 65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 540 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (
65A 34661 Link, Governor 67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather tube 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner				
67A 34664 Control Bracket (Incl. 68, 69, 72 & 1 38) 68 31342 Spring, Compression 69 650549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 88 34783 Filter, Pre-air 89 34782 Pol Nivet (1/8" dia.)				
68 31342 Spring, Compression 69 650549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Incl. 97) 90 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 88 34783 Filter, Pre-				
69 650549 Screw, 5-40 x 7/16" 70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 93 30675 Fit				
70 27793 Clip, Conduit 71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 88 34783 Filter, Pre-air 89 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Fitting, Breather <td></td> <td></td> <td></td> <td></td>				
71 28942 Screw, 10-32 x 3/8" 72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 88 34783 Filter, Pre-air 89 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Fitting, Breather 94 34780 Elbow, Air cleane				
72 610973 Terminal Assy. (Use as required) 74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Filter, Air cleaner 93 30675 Filting, Breather 94 34780 <td< td=""><td></td><td></td><td></td><td></td></td<>				
74 27896A Gasket, Valve chamber cover 75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34782 Filter, Pre-air 89 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 93 30675 Fitting, Breather 94 34780 Elbow, Air cleaner 94 34819 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
75 28423 Breather Assy., Valve 76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34782 Filter, Air cleaner (Incl. 97) 90 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 36675 Fitting, Breather 94 34780 Elbow, Air cleaner 94 34780 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
76 28424 Element, Breather 77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34783 Filter, Pre-air 89 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Fitting, Breather 94 34780 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
77 28425 Cover, Valve spring box 78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34783 Filter, Pre-air 89 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Fitting, Breather 94 34780 Elbow, Air cleaner 94 34819 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
78 650128 Screw, 10-24 x 1/2" 79 35350 Tube, Breather 80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34782 Filter, Pre-air 89 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Fitting, Breather 94 34780 Elbow, Air cleaner 94 34819 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
7935350Tube, Breather8032446Grommet, Breather tube8227915A* Gasket, Intake pipe to cylinder8334712Flange, Carburetor (Incl. 86A)8430196Screw, 5/16-18 x 3/4"8531688A* Gasket, Carburetor86A650517Screw, 1/4-20 x 13/16"8727272A* Air Cleaner Gasket (Use as required)8730767Spacer, Cleaner (Use as required)8834783Filter, Pre-air8934782Pop Rivet (1/8" dia.) (Purchase local ly)9134699Bracket, Air cleaner9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner94A34819Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
80 32446 Grommet, Breather tube 82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34783 Filter, Pre-air 89 34782 Filter, Air cleaner (Incl. 97) 90 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Fitting, Breather 94 34780 Elbow, Air cleaner 94A 34819 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				•
82 27915A * Gasket, Intake pipe to cylinder 83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34783 Filter, Pre-air 89 34782 Filter, Air cleaner (Incl. 97) 90 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Fitting, Breather 94 34780 Elbow, Air cleaner (Incl. 90,91,92,93,94,96)				
83 34712 Flange, Carburetor (Incl. 86A) 84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34783 Filter, Pre-air 89 34782 Filter, Air cleaner (Incl. 97) 90 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Fitting, Breather 94 34780 Elbow, Air cleaner (Incl. 90,91,92,93,94,96)				•
84 30196 Screw, 5/16-18 x 3/4" 85 31688A * Gasket, Carburetor 86A 650517 Screw, 1/4-20 x 13/16" 87 27272A * Air Cleaner Gasket (Use as required) 87 30767 Spacer, Cleaner (Use as required) 88 34783 Filter, Pre-air 89 34782 Filter, Air cleaner (Incl. 97) 90 34782 Pop Rivet (1/8" dia.) (Purchase local ly) 91 34699 Bracket, Air cleaner 92 34698A Gasket, Air cleaner 93 30675 Fitting, Breather 94 34780 Elbow, Air cleaner 94A 34819 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
8531688A* Gasket, Carburetor86A650517Screw, 1/4-20 x 13/16"8727272A* Air Cleaner Gasket (Use as required)8730767Spacer, Cleaner (Use as required)8834783Filter, Pre-air8934782Filter, Air cleaner (Incl. 97)9034782Pop Rivet (1/8" dia.) (Purchase local ly)9134699Bracket, Air cleaner9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner94A34819Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
86A650517Screw, 1/4-20 x 13/16"8727272A* Air Cleaner Gasket (Use as required)8730767Spacer, Cleaner (Use as required)8834783Filter, Pre-air8934782Filter, Air cleaner (Incl. 97)9034782Pop Rivet (1/8" dia.) (Purchase local ly)9134699Bracket, Air cleaner9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner (Incl. 90,91,92,93,94,96)				
8727272A* Air Cleaner Gasket (Use as required)8730767Spacer, Cleaner (Use as required)8834783Filter, Pre-air8934782Filter, Air cleaner (Incl. 97)9034782Pop Rivet (1/8" dia.) (Purchase local ly)9134699Bracket, Air cleaner9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner94A34819Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				•
8730767Spacer, Cleaner (Use as required)8834783Filter, Pre-air8934782Filter, Air cleaner (Incl. 97)9034782Pop Rivet (1/8" dia.) (Purchase local ly)9134699Bracket, Air cleaner9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner94A34819Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				•
8834783Filter, Pre-air8934782Filter, Air cleaner (Incl. 97)9034782Pop Rivet (1/8" dia.) (Purchase local ly)9134699Bracket, Air cleaner9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner94A34819Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
8934782Filter, Air cleaner (Incl. 97)9034782Pop Rivet (1/8" dia.) (Purchase local ly)9134699Bracket, Air cleaner9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner94A34819Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				,
9034782Pop Rivet (1/8" dià.) (Purchase local ly)9134699Bracket, Air cleaner9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner94A34819Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				•
9134699Bracket, Air cleaner9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner94A34819Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
9234698AGasket, Air cleaner9330675Fitting, Breather9434780Elbow, Air cleaner94A34819Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
93 30675 Fitting, Breather 94 34780 Elbow, Air cleaner 94A 34819 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				•
94 34780 Elbow, Air cleaner 94A 34819 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
94A 34819 Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96)				
(Use in 750561 assembly only)	94A	34013		•

	Part Number	Qty	Description
	650163		Screw, 10-32 x 7/8"
	650826		Stud, 1/4-20 x 6.20, threaded both en ds
	650825		Nut & Lockwasher, 1/4-20
	34781		Cover, Air cleaner
	650513		Nut, Wing, 1/4-20
	34158		Bracket, Fuel tank
	650665		Screw, 1/4-14 x 7/8"
	34159		Plate, Fuel tank mounting
104	34186A		Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening
			use fuel cap 35355.
105	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
105	33032		Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105	35355		Fuel Cap (Red plastic) (Use as requir ed)
106	29774		Fuel Line (Braided, 8 1/4") (Use as r equired)
106	30962		Fuel Line (Braided, 32") (Use as required)
107	26460		Clamp, Fuel line (Use as required)
108	32158E		Blower Housing (For electric starter)
	29747B		Screw, 5/16-24 x 21/32"
	27930A		* Gasket, Exhaust flange
	32401		Muffler
	391026		Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	33714		Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer, Flat
	650694A		Screw, 5/16 - 18 x 2"
	32125		Cup, Starter
	35009		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	29716		Screw, 1/4-28 x 7/16"
	31793 31855		Bearing, Ball
	31792		Retainer, Bearing
	650778		Washer, Thrust Washer, Lock
	650580		Nut, Lock
	34663		Spring, Speed control
	650821		Screw, 10-32 x 1/2"
	30747		Clip, Spark plug shorting
	650890		Lockwasher,Shakeproof, 5/16
	33185		Cover & tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8" (Use as required)
	33171		Screen, Muffler (Use as required)
	33323		Screen, Muffler (Use as required)
	33700		Cover & Tube, Muffler (Use as require d)
	31297		Dipstick (Incl. 146A)
	29673		* Gasket, Oil fill

		Qty Description
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
201B	730561	Air Cleaner Kit (Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
230C 230A 230A 231A 231A 232A 240 241 242 242 242 243 243 244	730130 34704 34346 34768 30547A 30548B 631021 611077 650868 611078 611079 590610 590613 632213	Muffler Adapter Kit (Incl.110,112)(As req.) Decal, Instruction Decal, Instruction Decal, Name Breaker Assy (Used on Std. Point igni tion) Condenser Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt .) Connector, A.C. Lighting (Optional) Connector, D.C. Charging (Optional) Tube, Centering (Optional) Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)
251	611038	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
252	590420A	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D	Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A	Gasket Set (Incl. items marked*)