



Dof #	Part Number	Ot:	Description
	32769B	Ųί	Description Cylinder (Incl. 2, 3, 4, 76 & 270) (2 -3/4")
	27652		Pin, Dowel
			·
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced
			by 34242 oil dipper but 650662C screw must be
			used.)
10	34242		Dipper, Oil
	32773		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
	27884		Gear, Crankshaft (Used in early production) This
13	27004		gear is servicable onlywhen it is pinned to the
			crankshaft.
			Clarinstratt.
14A	32770B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32771B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32772B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34528		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34529		Piston, Pin & Ring Set (.010" OS)
14	34530		Piston, Pin & Ring Set (.020" OS)
15	32595		Ring Set (Std.) (2-3/4" Bore)
15	32596		Ring Set (.010" OS)
15	32597		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034		Lifter, Valve
23	31451A		Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
24	28460		Seal, Oil
24B	31546		Bushing, Crankshaft (Use as required)
25	31297		Dipstick, Oil (Incl. 30)
26	30684		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
			Trodotor Opanii rag

	•	Description
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Valve spring
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
45	27915A	* Gasket, Intake
46	30195A	Flange, Carburetor (Incl. 79 & 80)
47	30196	Screw, 5/16-18 x 3/4"
	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
56	31710	Link, Throttle
59	29216	Nut, Lock, 10-32
60	650152	Screw, 8-32 x 3/8"
61	29826	Screw, 10-32 x 3/4"
62	29642	Ring, Retaining
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis
		no longer used. It is replaced by 30699C ass'y.,Ref.
		no. 63A)
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
66	29918	Lockwasher, #8 E.T.
67	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
	29536	Blower Housing Baffle (without electric starter
		knock-out) (Use as required)
73	35256A	Blower Housing Baffle (with electric starter
		knock-out) (Use as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A &
5 _, .		331B) (Use as required)
83	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11
0.	0.00	used in early production only.
88	28820	Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	29538	Base, Engine mounting
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
100	3000071	Speed, Cotoliloi

Ref #	Part Number	Qty	Description
109	30590A		Washer, Flat
	29193		Ring, Retaining
	650561		Screw, 1/4-20 x 5/8"
	31301		Fuel Tank (Incl. 115)
	410144B		Fuel Cap (White Plastic)(Std)(As required)
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low
			profile) (Use as required)
445	0.404.0		F 10 (B 1B) (1) (0 (1) (1) (1)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile)
			(Use as required)
115	25255		Fuel Cap (Llee on required)
	35355		Fuel Cap (Use as required)
	29683		Valve, Fuel shut-off
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
120	650128		Screw, 10-24 x 1/2" (Use as required)
121	30622A		Extension, Blower housing
	650542		Screw, 5/16-18 x 3/4"
	26073		Washer (Use as required)
			• • •
	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
131	650836		Screw, 10-24 x 1/2"
133	650599		Screw, 1/4-20 x 1-1/2"
149	30747		Clip, Shorting
150	650890		Lockwasher
	610118		Cover, Spark plug (Use as required)
	27276		Cover, Spark plug
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30939A		Cover, Cylinder head
	26460		Clamp, Fuel line
270	31461		Bushing, Crankshaft (Use as required)
274	610973		Terminal Ass'y. (As req. on late prod uction)
287	27275		Clip, Hi-tension wire (Use as require d)
287	34246		Clip, Ground wire (Use as required)
	650625		Washer, Thrust
	31752		Decal, Air cleaner
	550223		
			Decal, Name
	34346		Decal, Instruction
	30547A		Contact Assy., Breaker
	30548B		Condenser
334	631021		Inlet Needle, Seat & Clip Assy.
336	631453		Carburetor (Incl. 75) (Refer to Division 5, Section A,
			page 100 for breakdown)
			,
337	610689A		Magneto NOTE: The complete magneto is not
			available as an assembly. The magneto number is
			shown for reference purposes only. Order
			component parts individually, as show in parts list.
			(Refer to Division 5, Section B, page 24 for
			breakdown)
			,
343	33239A		Gasket Set (Incl. items marked*)
			·

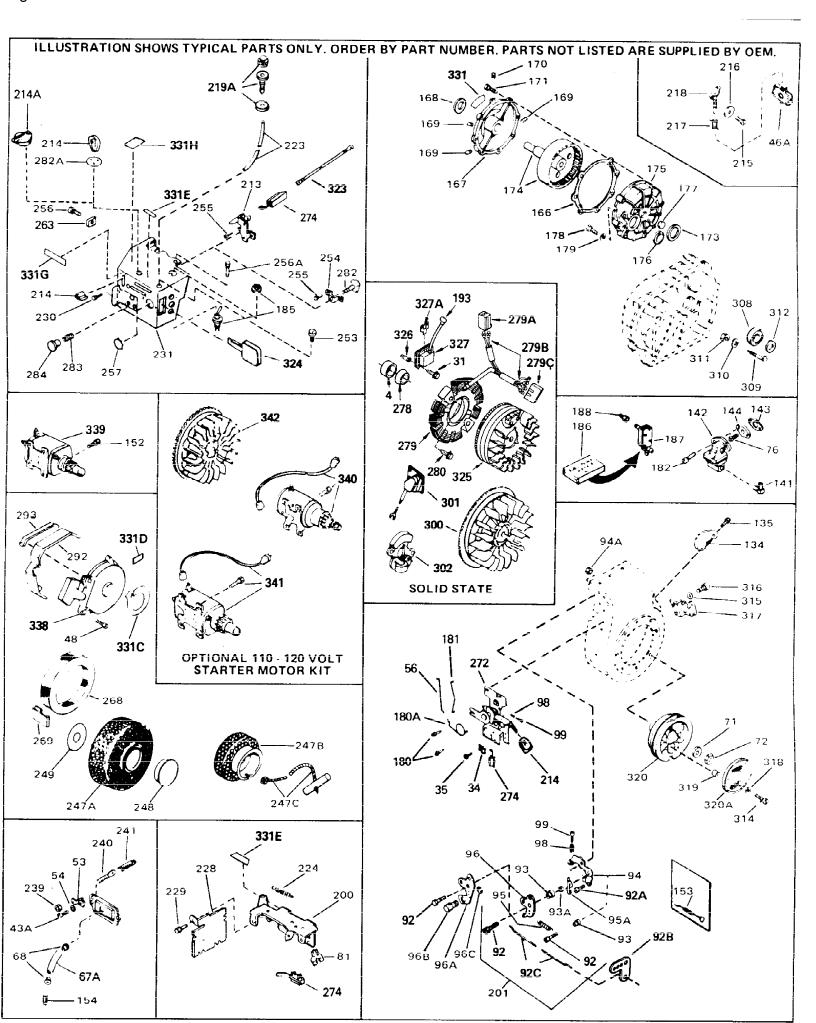

Ref #	Part Number	Qty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
56	31710		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
193	610118		Cover, Spark plug (Use as required)
193	27276		Cover, Spark plug
239	33450		Nut, Lock
240	30845A		Bolt, Governor adjusting
241	30886A		Spring, Governor bolt
247C	590343		Rope Assy., Starter
247B	28301		Pulley, Rope starter
263	650764		Nut, "U" Type (Use as required)
274	610973		Terminal Ass'y. (As req. on late prod uction)
308	31793		Bearing, Ball
309	31855		Retainer, Bearing
310	650778		Washer, Lock
311	650580		Nut, Lock
312	31792		Washer, Thrust
331	550223		Decal, Name
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt
			starter motor kit may have been added to this engine.
			It can be added only if cylinder hasdrilled and tapped
			starter mounting bosses and a ring gear flywheel
			(see#342). Refer to service number stamped on end
			cap of motor, or on decal, for identifica
242	30811A		Elymphool (Ping goar flywhool requiredon engines
342	30011A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
			using 110-120 voil starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std.
			Point ignition) (Ring gear flywheel required on
			engines using 110-120 volt starter kits listed above)
3/12	611085		Flywheel (Minimum ring gear flywheel required on
342	011000		engines using 110-120 volt starter kits listed above)
			(Use withSolid State ignition)
			(USE WILLIOUIL State Igrillion)

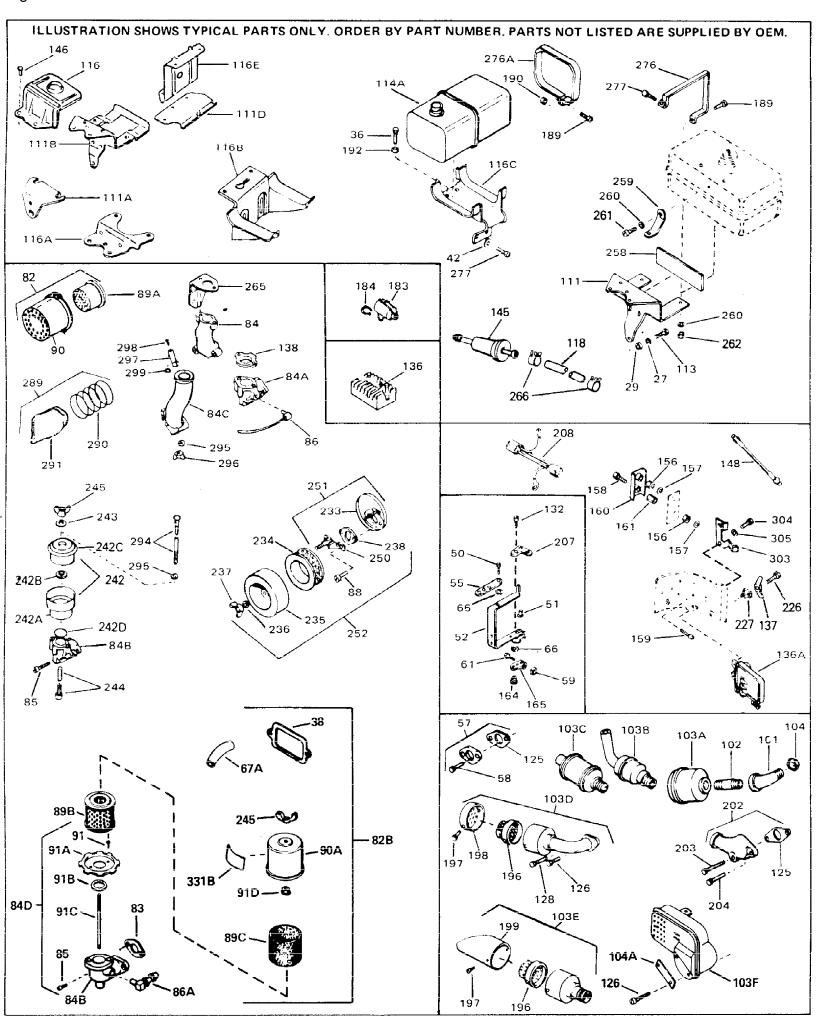

Ref #	Part Number	Qty Description
36 36 38 42 42 50 51	27513 650697A 650695A 650694A 27896A 26073 650691 650548 30319 32326A	Lockwasher, 1/4" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as requi red) Screw, 5/16-18 x 2-1/4" (Use as requi red) Screw, 5/16-18 x 2" (Use as required) * Gasket, Breather cover Washer (Use as required) Washer, Flat (Use as required) Screw, 8-32 x 5/16" Rivet, Split (Used in early production) Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
57 58 59 61 66	30205 730130 30196 29216 29826 29918 730127	Bracket, Adjusting Exh.Adap.Kit (Incl. 58 & 125) (Use as req.) Screw, 5/16-18 x 3/4" (Use as require d) Nut, Lock, 10-32 Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
	27272A 34819	* Gasket, Air cleaner Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only)
90 101 102 103E 103A 104 111 113 118 118 118 128 132 148 148 148 149 202 203 204 207 262	28820 31715 30209 30244 391026 29633 32862 31694 650561 29774 30705 30962 650694A 650548 650139 34067 34069 6201 31288 650697A 6021A 31725A 29752 26460	Screw, 10-32 x 1/2" Body, Air cleaner Elbow, Exhaust (45 degree) Muffler Nipple Opt. Spark Arrest Muffler (Incl.196,1 97,199) Muffler Conduit Nut Bracket, Fuel tank Screw, 1/4-20 x 5/8" Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 5/16-18 x 2" (Use as required) Screw, 8-32 x 5/16" (Early production) Screw, 8-32 x 1/2" Wire Assy., Alternator adapter (4-1/4") Wire Assy., Alternator adapter (6-3/4") Screw, 1/4-28 x 7/8" Exh. Adaptor Kit (Incl.125,203,204) (As req.) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 1-1/2" (Use as required) Extension, Governor lever Nut, Lock Clamp, Fuel line
276 277	26460 31697 29212 31752	Strap, Fuel line Strap, Fuel tank Screw, Hex hd. Sems, 1/4-28 x 7/16 Decal, Air cleaner