



Dof #	Part Number	Otv	Description
	32769B	Ųίy	Description Cylinder (Incl. 2, 3, 4, 76 & 270) (2 -3/4")
	27652		Pin, Dowel
			·
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	31469A		Exhaust Valve (Std.) (Incl. 9)
	31470A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
	32190		Spring, Valve (Rotator)
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32189		Cap, Lower valve spring (Rotator)
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced
			by 34242 oil dipper but 650662C screw must be
			used.)
10	34242		Dipper, Oil
	32880		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production )
	27884		Gear, Crankshaft (Used in early production) This
10	27004		gear is servicable onlywhen it is pinned to the
			crankshaft.
			Clarinstiait.
	34528		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34529		Piston, Pin & Ring Set (.010" OS)
14	34530		Piston, Pin & Ring Set (.020" OS)
14A	32770B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32771B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32772B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
15	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31451A		Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
	31546		Bushing, Crankshaft (Use as required)
	28460		Seal, Oil
	29668		Dipstick, Oil (Incl. 30)
26	30684		* Gasket, Cylinder cover
28	650451		Screw, 1/4-20 x 1"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
32	32631A		* Gasket, Cylinder head
33	30938A		Head, Cylinder
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
			- Color opant rag

Ref #	Part Number	Qty Description
39 40 41 42A 42 43 45 46 47 48 50	27896A 28423 28424 28425 650690 26073 650691 650128 27915A 30195A 30196 29716 650548 32326A	* Gasket, Breather cover Body, Breather Element, Breather Cover, Valve spring Washer, Belleville (Use as required) Washer (Use as required) Washer, Flat (Use as required) Screw, 10-24 x 1/2" * Gasket, Intake Flange, Carburetor (Incl. 79 & 80) Screw, 5/16-18 x 3/4" Screw, 1/4-28 x 7/16" Screw, 8-32 x 5/16" Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
56 59 60 61 62 63A	30205 32327 29216 650152 29826 29642 30699C 30699B	Bracket, Adjusting Link, Throttle Nut, Lock, 10-32 Screw, 8-32 x 3/8" Screw, 10-32 x 3/4" Ring, Retaining Rod Assy., Governor (Incl. 64 & 65) Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
65 66 67 69 70 71 72 73	30700 650494 29918 35350 29747B 32158E 650815 8116 29536	Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Blower Housing (For elec.star.)(Incl. 134,135) Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
74 75	35256A 650561 31688A	Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)  Screw, 1/4-20 x 5/8"  * Gasket, Carburetor
80 82A	29752 650572 730164	Nut & Lockwasher Assy., 1/4-28 Screw, 1/4-28 x 1-1/8" Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
	27272A 31691	* Gasket, Air cleaner Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
89 90 97 100	28820 30727 31715 30831 29538 31845	Screw, 10-32 x 1/2" Element, Air cleaner Body, Air cleaner Ground Wire (Incl. 137) Base, Engine mounting Shaft, Mechanical governor

Ref #	Part Number	Qty	Description
108 110 113	31947 32324 29193 30063		Gear Assy., Governor Spool, Governor Ring, Retaining Screw, 1/4-20 x 1/2"
	410144B 33032		Fuel Cap (White Plastic)(Std)(As requ ired) Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
118 118 118 120 121 124 127 128 129 130 131 133 149 193 205 209 246 266 270 274 287 287 313 331 331A 331B 332 333	35355 29774 30705 30962 650128 30622A 650542 26073 650694A 32589 31843A 650836 650599 30747 610118 650561 30939A 32125 26460 31461 610973 27275 34246 650625 550223 34346 31752 30547A 30548B 31393		Fuel Cap (Use as required) Fuel Line (Braided 8-1/4" 21 cm) (Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-1/2" Clip, Shorting Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Cup, Starter Clamp, Fuel line Bushing, Crankshaft (Use as required) Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Washer, Thrust Decal, Name Decal, Instruction Decal, Air cleaner Contact Assy., Breaker Condenser Valve, Seat & Gasket Assy.
	631677		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 120 for breakdown)
337	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)

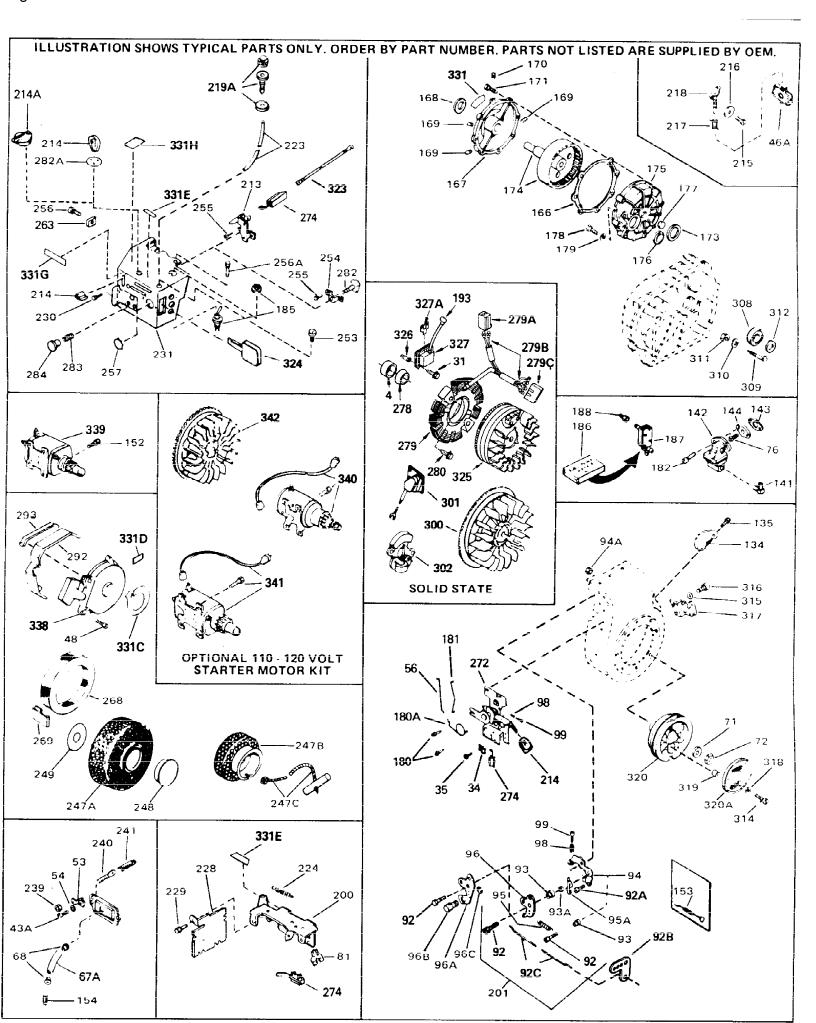

Ref #	Part Number	Qty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	32327		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
141	28566		Fitting, Fuel line
186	33010		Repair Kit, Impulse fuel pump
187	32959		Fuel pump, Impulse
188	33229		Pipe Fitting
193	610118		Cover, Spark plug (Use as required)
239	33450		Nut, Lock
240	30845A		Bolt, Governor adjusting
241	32329		Spring, Governor bolt
263	650764		Nut, "U" Type (Use as required)
274	610973		Terminal Ass'y. (As req. on late prod uction)
308	31793		Bearing, Ball
309	31855		Retainer, Bearing
310	650778		Washer, Lock
311	650580		Nut, Lock
312	31792		Washer, Thrust
331	550223		Decal, Name
338	590420		Rewind Starter (Refer to Division 5, Section C, page
			25 for breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt
			starter motor kit may have been added to this engine.
			It can be added only if cylinder hasdrilled and tapped
			starter mounting bosses and a ring gear flywheel
			(see#342). Refer to service number stamped on end
			cap of motor, or on decal, for identifica
2/12	30811A		Flywheel (Ring gear flywheel requiredon engines
342	30011A		using 110-120 volt starter kits listed above)
			,
342	611042		Flywheel (Used on Type letters H and above) (Std.
			Point ignition) (Ring gear flywheel required on
			engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on
			engines using 110-120 volt starter kits listed above)
			(Use withSolid State ignition)

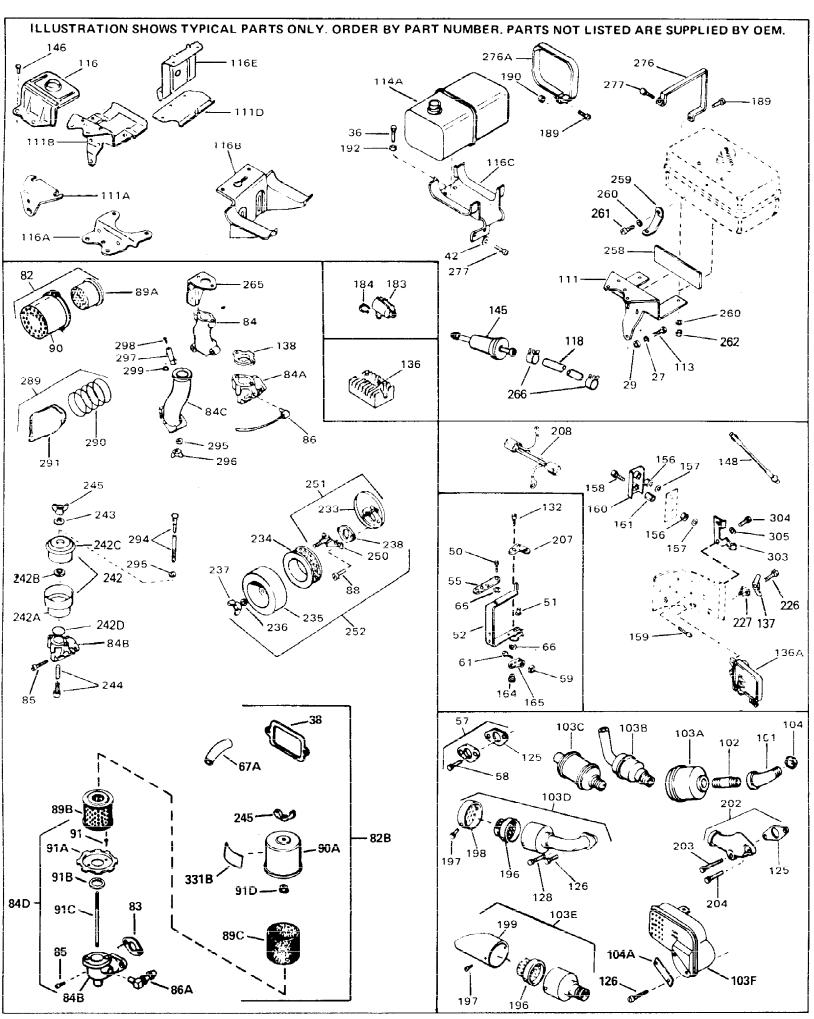

Ref #	Part Number	Qty	Description
27	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early production)
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238
02	730127		& 331B) (Use as required)
			a 33 lb) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C,
			90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only
			on engines with an externally vented fully adjustable
			carburetor)
00	070704		,
	27272A		* Gasket, Air cleaner
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B &
			91C) (Use in 730561 assembly only)
88	28820		Screw, 10-32 x 1/2"
	31715		Body, Air cleaner
	29574		Muffler Elbow
	30244		Muffler Nipple
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
			Muffler
	29633 32862		Conduit Nut
	30063		Screw, 1/4-20 x 1/2"  Fuel Line (Proided 8 1/4" 21 cm)(Line co reg.)
	29774		Fuel Line (Braided 8-1/4" 21 cm) (Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	31584		Cup, Spark plug
	31583		Clamp, Wire
202	31288		Exh. Adaptor Kit (Incl.125,203,204) ( As req.)
203	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
204	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	26460		Clamp, Fuel line
	31752		Decal, Air cleaner
			,