

Ref #	Part Number	Qty	
	35371 27652		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72) Pin, Dowel
15A	30700		Yoke, Governor
15	30699C		Rod Assy., Governor (Incl. 15A & 15B)
	650494		Screw, 6-40 x 5/16"
	33454		Governor Lever Assy.
	29916		Clamp, Governor lever
	650548		Screw, 8-32 x 5/16"
	35319		Seal, Oil
	29536		Blower Housing Baffle (Without electric starter
20	20000		knockout) (Use as required)
25	35256A		Blower Housing Baffle (With electric starter
25	25222		knockout) (Use as required)
	35326		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	35420A		Crankshaft
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	29216		Locknut, 10-32
	30322		Nut & Lockwasher, 8-32
	29642		Ring, Retaining
	34860A		Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A		Piston, Pin & Ring Set (.010" OS)
40	34862A		Piston, Pin & Ring Set (.020" OS)
41	34863		Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	34865		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34866A		Ring Set (Std.) (3-5/16" Bore)
42	34867A		Ring Set (.010" OS)
42	34868A		Ring Set (.020" OS)
43	27888		Ring, Piston Pin retaining
	35373A		Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908		Bolt, Connecting rod
	650882		Connecting Rod Bolt (2 pcs. on early Specs.)
	34034		Lifter, Valve
	35374		Dipper, Oil
	35375		Camshaft (MCR)
	33273A		Extension, Blower housing
	650802		Screw, 1/4-20 x 5/8"
	650128		Screw, 10-24 x 1/2"
	35262		* Gasket, Flange
	33626B		Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642		· · · · · · · · · · · · · · · · · · ·
			Plug, Oil drain
	33625		Seal, Oil
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	35378		Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832		Screw, 1/4-20 x 1-11/16" (Use as requ ired)
89	32589		Key, Flywheel
90	611091		Flywheel (w/ring gear)
92	650880		Washer, Lock


Ref #	Part Number Qt	y Description
93	650881	Nut, 5/8-18
100	35135	Solid State Assy.
102	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	29783	Pin, Crankshaft gear (Only serviceable when gear is
100	207.00	pinned to crank.)
		,
	33245	Gear, Crankshaft
	35183	Wire, Ground
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
127	650691	Washer (Do not use with No. 6021A scr ew.)
128	650690	Washer, Belleville (Use as required)
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do
		notuse No. 650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use
100	000711	6021A but discard 650691 washer.)
400	0500044	•
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650890	Washer, Internal Lock
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
173	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
186	34661	Link, Governor lever
200	34664	Control Bracket (Incl.19,203, 204, 20 6 & 209)
207	33878	Link, Governor lever-to-throttle
209	650821	Screw, 10-32 x 1/2"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
261	650788	Screw, 5/16-18 x 3/4"


Page 4 of 12


HM100-159143F Engine Parts List #1


	•	Description
	29747B	Screw, 5/16-24 x 21/32"
265	33272B	Cover, Cylinder head
275	33280A	Muffler
276	31588	Plate, Muffler locking
276	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	35287	Cup, Starter
	35446	Screen, Starter
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	
		Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300	34186A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with
		the 1-3/16" I.D. opening use fuel cap 34210. Tanks
		with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required)
••••		(1.5" I.D.)
0044		
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile)
		(Use as required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
		(Use as required) (1.5" I.D.)
0044		
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33893A	Oil Fill Tube
	33590	"O" Ring
310	34011A	Dipstick (Incl. 307)
325	34246	Clip, Ground wire
327	35392	Plug, Starter
338A	31291	Plug, Cover
340	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
	34686	Decal, Name
	34346	Decal, Instruction
	35274	Decal, Instruction
	631021	•
		Inlet Needle, Seat & Clip Assy.
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5,
		Section A, page A4-4 for breakdown or Fiche 18B,
		Grid D-3)
390	590633	Rewind Starter (Refer to Division 5, Section C, page
		30 for breakdown or Fiche 18B, Grid G-1)
22-	057004	
395	35763A	Electric Starter Motor (12 Volt) (Refer to service
		number stamped on end cap of motor, or on decal,
		for identification. Refer to Division 5, Section D for
		breakdown or Fiche 18B, Grid G-6)
400	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
421	1 00220	OAL JIVOU 4-OYGE LIIGINE OII (QUAIT)


Ref # Pai	rt Number Qty	Description
422 358	824	Muffler Optional

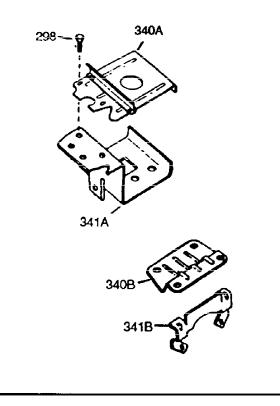


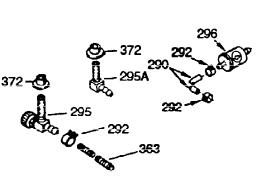

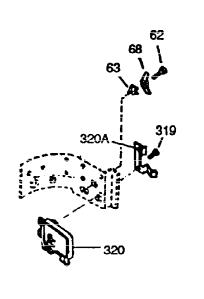


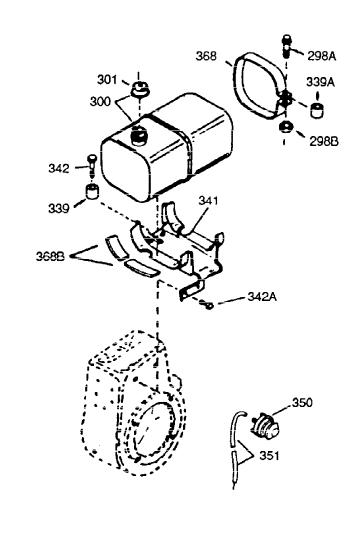

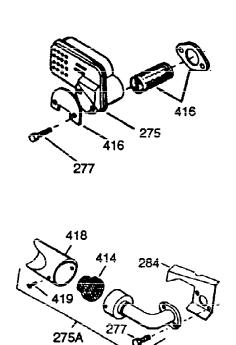


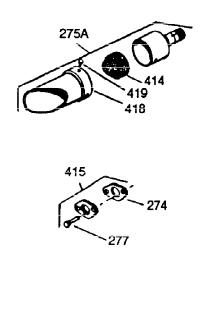

Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34186A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with
			the 1-3/16" I.D. opening use fuel cap 34210. Tanks
			with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required)
00171	101445		(1.5" I.D.)
	<u>.</u>		,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile)
			(Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
	0.12.10		(Use as required) (1.5" I.D.)
0044	05055		
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

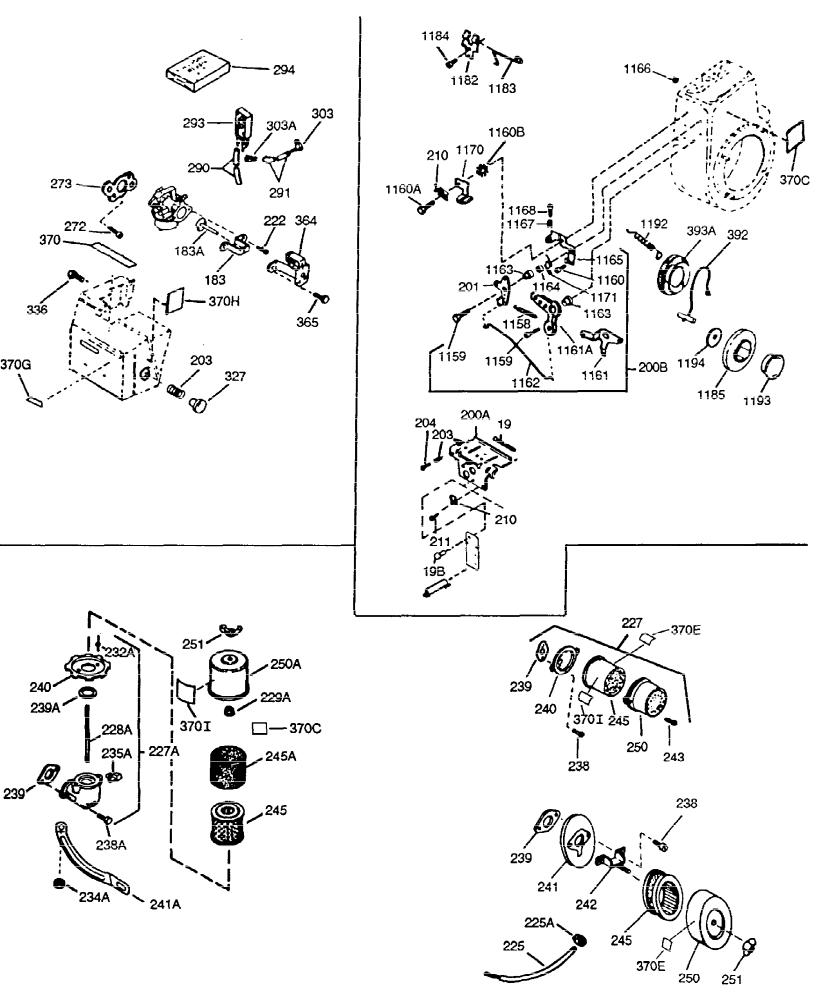

37A 64 129 131 131A 200B 210 211	Part Number 30322 650802 650727 650737 650738 650713 730152 27793 28942 730127	Qty	Description Nut & Lockwasher, 8-32 Screw, 1/4-20 x 5/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" Control Bracket (Incl.1158-1171)(As r eq.) Clip, Conduit Screw, 10-32 x 3/8" Pop Rivet (Can be purchased locally) Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
239 241 242 245 250B 251 290 290 291	28820 27272A 33266 33267 33268 33269A 650513 29774 30962 30705 33715		Screw, 10-32 x 1/2" * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Element, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Fuel Line (Braided 8-1/4")(21cm)(As r equired) Fuel Line (Braided 32")(80cm)(As required) Fuel Line (Braided 16")(40cm)(As required) Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
303 327 338A 370 370 421 422 1159 1160 1160	35355 32958 35392 31291 34346 35274 730226 35824 30312 28820 27070 33816		Fuel Cap (Red Plastic)(1.75" I.D.) Fitting, Fuel Plug, Starter Plug, Cover Decal, Instruction Decal, Instruction SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.

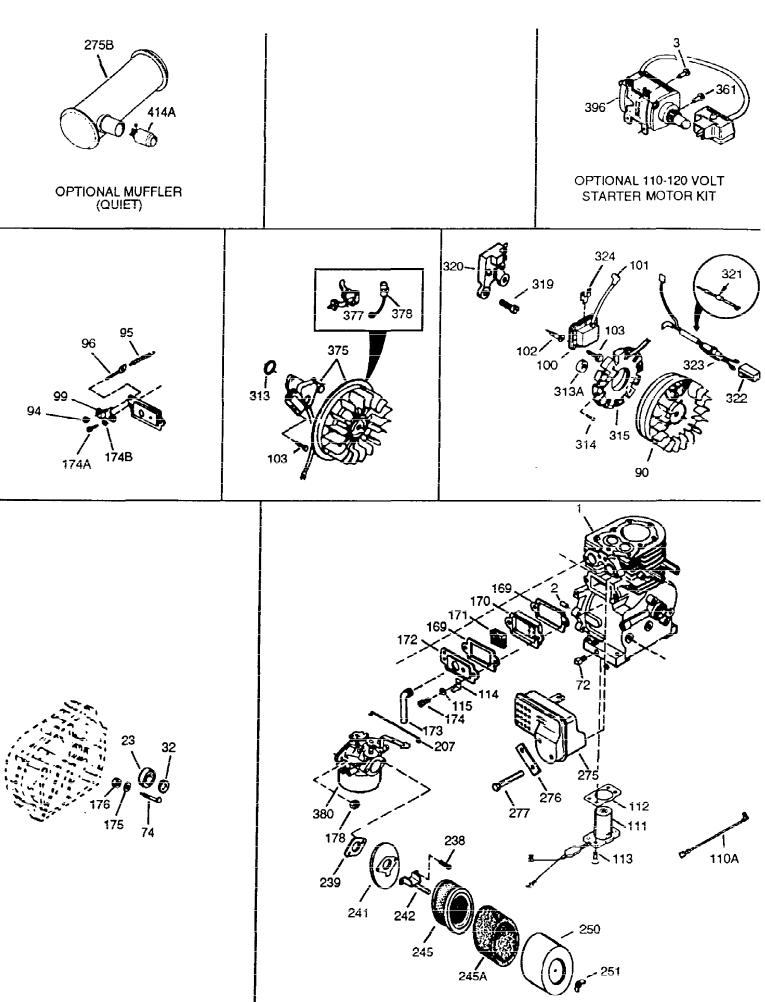

		Qty	
	35371		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652		Pin, Dowel
23	33627		Bearing, Ball
32	33628		Washer, Thrust
37A	30322		Nut & Lockwasher, 8-32
	650802		Screw, 1/4-20 x 5/8"
	27642		Plug, Oil drain
	31855		Retainer, Bearing
	611091		Flywheel (w/ring gear)
	35135		Solid State Assy.
	650872		Stud, Solid state mounting
	650814		Screw, Torx T-15, 10-24 x 1"
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
173	35350		Tube, Breather
174	650128		Screw, 10-24 x 1/2"
175	650778		Lockwasher
176	650580		Nut, Lock
178	29752		Nut & Lockwasher, 1/4-28
207	33878		Link, Governor lever-to-throttle
222A			Pop Rivet (Can be purchased locally)
	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	391026		•
2736	391020		Muffler (Incl. 284, 284A & 416) (This spark arrester
			mufflercan be used on any model.)
275	33280A		Muffler
276	31588		Plate, Muffler locking
276	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
	410144B		Fuel Cap (White Plastic)(Standard) (Use as required)
00171	4101445		(1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile)
			(Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	33876		Gasket, Stator (Used only on Std. poi nt ign.)
	31291		Plug, Cover
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	30547A		Breaker Points (Use with Std. point i gn.)
311	OOTIN		Dioanoi i ointo (Ooc with old. point i gil.)

Ref #	Part Number	Qty	Description
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
	730226 35824		SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional