Illustrated Parts List Model Series 112700 to 112799 Compliance


TYPE NUMBERS 3000 3060 through 3065


TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 012301 are listed herein only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be needed for more accurate parts identification. Then use the Illustrated Parts List covering the Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Number are listed. THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type number is listed under "Note," order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note," use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

BRIGGS & STRATTON
®

PRINTED IN U.S.A.

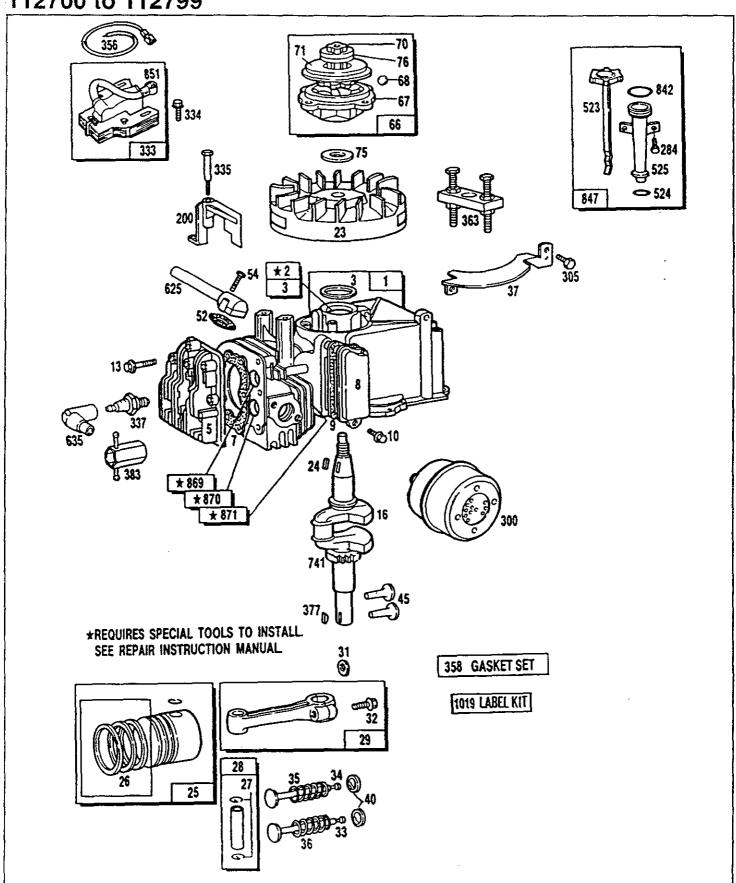


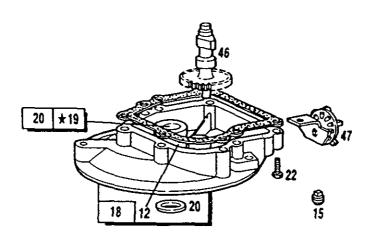

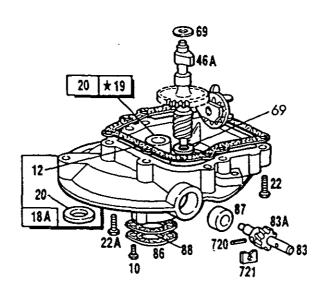


*REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.



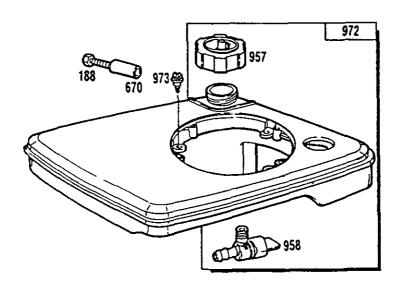


REF. 972 FUEL TANKS FOR ENGINES WITH REWIND START ONLY

Color	Black	Grey	Amer. Red (I/Ce)	Sun Yellow	Light Fawn
Part No.	490622	490808	490806	490804	491045

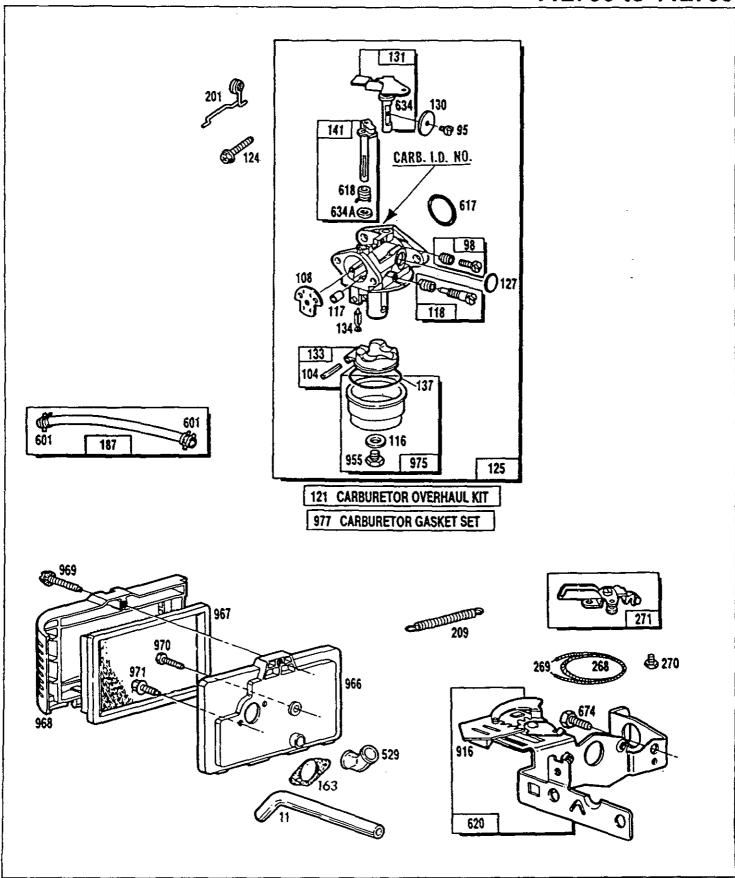

8546-5

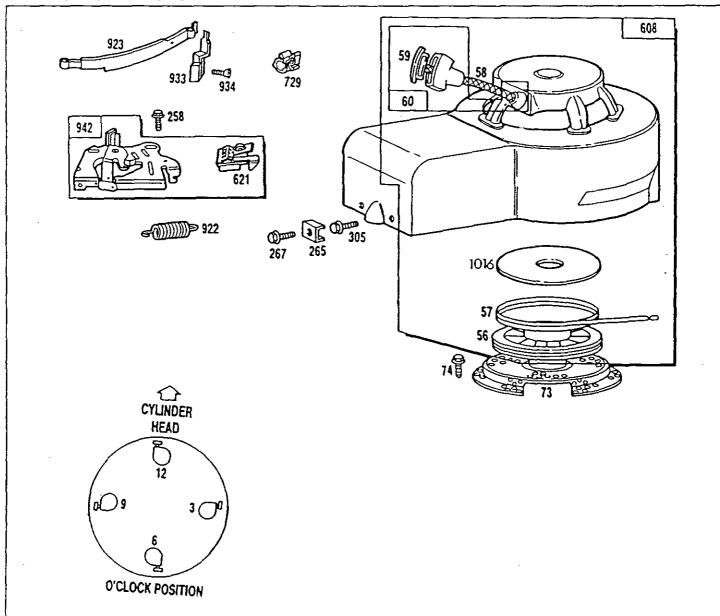

CLOCK POSITIONS							
1:30	1:30 4		9	12			
		398176	398005	398004			

								0 (0 112733
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	398477	Cylinder Assembly	25	396455	Piston-AssyStandard	52	*270844	Gasket-Intake Elbow
2		Bushing-Cylinder			Piston Assy010" O.S.	54	93485	Screw-Intake Elbow
		Requires Special Tools			Piston Assy020" O.S.			Mounting
		for Installation.			Piston Assy030" O.S.	56	280469	Pulley-Starter
3	299819	Seal-Oil				57	490179	Spring-Rewind Starter
5	212996	Head-Cylinder		112700 SI	1	58	280406	Rope-Rewind Starter
7	±270836	Gasket-Cylinder Head	PISTON	RING SET	For Chrome Piston			(81" Long)
8	298383	Breather-Valve	•	Mole.	Ring Set-Standard		Note:	if Longer Rope is
		Chamber			Size-Order			Needed, Order No.
9		Gasket-Valve Cover			Part No. 392330.			280399 and Cut to
10	93394	Screw-Breather and	26	396459	Ring Set-Standard			Required Length. Order
		P.T.O. Gear Cover		000 100	Piston			66734 For 48–5/8"
		(Ref. No. 86)		396460	Ring Set~		000000	Long Rope
	004000	Mounting Sem			.010" O.S. Piston	59 60		Insert-Starter Grip
11		Tube-Breather		396461	Ring Set-	60 65		Grip-Starter Rope
12	±270833	Gasket-Sump .015" Thick			.020" O.S. Piston	66		Screw-Cover Mounting Clutch Assembly-
		(Standard)		396462	Ring Set~	00	399071	Rewind Starter
	± 270805	Gasket-Sump			.030" O.S. Piston	67	30/807	Housing-Starter Clutch
	* 210033	.005" Thick	27	26026	Lock-Piston Pin	68		Ball-Clutch
	+270896	Gasket-Sump	28	391649	Pin Assembly-	69		Washer-Thrust
	- 270050	.009 Thick			Piston-Standard	05	00017	(11/16" O.D. x
13	93111	Screw-Cylinder Head		394861	Pin Assembly-			15/32" I.D.)
	00	(1-15/16" Long)			Piston005" O.S.		Note:	68938 Washer-Thrust
15	91084	Plug-Oil Drain	29		Rod Assy.—Connecting			(13/16" O.D. x
16		Crankshaft		Note:	For Connecting Rod			17/32" I.D.)
	Note:	To Replace Crankshaft			With .020" Undersize			Used on Auxiliary
		Gear Pin, Order Part			Crankpin Bore-Order			Drive P.T.O. Camshaft
		No. 230978.	04	200000	No. 393710.			and is Located Next to
		492094 Crankshaft	31	222282	Washer-Flat			the Worm Gear.
		Used on Type Nos.	20	04405	(One for Each Screw)	70	298799	Ratchet-Rewind Starter
		3060, 3065.	32 33		Screw-Connecting Rod Valve-Exhaust	71	394506	Washer-Clutch
18		Sump-Engine	34	· ·	Valve-Intake			Retainer
18 A	395390	Sump-Engine	35		Spring-Intake Valve	73		Screen-Starter Pulley
		Used on Model 112782	36		Spring-Exhaust Valve	74		Screw-Sem
		to 112788	37		Guard-Flywheel	75		Washer
		Series Engines.	40		Retainer-Valve Spring	76	68238	Washer-Ratchet
19		Bushing-Engine Sump			Used With Valves With	83	220021	Sealing Shaft-Drive
	Mofe:	Requires Special Tools for Installation.			Groove in Stem.	63		231213 Shaft-Drive
20	201/82	Seal-Oil	45	261250	Tappet-Valve		Mote.	Used on Type Nos.
22		Screw-Mtg. Sem	46	395856	Gear-Cam			3061, 3062.
22A		Screw-Sem	46A	395904	Cam Gear, Worm and	83A	231278	Gear-Drive
	30410	(One Used in Auxiliary	1		Oil Slinger Assembly			231279 Gear-Drive
		Drive Gear Sump) on		Note:	395906 Cam Gear,			Used on Type Nos.
		Model 112782 to	{		Worm and Oil Slinger			3061, 3062.
		112788 Series Engines.]		Assembly	86	221780	Cover-Sump
23	395653	FlywheelMagneto			Used on Type No.	87		Seal-Oil
24	222698	Key-Flywheel	Í	004650	3061.	88	270328	Gasket-Base Cover
			47	294652	Oil Slinger Gear and Bracket			
							a.a. 6 1	
	ded in Gas No. 49326:			ed in Cart lef. 121.	ouretor Overhaul Kit		ded in Carb No. 490937	uretor Gasket Set-
,	15020	- .						

	, 00 (
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
95	94098	Screw-Throttle Valve		Note:	398184 Shaft		Note:	if Longer Casing is
		Mounting	1		Assembly-Throttle	1		Needed, Specify Length
98	398185	Screw-Idle Adjustment			(Used Before Code			in Inches; if a Shorter
104	•231371	Pin-Float Hinge			Date 87081700).			Casing is Needed,
108	223471	Valve-Choke	133	398187	Float AssyCarburetor	1		Order No. 66986 and
116	••	Gasket-Sealing	134	•398188	Valve-Inlet			Cut to
		(Available in Kit Only)			(Includes Seat)			Required Length.
117	•	Jet-Main	137	••	Gasket-Bowl	269	26099	Wire Control,
		(Available in Kit Only)			(Available in Kit Only)			54" Long
118	•492500	Valve and	141	398186	Shaft-Choke		Note:	if Longer Wire is
		Spring-Needle	163	271840	Gasket-Air Cleaner			Needed, Specify Length
		(For LMS-11)	187		Hose-Fuel	İ		in Inches; if Shorter
	398670	Valve and	188	398540	Screw-Fuel Tank			Wire is Needed, Order
		Spring-Needle	,		Mounting	1		No. 26099 and Cut to
		(For LMS-3)	İ		(Includes Washer)			Required Length.
	•398157	Valve and	200	68388		270	63426	Locknut-Control
		Spring-Needle	201	262365	Link-Governor			Wire Casing
		(For LMS-1)			(Used After Code Date	271	290568	Lever Assembly-
		(See Carburetor			87081600).			Control
		Illustration For Location	1	Note:	262043 Link-	284		Screw-Clamp Mounting
		of LMS I.D. Number)			Governor	300	-	Muffler-Exhaust
121	492495	Carburetor Overhaul Kit			(Used Before Code	305		Screw-Sem
		(For LMS-11)			Date 87081700).	333		Armature-Magneto
	398669	Carburetor Overhaul Kit	209	260875	. •	334	93381	Screw-Armature
	000450	(For LMS-3)		Note:	261060 Spring-		00405	Mounting Sem
	398158	Carburetor Overhaul Kit	[Governor	335	93435	Screw-Armature and
		(For LMS-1)	[Used on Type No.	ĺ		Governor Blade
		(See Carburetor	1		3065.	227	200000	Mounting Sem
		Illustration For Location	Į		261105 Spring-	337	290009	Plug-Spark (with Gasket)
124	0/110	of LMS I.D. Number) Screw-Carb. Mtg.	ĺ		Governor	ì		(1-1/2" High, 37 mm)
125		Carburetor Assembly			Used on Type Nos. 3060, 3061, 3062,	356	208808	Wire-Ground
123	732373	(For LMS-11)			3063.	358	=	Gasket Set
	Note:	491331 Carburetor			261320 Spring-	363	= -	Puller-Flywheel
	11016.	Assembly			Governor	377		Key-Woodruff No. 6
		(For LMS-1)	Į		Used on Type No.	383		Wrench-Spark Plug
		(Used After Code Date			3064.	523		Cap With
		87081600).	258	94018	Screw-Hex. Head		000012	Dipstick-Oil Filler
		492498 Carburetor	265		Clamp-Casing	524	271485	Seal-Filler Tube
		Assembly			221535 Clamp Casing	525		Tube-Oil Filler
		(For LMS-3)		-1.2.0.	Used on Type No.	529		Grommet-Breather
		(Used Before Code			3000.	601		Clamp-Hose
		Date 87081700).	267	93686	Screw-Clamp Mtg.	608		Starter AssyRewind
127	•	Plug-Welch	268		Casing-Control			See Chart on Illustrated
		(Available in Kit Only)			Wire-48" Long			Pages.
130	223470	Valve-Throttle			•	617	••270344	Seal-Fuel Intake Tube
131	491333	Shaft Assembly-				618	262035	Spring-Chake
		Throttle						
		(Used After Code Date				<u> </u>		
		87081600).				1		
A 11	المائدة	lint Cat		da dia 0 - 1		 	المناهم المام	urator Cooket Cot
	ded in Gasi No. 493263			ded in Carb Ref. 121.	ouretor Overhaul Kit	1	ed in Carb lo. 490937	uretor Gasket Set-
]		-
			}		_	}		

398181	Plate-Carburetor	869					
	Control		211172	Seat-Intake Valve	934	94037	Screw-Band Brake
	Control			(Standard)			Pivot
	Used on Model 112702			(Used After Code Date	942	493248	Control Plate-
	and 112782			88073100).			Band Brake
	Series Engines.		Note:	210879 Seat-	949	280502	Cover-Static-Gard
396847	Switch-Stop			Intake Valve			(Rewind)
397973	Tube-Fuel Intake			(Used Before Code	955	231373	Screw-Bowl Mounting
•	Washer-Throttle Shaft			Date 88080100).	957	397974	Cap AssyFuel Tank
	(Available in Kit Only)	870	211291	Seat-Exhaust Valve	958	399517	Valve-Fuel Shut-Off
•	Seal-Choke Shaft			(Standard)	966	399059	Base-Air Cleaner
	(Available in Kit Only)	871	262001	Guide-Exhaust Valve	967	397795	Filter-Air
280512	Spacer-Fuel Tank		Note:	63709 Guide-	968	280501	Cover-Air Cleaner
94117	Screw-Bracket to			Intake Valve	969	94120	Screw-Cover Mtg.
	Cylinder			See Repair Instruction	970	94118	Screw-Hex. Head
93474	Pin-Gear to Shaft			Manual	971	94121	Screw-Air Cleaner
221779	Stop-Drive Shaft	916	280993	Rack-Gear	972		Tank AssyFuel
280470	Clip-Wire			(Used After Code Date			See Chart on
261533	Gear-Timing			89033100).			Illustrated Pages
270920	Seal-Filler Cap		Note:	280522 Rack-Gear	973	94114	Screw-Hex. Head
398010	Filler Group-Oil			(Used Before Code	975	398191	Bowl AssyCarburetor
221798	Terminal-Ignition Cable			Date 89040100).	977	398183	Gasket Set-Carburetor
		922	261647	Spring-Band Brake	1016	490817	Spacer
		923	394867	Brake Assembly-Band	1019	491081	Label Kit
		933	223448	Pivot-Band Brake			
•	397973 280512 94117 93474 221779 280470 261533 270920 398010	396847 Switch-Stop 397973 Tube-Fuel Intake Washer-Throttle Shaft (Available in Kit Only) Seal-Choke Shaft (Available in Kit Only) 280512 Spacer-Fuel Tank 94117 Screw-Bracket to Cylinder 93474 Pin-Gear to Shaft	396847 Switch—Stop 397973 Tube—Fuel Intake Washer—Throttle Shaft (Available in Kit Only) Seal—Choke Shaft (Available in Kit Only) 280512 Spacer—Fuel Tank 94117 Screw—Bracket to Cylinder 93474 Pin—Gear to Shaft 221779 Stop—Drive Shaft 280470 Clip—Wire 261533 Gear—Timing 270920 Seal—Filler Cap 398010 Filler Group—Oil 221798 Terminal—Ignition Cable	396847 Switch—Stop 397973 Tube—Fuel Intake	Intake Valve (Used Before Code Date 88080100). (Available in Kit Only) Seal-Choke Shaft (Available in Kit Only) 280512 Spacer-Fuel Tank 94117 Screw-Bracket to Cylinder 93474 Pin-Gear to Shaft 221779 Stop-Drive Shaft 280470 Clip-Wire 261533 Gear-Timing 270920 Seal-Filler Cap 398010 Filler Group-Oil 221798 Terminal-Ignition Cable Pintake Valve (Used Before Code Date 88080100). 870 211291 Seat-Exhaust Valve (Standard) (Stand	Intake Valve Say Switch—Stop Say Switch—Stop Say Switch—Stop Seal—Throttle Shaft Seal—Choke Shaft Say Seal—Choke Shaft Say S	Intake Valve Sapropriate
Included in Gasket Set— Part No. 493263.

Included in Carburetor Overhaul Kit See Ref. 121.

[◆] Included in Carburetor Gasket Set– Part No. 490937.

