



ENGINE PARTS - TROY-BILT MODEL TB2000

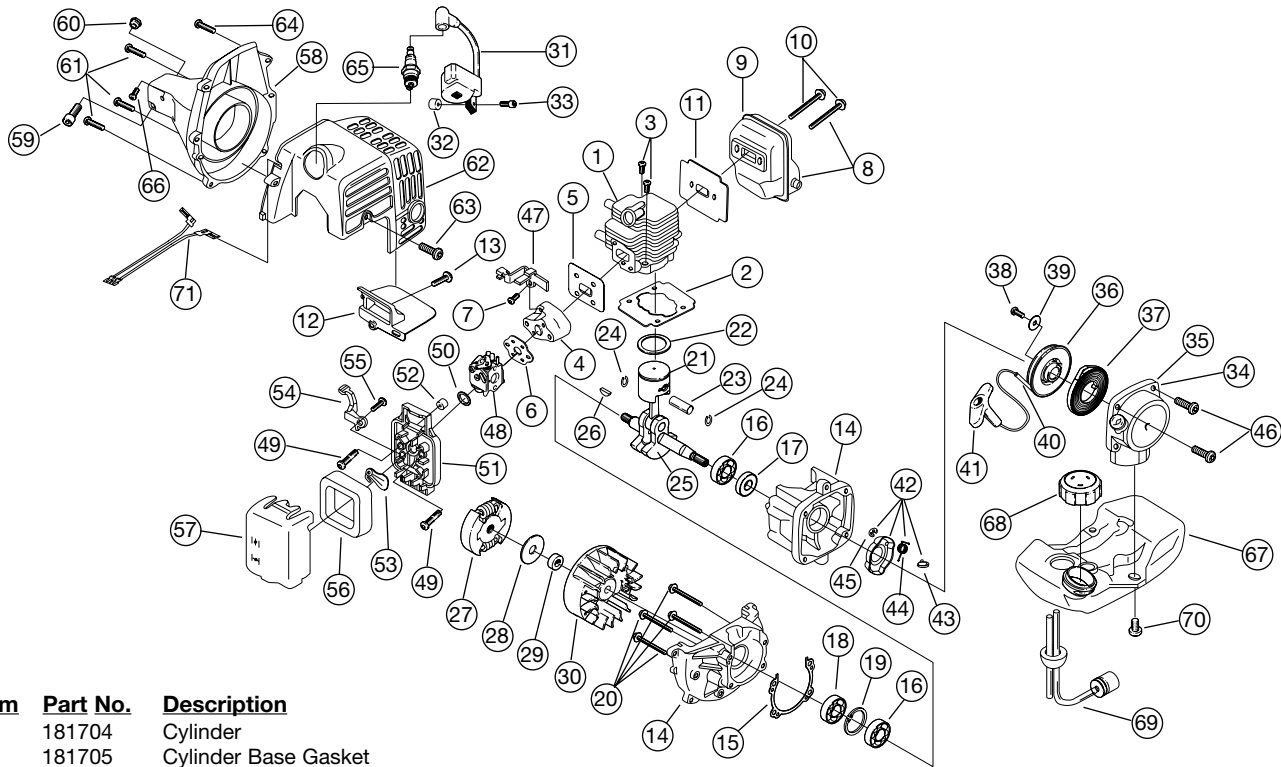

Item	Part No.	Description
1	181704	Cylinder
2	181705	Cylinder Base Gasket
3	181706	Bolt
4	181707	Insulator
5	181708	Insulator Gasket
6	181709	Carburetor Gasket
7	181710	Screw and Washer
8	181711	Muffler Assembly (includes 9 & 10)
9	181712	Muffler
10	181713	Screw
11	181714	Muffler Gasket
12	181715	Muffler Plate
13	181716	Screw
14	181717	Crankcase Service Assembly (includes 15-19 & 25)
15	181718	Crankcase Gasket
16	181719	Bearing
17	181720	Oil Seal
18	181721	Oil Seal
19	181722	Snap Ring
20	181723	Screw
21	181724	Piston
22	181725	Ring
23	181726	Piston Pin
24	181727	Snap Ring
25	181728	Crankshaft
26	181729	Key
27	181730	Clutch
28	181074	Clutch Washer
29	181731	Spacer
30	181732	Flywheel Assembly
31	181733	Module Assembly (includes 32 & 33)
32	181734	Spacer
33	181735	Screw
34	181777	Recoil Assembly (includes 35-41)
35	181737	Recoil Case
36	181738	Recoil Pulley
37	181739	Recoil Spring
38	181740	Screw
39	181741	Washer
40	181742	Rope

Item	Part No.	Description
41	181743	Pull Handle
42	182118	Pulley Assembly (includes 43-45)
43	181745	Ratchet
44	181746	Spring
45	181747	Retaining Ring
46	181716	Screw
47	181748	Throttle Bracket
48	181749	Carburetor (includes Primer Bulb)
49	181750	Screw
50	181751	O-Ring
51	181752	Air Cleaner Assembly (includes 52-55)
52	181753	Sleeve
53	181754	Choke Plate
54	181755	Choke Lever
55	181756	Screw
56	181757	Air Filter
57	181758	Air Cleaner Cover
58	182834	Clutch Housing Assembly
59	182844	Screw
60	182031	Nut
61	181762	Screw
62	182835	Engine Cover
63	181716	Screw
64	181762	Screw
65	181765	Spark Plug
66	182844	Screw
67	181774	Fuel Tank (includes 70)
68	180000	Fuel Cap Assembly
69	181767	Fuel Line Assembly
70	181768	Screw
71	181769	Lead Wire Assembly
*	181696	Spark Arrestor
*	181701	Primer Bulb
*	181702	Carburetor Repair Kit
*	181703	Gasket/Diaphragm Repair Kit
*		not shown

BOOM AND TRIMMER PARTS - TROY-BILT MODEL TB2000

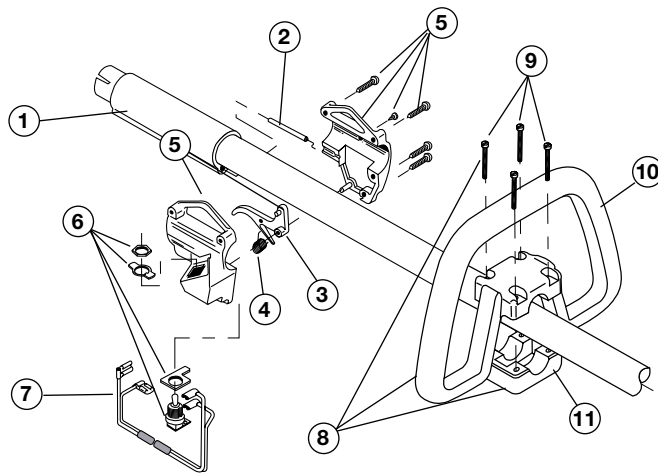

Item	Part No.	Description
1	180866	Grip
2	181688	Throttle Cable Assembly
3	181556	Throttle Trigger
4	610314	Throttle Trigger Spring
5	182603	Throttle Trigger Assembly (includes 3 & 4)
6	180252	Switch Assembly
7	181690	Wire Lead Assembly
8	180869	Loop Handle Assembly (includes 9-11)
9	181070	Screw
10	182167	Loop Handle
11	182168	Bottom Clamp
12	182838	Drive Shaft Housing Assembly
13	182839	Flexible Drive Shaft
14	153597	Lower Clamp Assembly
15	180531	Shield Mounting Screw
16	182870	Bushing Housing Assembly
17	145569	Anti-Rotation Screw
18	180341	Shield and Blade Assembly (includes 19)
19	682061	Blade Assembly
20	182841	Outer Spool w/ Retainer (includes 21-23)
21	181458	Retainer
22	182842	Pawl Spring
23	182843	Ratchet Pawl
24	182844	Inner Reel
25	182845	Spool Cover

Optional Accessories

- * 49U0134L063 Replacement Line, 0.080 Diameter
- * 49U0333L063 Reel and Line Assembly
- * 182840 Automatic Line Feed Head Assembly (includes 20-25)
- * 682075 Shoulder Harness
- * Items Not Shown

