



Illustrated Parts List

Model Series

21000

TYPE NUMBERS
0015 through 0131.

TABLE OF CONTENTS

Air Cleaner	3
Blower Housing/Shrouds	4
Cams	2
Carburetor	3
Crankcase Cover/Sump	2
Flywheel	2
Fuel Tank	4
Head	2
Ignition	4
Kits/Gaskets – Engine	2
Muffler	4
Oil	2
Rewind	4



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



1330 REPAIR MANUAL




1058 OPERATOR'S MANUAL

 







1036 EMISSIONS LABEL

1019 LABEL KIT

CYLINDER AND INTERNAL COMPONENTS ARE NOT SERVICEABLE.
USE REPLACEMENT ENGINE.

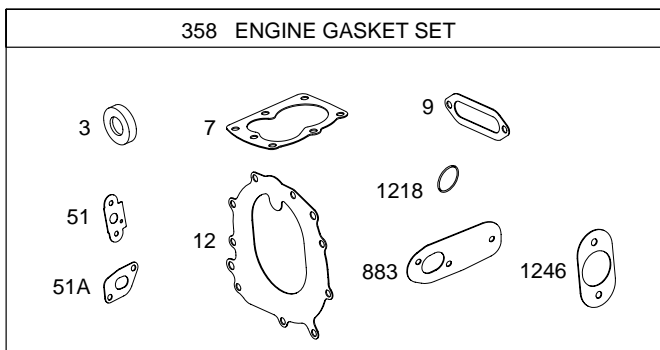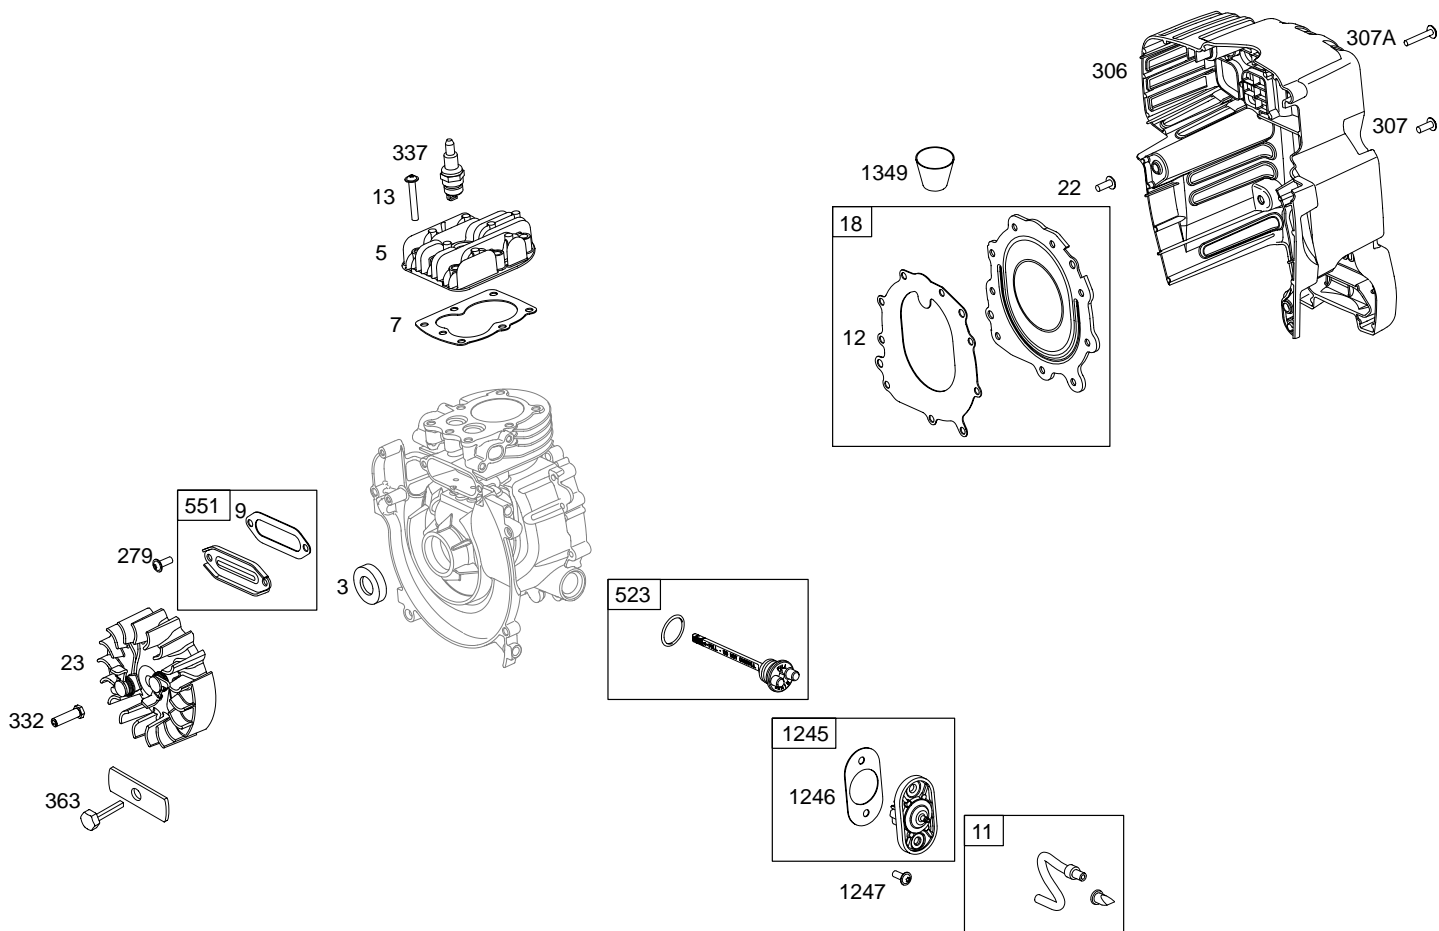

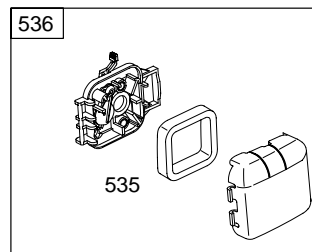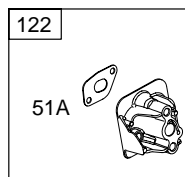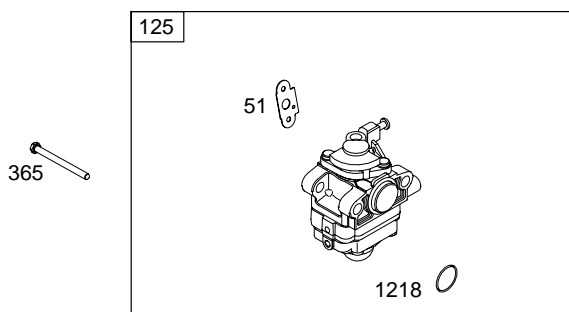

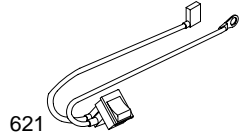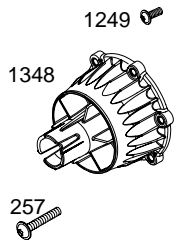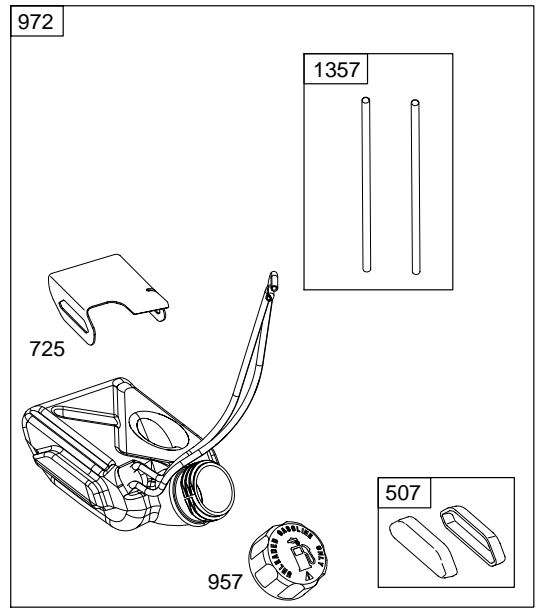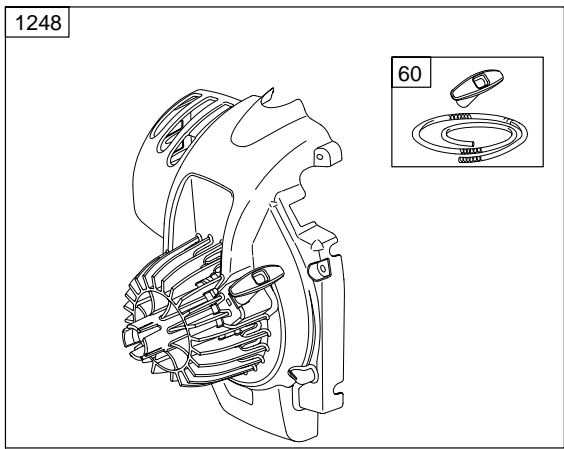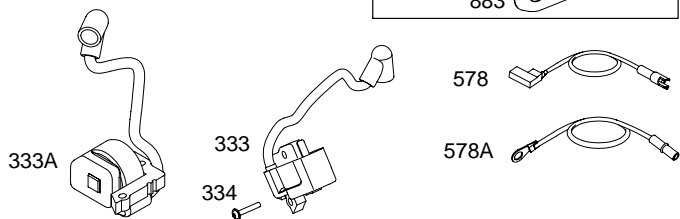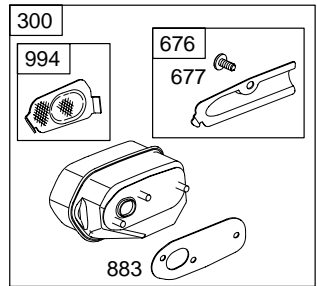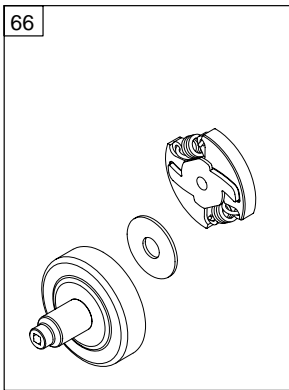

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★696879	Seal–Oil (Magneto Side)	332	696928	Nut (Flywheel)	883	★697035	Gasket–Exhaust
5	696848	Head–Cylinder			———— Note ————	957	696921	Cap–Fuel Tank
7	★696865	Gasket–Cylinder Head			699870 Nut	957A	790882	Cap–Fuel Tank
9	★696931	Gasket–Breather			(Flywheel)			Used on Type No(s).
11	696871	Tube–Breather			Used on Type No(s).			0128, 0129, 0130,
12	★696866	Gasket–Crankcase			0015, 0112, 0119,	972	696919	Tank–Fuel
13	696891	Screw (Cylinder Head)	333	696877	Armature–Magneto (Blue)	994	697038	Arrestor–Spark
18	696950	Cover–Crankcase				1019	697060	Kit–Label
22	696889	Screw (Crankcase Cover/Sump)	333A	699875	Armature–Magneto (Pink)	1036	790883	Label–Emissions (Used After Code Date 04063000).
23	696885	Flywheel	334	696892	Screw (Magneto Armature)			———— Note ————
51	★696868	Gasket–Intake	337	696876	Plug–Spark			697034 Label–Emissions
51A	★696867	Gasket–Intake			———— Note ————			(Used Before Code Date 04070100).
60	699944	Grip–Starter Rope (Includes Starter Rope)			790885 Plug–Spark	1058	275064	Operator’s Manual
66	699871	Clutch–Starter			Used on Type No(s).	1218	★699942	Seal–O Ring (Carburetor)
122	696870	Spacer–Carburetor	358	697010	Gasket Set–Engine			
125	696949	Carburetor	363	19538	Puller–Flywheel	1238	696893	Screw (Carburetor Spacer)
257	696895	Screw (Starter Clutch)	365	696894	Screw (Carburetor)	1245	696967	Cover–Cam Gear
279	696889	Screw (Valve Cover)	507	696872	Insulator	1246	★696929	Gasket–Cam Gear Cover
300	696874	Muffler	523	696930	Dipstick	1247	696889	Screw (Cam Gear Cover)
306	696936	Shield–Cylinder	535	696923	Filter–Air Cleaner Foam	1248	698050	Blower Housing/Rewind
307	696889	Screw (Cylinder Shield)	536	790567	Cleaner–Air			———— Note ————
307A	696895	Screw (Cylinder Shield)	551	696849	Cover–Valve			699877 Blower Housing/Rewind
			578	699873	Wire Assembly			Used on Type No(s).
			578A	699874	Wire Assembly			0015, 0112, 0119,
			621	698243	Switch–Stop			0120, 0126, 0129,
			654	690800	Nut (Carburetor)			0130.
			676	697039	Deflector–Muffler			699872 Blower Housing/Rewind
			677	697040	Screw (Muffler Deflector)			Used on Type No(s).
			725	696922	Gasket–Fuel Tank			0118, 0125, 0128,
								0131.
						1249	696889	Screw (Blower Housing/Rewind)
						1330	275072	Repair Manual
						1348	699888	Cover–Clutch
						1349	699969	Cup–Oil Fill
						1357	699876	Sleeve–Fuel Line