

Illustrated Parts List

Model Series

050000

TYPE NUMBERS
0005 THROUGH 0117.



TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	4
Carburetor	6
Controls	7
Control Panel	7
Crankcase Cover	4
Crankshaft	4
Cylinder	2
Exhaust System	10
Flywheel	5
Fuel Supply	8
Gasket Set – Engine	2
Gasket Set – Valve	3
Governor Spring	7
Cylinder Head	3
Ignition	5
Lubrication	11
Piston, Rings, Connecting Rod	2
Rewind Starter	9
Valves	3

PRINTED IN U.S.A.




  COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



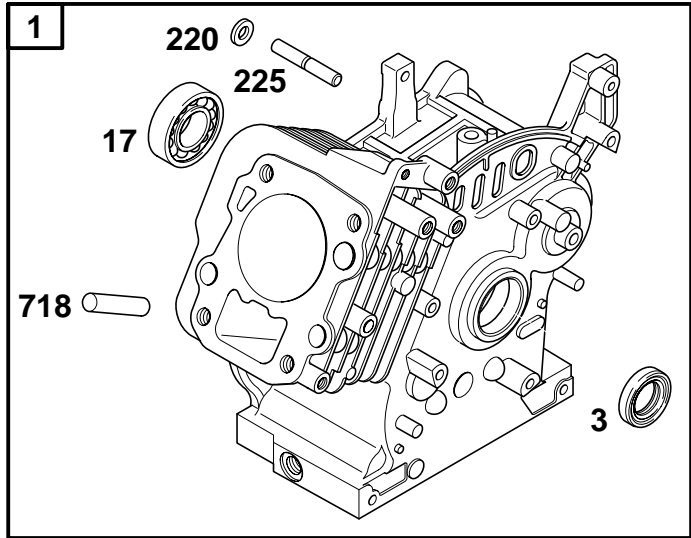
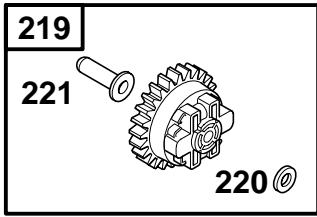





1019 LABEL KIT

 1058 OPERATOR'S MANUAL

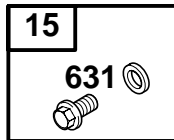





494

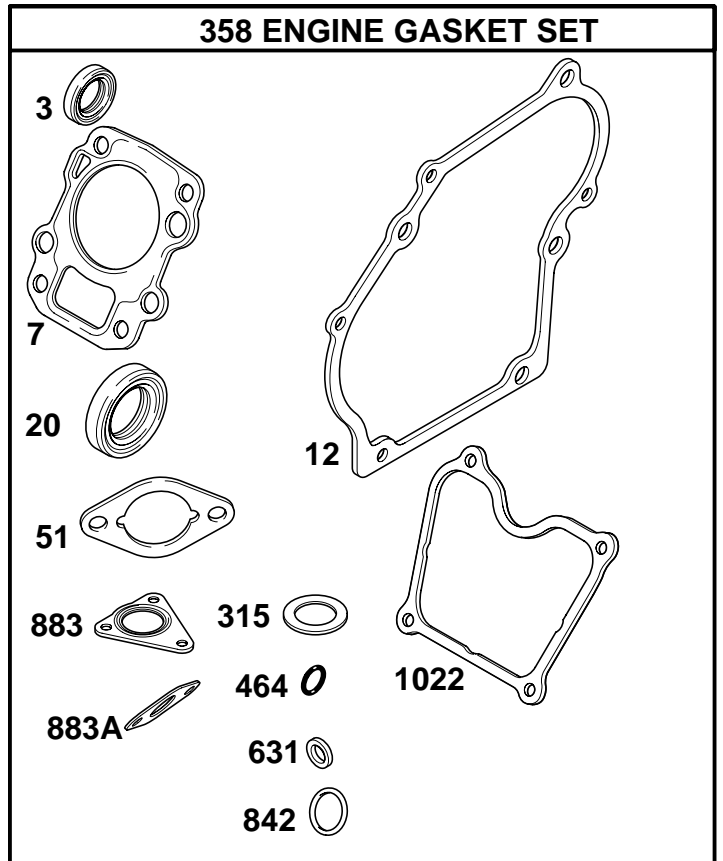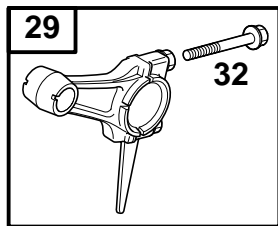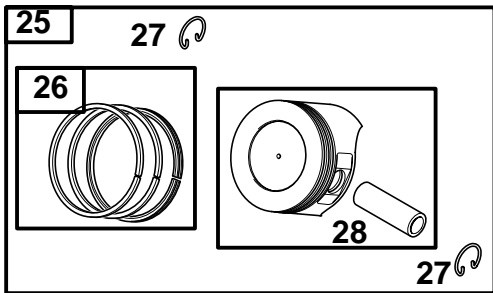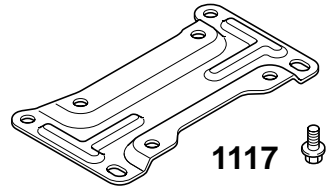    

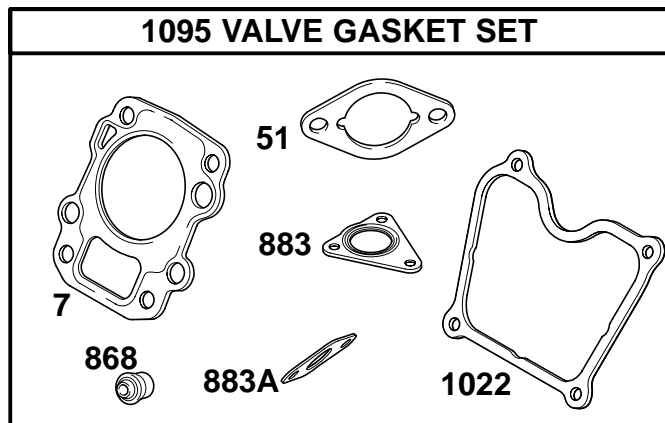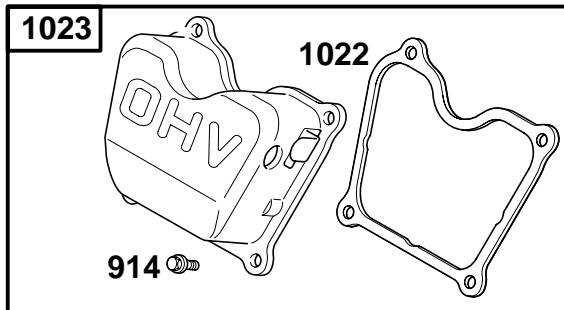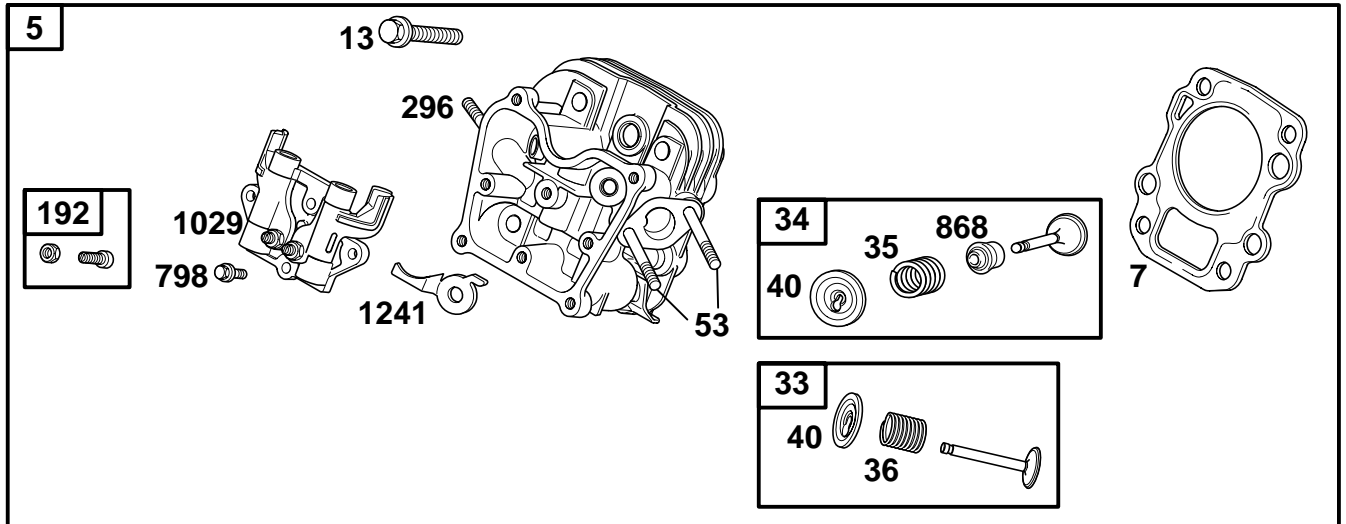   


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5359-3 Assemblies include all parts shown in frames.

    9/28/2004

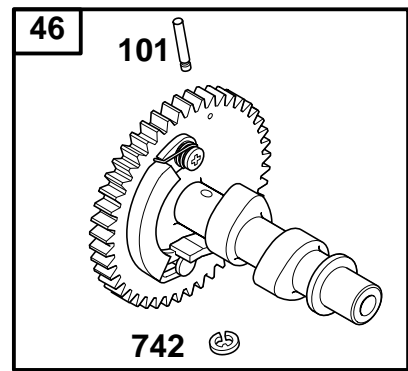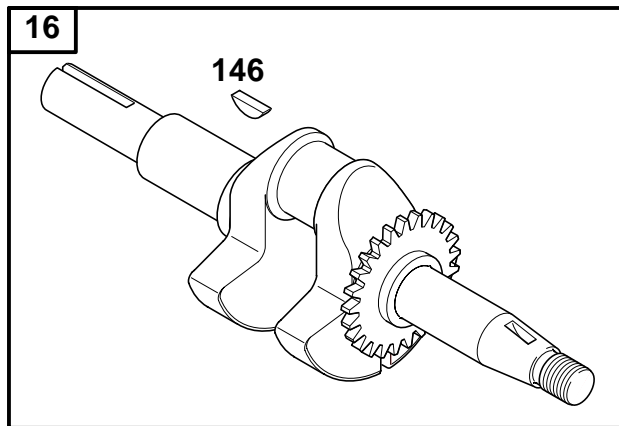
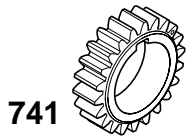
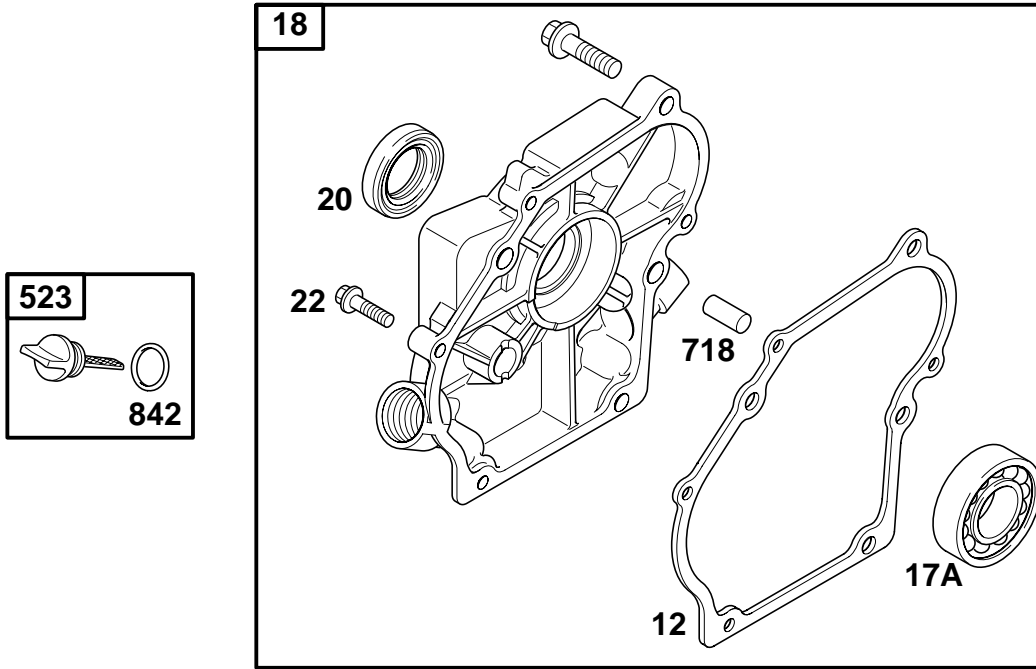


24



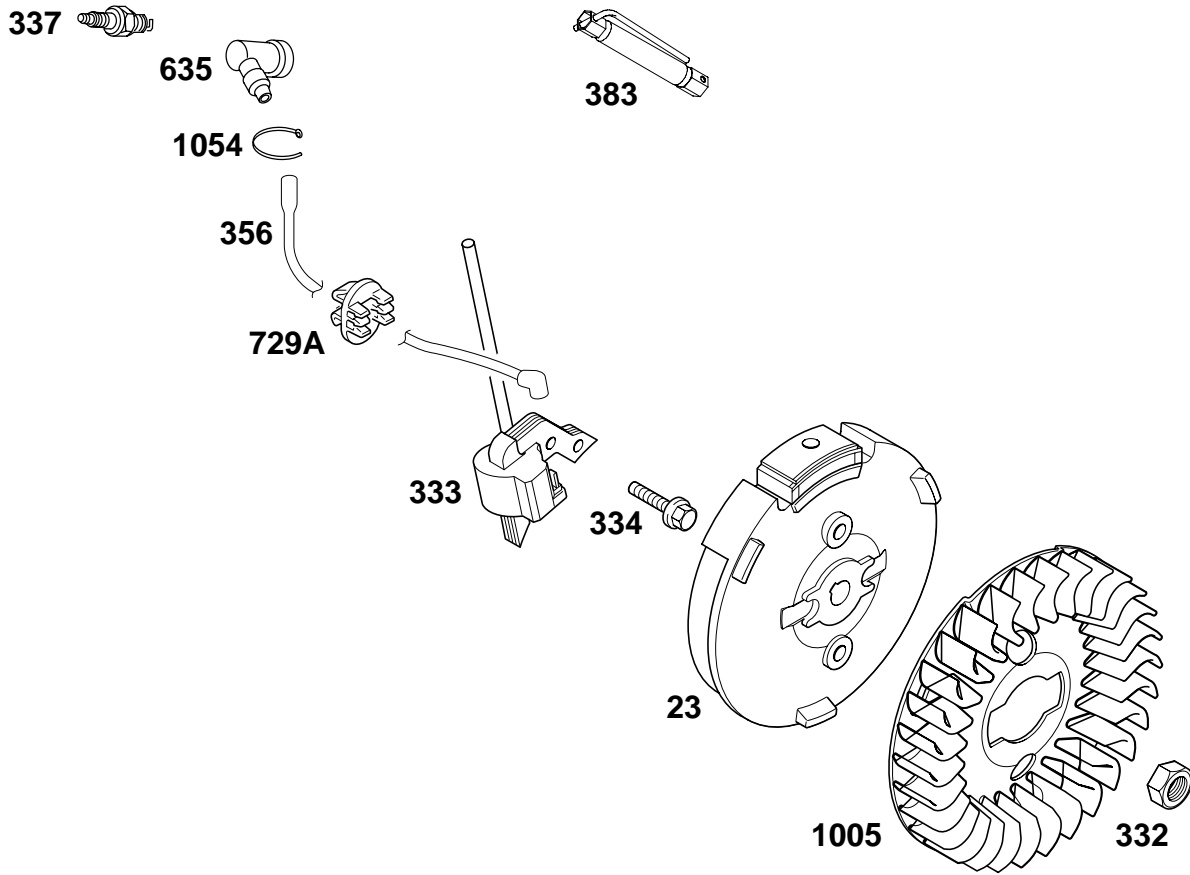 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5359-5 Assemblies include all parts shown in frames.

   9/28/2004

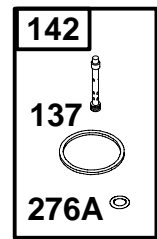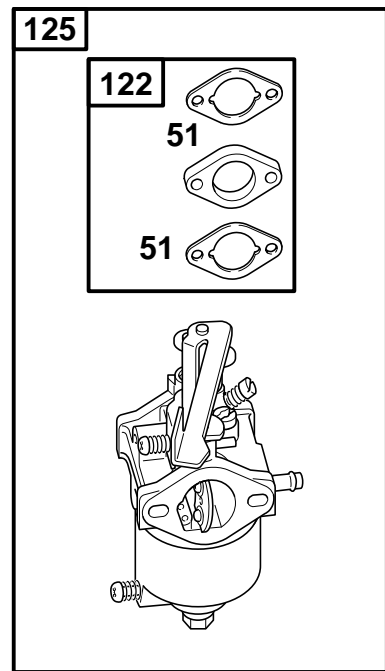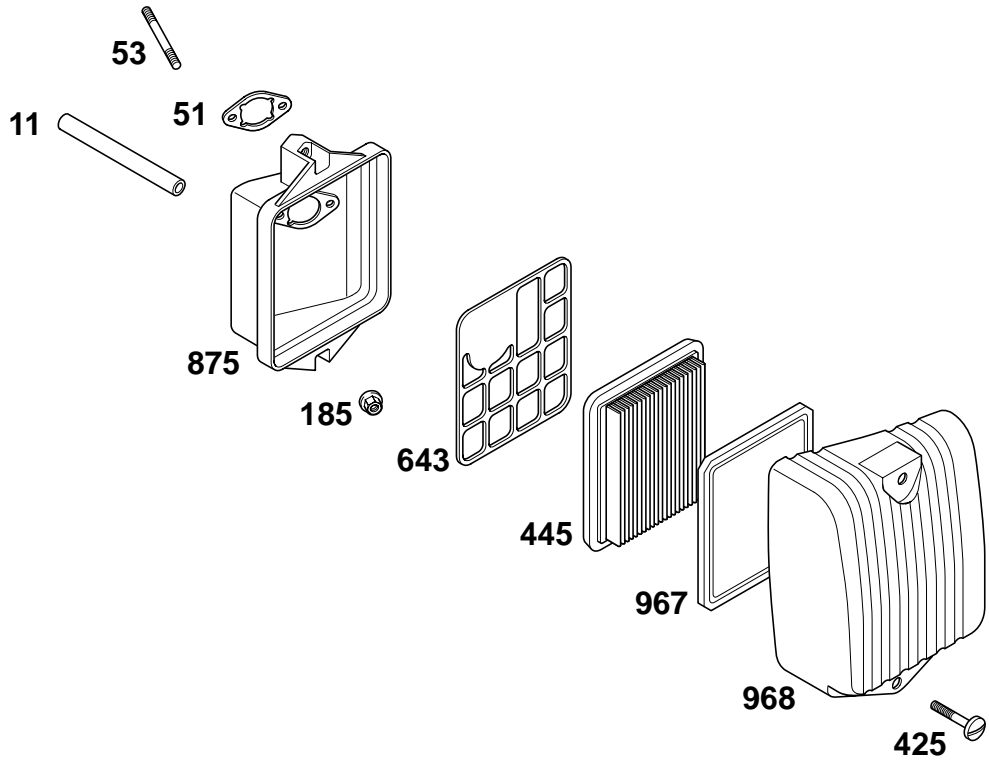






Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5359-6 Assemblies include all parts shown in frames.

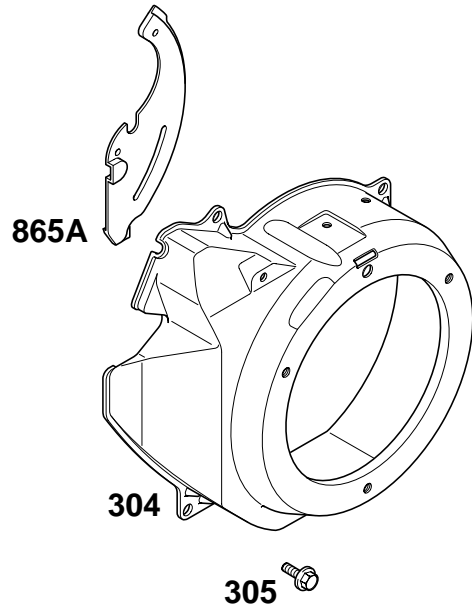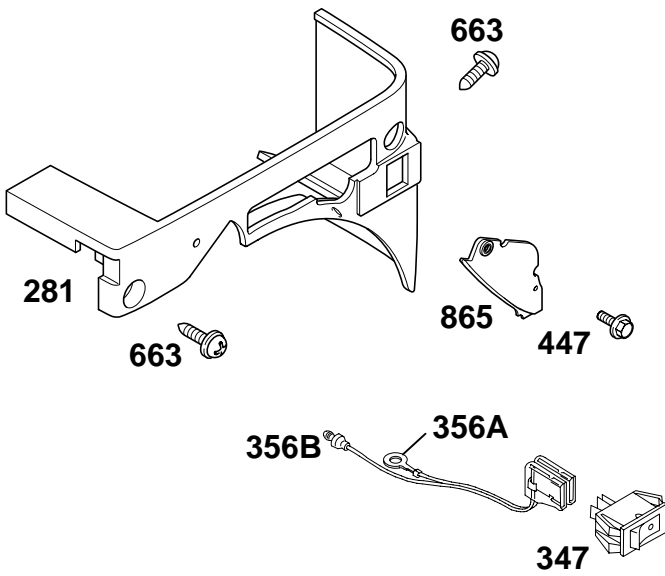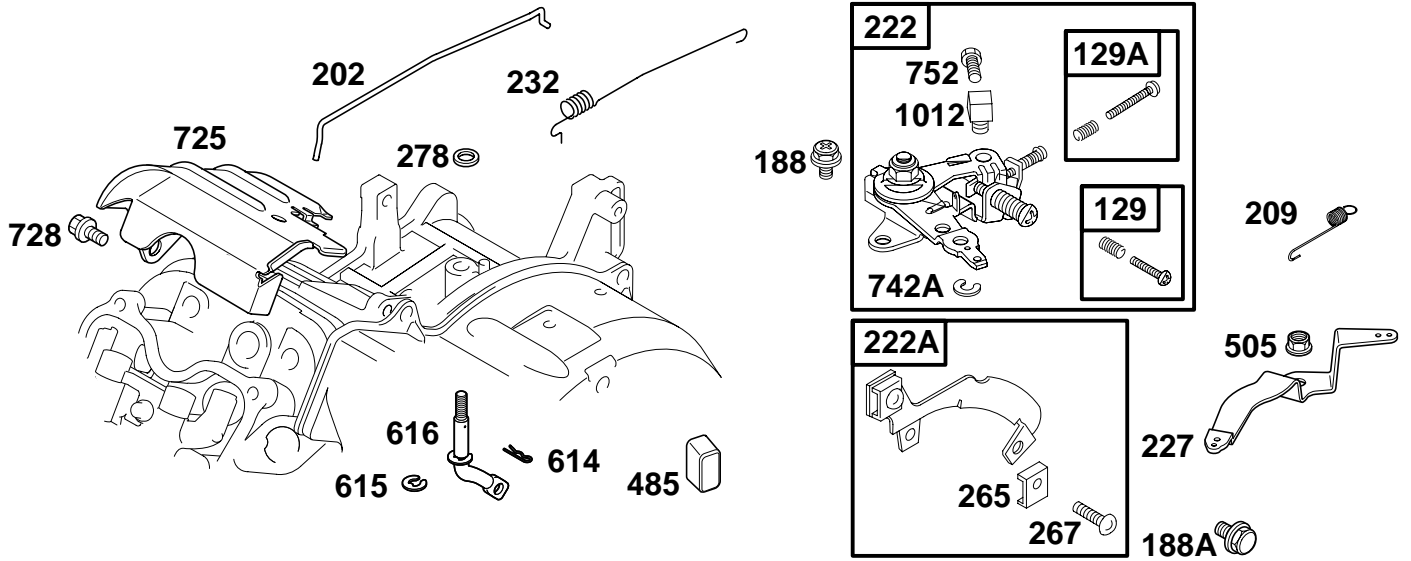   


1036 EMISSIONS LABEL

      1036A



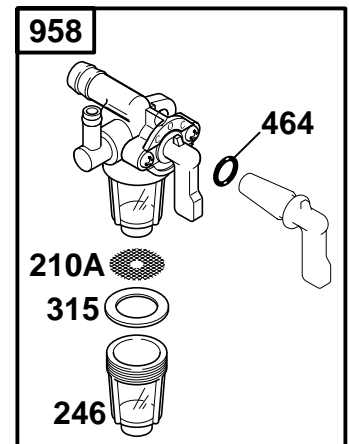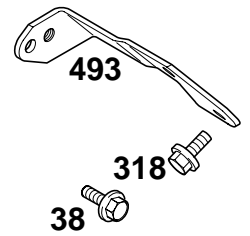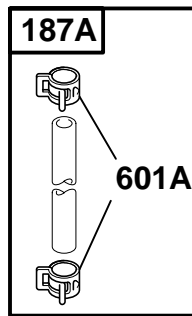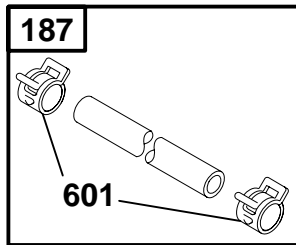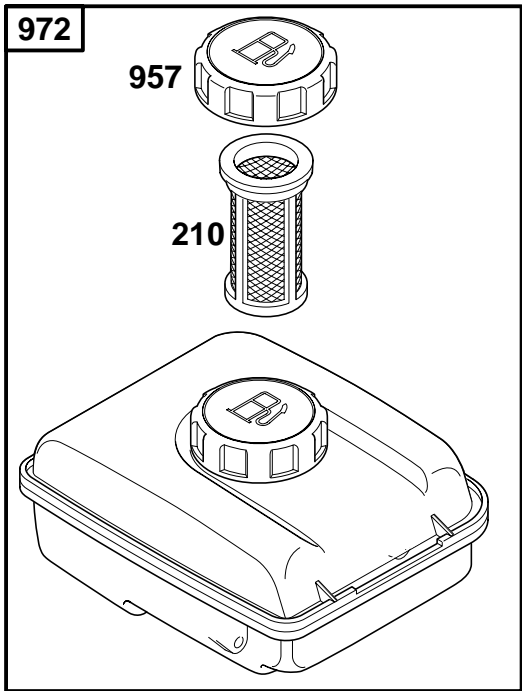



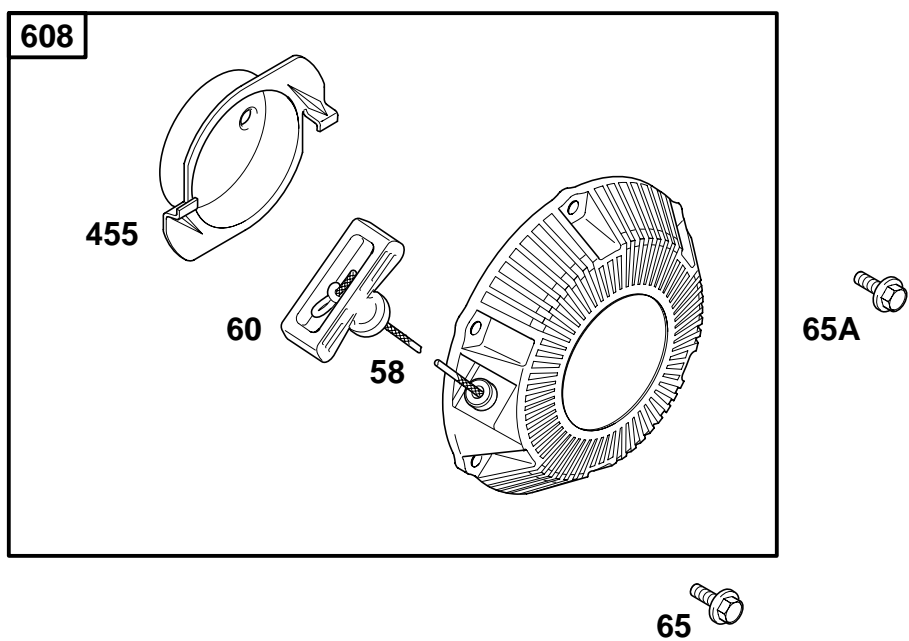



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5359-9

Assemblies include all parts shown in frames.

    9/28/2004

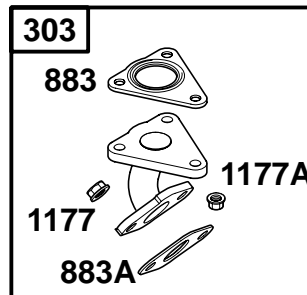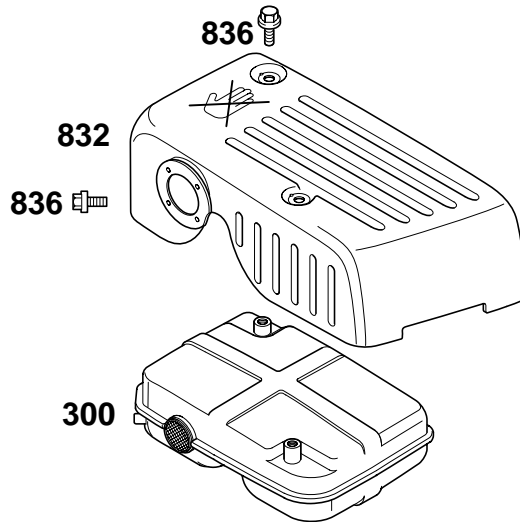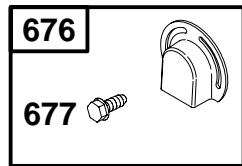

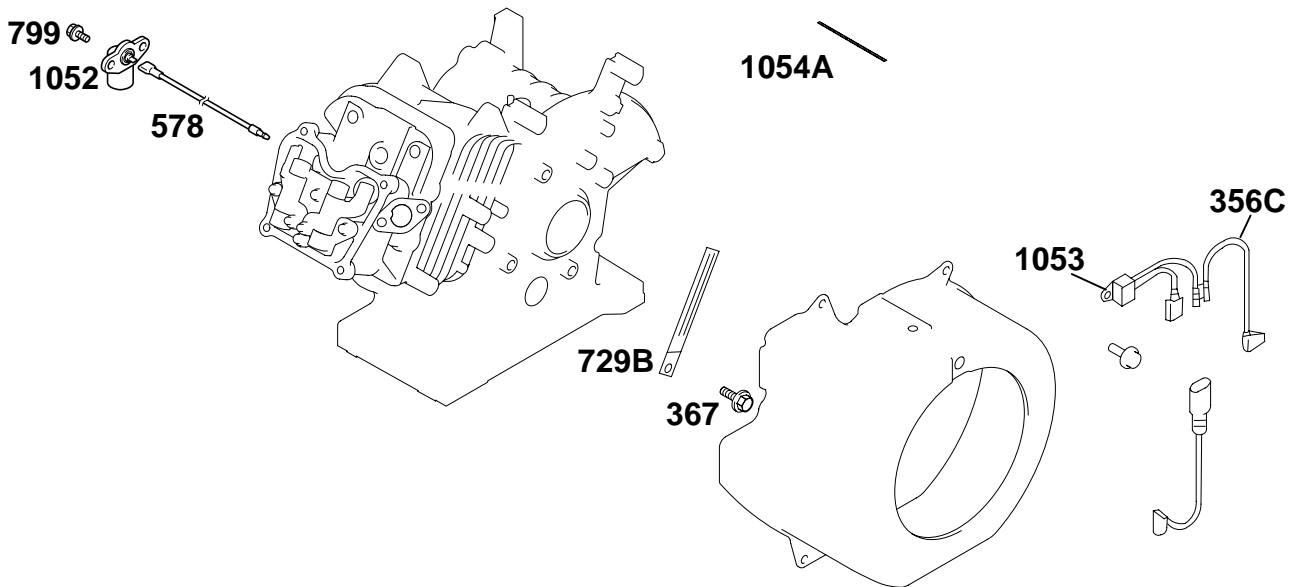

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

050000

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	715918	Cylinder Assembly Used on Type No(s). 0005, 0100, 0116, 0117. Note 715921 Cylinder Assembly Used on Type No(s). 0111, 0115.	38	710057	Screw (Shut Off Valve) Used on Type No(s). 0005, 0100, 0111, 0115, 0116, 0117.	192	715841	Adjuster-Rocker Arm
3	★711520	Seal-Oil (Magneto Side)	40	711491	Retainer-Valve	202	711513	Link-Mechanical Governor
5	715927	Head-Cylinder	45	711173	Tappet-Valve	209	711508	Spring-Governor Used on Type No(s). 0005, 0100. Note 711509 Spring-Governor Used on Type No(s). 0111, 0115, 0116, 0117.
7	★△711489	Gasket-Cylinder Head	46	715926	Camshaft	210	710065	Strainer-Fuel
11	710115	Tube-Breather (Cut To Required Length)	51	★△711499	Gasket-Intake	210A	710071	Strainer-Fuel
12	★711524	Gasket-Crankcase	53	710148	Stud (Carburetor)	219	715679	Gear-Governor
13	710020	Screw (Cylinder Head)	58	711539	Rope-Starter	220	710545	Washer (Governor Gear)
15	715811	Plug-Oil Drain	60	711540	Grip-Starter Rope	221	710027	Cup-Governor
16	715923	Crankshaft (SAE)	65	710976	Screw (Rewind Starter) (Qty. 2)	222	715943	Bracket-Control Used on Type No(s). 0005, 0100. Note 715944 Bracket-Control Used on Type No(s). 0111, 0115, 0116, 0117.
17	710482	Bearing-Ball	65A	710057	Screw (Rewind Starter) (Qty. 1) Used on Type No(s). 0111, 0115, 0117.	222A	715946	Bracket-Control Used on Type No(s). 0005, 0111, 0115, 0116, 0117.
17A	711522	Bearing-Ball	101	711135	Pin-Shaft	225	710028	Shaft-Governor Gear
18	715919	Cover-Crankcase	122	715940	Spacer-Carburetor	227	711515	Lever-Governor Control
20	★711520	Seal-Oil (PTO Side)	125	715978	Carburetor	232	711512	Spring-Governor Link
22	711523	Screw (Crankcase Cover/Sump)	129	715854	Screw/Spring-Governor or Speed	246	710070	Bowl-Fuel Filter
23	711525	Flywheel	129A	715942	Screw/Spring-Governor or Speed Used on Type No(s). 0111, 0115, 0116, 0117.	265	711506	Clamp-Casing
24	710037	Key-Flywheel	137	711778	Gasket-Float Bowl	267	711507	Screw (Casing Clamp)
25	715935	Piston Assembly (Standard) Note 715936 Piston Assembly (.020" Undersize)	142	716076	Nozzle-Carburetor (Standard)	276A	711779	Washer-Sealing
26	715938	Ring Set (Standard) Note 715939 Ring Set (.020" Oversize)	146	710037	Key-Timing	278	711516	Washer (Governor Control Lever)
27	711494	Lock-Piston Pin	185	710068	Nut (Air Cleaner Base)	281	711543	Panel-Control Used on Type No(s). 0005, 0100. Note 711544 Panel-Control Used on Type No(s). 0111, 0115, 0116, 0117.
28	715937	Pin-Piston	187	715125	Line-Fuel (8mm Inside Diameter)(Cut To Required Length)			
29	715933	Rod-Connecting (Standard)	187A	715126	Line-Fuel (4mm Inside Diameter)(Cut to Required Length)			
32	710041	Screw (Connecting Rod)	188	710074	Screw (Control Bracket)			
33	715931	Valve-Exhaust	188A	710976	Screw (Control Bracket)			
34	715932	Valve-Intake	190	711142	Screw (Fuel Tank)			
35	711492	Spring-Valve (Intake)						
36	711492	Spring-Valve (Exhaust)						

★ Included in Engine Gasket Set-Ref. No.358.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
296	710099	Stud (Muffler)	485	692295	Knob—Control	842	★711521	Seal—O Ring (Dipstick Tube)
300	715948	Muffler	493	711538	Bracket—Mounting	865	711536	Cover—Air Guide
303	715949	Elbow—Exhaust	494	711564	Mount—Engine	865A	711535	Cover—Air Guide
304	711533	Housing—Blower Used on Type No(s). 0005, 0111, 0115, 0116, 0117.	505	711208	Nut (Governor Control Lever)	868	△711287	Seal—Valve
		————— Note —————	523	715588	Dipstick	875	711138	Base—Air Cleaner (Plastic)
		711534	578	711247	Wire Assembly (Oil Sensor)	883	★△711542	Gasket—Exhaust
		Housing—Blower Used on Type No(s). 0100.	601	710067	Clamp—Hose	883A	★△711244	Gasket—Exhaust
305	710023	Screw (Blower Housing)	601A	710075	Clamp—Hose	914	710057	Screw (Rocker Cover)
315	★710072	Seal—O Ring (Filter Bowl)	608	715952	Starter—Rewind	957	711537	Cap—Fuel Tank (Plastic)
318	710074	Screw (Mounting Bracket)	614	710056	Pin—Cotter	958	715901	Valve—Fuel Shut Off (Plastic)
332	711528	Nut (Flywheel)	615	710154	Washer (Governor Crank)	967	711460	Filter—Pre Cleaner
333	711526	Armature—Magneto	616	711514	Crank—Governor	968	711495	Cover—Air Cleaner
334	711142	Screw (Magneto Armature)	631	★711188	Washer (Oil Drain Plug)	972	715951	Tank—Fuel (Plastic)
337	711252	Plug—Spark	635	710634	Boot—Spark Plug	1005	711527	Fan—Flywheel
347	691995	Switch—Rocker Used on Type No(s). 0111, 0115, 0116, 0117.	643	711461	Retainer—Air Filter	1012	710855	Retainer—Link
356	710324	Wire—Stop	663	711249	Screw (Control Panel)	1019	715953	Kit—Label
356A	710087	Wire—Stop Used on Type No(s). 0111, 0115, 0116, 0117.	676	715230	Deflector—Muffler Used on Type No(s). 0005.	1022	★△711490	Gasket—Rocker Cover
356B	710120	Wire—Stop Used on Type No(s). 0111, 0115, 0116, 0117.	677	710307	Screw (Muffler Deflector) Used on Type No(s). 0005.	1023	715930	Cover—Rocker
356C	711203	Wire—Stop	718	710005	Pin—Locating	1026	711493	Rod—Push
358	715965	Gasket Set—Engine	725	711503	Shield—Heat	1029	715929	Arm—Rocker
367	711427	Screw (Wire Clip)	728	710023	Screw (Heat Shield)	1036	711690	Label—Emissions (Used After Code Date 04063000)
383	19374	Wrench—Spark Plug	729	711518	Clip—Wire			————— Note —————
425	711163	Screw (Air Cleaner Cover)	729A	710046	Clip—Wire			711545
445	711459	Filter—Air Cleaner Cartridge	729B	710407	Clip—Wire			Label—Emissions (Used Before Code Date 04070100)
447	710023	Screw (Air Guide Cover)	741	711136	Gear—Timing (Spur Gear)	1036A	698979	Label—Emissions Used on Type No(s). 0116.
455	711541	Cup—Flywheel	742	710548	Retainer—E Ring	1052	711246	Sensor—Oil
464	★710069	Seal—O Ring (Fuel Shut-off Valve)	742A	710477	Retainer—E Ring	1053	710305	Module—Oil Gard
			752	710478	Screw (Link Retainer)	1054	711529	Tie—Cable
			798	710234	Screw (Rocker Arm)	1054A	710349	Tie—Cable
			799	710057	Screw (Oil Sensor)	1058	MS6669	Operator's Manual
			832	711532	Guard—Muffler	1095	715964	Gasket Set—Valve
			836	710074	Screw (Muffler Guard)	1117	711487	Screw (Engine Mount)
						1177	710090	Nut (Muffler)
						1177A	710068	Nut (Muffler)
						1241	711488	Plate—Valve Spring

★ Included in Engine Gasket Set—Ref. No.358.

△ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.