

**10J900**

# Illustrated Parts List

## Model Series

# 10J900

TYPE NUMBERS  
0130 through 0138.






 





### TABLE OF CONTENTS

Air Cleaner .....	6
Blower Housing .....	7
Brake .....	9
Cams .....	3
Carburetor .....	4
Controls .....	5
Covers .....	7
Crankcase Cover/Sump .....	3
Crankshaft .....	3
Cylinder .....	2
Flywheel .....	7
Fuel Tank .....	4
Governor Spring .....	5
Head .....	2
Ignition .....	5
Kits/Gaskets – Sets .....	2
Muffler Group .....	6
Oil Group .....	2
Piston Group .....	3
Rewind/Blower Housing 1 .....	8
Valves .....	3



PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

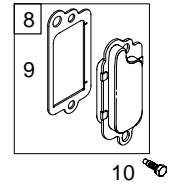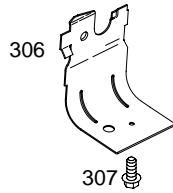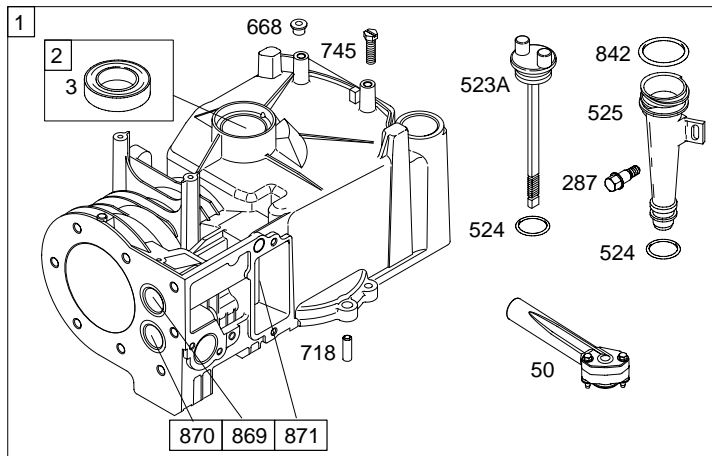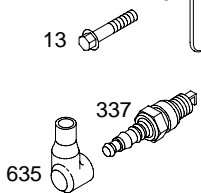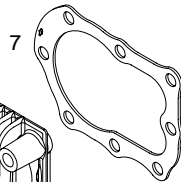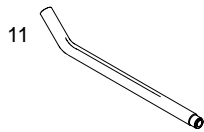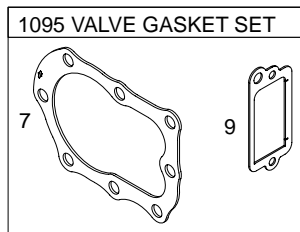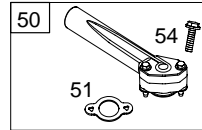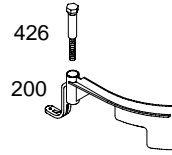
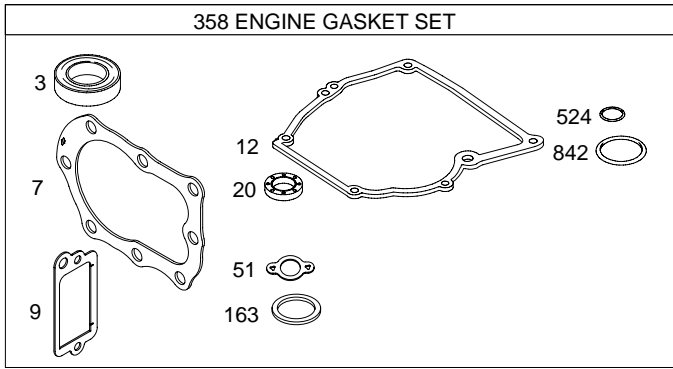





1019 LABEL KIT



1058 OWNER'S MANUAL


1330 REPAIR MANUAL

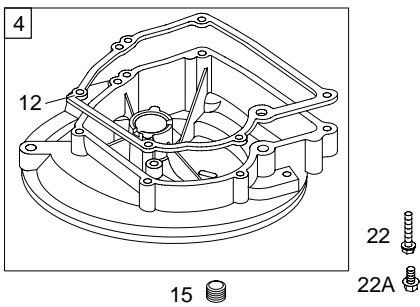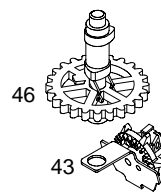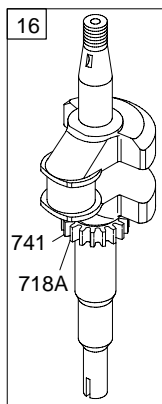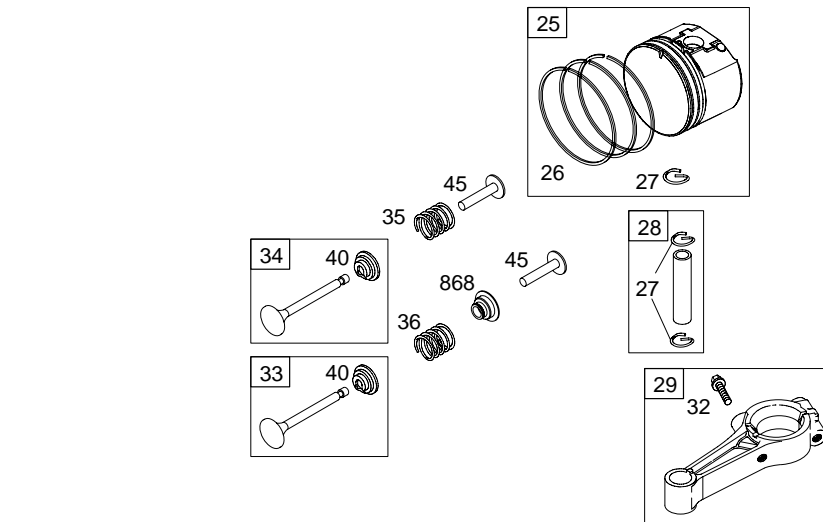

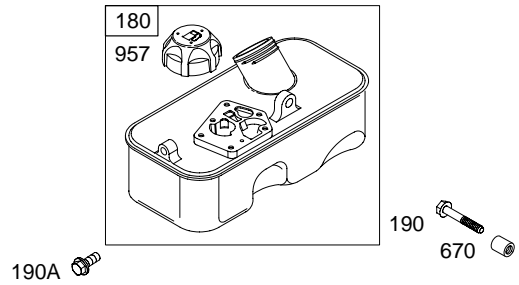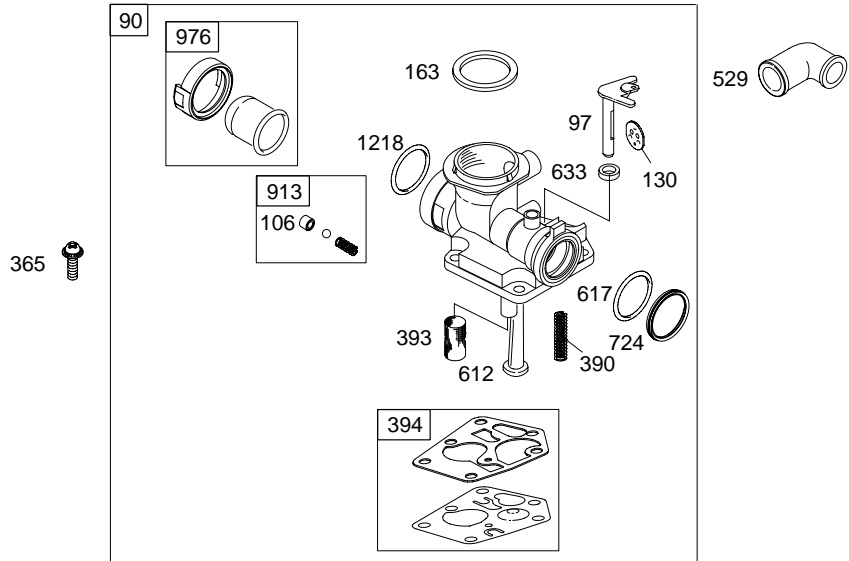


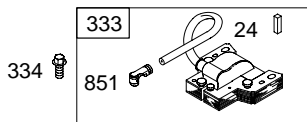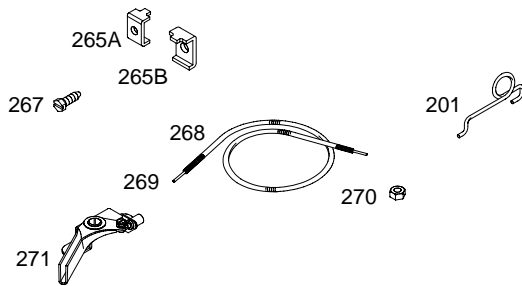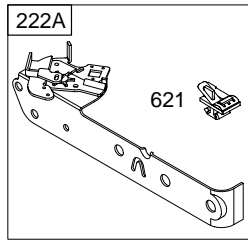

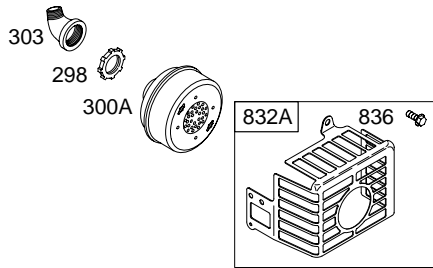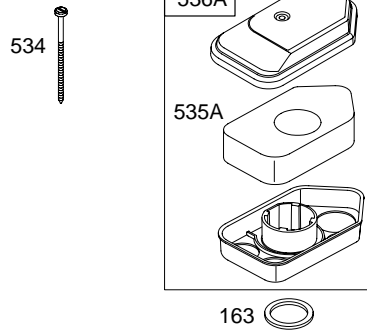


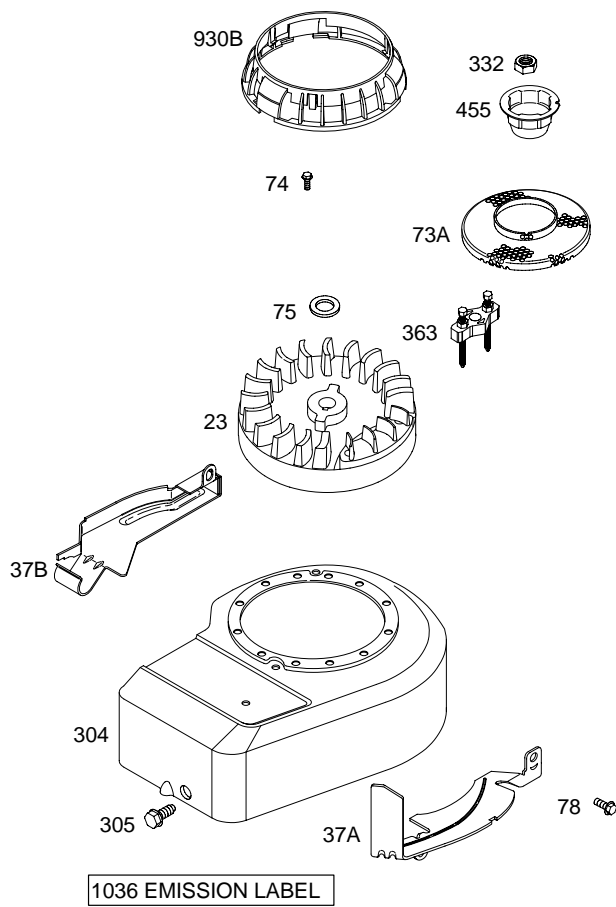

5740-7 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 05/20/2004

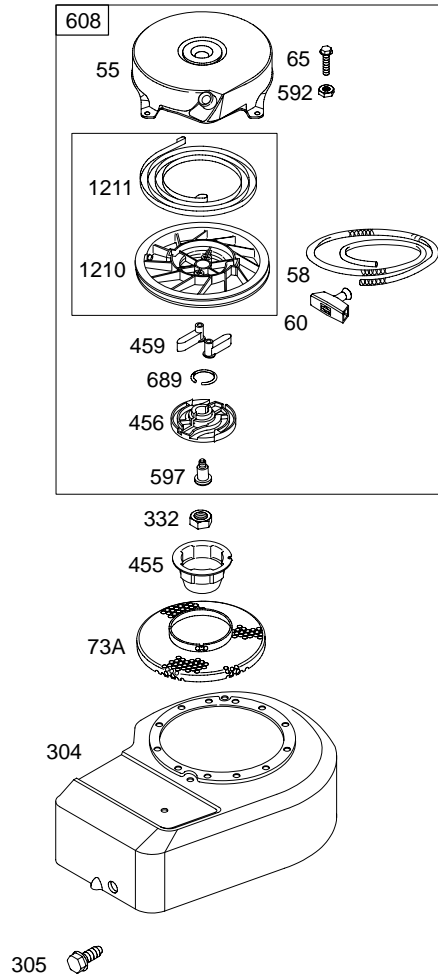



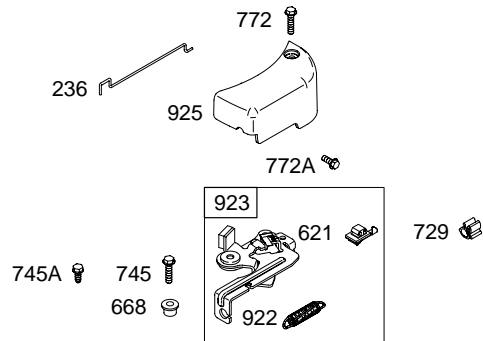

# 10J900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly	26	699658	Ring Set (Standard)	78	692198	Screw (Flywheel Guard)
2	399269	Kit-Bushing/Seal (Magneto Side)	27	691588	Lock-Piston Pin	90	699660	Carburetor
3	★299819	Seal-Oil (Magneto Side)	28	699659	Pin-Piston (Standard)	97	691931	Shaft-Throttle
4	698691	Sump-Engine	29	699654	Rod-Connecting	106	691901	Seat-Inlet
		<b>Note</b>	32	691664	Screw (Connecting Rod)	130	691190	Valve-Throttle
		699081 Sump-Engine Used on Type No(s). 0138.	33	296676	Valve-Exhaust	163	★271139	Gasket-Air Cleaner
5	690386	Head-Cylinder	34	296677	Valve-Intake	180	494406	Tank-Fuel (Metal)
7	★△698717	Gasket-Cylinder Head	35	690520	Spring-Valve (Intake)	188	692198	Screw (Control Bracket)
8	699640	Breather Assembly	36	690520	Spring-Valve (Exhaust)	190	691640	Screw (Fuel Tank)
9	★△695890	Gasket-Breather	37A	691209	Guard-Flywheel (Muffler Side)	190A	692198	Screw (Fuel Tank)
10	691666	Screw (Breather Assembly)	37B	690482	Guard-Flywheel (Carburetor Side)	200	691912	Blade-Governor
11	691245	Tube-Breather	40	692194	Retainer-Valve	201	690347	Link-Air Vane
12	★692218	Gasket-Crankcase (Standard)	43	698690	Slinger-Governor/Oil	209	691862	Spring-Governor (Dark Green)
13	691640	Screw (Cylinder Head)	45	691762	Tappet-Valve			<b>Note</b>
15	691680	Plug-Oil Drain (Flush)	46	691998	Camshaft			690251 Spring-Governor (Yellow)
16	692989	Crankshaft	50	699644	Manifold-Intake			Used on Type No(s). 0138.
20	★391483	Seal-Oil (PTO Side)	51	★699649	Gasket-Intake			692211 Spring-Governor (No Color) Used on Type No(s). 0130, 0137.
22	691662	Screw (Crankcase Cover/Sump)	54	691111	Screw (Intake Manifold)	211	691859	Spring-Governed Idle
22A	691108	Screw (Crankcase Cover/Sump)	55	692144	Housing-Rewind Starter	222A	691445	Bracket-Control
23	690843	Flywheel	58	697316	Rope-Starter (Cut To Required Length)			<b>Note</b>
		<b>Note</b>	60	691915	Grip-Starter Rope			691446 Bracket-Control Used on Type No(s). 0138.
		692009 Flywheel Used on Type No(s). 0138.	65	690837	Screw (Rewind Starter)			
24	222698	Key-Flywheel	73A	699850	Screen-Rotating			
25	699657	Piston Assembly (Standard)	74	691627	Screw (Rotating Screen)			
			75	691736	Washer (Flywheel)	236	691867	Link-Lockout

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No.1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
265A	690798	Clamp—Casing (Die Cast)	383	89838	Wrench—Spark Plug	745A	690859	Screw (Brake)
265B	691024	Clamp—Casing	390	691839	Spring—Choke Diaphragm	772	691111	Screw (Linkage Cover)
267	691044	Screw (Casing Clamp)	393	691837	Screen—Carburetor	772A	690345	Screw (Linkage Cover)
268	691072	Casing—Control Wire (Cut To Required Length)	394	495770	Diaphragm—Carburetor	832A	699670	Guard—Muffler (Round Lo Tone)
269	691589	Wire—Control (Cut To Required Length)	426	691107	Screw (Governor Blade)	836	690664	Screw (Muffler Guard)
270	691027	Nut (Control Wire Casing)	455	691236	Cup—Flywheel	842	*691870	Seal—O Ring (Dipstick Tube)
271	691028	Lever—Control	456	692299	Plate—Pawl Friction	851	493880	Terminal—Spark Plug
287	691002	Screw (Dipstick Tube)	459	281505	Pawl—Ratchet	868	697338	Seal—Valve
298	691720	Locknut—Muffler/Elbow	523A	691913	Dipstick	869	699641	Seat—Valve (Intake)
300A	394569	Muffler (Round Lo Tone)	524	*692296	Seal—Dipstick Tube	870	699642	Seat—Valve (Exhaust)
303	690291	Elbow—Exhaust	525	691320	Tube—Dipstick	871	699643	Bushing—Valve Guide (Exhaust Valve)
304	692536	Housing—Blower ———— <b>Note</b> ————	529	692189	Grommet (Breather)			<b>Note</b>
		691484 Housing— Blower (Compliance Engines) Used on Type No(s). 0138.	534	691417	Screw (Air Cleaner)			63709 Bushing—Valve Guide (Intake Valve)
305	692198	Screw (Blower Housing)	535A	698369	Filter—Air Cleaner Foam	913	494409	Seat—Check Valve
306	690400	Shield—Cylinder	536A	698472	Cleaner—Air (Plastic)	922	692135	Spring—Brake
307	690345	Screw (Cylinder Shield)	592	690800	Nut (Rewind Starter)	923	691487	Brake
332	690662	Nut (Flywheel)	597	691696	Screw (Pawl Friction Plate)	925	691349	Cover—Linkage
333	496914	Armature—Magneto	608	499706	Starter—Rewind	930B	691348	Guard—Rewind Used on Type No(s). 0130.
334	691061	Screw (Magneto Armature)	612	496046	Tube—Pick Up	957	497929	Cap—Fuel Tank (Plastic)
335	691107	Screw (Magneto Armature With Air Vane)	617	270344	Seal—O Ring (Intake Manifold)	976	694394	Primer—Carburetor
337	802592	Plug—Spark	621	692310	Switch—Stop	1019	699934	Kit—Label
356	692390	Wire—Stop	633	691321	Seal—Choke/Throttle Shaft	1036	699930	Label—Emissions
358	699933	Gasket Set—Engine	635	66538	Boot—Spark Plug	1058	275508	Operator's Manual
363	19069	Puller—Flywheel	668	692889	Spacer	1095	498526	Gasket Set—Valve
365	692200	Screw (Carburetor)	670	691633	Spacer—Fuel Tank	1210	499901	Pulley/Spring Assembly (Pulley)
			689	691855	Spring—Friction (Ratchet Pawl)	1211	499901	Pulley/Spring Assembly (Spring)
			718	690959	Pin—Locating (Cylinder)	1218	695866	Seal—O Ring (Carburetor)
			718A	499047	Pin—Locating (Crankshaft)	1330	270962	Repair Manual
			724	697478	Retainer—Seal			
			729	690586	Clip—Wire			
			741	691805	Gear—Timing			
			745	691146	Screw (Brake)			

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**