



Illustrated Parts List

Model Series

120300

TYPE NUMBERS
0036 through 0335.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	7
Fuel Supply	5
Gear Reduction	6
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	5
Piston Group	2
Rewind Starter	7



PRINTED IN U.S.A.

 
 
 
 
 
 
 
 
 
 
 
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

120300




1019 LABEL KIT

1058 OWNER'S MANUAL




1330 REPAIR MANUAL

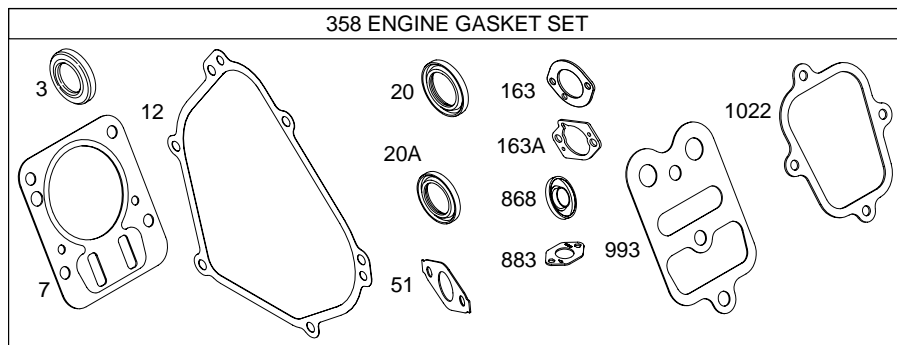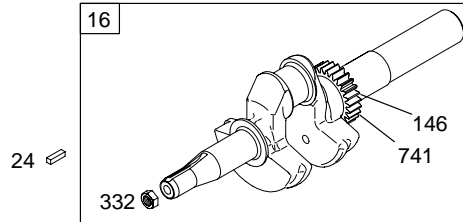


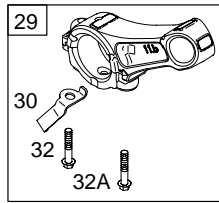
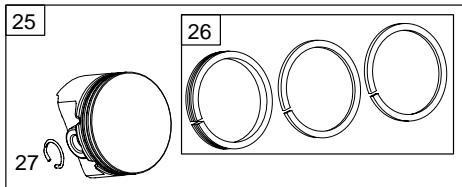
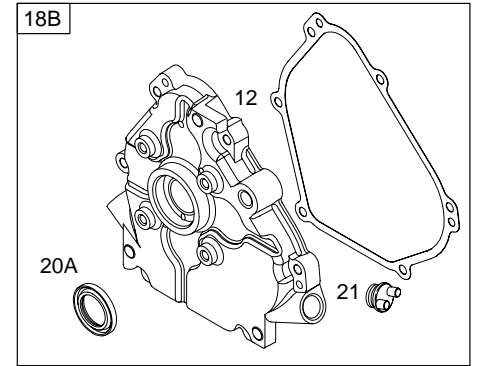
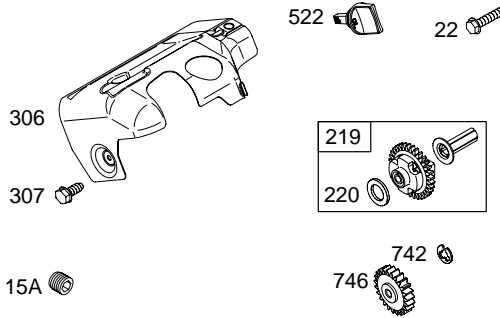
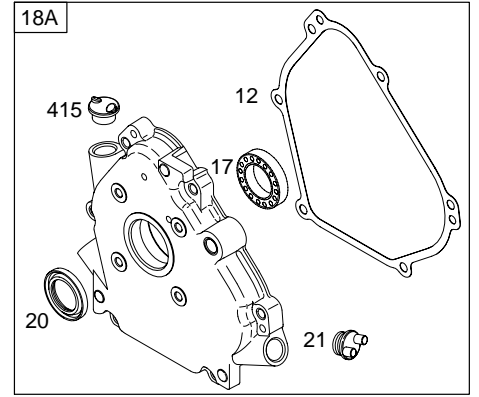
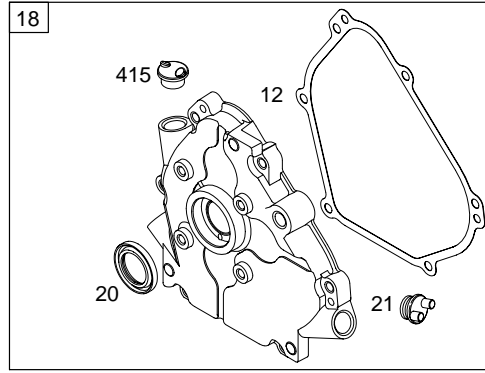
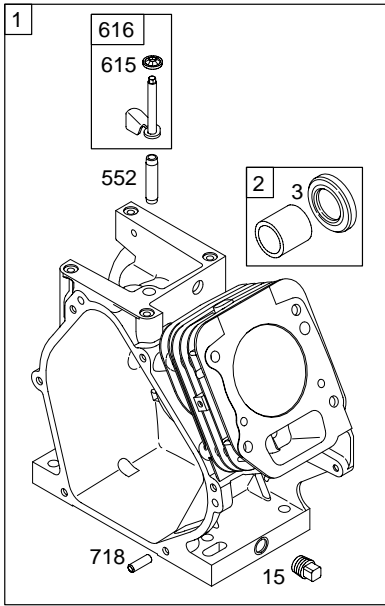


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5640-2 Assemblies include all parts shown in frames. 10/14/2004

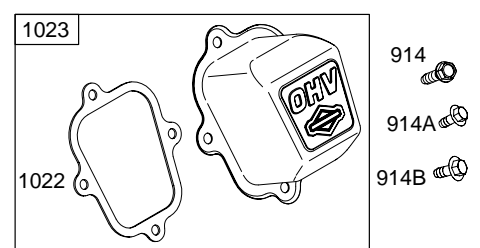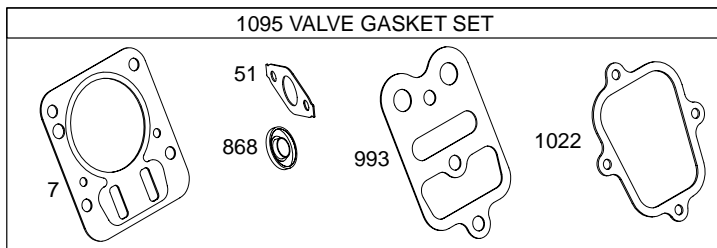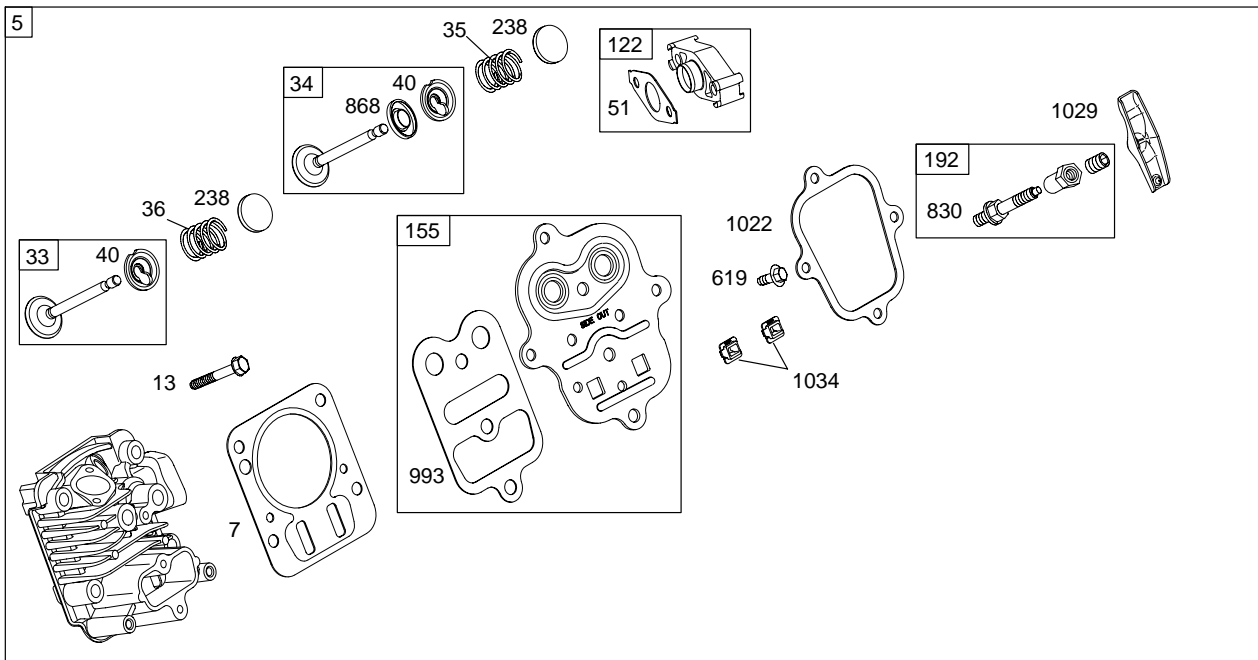   


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5640-3 Assemblies include all parts shown in frames. 10/14/2004

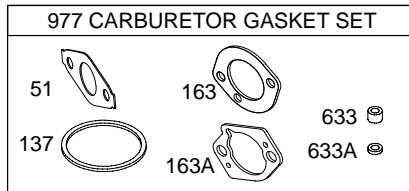 
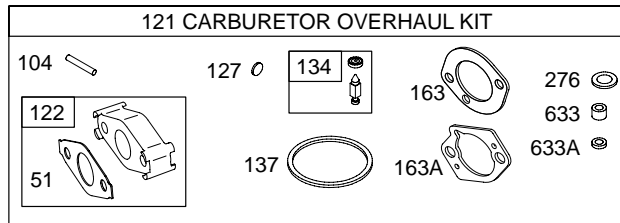 
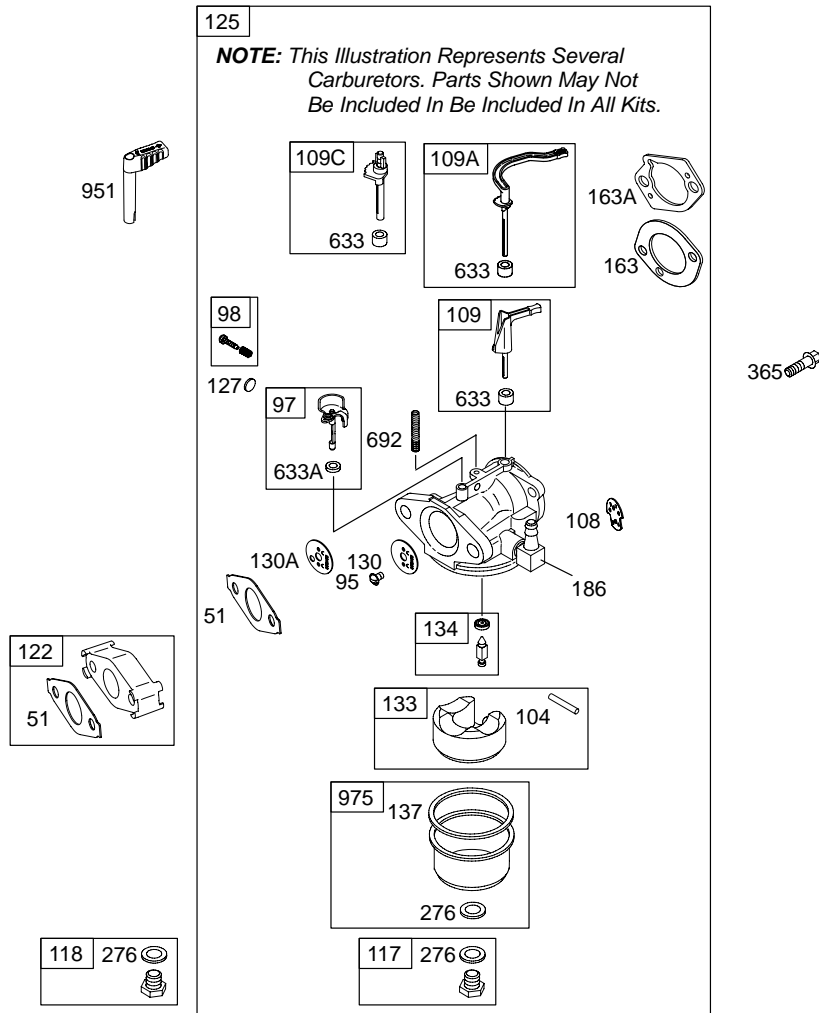 


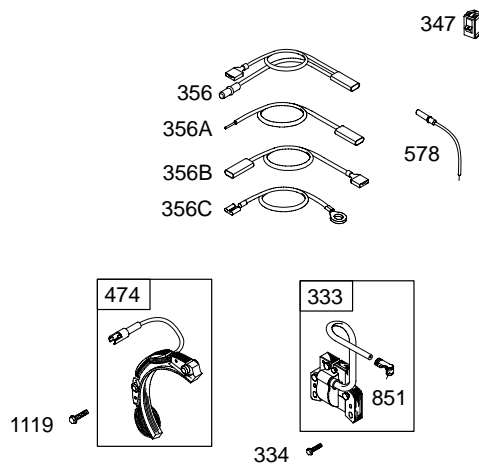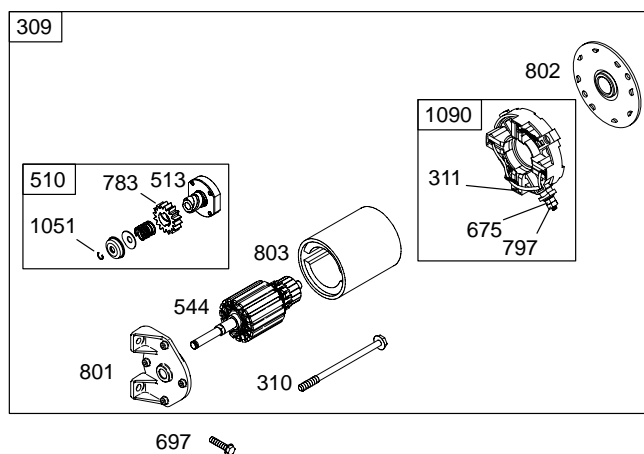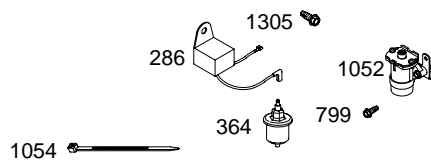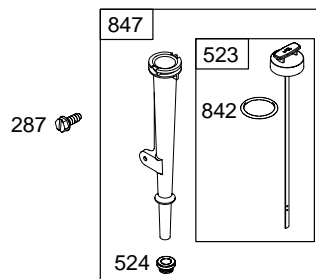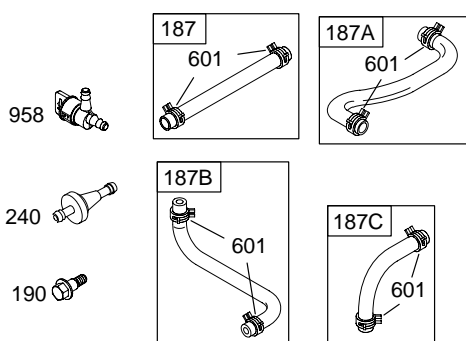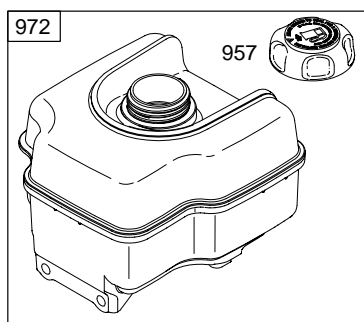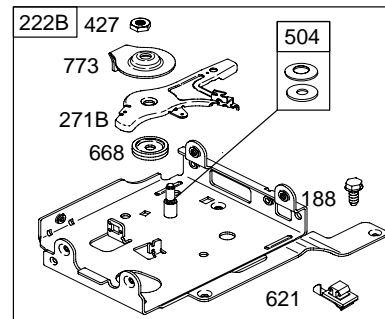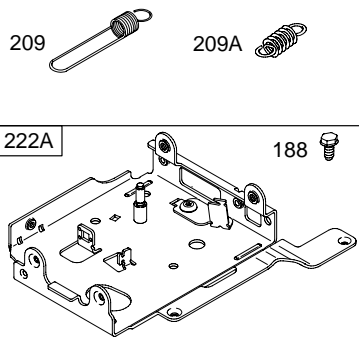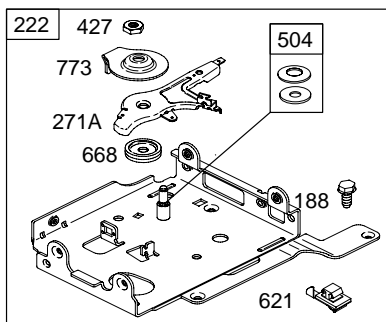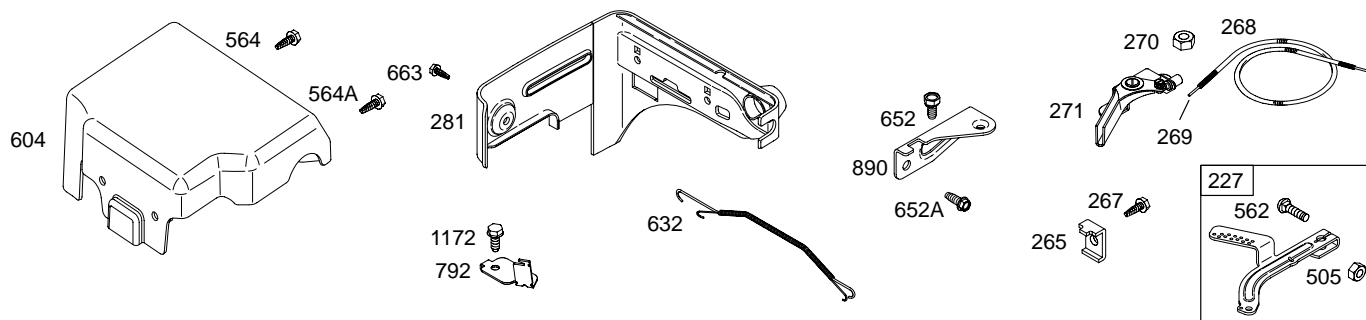          

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5640-5 Assemblies include all parts shown in frames. 10/14/2004

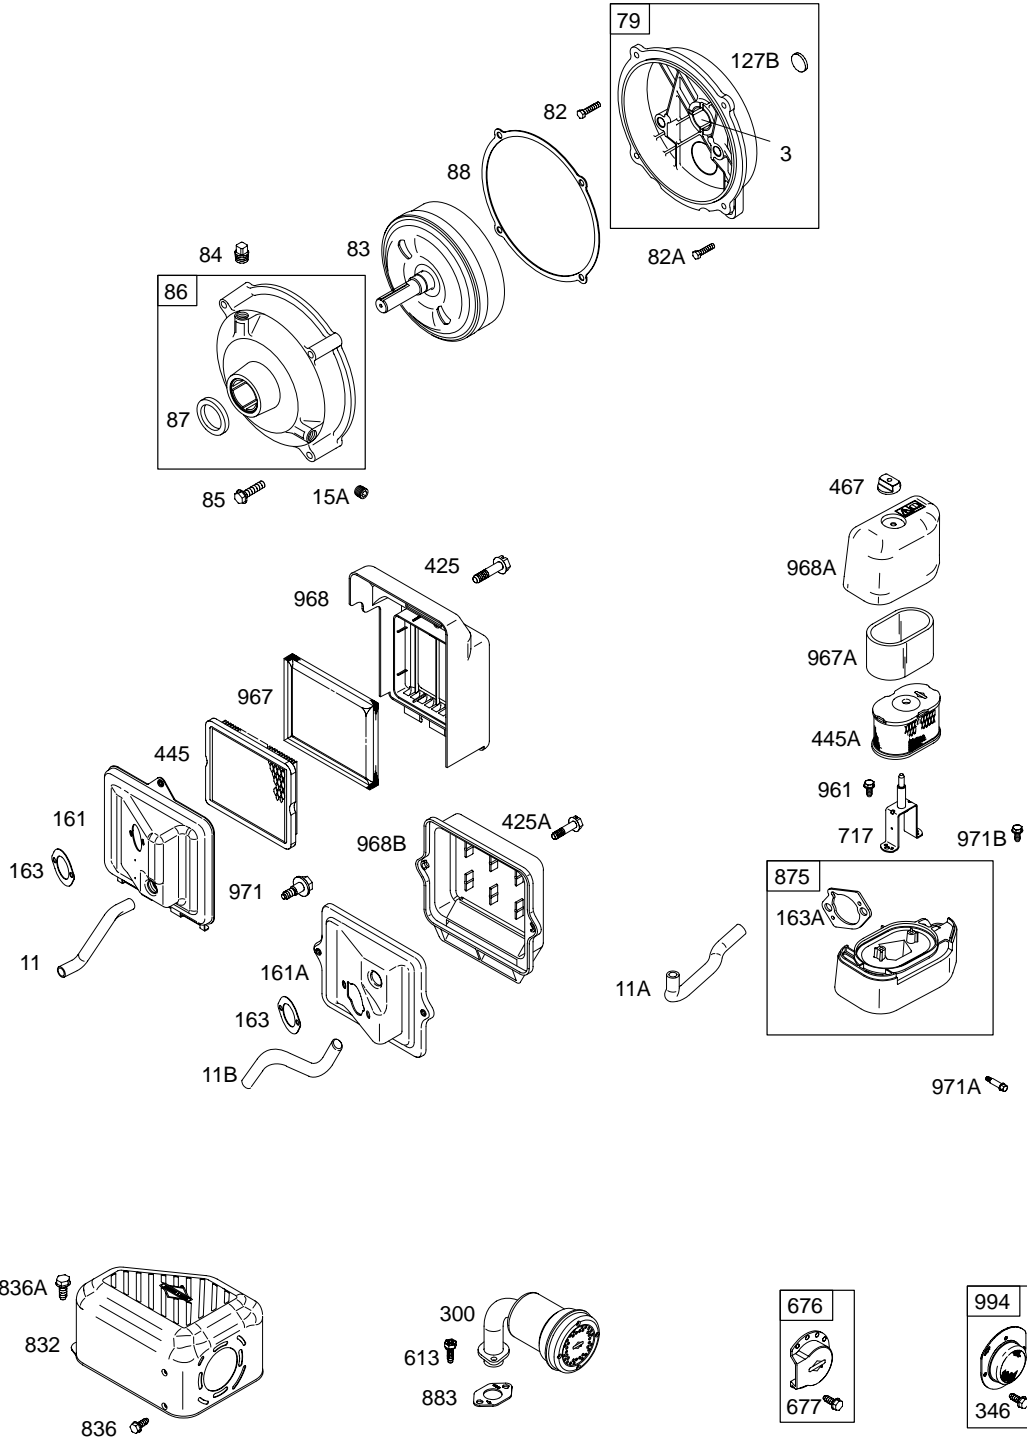 

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5640-6 Assemblies include all parts shown in frames. 10/14/2004

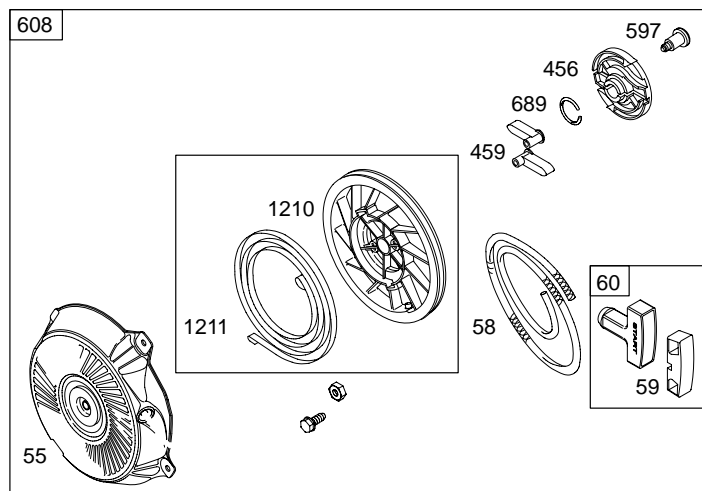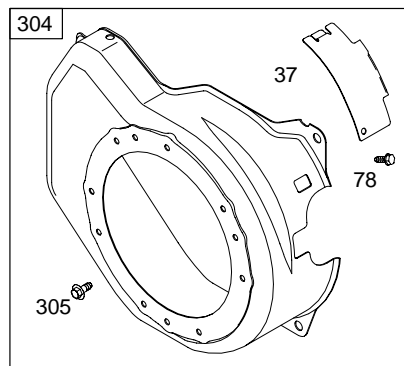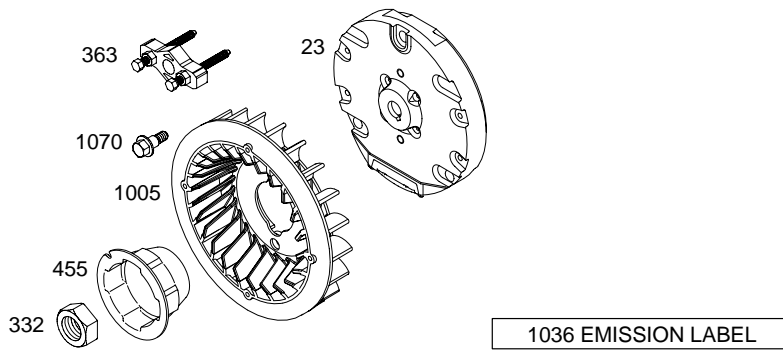   

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5640-7 Assemblies include all parts shown in frames. 10/14/2004

120300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	699510	Cylinder Assembly	17	692517	Bearing–Ball	28	499423	Pin–Piston	
2	399269	Kit–Bushing/Seal (Magneto Side)	18	699804	Cover–Crankcase ———— Note ————	29	690124	Rod–Connecting	
3	★299819	Seal–Oil (Magneto Side)		699696	Cover–Crankcase Used on Type No(s). 0145, 0213, 0299, 0300, 0335, 0432.	30	692562	Dipper–Connecting Rod	
5	699486	Head–Cylinder	18A	699672	Cover–Crankcase Used on Type No(s). 0036, 0131, 0149, 0159.	32	691664	Screw (Connecting Rod)	
7	★∅698210	Gasket–Cylinder Head	18B	699761	Cover–Crankcase Used on Type No(s). 0137.	32A	695759	Screw (Connecting Rod)	
11	692600	Tube–Breather (Flat Panel Air Cleaner)		20	★692550	Seal–Oil (PTO Side)	33	499642	Valve–Exhaust
11A	693647	Tube–Breather (High Mount Air Cleaner)		20A	★694171	Seal–Oil (PTO Side) Used on Type No(s). 0137.	34	499641	Valve–Intake
11B	790632	Tube–Breather (Ultra Low Air Cleaner)		21	281658	Cap–Oil Fill	35	691304	Spring–Valve (Intake)
12	★699485	Gasket–Crankcase		22	699478	Screw (Crankcase Cover/ Sump)	36	691304	Spring–Valve (Exhaust)
13	699482	Screw (Cylinder Head)		23	699488	Flywheel ———— Note ————	37	699661	Guard–Flywheel
15	691686	Plug–Oil Drain (Square Head)			699514	Flywheel Used on Type No(s). 0121.	40	692194	Retainer–Valve
15A	691682	Plug–Oil Drain (Flush)		24	222698	Key–Flywheel	45	690977	Tappet–Valve
16	699445	Crankshaft ———— Note ————		25	690021	Piston Assembly (Standard) ———— Note ————	46	693404	Camshaft
		699443 Crankshaft Used on Type No(s). 0036, 0131, 0149, 0159.			694168	Piston Assembly (.020" Oversize)	51★◆∅692555	Gasket–Intake (2 Required)	
		699447 Crankshaft Used on Type No(s). 0137, 0138, 0145.		26	499631	Ring Set (Standard) ———— Note ————	55	691422	Housing–Rewind Starter
		699452 Crankshaft Used on Type No(s). 0158, 0321.			692786	Ring Set (.020" Oversize)	58	693389	Rope–Starter (Cut to Required Length)
		699449 Crankshaft Used on Type No(s). 0242, 0299.		27	691866	Lock–Piston Pin	59	490653	Grip–Insert
		699451 Crankshaft Used on Type No(s). 0150.					60	490652	Grip–Starter Rope (2 Piece)
		699444 Crankshaft Used on Type No(s). 0147.					78	699205	Screw (Flywheel Guard)
							79	694511	Case–Gear Reduction
							82	690369	Screw (Gear Reduction Case)
							82A	790197	Screw (Gear Reduction Case)
							83	690374	Shaft–Auxiliary Drive
							84	691121	Plug–Breather
							85	692551	Screw (Gear Cover to Gear Reduction)
							86	690608	Cover–Gear
							87	691582	Seal–Gear Reduction
							88	691600	Gasket–Gear Reduction Cover

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5640–8

Assemblies include all parts shown in frames.

10/14/2004

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
95	691636	Screw (Throttle Valve)	125	698474	Carburetor ———— Note ————	190	699220	Screw (Fuel Tank)	
97	690024	Shaft–Throttle		698475	Carburetor	192	694543	Adjustor–Rocker Arm	
98	398185	Kit–Idle Speed (Carburetor)			Used on Type No(s). 0147, 0158, 0213, 0335.	209	692571	Spring–Governor (Silver) ———— Note ————	
104	●691242	Pin–Float Hinge						693206	Spring–Governor (Yellow) Used on Type No(s). 0121, 0137, 0138, 0141, 0145.
108	692567	Valve–Choke	127	●691739	Plug–Welch	209A	691278	Spring–Governor	
109	690023	Shaft–Choke (Straight Handle)	127B	691585	Plug–Welch	219	693578	Gear–Governor	
109A	693628	Shaft–Choke Used on Type No(s). 0147, 0158, 0213, 0335.	130	691181	Valve–Throttle	220	691724	Washer (Governor Gear)	
109C	790624	Shaft–Choke Used on Type No(s). 0321.	130A	691203	Valve–Throttle Used on Type No(s). 0137, 0138, 0145.	222	699589	Bracket–Control	
117	690048	Jet–Main (Standard) ———— Note ———— 698344 Jet–Main (Standard) Used on Type No(s). 0147, 0158, 0213, 0335. 691428 Jet–Main (Standard) Used on Type No(s). 0137, 0138, 0145.	133	398187	Float–Carburetor	222A	699493	Bracket–Control Used on Type No(s). 0145. ———— Note ———— 699590 Bracket–Control Used on Type No(s). 0137, 0138.	
118	498976	Jet–Main (High Altitude) ———— Note ———— 694176 Jet–Main (High Altitude) Used on Type No(s). 0147, 0158, 0213, 0335. 695042 Jet–Main (High Altitude) Used on Type No(s). 0137, 0138, 0145.	134	●398188	Kit–Needle/Seat	222B	699591	Bracket–Control Used on Type No(s). 0143.	
121	696998	Kit–Carburetor Overhaul	137	●693981	Gasket–Float Bowl	227	692573	Lever–Governor Control	
122	★●693749	Spacer–Carburetor	146	690979	Key–Timing	238	691300	Valve–Cap	
			155	★698214	Plate–Cylinder Head	240	694485	Filter–Fuel	
			161	699207	Base–Air Cleaner (Flat Panel Air Cleaner)	265	691024	Clamp–Casing	
			161A	790631	Base–Air Cleaner (Ultra Low Air Cleaner)	267	699492	Screw (Casing Clamp)	
			163	★●696024	Gasket–Air Cleaner (Flat Panel Air Cleaner)	268	691025	Casing–Control Wire (72" Long) (Cut to Required Length)	
			163A	★●696979	Gasket–Air Cleaner (High Mount)	269	691026	Wire–Control (78" Long) (Cut to Required Length)	
			186	692317	Connector–Hose				
			187	691050	Line–Fuel (Cut to Required Length)				
			187A	692601	Line–Fuel (Molded)				
			187B	693401	Line–Fuel (Molded)				
			187C	694486	Line–Fuel (Molded)				
			188	699479	Screw (Control Bracket)				

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

120300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
270	691027	Nut (Control Wire Casing)	358	699638	Gasket Set—Engine	564A	699492	Screw (Control Cover)
271	691028	Lever—Control	363	19069	Puller—Flywheel			Note
271A	694256	Lever—Control	364	695693	Terminal—Oil Plug			699206 Screw (Control Cover)
271B	695743	Lever—Control	365	699484	Screw (Carburetor)			Used on Type No(s). 0145.
276	●271716	Washer—Sealing	383	19374	Wrench—Spark Plug	578	692306	Wire Assembly
281	699639	Panel—Control	415	693463	Plug	597	691696	Screw (Pawl Friction Plate)
286	698611	Module—Oil Sensor	425	699208	Screw (Air Cleaner Cover)	601	95162	Clamp—Hose
287	699629	Screw (Dipstick Tube)	425A	699492	Screw (Air Cleaner Cover)	604	697326	Cover—Control
300	693593	Muffler	427	694255	Nut (Control Bracket)	608	693394	Starter—Rewind
304	699598	Housing—Blower	445	491588	Filter—Air Cleaner Cartridge (Flat Panel)	613	699209	Screw (Muffler)
305	699480	Screw (Blower Housing)	445A	697029	Filter—Air Cleaner Cartridge (High Mount)	615	692576	Retainer—Governor Shaft
306	693610	Shield—Cylinder	455	692591	Cup—Flywheel	616	692547	Crank—Governor
307	699483	Screw (Cylinder Shield)	456	692299	Plate—Pawl Friction	619	699230	Screw (Cylinder Head Plate)
309	694504	Motor—Starter	459	281505	Pawl—Ratchet	621	692310	Switch—Stop
310	690323	Screw (Starter Motor)	467	691668	Knob—Air Cleaner	632	693408	Spring/Link— Mechanical Governor
311	497608	Brush Set	474	694457	Alternator	633	●●693867	Seal—Choke/Throttle Shaft
332	699359	Nut (Flywheel)	504	694254	Washer Set—Friction	633A	●●691321	Seal—Choke/Throttle Shaft
333	695711	Armature—Magneto	505	691251	Nut (Governor Control Lever)	635	692076	Boot—Spark Plug
334	699477	Screw (Magneto Armature)	510	499308	Drive—Starter	652	699755	Screw (Support Bracket)
337	491055	Plug—Spark Note 691043 Plug—Spark Used on Type No(s). 0158, 0321, 0335, 0432.	513	692024	Drive—Clutch	652A	699230	Screw (Support Bracket)
346	690661	Screw (Spark Arrestor)	522	697689	Plug—Dipstick/Fill Used on Type No(s). 0145, 0213.	663	699206	Screw (Control Panel)
347	697854	Switch—Rocker Note 698338 Switch—Rocker Used on Type No(s). 0137, 0138.	523	693618	Dipstick	668	694257	Spacer
356	693651	Wire—Stop	524	281370	Seal—Dipstick Tube	675	691261	Washer (Brush Retainer)
356A	692390	Wire—Stop	544	692966	Armature—Starter	676	393757	Deflector—Muffler
356B	692602	Wire—Stop	552	692346	Bushing—Governor Crank	677	690661	Screw (Muffler Deflector)
356C	695630	Wire—Stop	562	691119	Bolt (Governor Control Lever)	689	691855	Spring—Friction
			564	699491	Screw (Control Cover)	692	690572	Spring—Detent

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

∅ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5640-10

Assemblies include all parts shown in frames.

10/14/2004

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
697	699773	Screw (Starter Motor)	951	790630	Lever-Choke	1036	790634	Label-Emission (Used After Code Date 04063000).
717	693462	Bracket-Air Cleaner	957	694261	Cap-Fuel Tank			Note
718	690959	Pin-Locating	958	698180	Valve-Fuel Shut Off			699946 Label-Emission
727	698039	Cover-Starter Drive	961	698304	Screw (Air Cleaner Bracket)			(Used Before Code Date 04070100 and After Code Date 03093000).
732	699200	Screw (Starter Drive Cover)	967	493537	Filter-Pre Cleaner (Flat Panel)			697004 Label-Emission
741	692565	Gear-Timing	967A	273356	Filter-Pre Cleaner (High Mount)			(Used Before Code Date 03100100).
742	692564	Retainer-E Ring	968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)			
746	692566	Gear-Idler			Note			
773	694258	Retainer			698811 Cover-Air Cleaner	1051	691265	Ring-Retaining
783	692353	Gear-Pinion			(Flat Panel Air Cleaner)	1052	698674	Sensor-Oil
792	694259	Bracket-Fixed Speed			Used on Type No(s). 0145.	1054	280275	Cable-Tie
797	691029	Nut (Brush Retainer)				1058	275092	Owner's Manual (Emission Engines)
799	699202	Screw (Oil Sensor)	968A	693460	Cover-Air Cleaner (High Mount)	1070	699201	Screw (Flywheel Fan)
801	694482	Cap-Drive	968B	790633	Cover-Air Cleaner (Ultra Low Air Cleaner)	1090	691293	Retainer-Brush
802	691286	Cap-End	971	690370	Screw (Air Cleaner Base)	1095	698215	Gasket Set-Valve
803	693757	Housing-Starter	971A	690349	Screw (Air Cleaner Base)	1119	699772	Screw (Alternator)
830	694544	Stud-Rocker Arm	971B	699629	Screw (Air Cleaner Base)	1172	699230	Screw (Fixed Speed Bracket)
832	693583	Guard-Muffler	972	694260	Tank-Fuel	1210	498144	Pulley/Spring Assembly (Pulley)
836	699203	Screw (Muffler Guard)	975	493640	Bowl-Float	1211	498144	Pulley/Spring Assembly (Spring)
836A	699632	Screw (Muffler Guard)	977	697001	Gasket Set-Carburetor	1305	691140	Screw (Oil Sensor Module)
842	691031	Seal-O Ring (Dipstick Tube)	993	Ø694088	Gasket-Cylinder Head Plate			Note
847	693617	Dipstick/Tube Assembly	994	399541	Arrester-Spark Used on Type No(s). 0138.			699691 Screw (Oil Sensor Module)
851	493880	Terminal-Spark Plug	1005	692592	Fan-Flywheel			Used on Type No(s). 0159.
868	★Ø692044	Seal-Valve	1019	694852	Kit-Label	1330	272147	Repair Manual
875	697030	Base-Air Cleaner (High Mount)	1022	★Ø691890	Gasket-Rocker Cover			
883	★691893	Gasket-Exhaust	1023	499924	Cover-Rocker Arm			
890	790203	Bracket-Support	1026	790287	Rod-Push			
914	699481	Screw (Rocker Cover) (Bottom)	1029	691230	Arm-Rocker			
914A	692557	Screw (Rocker Cover) (Top)	1034	691343	Guide-Push Rod			
914B	697551	Screw (Rocker Cover) (Center)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.