

Illustrated Parts List

Model Series

122000

TYPE NUMBERS
0111 through 0394.


TABLE OF CONTENTS

Air Cleaner	5
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Exhaust System	5
Flywheel	6
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	2
Piston Group	2
Rewind Starter	6










PRINTED IN U.S.A.














COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

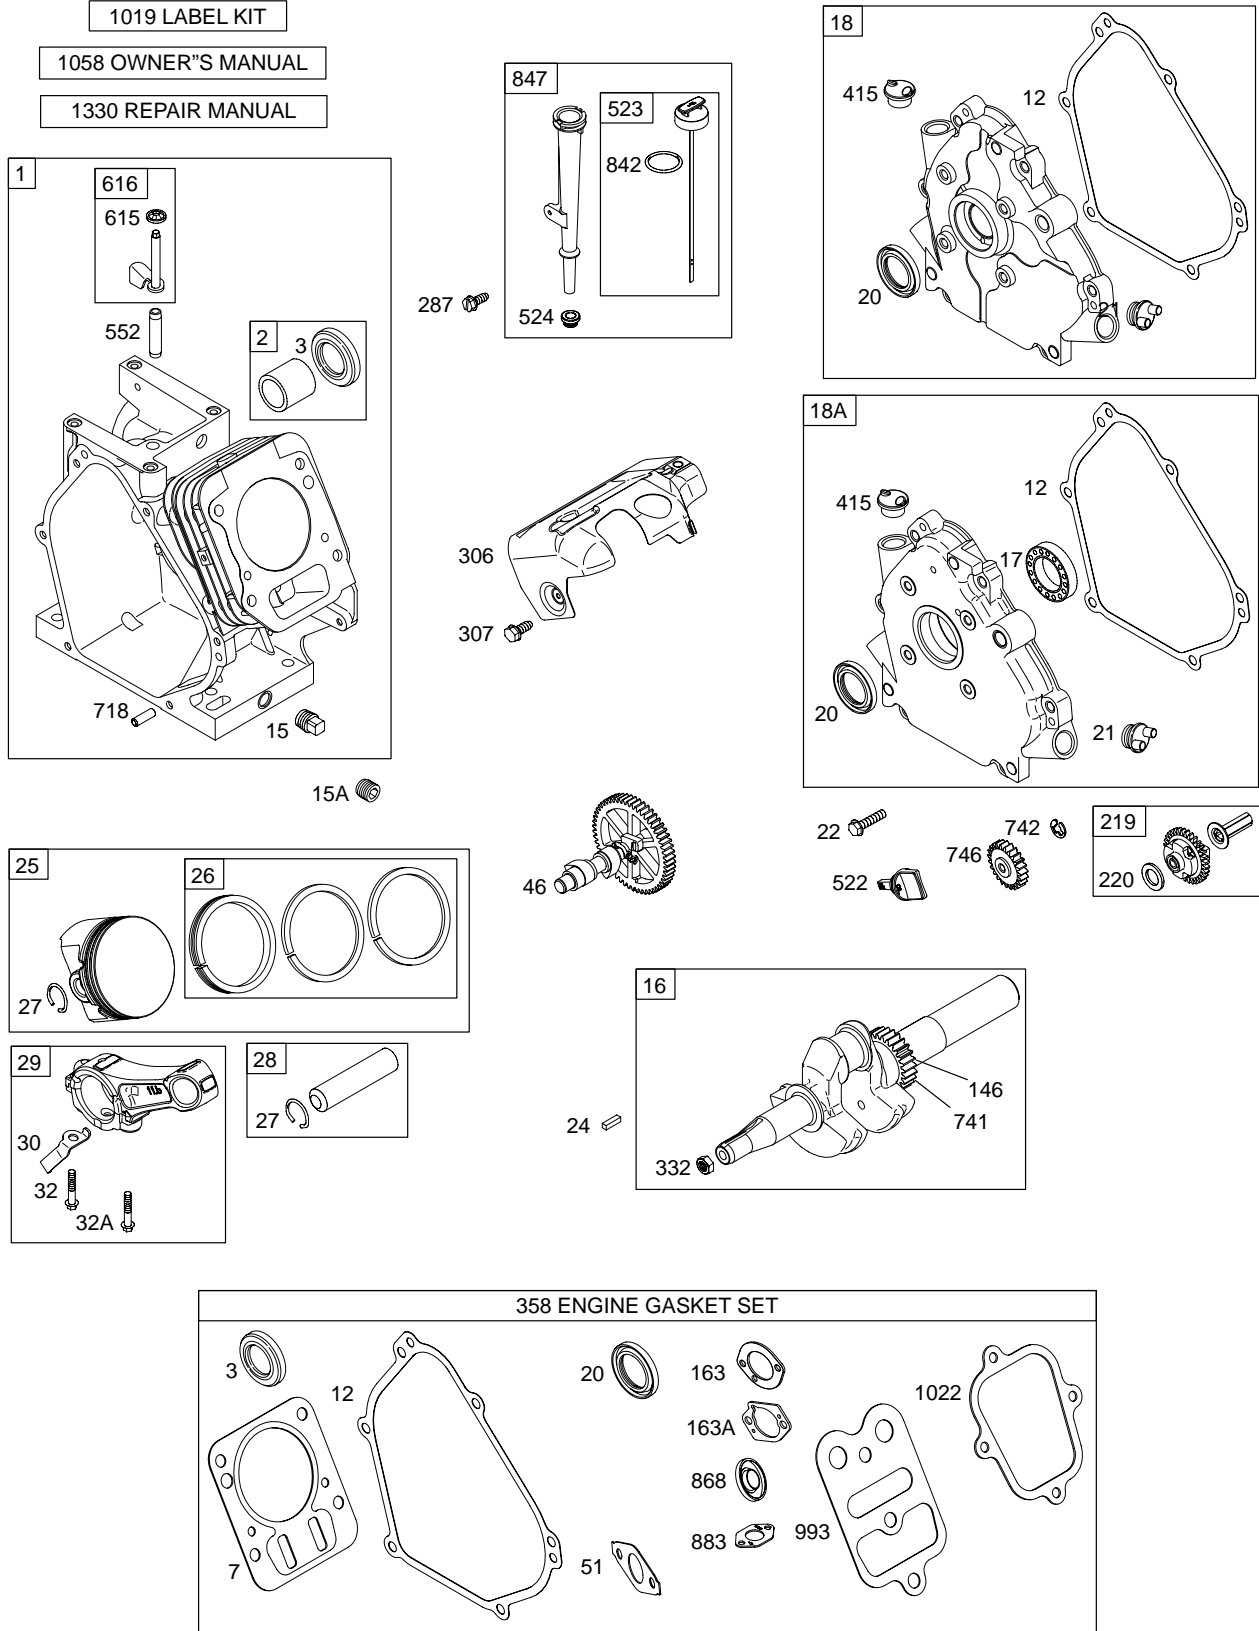



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

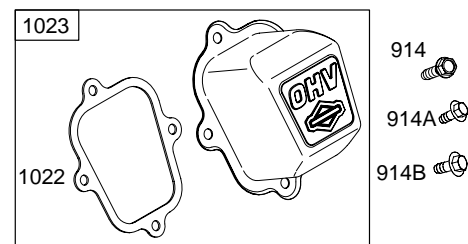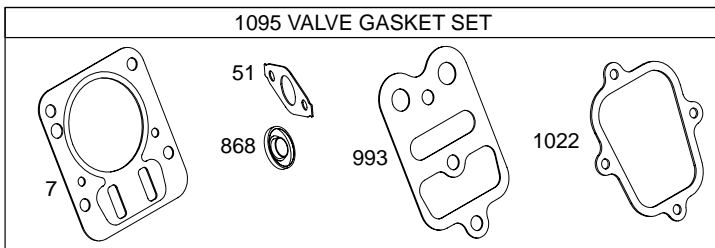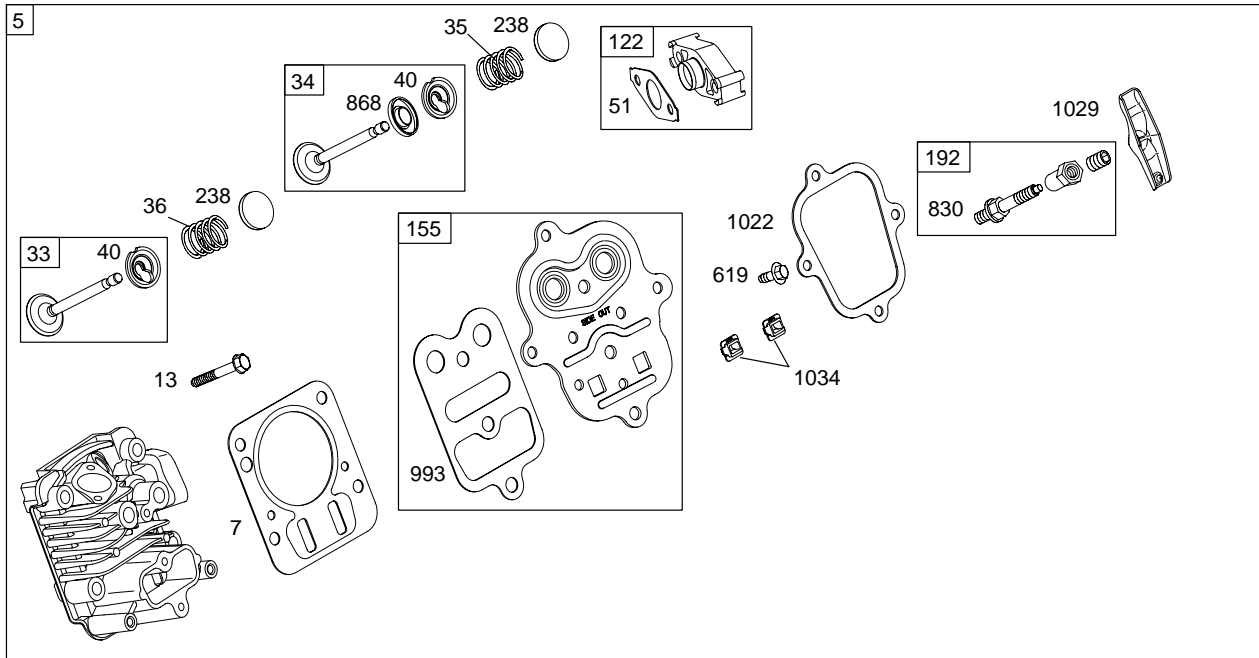

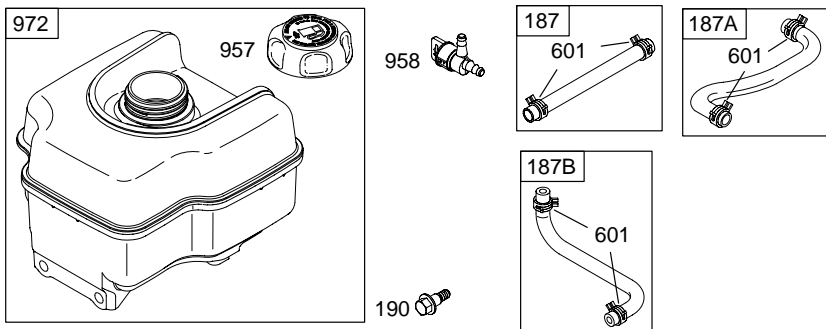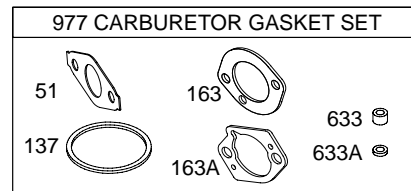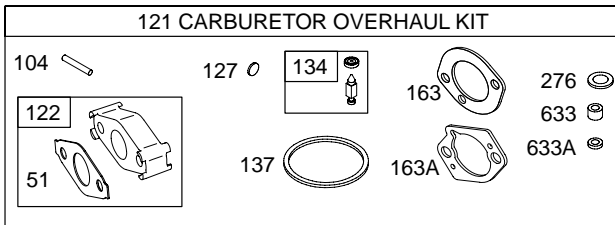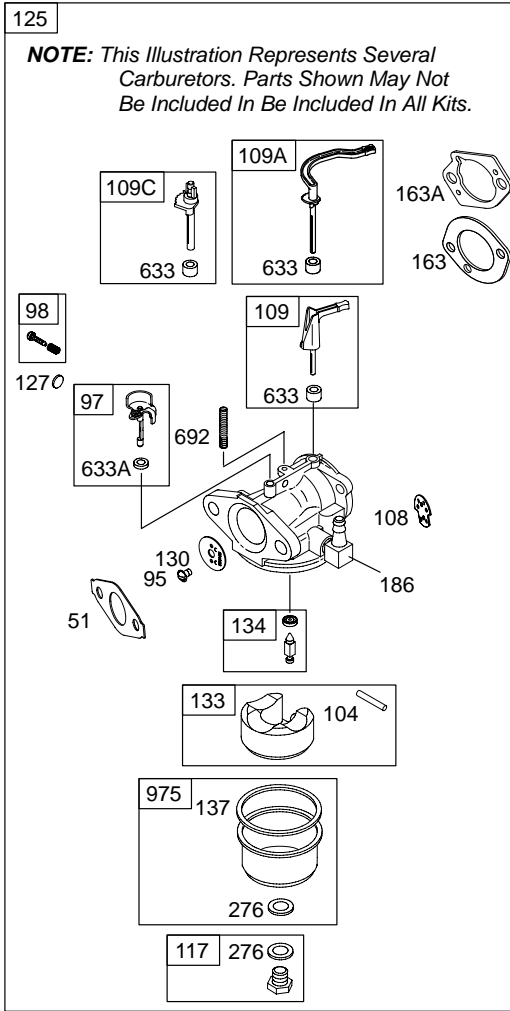


   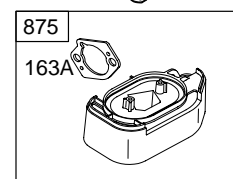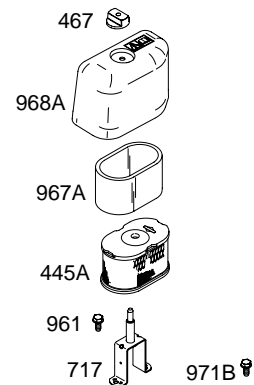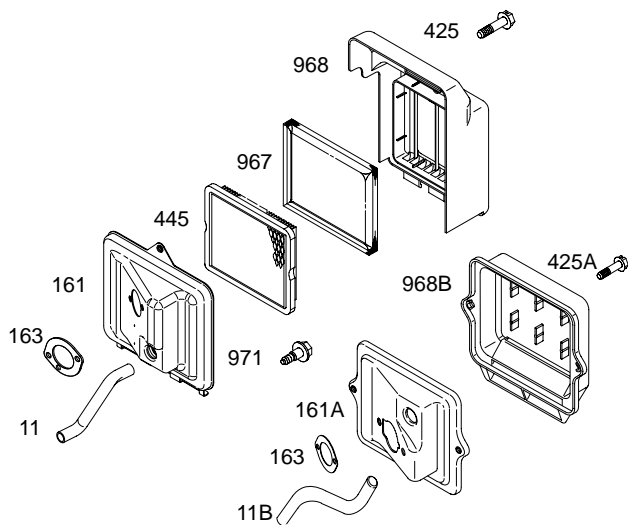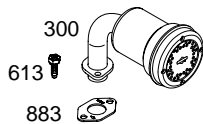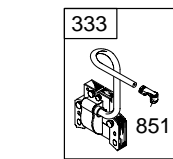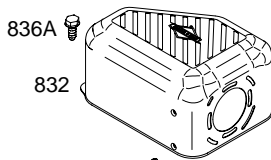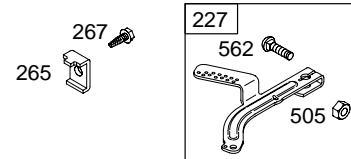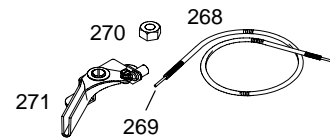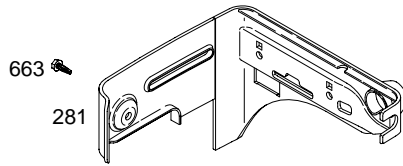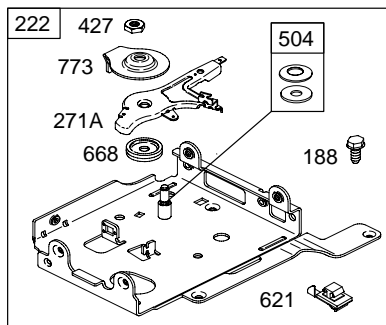

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3248-5 Assemblies include all parts shown in frames. 10/26/2004

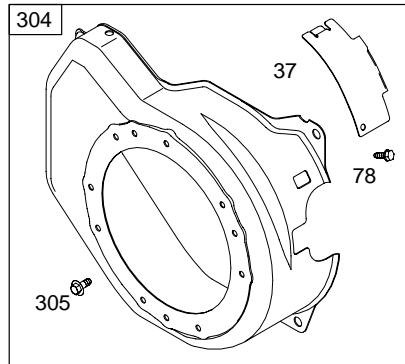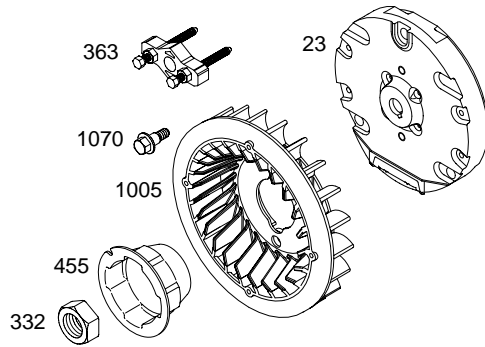

1036 EMISSION LABEL

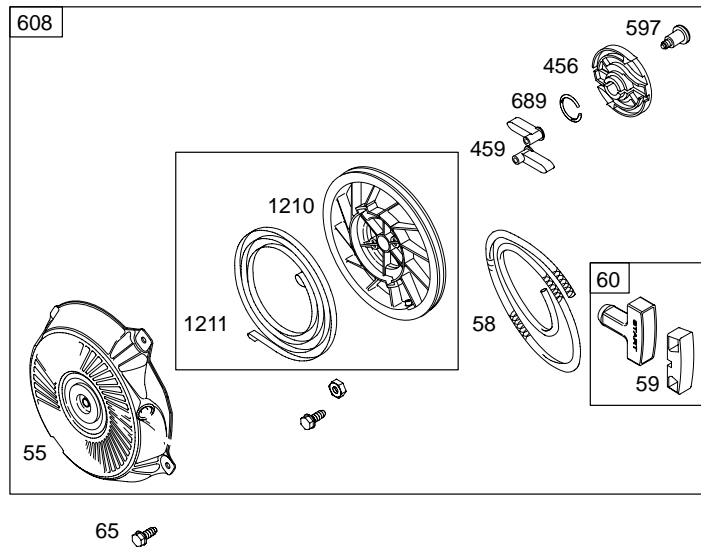

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly	18	699804	Cover-Crankcase Used on Type No(s). 0115, 0116, 0358, 0361.	35	691304	Spring-Valve (Intake)
2	399269	Kit-Bushing/Seal (Magneto Side)			————— Note —————	36	691304	Spring-Valve (Exhaust)
3	★299819	Seal-Oil (Magneto Side)			699696	37	699661	Guard-Flywheel
5	699486	Head-Cylinder			Crankcase	40	692194	Retainer-Valve
7	★∅698210	Gasket-Cylinder Head			Used on Type No(s). 0394.	45	690977	Tappet-Valve
11	692600	Tube-Breather (Flat Panel Air Cleaner)	18A	699672	Cover-Crankcase Used on Type No(s). 0111, 0112.	46	693404	Camshaft
11A	693647	Tube-Breather (High Mount Air Cleaner)				51★●∅692555	692555	Gasket-Intake
11B	790632	Tube-Breather (Ultra Low Air Cleaner)	20	★692550	Seal-Oil (PTO Side)	55	691422	Housing-Rewind Starter
12	★699485	Gasket-Crankcase	21	281658	Cap-Oil Fill	58	693389	Rope-Starter (Cut to Required Length)
13	699482	Screw (Cylinder Head)	22	699478	Screw (Crankcase Cover/ Sump)	59	490653	Grip-Insert
15	691686	Plug-Oil Drain (Square Head)	23	699488	Flywheel	60	490652	Grip-Starter Rope (2 Piece)
15A	691682	Plug-Oil Drain (Flush)	24	222698	Key-Flywheel	65	699228	Screw (Rewind Starter)
16	699445	Crankshaft Used on Type No(s). 0115, 0394.	25	499627	Piston Assembly (Standard)	78	699205	Screw (Flywheel Guard)
		————— Note —————			————— Note —————	95	691636	Screw (Throttle Valve)
		699452	26	499631	Ring Set (Standard)	97	690024	Shaft-Throttle
		Used on Type No(s). 0358.			————— Note —————	98	398185	Kit-Idle Speed (Carburetor)
		699449			692786	104	●691242	Pin-Float Hinge
		Crankshaft Used on Type No(s). 0361.			Ring Set (.020" Oversize)	108	692567	Valve-Choke
		699451	27	691866	Lock-Piston Pin	109	690023	Shaft-Choke
		Crankshaft Used on Type No(s). 0112, 0116.	28	499423	Pin-Piston	109A	693628	Shaft-Choke
		699443	29	690124	Rod-Connecting	109C	790624	Shaft-Choke
		Crankshaft Used on Type No(s). 0111.	30	692562	Dipper-Connecting Rod	117	690048	Jet-Main (Standard) Used on Type No(s). 0112, 0115, 0358, 0361.
17	692517	Bearing-Ball	32	691664	Screw (Connecting Rod)			————— Note —————
			32A	695759	Screw (Connecting Rod)			698344
			33	499642	Valve-Exhaust			Jet-Main (Standard) Used on Type No(s). 0111, 0116, 0394.
			34	499641	Valve-Intake			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122000

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118	498976	Jet—Main (High Altitude) Used on Type No(s). 0112, 0115, 0358, 0361. Note 694176 Jet—Main (High Altitude) Used on Type No(s). 0111, 0116, 0394.	188	699479	Screw (Control Bracket)	305	699480	Screw (Blower Housing)
121	696998	Kit—Carburetor Overhaul	190	699220	Screw (Fuel Tank)	306	693610	Shield—Cylinder
122	★693749	Spacer—Carburetor	192	694543	Adjustor—Rocker Arm	307	699483	Screw (Cylinder Shield)
125	698474	Carburetor Used on Type No(s). 0112, 0115, 0358, 0361. Note 698475 Carburetor Used on Type No(s). 0111, 0116, 0394.	209	692571	Spring—Governor Used on Type No(s). 0111, 0112, 0358, 0361, 0394. Note 693206 Spring— Governor Used on Type No(s). 0115, 0116.	332	699359	Nut (Flywheel)
127	●691739	Plug—Welch	209A	691278	Spring—Governor	333	695711	Armature—Magneto
130	691181	Valve—Throttle	219	693578	Gear—Governor	334	699477	Screw (Magneto Armature)
133	398187	Float—Carburetor	220	691724	Washer (Governor Gear)	337	491055	Plug—Spark (Resistor)
134	●398188	Kit—Needle/Seat	222	699589	Bracket—Control	346	690661	Screw (Spark Arrester)
137	●●693981	Gasket—Float Bowl	227	692573	Lever—Governor Control	356	693651	Wire—Stop
146	690979	Key—Timing	238	691300	Valve—Cap	356A	692390	Wire—Stop
155	★698214	Plate—Cylinder Head	265	691024	Clamp—Casing	358	699638	Gasket Set—Engine
161	699207	Base—Air Cleaner (Flat Panel Air Cleaner)	267	699492	Screw (Casing Clamp)	363	19069	Puller—Flywheel
161A	790631	Base—Air Cleaner (Ultra Low Air Cleaner)	268	691025	Casing—Control Wire (72" Long) (Cut to Required Length)	365	699484	Screw (Carburetor)
163★●●696024	Gasket—Air Cleaner	269	691026	Wire—Control (78" Long) (Cut to Required Length)	383	19374	Wrench—Spark Plug	
163A★●●696979	Gasket—Air Cleaner	270	691027	Nut (Control Wire Casing)	415	693463	Plug	
186	692317	Connector—Hose	271	691028	Lever—Control	425	699208	Screw (Air Cleaner Cover)
187	691050	Line—Fuel (Cut to Required Length)	271A	694256	Lever—Control	425A	699492	Screw (Air Cleaner Cover)
187A	692601	Line—Fuel (Molded)	276	●271716	Washer—Sealing	427	694255	Nut (Control Bracket)
187B	693401	Line—Fuel (Molded)	281	699639	Panel—Control	445	491588	Filter—Air Cleaner Cartridge (Flat Panel)
			287	699629	Screw (Dipstick Tube)	445A	697029	Filter—Air Cleaner Cartridge (High Mount)
			300	693593	Muffler	455	692591	Cup—Flywheel
			304	699598	Housing—Blower	456	692299	Plate—Pawl Friction
						459	281505	Pawl—Ratchet
						467	691668	Knob—Air Cleaner
						504	694254	Washer Set—Friction
						505	691251	Nut (Governor Control Lever)
						522	697689	Plug—Dipstick/Fill
						523	693618	Dipstick

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

⊘ Included in Valve Gasket Set—Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
524	281370	Seal-Dipstick Tube	773	694258	Retainer	968A	693460	Cover-Air Cleaner (High Mount)
552	692346	Bushing-Governor Crank	830	694544	Stud-Rocker Arm	968B	790633	Cover-Air Cleaner (Ultra Low Air Cleaner)
562	691119	Bolt (Governor Control Lever)	832	693583	Guard-Muffler	971	690370	Screw (Air Cleaner Base)
597	691696	Screw (Pawl Friction Plate)	836	699203	Screw (Muffler Guard)	971A	690349	Screw (Air Cleaner Base)
601	95162	Clamp-Hose	836A	699632	Screw (Muffler Guard)	971B	699629	Screw (Air Cleaner Base)
608	693394	Starter-Rewind	842	691031	Seal-O Ring (Dipstick Tube)	972	694260	Tank-Fuel
613	699209	Screw (Muffler)	847	693617	Dipstick/Tube Assembly	975	493640	Bowl-Float
615	692576	Retainer-Governor Shaft	851	493880	Terminal-Spark Plug	977	697001	Gasket Set-Carburetor
616	692547	Crank-Governor	868	★692044	Seal-Valve	993	∅694088	Gasket-Cylinder Head Plate
619	699230	Screw (Cylinder Head Plate)	875	697030	Base-Air Cleaner (High Mount)	994	399541	Arrester-Spark
621	692310	Switch-Stop	883	★691893	Gasket-Exhaust	1005	692592	Fan-Flywheel
632	693408	Spring/Link-Mechanical Governor	914	699481	Screw (Rocker Cover) (Bottom)	1019	694852	Kit-Label
633	◆693867	Seal-Choke/Throttle Shaft	914A	692557	Screw (Rocker Cover) (Top)	1022	★∅691890	Gasket-Rocker Cover
633A	◆691321	Seal-Choke/Throttle Shaft	914B	697551	Screw (Rocker Cover) (Center)	1023	499924	Cover-Rocker Arm
635	692076	Boot-Spark Plug	951	790630	Lever-Choke	1026	790287	Rod-Push
663	699206	Screw (Control Panel)	957	694261	Cap-Fuel Tank	1029	691230	Arm-Rocker
668	694257	Spacer	958	698180	Valve-Fuel Shut Off	1034	691343	Guide-Push Rod
676	393757	Deflector-Muffler	961	698304	Screw (Air Cleaner Bracket)	1036	790634	Label-Emission
677	690661	Screw (Muffler Deflector)	967	493537	Filter-Pre Cleaner (Flat Panel)	1058	275092	Owner's Manual
689	691855	Spring-Friction	967A	273356	Filter-Pre Cleaner (High Mount)	1070	699201	Screw (Flywheel Fan)
692	690572	Spring-Detent	968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)	1095	698215	Gasket Set-Valve
717	693462	Bracket-Air Cleaner				1210	498144	Pulley/Spring Assembly (Pulley)
718	690959	Pin-Locating				1211	498144	Pulley/Spring Assembly (Spring)
741	695087	Gear-Timing				1330	272147	Repair Manual
742	692564	Retainer-E Ring				1330	272147	Repair Manual
746	692566	Gear-Idler						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.