

124000

Illustrated Parts List

Model Series

124000

TYPE NUMBERS
0267.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing	5
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Exhaust System	5
Flywheel	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valves	3
Lubrication	2
Piston Group	2
Rewind Starter	5




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

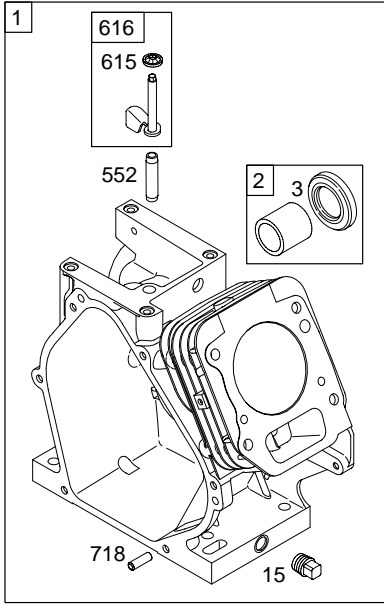


287

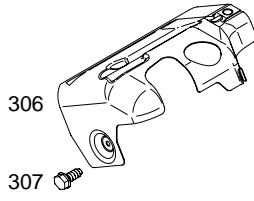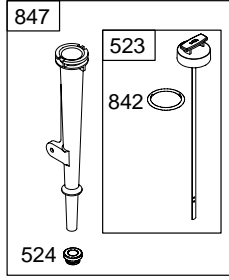

307



15A

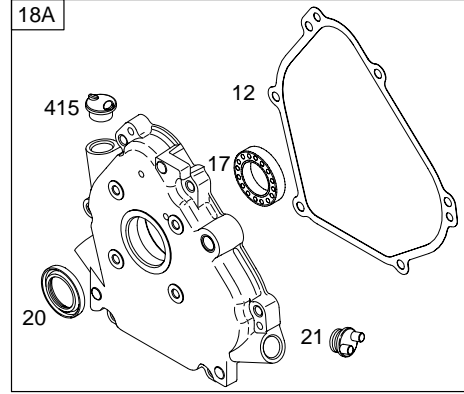




22






219




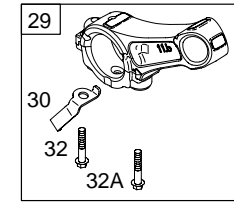
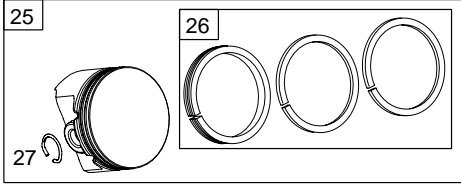


28

 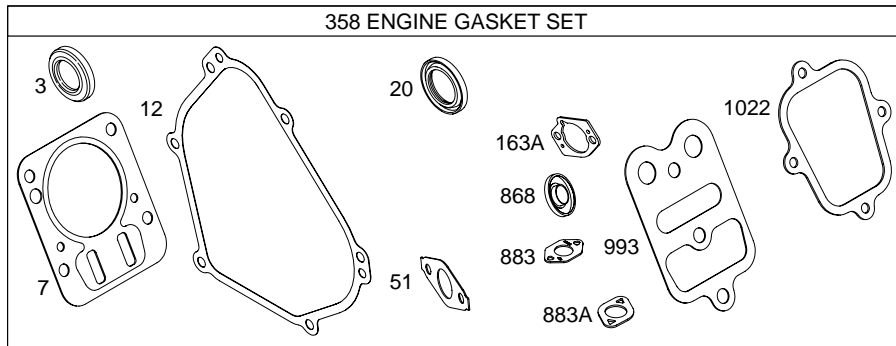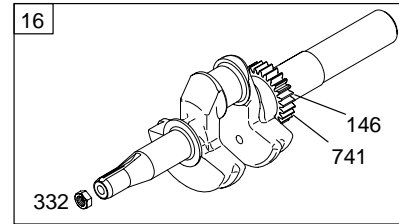


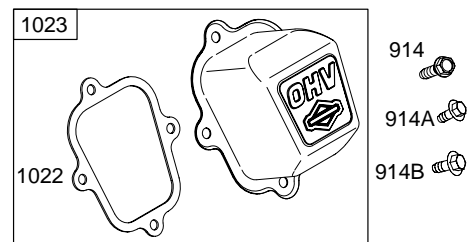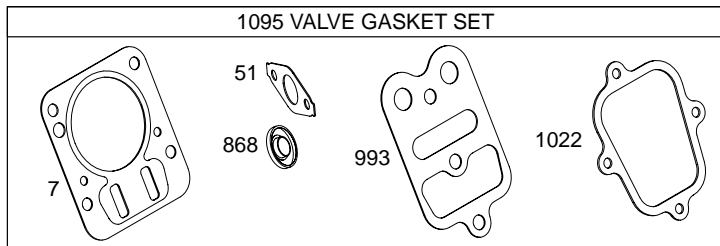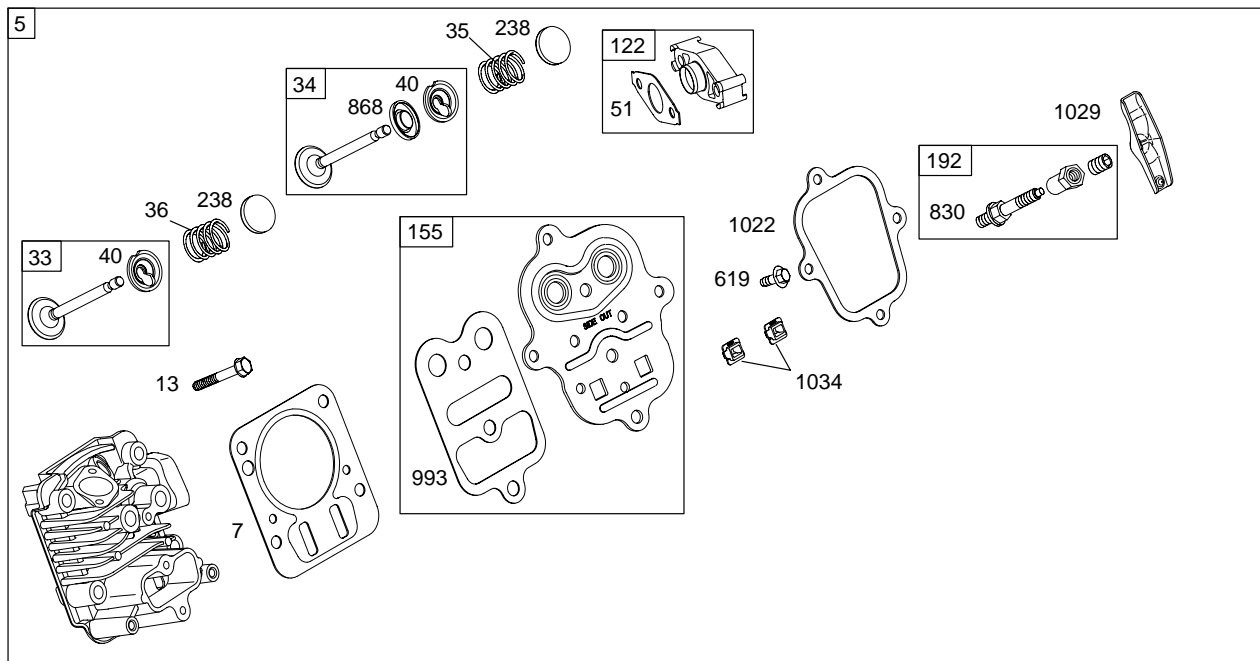

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3249-3 Assemblies include all parts shown in frames. 10/27/2004

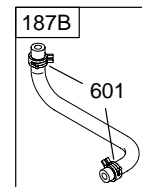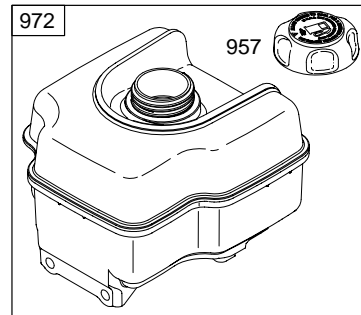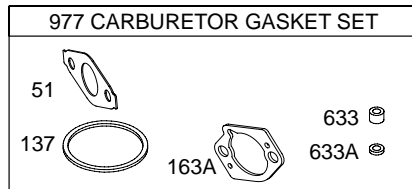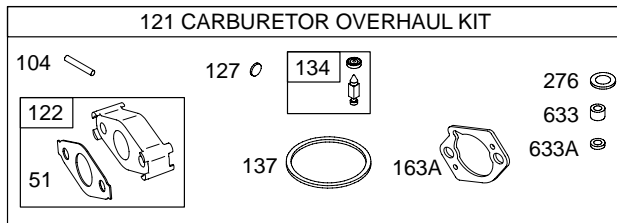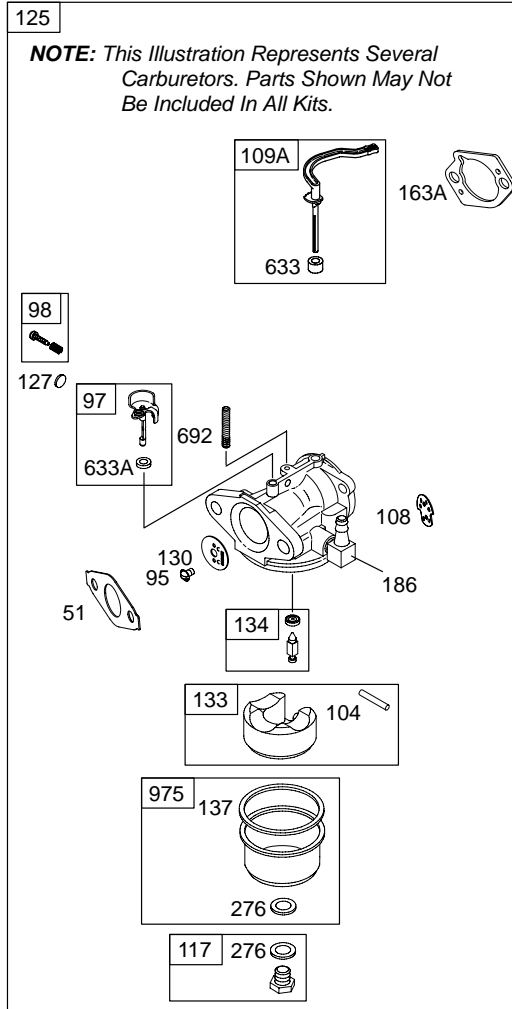

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3249-4 Assemblies include all parts shown in frames. 10/27/2004

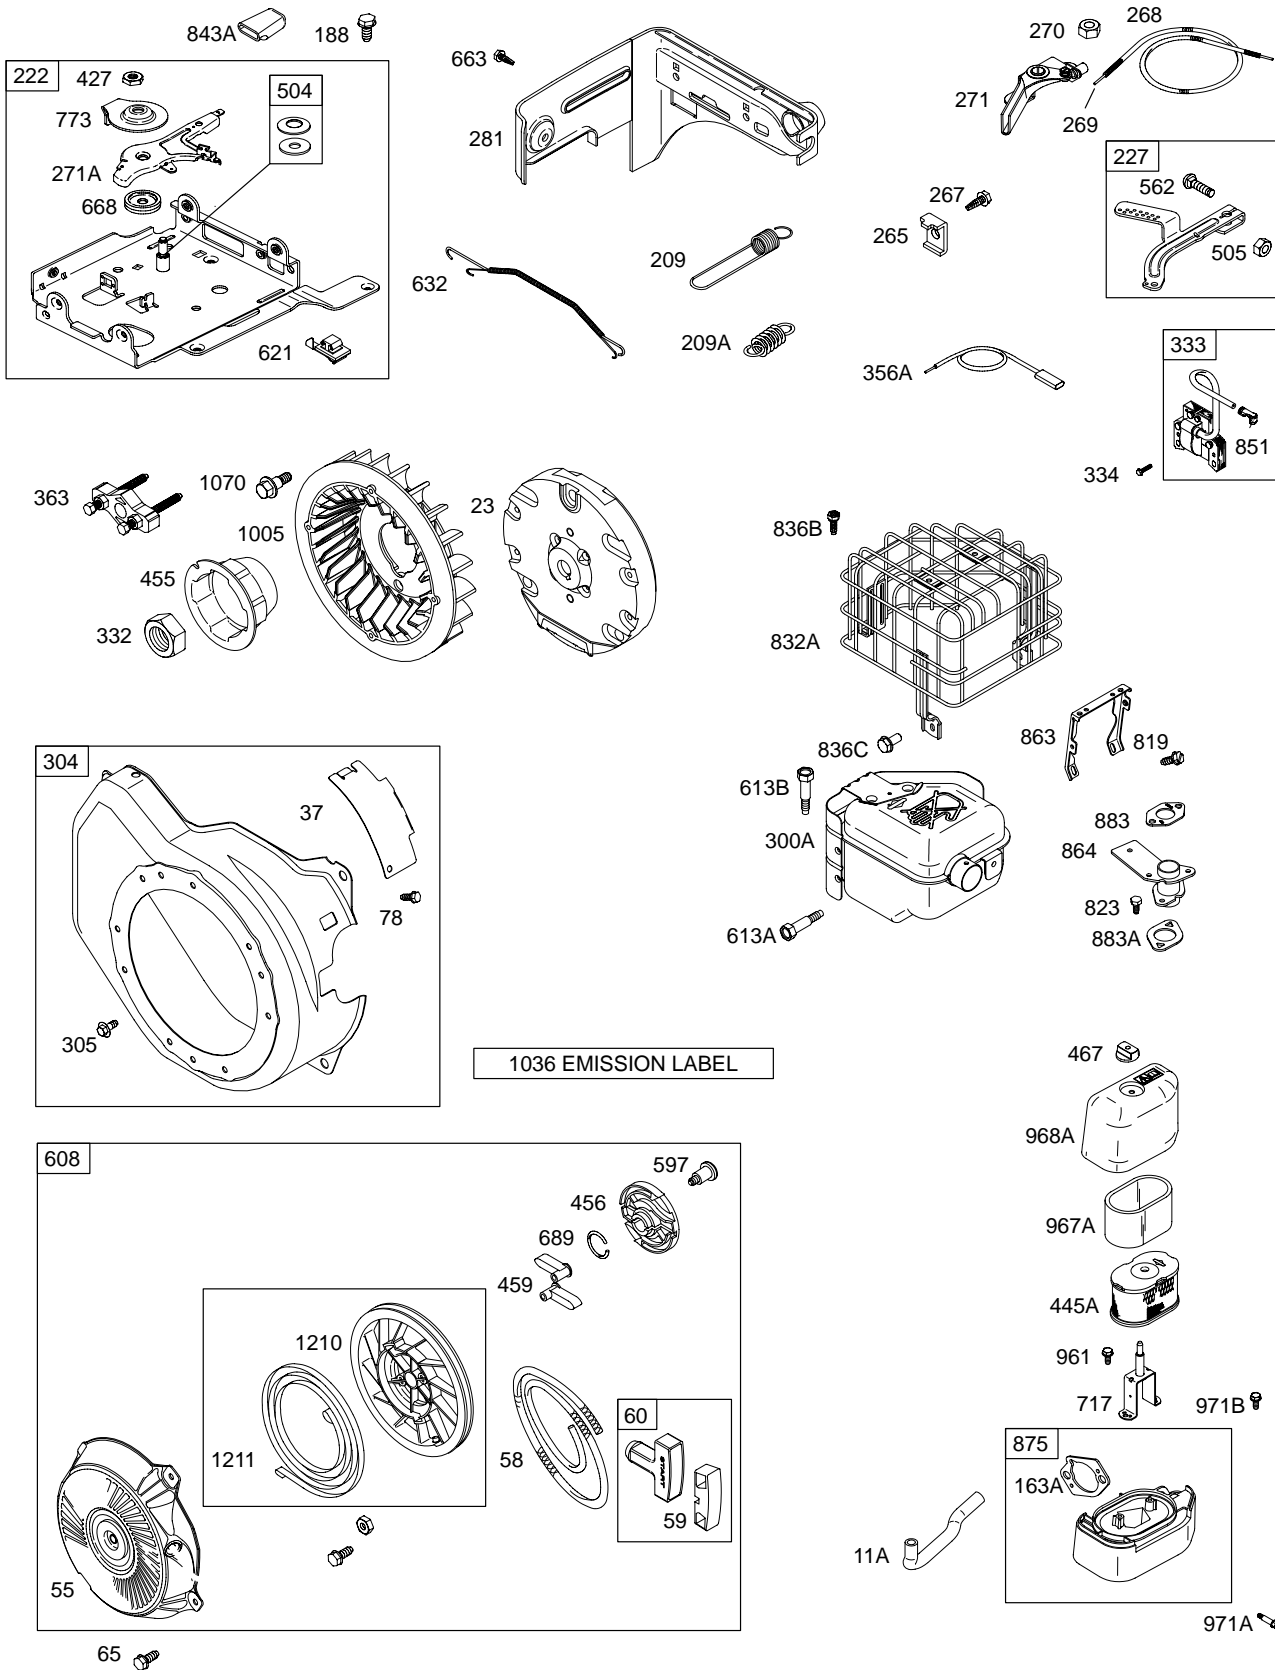

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3249-5 Assemblies include all parts shown in frames. 10/27/2004

124000

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly	32A	695759	Screw (Connecting Rod)	155	★698214	Plate-Cylinder Head
2	399269	Kit-Bushing/Seal (Magneto Side)	33	499642	Valve-Exhaust	163A	★◆696979	Gasket-Air Cleaner (High Mount)
3	★299819	Seal-Oil (Magneto Side)	34	499641	Valve-Intake	186	692317	Connector-Hose
5	699486	Head-Cylinder	35	691304	Spring-Valve (Intake)	187B	693401	Line-Fuel (Molded)
7	★∅698210	Gasket-Cylinder Head	36	691304	Spring-Valve (Exhaust)	188	699479	Screw (Control Bracket)
11A	693647	Tube-Breather (High Mount Air Cleaner)	37	699661	Guard-Flywheel	190	699220	Screw (Fuel Tank)
12	★699485	Gasket-Crankcase	40	692194	Retainer-Valve	192	694543	Adjustor-Rocker Arm
13	699482	Screw (Cylinder Head)	45	690977	Tappet-Valve	209	692571	Spring-Governor
15	691686	Plug-Oil Drain (Square Head)	46	693404	Camshaft	209A	691278	Spring-Governor
15A	691682	Plug-Oil Drain (Flush)	51	★◆∅692555	Gasket-Intake	219	693578	Gear-Governor
16	699449	Crankshaft	55	691422	Housing-Rewind Starter	220	691724	Washer (Governor Gear)
17	692517	Bearing-Ball	58	693389	Rope-Starter (Cut to Required Length)	222	699589	Bracket-Control
18A	699672	Cover-Crankcase	59	490653	Grip-Insert	227	692573	Lever-Governor Control
20	★692550	Seal-Oil (PTO Side)	60	490652	Grip-Starter Rope	238	691300	Valve-Cap
21	281658	Cap-Oil Fill	65	699228	Screw (Rewind Starter)	265	691024	Clamp-Casing
22	699478	Screw (Crankcase Cover/ Sump)	78	699205	Screw (Flywheel Guard)	267	699492	Screw (Casing Clamp)
23	699488	Flywheel	95	691636	Screw (Throttle Valve)	268	691025	Casing-Control Wire (72" Long) (Cut to Required Length)
24	222698	Key-Flywheel	97	690024	Shaft-Throttle	269	691026	Wire-Control (78" Long) (Cut to Required Length)
25	499627	Piston Assembly (Standard)	98	398185	Kit-Idle Speed (Carburetor)	270	691027	Nut (Control Wire Casing)
		Note	104	◆691242	Pin-Float Hinge	271	691028	Lever-Control
		692789	108	692567	Valve-Choke	271A	694256	Lever-Control
		Piston Assembly (.020" Oversize)	109A	693628	Shaft-Choke	276	◆271716	Washer-Sealing
26	499631	Ring Set (Standard)	117	698344	Jet-Main (Standard)	281	699639	Panel-Control
		Note	118	694176	Jet-Main (High Altitude)	287	699629	Screw (Dipstick Tube)
		692786	121	696998	Kit-Carburetor Overhaul	300A	699231	Muffler
		Ring Set (.020" Oversize)	122	★◆693749	Spacer-Carburetor	304	699598	Housing-Blower
27	691866	Lock-Piston Pin	125	698475	Carburetor	305	699480	Screw (Blower Housing)
28	499423	Pin-Piston	127	◆691739	Plug-Welch	306	693610	Shield-Cylinder
29	690124	Rod-Connecting	130	691181	Valve-Throttle	307	699483	Screw (Cylinder Shield)
30	692562	Dipper-Connecting Rod	133	398187	Float-Carburetor			
32	691664	Screw (Connecting Rod)	134	◆398188	Kit-Needle/Seat			
			137	◆693981	Gasket-Float Bowl			
			146	690979	Key-Timing			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
332	699359	Nut (Flywheel)	619	699230	Screw (Cylinder Head Plate)	914	699481	Screw (Rocker Cover (Bottom))
333	695711	Armature–Magneto	621	692310	Switch–Stop	914A	692557	Screw (Rocker Cover (Top))
334	699477	Screw (Magneto Armature)	632	693408	Spring/Link–Mechanical Governor	914B	697551	Screw (Rocker Cover (Center))
337	491055	Plug–Spark	633	◆693867	Seal–Choke/Throttle Shaft	957	694261	Cap–Fuel Tank
356A	692390	Wire–Stop	633A	◆691321	Seal–Choke/Throttle Shaft	961	698304	Screw (Air Cleaner Bracket)
358	699638	Gasket Set–Engine	635A	692927	Boot–Spark Plug	967A	273356	Filter–Pre Cleaner (High Mount)
363	19069	Puller–Flywheel	663	699206	Screw (Control Panel)	968A	693460	Cover–Air Cleaner (High Mount)
365	699484	Screw (Carburetor)	668	694257	Spacer	971A	690349	Screw (Air Cleaner Base)
383	19374	Wrench–Spark Plug	689	691855	Spring–Friction	971B	699629	Screw (Air Cleaner Base)
415	693463	Plug	692	690572	Spring–Detent	972	694260	Tank–Fuel
427	694255	Nut (Control Bracket)	717	693462	Bracket–Air Cleaner	975	493640	Bowl–Float
445A	697029	Filter–Air Cleaner Cartridge (High Mount)	718	690959	Pin–Locating	977	697001	Gasket Set–Carburetor
455	692591	Cup–Flywheel	741	695087	Gear–Timing	993	∅694088	Gasket–Cylinder Head Plate
456	692299	Plate–Pawl Friction	742	692564	Retainer–E Ring	1005	692592	Fan–Flywheel
459	281505	Pawl–Ratchet	746	692566	Gear–Idler	1019	694852	Kit–Label
467	691668	Knob–Air Cleaner	773	694258	Retainer	1022	★∅691890	Gasket–Rocker Cover
504	694254	Washer Set–Friction	819	699233	Screw (Muffler Bracket)	1023	499924	Cover–Rocker Arm
505	691251	Nut (Governor Control Lever)	823	699209	Screw (Muffler Adapter)	1026	790287	Rod–Push
523	693618	Dipstick	830	694544	Stud–Rocker Arm	1029	691230	Arm–Rocker
524	281370	Seal–Dipstick Tube	832A	697818	Guard–Muffler	1034	691343	Guide–Push Rod
552	692346	Bushing–Governor Crank	836B	699209	Screw (Muffler Guard)	1036	790634	Label–Emission
562	691119	Bolt (Governor Control Lever)	836C	699234	Screw (Muffler Guard)	1058	275092	Owner's Manual
597	691696	Screw (Pawl Friction Plate)	842	691031	Seal–O Ring (Dipstick Tube)	1070	699201	Screw (Flywheel Fan)
601	95162	Clamp–Hose	843A	695588	Sleeve–Lever	1095	698215	Gasket Set–Valve
608	693394	Starter–Rewind	847	693617	Dipstick/Tube Assembly	1210	498144	Pulley/Spring Assem- bly (Pulley)
613A	699230	Screw (Muffler)	851	493880	Terminal–Spark Plug	1211	498144	Pulley/Spring Assem- bly (Spring)
613B	697812	Screw (Muffler)	863	699229	Bracket–Muffler	1330	272147	Repair Manual
615	692576	Retainer–Governor Shaft	864	699232	Adapter–Muffler			
616	692547	Crank–Governor	868	★∅692044	Seal–Valve			
			875	697030	Base–Air Cleaner (High Mount)			
			883	★691893	Gasket–Exhaust			
			883A	★692237	Gasket–Exhaust			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.