



Illustrated Parts List

Model Series

128300

TYPE NUMBERS
0035 through 0136.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Exhaust System	6
Flywheel	7
Fuel Supply	5
Gear Reduction	6
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	5
Piston Group	2
Rewind Starter	7



 
 
 
 
 
 
 
 
 
 
 
PRINTED IN U.S.A.

 
 
 
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

 
 
 
1019 LABEL KIT

1058 OWNER'S MANUAL















1330 REPAIR MANUAL

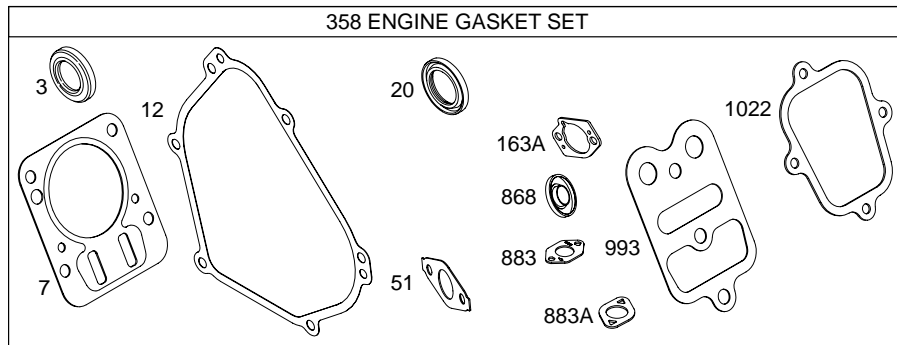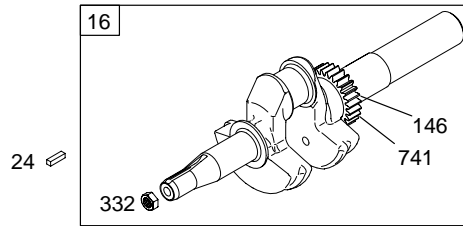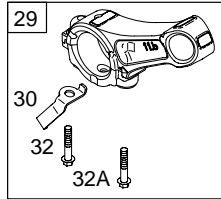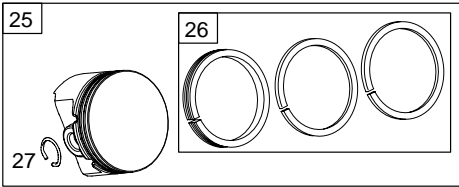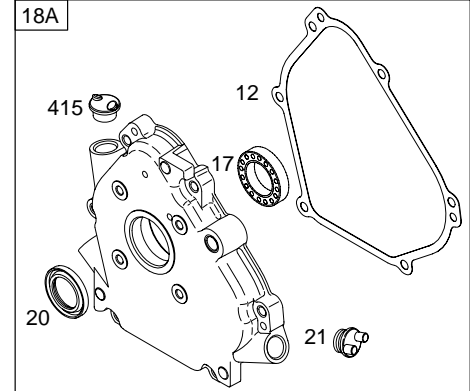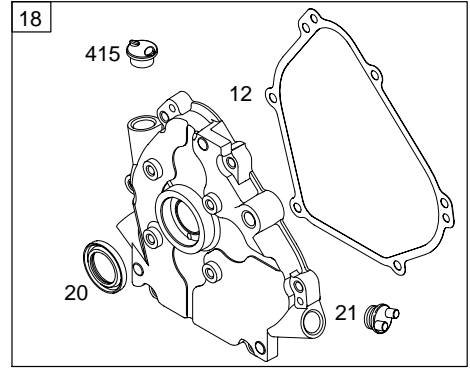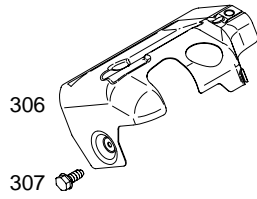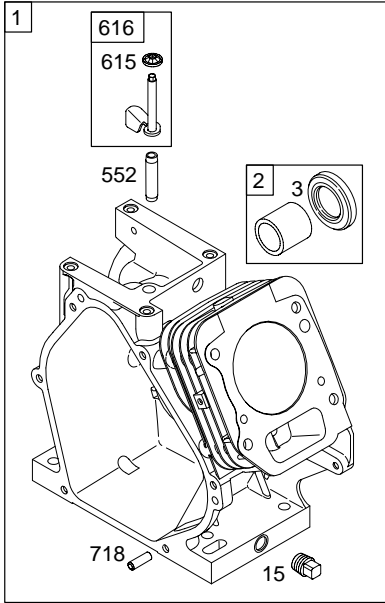

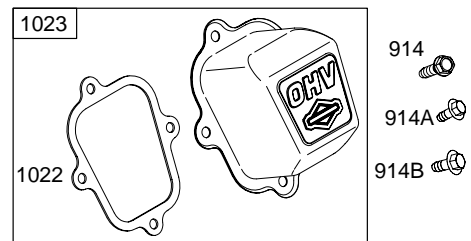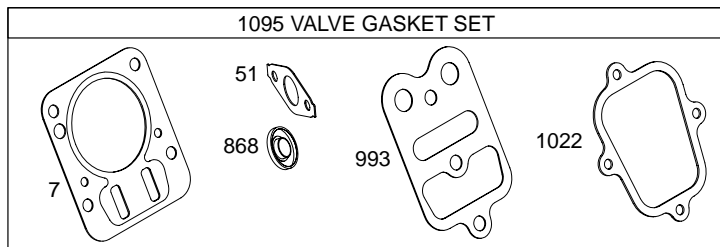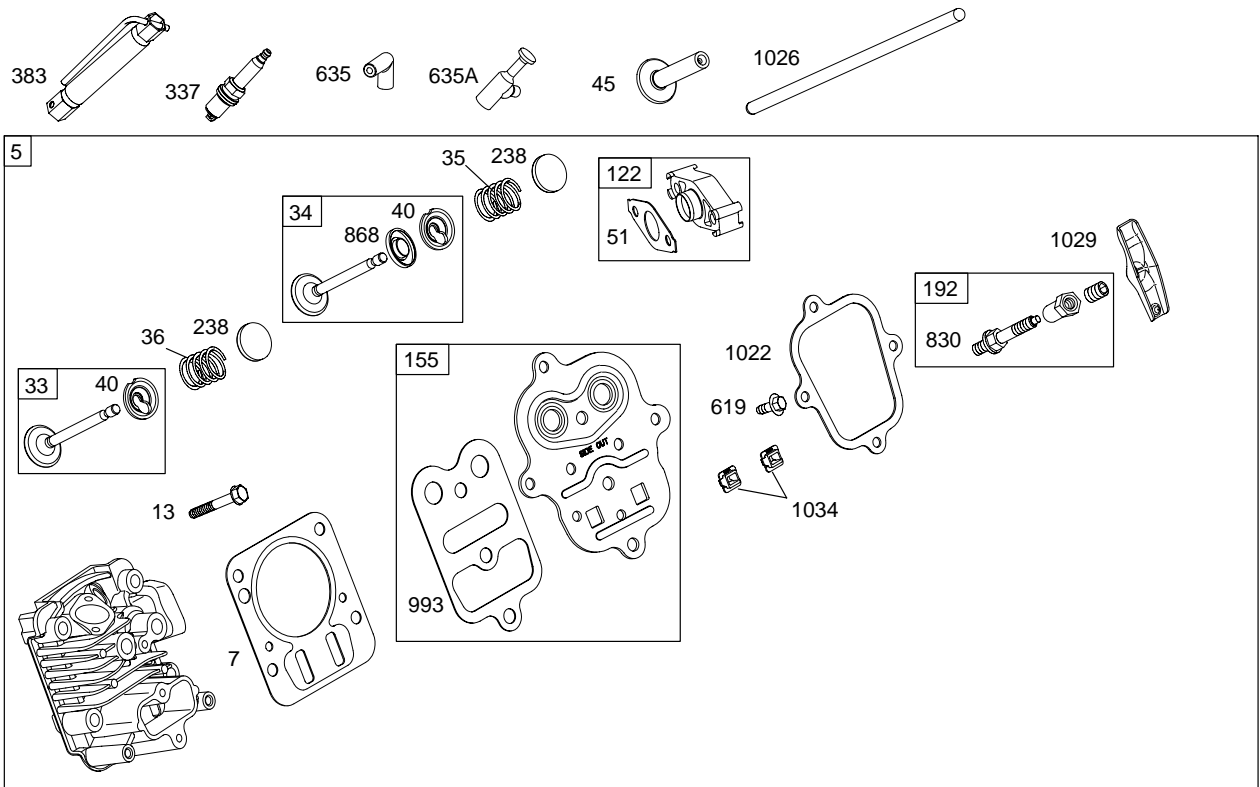


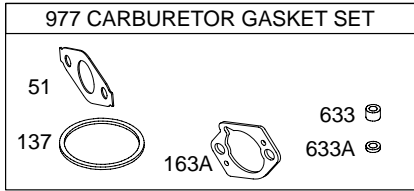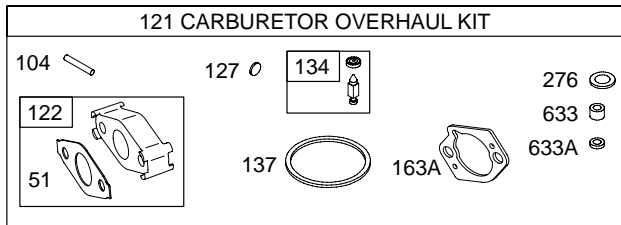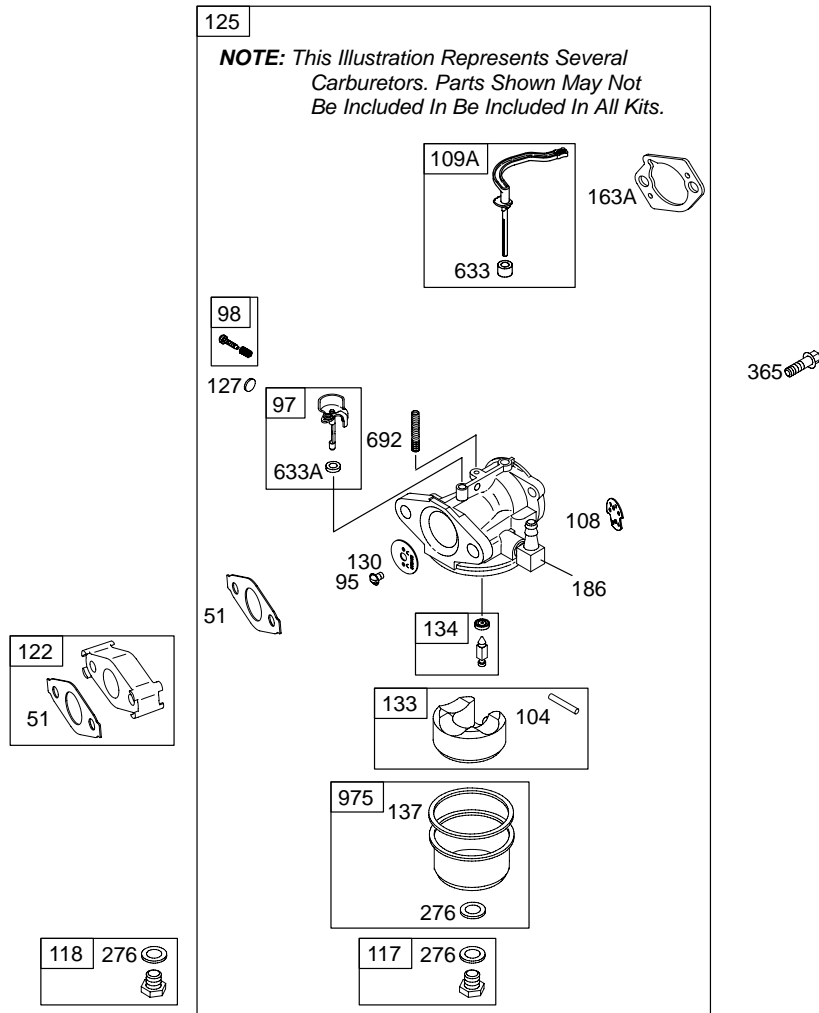




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5721-4 Assemblies include all parts shown in frames. 10/19/2004

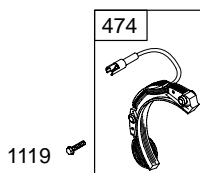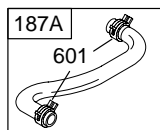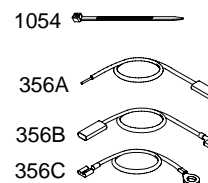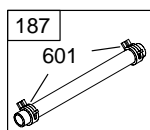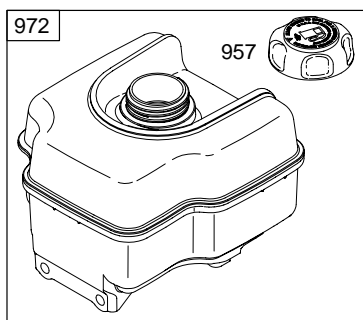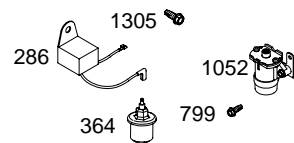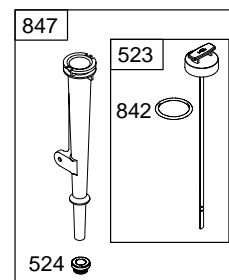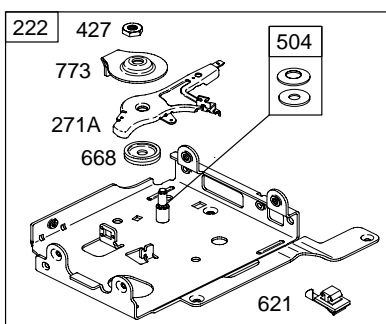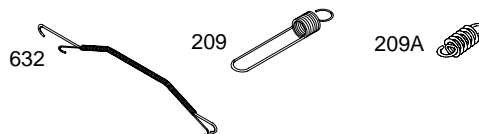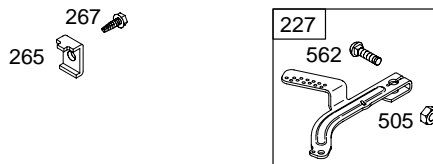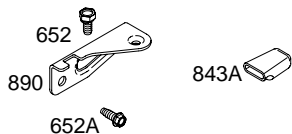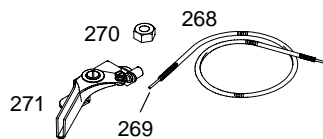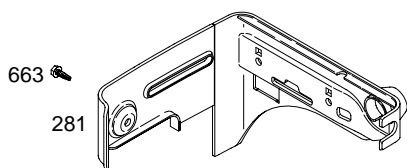              

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5721-5 Assemblies include all parts shown in frames. 10/19/2004

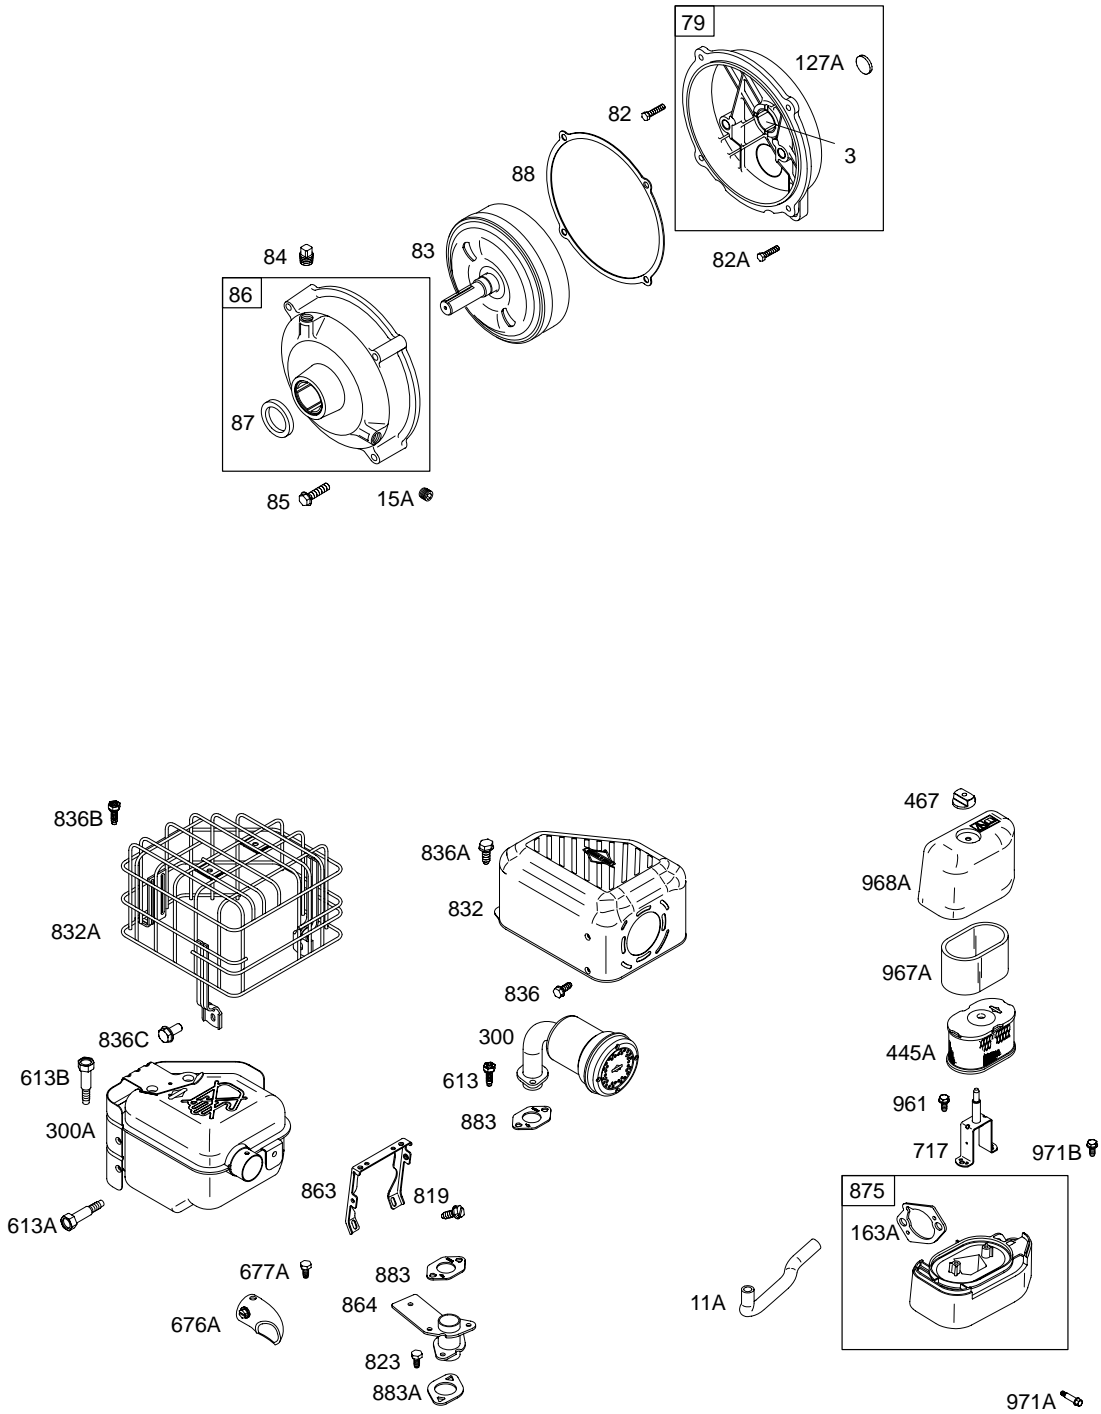 

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

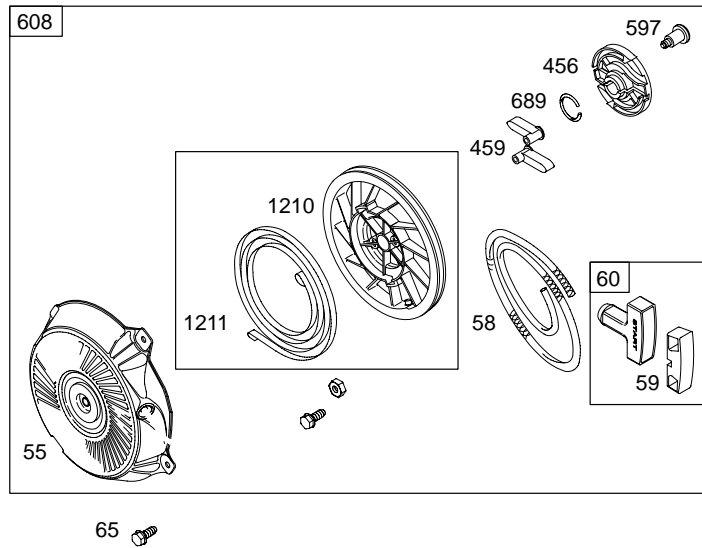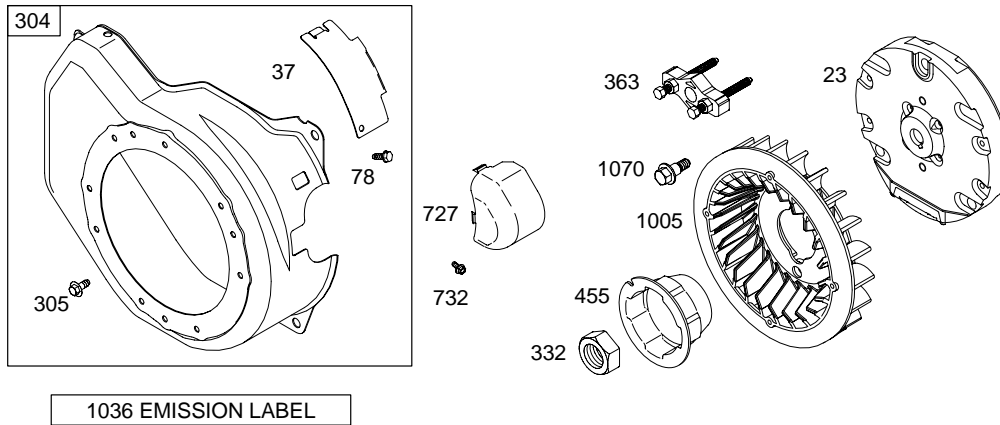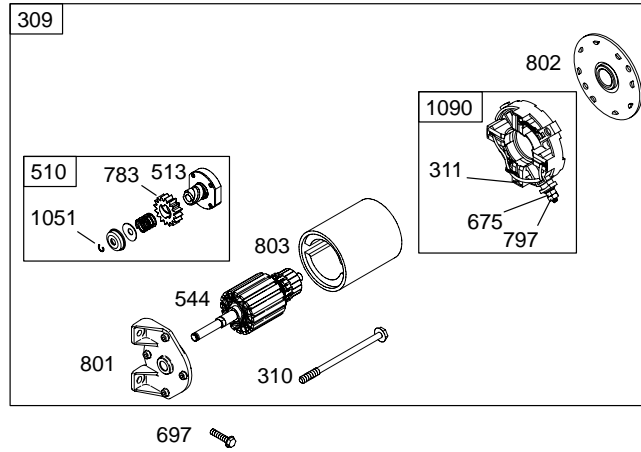   

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5721-7 Assemblies include all parts shown in frames. 10/19/2004

128300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly	23	699488	Flywheel	59	490653	Grip-Insert
2	399269	Kit-Bushing/Seal (Magneto Side)			Note	60	490652	Grip-Starter Rope (2 Piece)
3	★299819	Seal-Oil (Magneto Side)			699514 Flywheel Used on Type No(s). 0050.	65	699228	Screw (Rewind Starter)
5	699486	Head-Cylinder	24	222698	Key-Flywheel	78	699205	Screw (Flywheel Guard)
7	★Ø698210	Gasket-Cylinder Head	25	499627	Piston Assembly (Standard)	79	694511	Case-Gear Reduction
11A	693647	Tube-Breather (High Mount Air Cleaner)			Note	82	690369	Screw (Gear Reduction Case)
12	★699485	Gasket-Crankcase			692789 Piston Assembly (.020" Oversize)	82A	790197	Screw (Gear Reduction Case)
13	699482	Screw (Cylinder Head)	26	499631	Ring Set (Standard)	83	690374	Shaft-Auxiliary Drive
15	691686	Plug-Oil Drain (Square Head)			Note	84	691121	Plug-Breather
15A	691682	Plug-Oil Drain (Flush)			692786 Ring Set (.020" Oversize)	85	692551	Screw (Gear Cover to Gear Reduction)
16	699443	Crankshaft Used on Type No(s). 0036, 0116, 0132, 0136.	27	691866	Lock-Piston Pin	86	690608	Cover-Gear
		Note	28	499423	Pin-Piston	87	691582	Seal-Gear Reduction
		699444 Crankshaft Used on Type No(s). 0049.	29	690124	Rod-Connecting	88	691600	Gasket-Gear Reduction Cover
		699441 Crankshaft Used on Type No(s). 0035.	30	692562	Dipper-Connecting Rod	95	691636	Screw (Throttle Valve)
17	692517	Bearing-Ball	32	691664	Screw (Connecting Rod)	97	690024	Shaft-Throttle
18	699804	Cover-Crankcase Used on Type No(s). 0049.	32A	695759	Screw (Connecting Rod)	98	398185	Kit-Idle Speed (Carburetor)
18A	699672	Cover-Crankcase Used on Type No(s). 0035, 0036, 0132, 0136.	33	499642	Valve-Exhaust	104	●691242	Pin-Float Hinge
			34	499641	Valve-Intake	108	692567	Valve-Choke
			35	691304	Spring-Valve (Intake)	109A	693628	Shaft-Choke
20	★692550	Seal-Oil (PTO Side)	36	691304	Spring-Valve (Exhaust)	117	697355	Jet-Main (Standard)
21	281658	Cap-Oil Fill	37	699661	Guard-Flywheel	118	494870	Jet-Main (High Altitude)
22	699478	Screw (Crankcase Cover/ Sump)	40	692194	Retainer-Valve	121	696998	Kit-Carburetor Overhaul
			45	690977	Tappet-Valve	122	★●693749	Spacer-Carburetor
			46	693404	Camshaft	125	697028	Carburetor
			51	★●●Ø692555	Gasket-Intake (2 Required)	127	●691739	Plug-Welch
			55	691422	Housing-Rewind Starter	127A	691585	Plug-Welch
			58	693389	Rope-Starter (Cut to Required Length)	130	691181	Valve-Throttle
						133	398187	Float-Carburetor
						134	●398188	Kit-Needle/Seat

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5721-8

Assemblies include all parts shown in frames.

10/19/2004

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
137	◆◆693981	Gasket–Float Bowl	269	691026	Wire–Control (78" Long)	445A	697029	Filter–Air Cleaner Cartridge (High Mount)
146	690979	Key–Timing			(Cut to Required Length)	455	692591	Cup–Flywheel
155	★698214	Plate–Cylinder Head	270	691027	Nut (Control Wire Casing)	456	692299	Plate–Pawl Friction
163A	◆◆696979	Gasket–Air Cleaner (High Mount)	271	691028	Lever–Control	459	281505	Pawl–Ratchet
186	692317	Connector–Hose	271A	694256	Lever–Control	467	691668	Knob–Air Cleaner
187	691050	Line–Fuel (Cut to Required Length)	276	◆271716	Washer–Sealing	474	694457	Alternator
187A	694486	Line–Fuel (Molded)	281	699639	Panel–Control	504	694254	Washer Set–Friction
188	699479	Screw (Control Bracket)	286	698611	Module–Oil Sensor	505	691251	Nut (Governor Control Lever)
190	699220	Screw (Fuel Tank)	287	699629	Screw (Dipstick Tube)	510	499308	Drive–Starter
192	694543	Adjustor–Rocker Arm	300	693593	Muffler	513	692024	Drive–Clutch
209	692571	Spring–Governor Used on Type No(s). 0036, 0049, 0116, 0117, 0136.	300A	699231	Muffler	523	693618	Dipstick
	Note		304	699598	Housing–Blower	524	281370	Seal–Dipstick Tube
	693206	Spring– Governor Used on Type No(s). 0035.	305	699480	Screw (Blower Housing)	544	692966	Armature–Starter
	693710	Spring– Governor Used on Type No(s). 0132.	306	693610	Shield–Cylinder	552	692346	Bushing–Governor Crank
209A	691278	Spring–Governor	307	699483	Screw (Cylinder Shield)	562	691119	Bolt (Governor Control Lever)
219	693578	Gear–Governor	309	694504	Motor–Starter	597	691696	Screw (Pawl Friction Plate)
220	691724	Washer (Governor Gear)	310	690323	Screw (Starter Motor)	601	95162	Clamp–Hose
222	699589	Bracket–Control	311	497608	Brush Set	608	693394	Starter–Rewind
227	692573	Lever–Governor Control	332	699359	Nut (Flywheel)	613	699209	Screw (Muffler)
238	691300	Valve–Cap	333	695711	Armature–Magneto	613A	699230	Screw (Muffler)
240A	694485	Filter–Fuel	334	699477	Screw (Magneto Armature)	613B	697812	Screw (Muffler)
265	691024	Clamp–Casing	337	491055	Plug–Spark	615	692576	Retainer–Governor Shaft
267	699492	Screw (Casing Clamp)	347	697854	Switch–Rocker	616	692547	Crank–Governor
268	691025	Casing–Control Wire (72" Long) (Cut to Required Length)	356A	692390	Wire–Stop	619	699230	Screw (Cylinder Head Plate)
			356B	692602	Wire–Stop	621	692310	Switch–Stop
			356C	695630	Wire–Stop	632	693408	Spring/Link–Mechani- cal Governor
			357	692191	Kit–Flywheel	633	◆◆693867	Seal–Choke/Throttle Shaft
			358	699638	Gasket Set–Engine	633A	◆◆691321	Seal–Choke/Throttle Shaft
			363	19069	Puller–Flywheel			
			364	695693	Terminal–Oil Plug			
			365	699484	Screw (Carburetor)			
			383	19374	Wrench–Spark Plug			
			415	693463	Plug			
			427	694255	Nut (Control Bracket)			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

128300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
635	692076	Boot-Spark Plug	836A	699632	Screw (Muffler Guard)	977	697001	Gasket Set-Carburetor
635A	692927	Boot-Sprak Plug	836B	699209	Screw (Muffler Guard)	993	Ø694088	Gasket-Cylinder Head Plate
652	699755	Screw (Support Bracket)	836C	699234	Screw (Muffler Guard)	1005	692592	Fan-Flywheel
652A	699230	Screw (Support Bracket)	842	691031	Seal-O Ring (Dipstick Tube)	1019	694852	Kit-Label
663	699206	Screw (Control Panel)	843A	695588	Sleeve-Lever	1022	★Ø691890	Gasket-Rocker Cover
668	694257	Spacer	847	693617	Dipstick/Tube Assembly	1023	499924	Cover-Rocker Arm
675	691261	Washer (Brush Retainer)	851	493880	Terminal-Spark Plug	1026	790287	Rod-Push
676A	697816	Deflector-Muffler	863	699229	Bracket-Muffler	1029	691230	Arm-Rocker
677A	699776	Screw (Muffler Deflector)	864	699232	Adapter-Muffler	1034	691343	Guide-Push Rod
689	691855	Spring-Friction	868	★Ø692044	Seal-Valve	1036	790634	Label-Emission (Used After Code Date 04063000).
692	690572	Spring-Detent	875	697030	Base-Air Cleaner (High Mount)	Note		
697	699773	Screw (Drive Cap)	883	★691893	Gasket-Exhaust	699946	Label-Emission (Used Before Code Date 04070100 and After Code Date 03093000).	
717	693462	Bracket-Air Cleaner	883A	★692237	Gasket-Exhaust	697004	Label-Emission (Used Before Code Date 03100100).	
718	690959	Pin-Locating	890	790203	Bracket-Support	1051	691265	Ring-Retaining
727	698039	Cover-Starter Drive	914	699481	Screw (Rocker Cover) (Bottom)	1052	698674	Sensor-Oil
732	699200	Screw (Starter Drive Cover)	914A	692557	Screw (Rocker Cover) (Top)	1054	280275	Cable-Tie
741	695087	Gear-Timing	914B	697551	Screw (Rocker Cover) (Center)	1058	275092	Owner's Manual
742	692564	Retainer-E Ring	957	694261	Cap-Fuel Tank	1070	699201	Screw (Flywheel Fan)
746	692566	Gear-Idler	958	698180	Valve-Fuel Shut Off	1090	691293	Retainer-Brush
773	694258	Retainer	961	698304	Screw (Air Cleaner Bracket)	1095	698215	Gasket Set-Valve
783	692353	Gear-Pinion	967A	273356	Filter-Pre Cleaner (High Mount)	1119	699772	Screw (Alternator)
797	691029	Nut (Brush Retainer)	968A	693460	Cover-Air Cleaner (High Mount)	1210	498144	Pulley/Spring Assembly (Pulley)
799	699202	Screw (Oil Sensor)	971A	690349	Screw (Air Cleaner Base)	1211	498144	Pulley/Spring Assembly (Spring)
801	694482	Cap-Drive	971B	699629	Screw (Air Cleaner Base)	1305	699691	Screw (Oil Sensor Module)
802	691286	Cap-End	972	694260	Tank-Fuel	1330	272147	Repair Manual
803	693757	Housing-Starter	975	493640	Bowl-Float			
819	699233	Screw (Muffler Bracket)						
823	699209	Screw (Muffler Adapter)						
830	694544	Stud-Rocker Arm						
832	693583	Guard-Muffler						
832A	697818	Guard-Muffler						
836	699203	Screw (Muffler Guard)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.