

**283700**

# Illustrated Parts List

## Model Series

# 283700

TYPE NUMBERS  
0101 through 4516.

 
### TABLE OF CONTENTS

Air Cleaner .....	4
Alternator .....	8
Blower Housing/Shrouds .....	7
Cams .....	2
Carburetor .....	3
Controls .....	5
Crankcase Cover/Sump .....	2
Crankshaft .....	2
Cylinder .....	2
Electric Starter .....	9
Flywheel .....	6
Fuel Tank .....	5
Governor Spring .....	5
Head .....	2
Ignition .....	8
Kits/Gaskets-Carburetor .....	3
Kits/Gaskets-Engine .....	2
Kits/Gaskets-Valve .....	2
Muffler .....	4
Oil .....	2
Piston Group .....	2
Rewind .....	6
Valves .....	2


PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

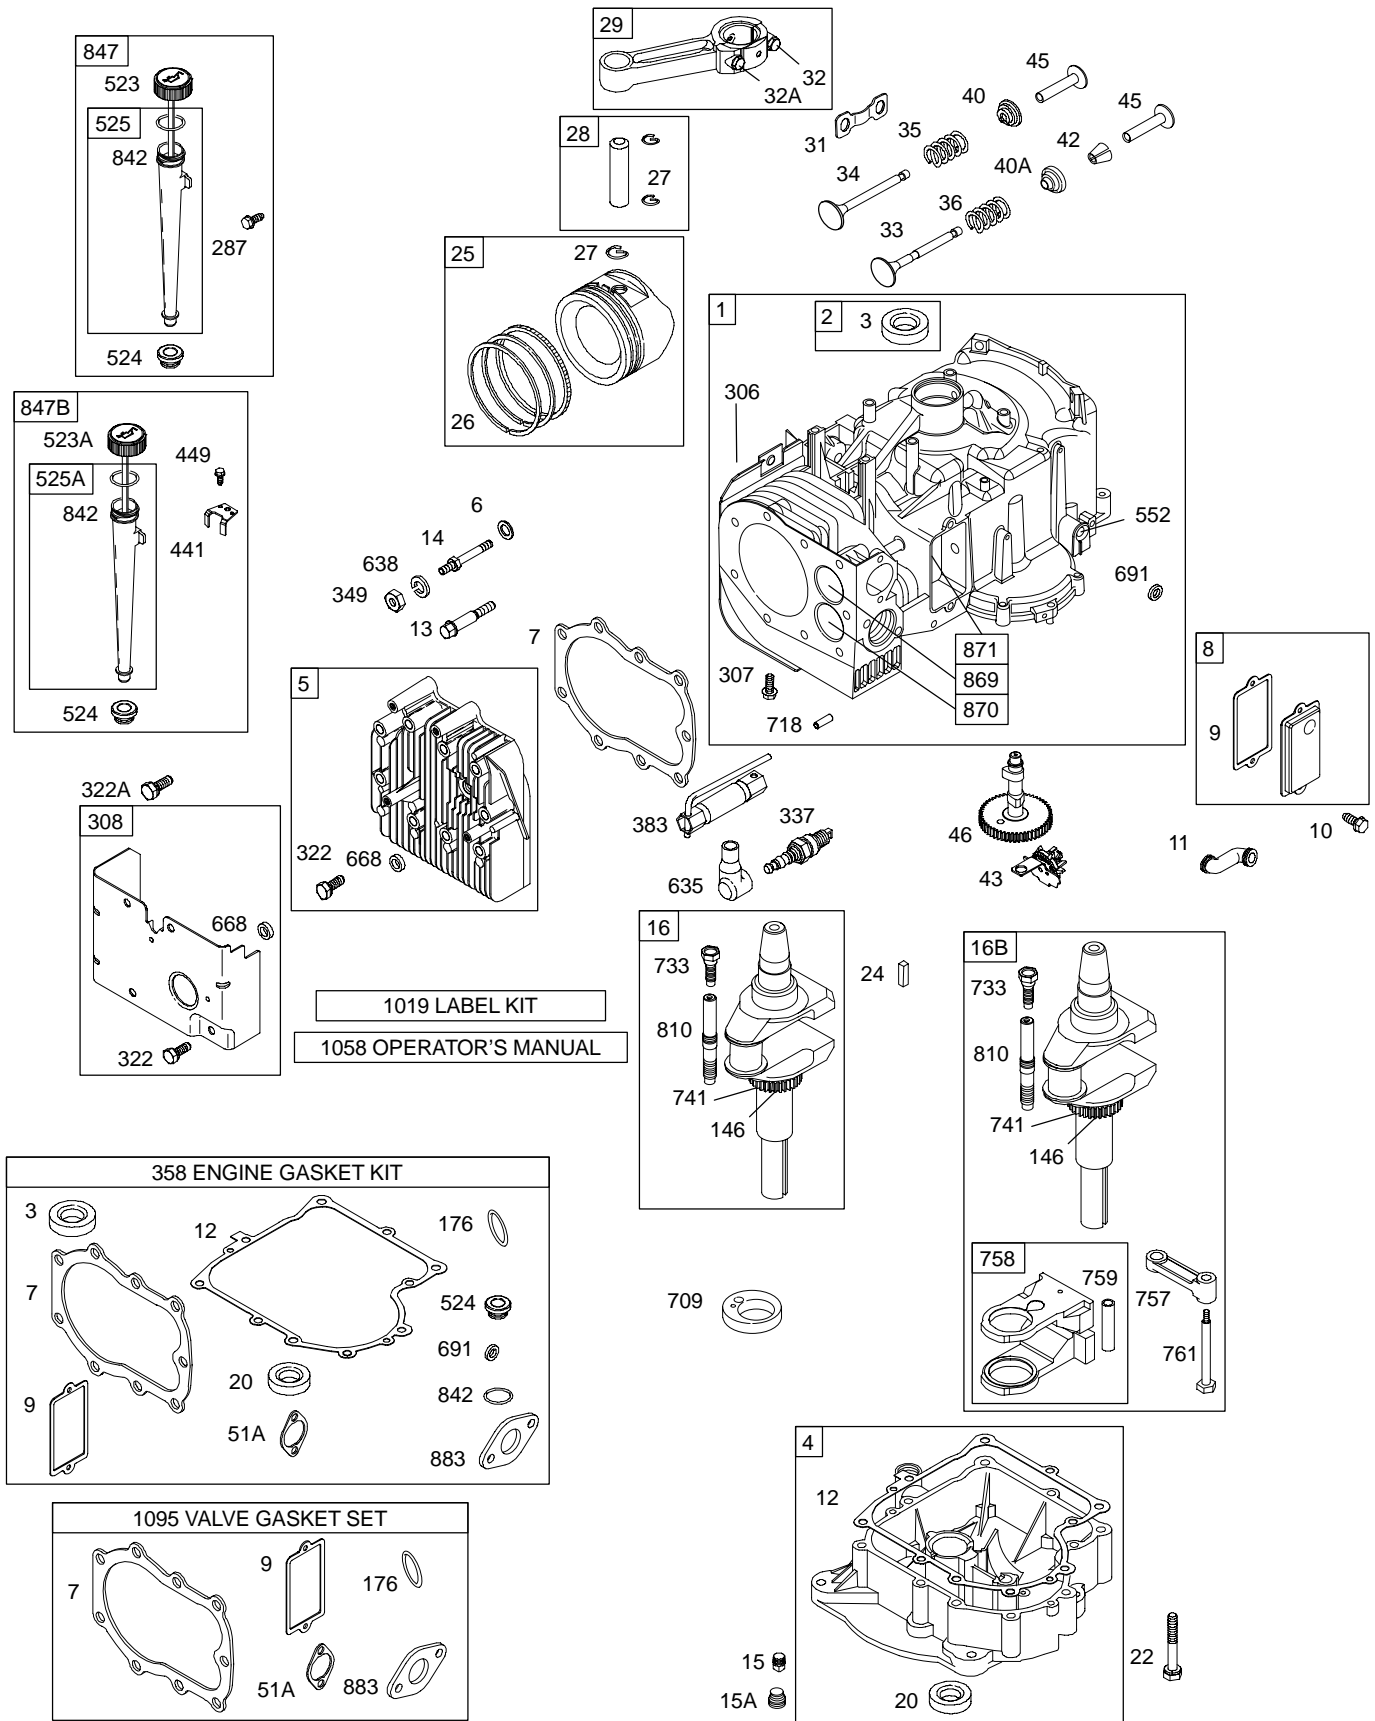


**NIKKI**

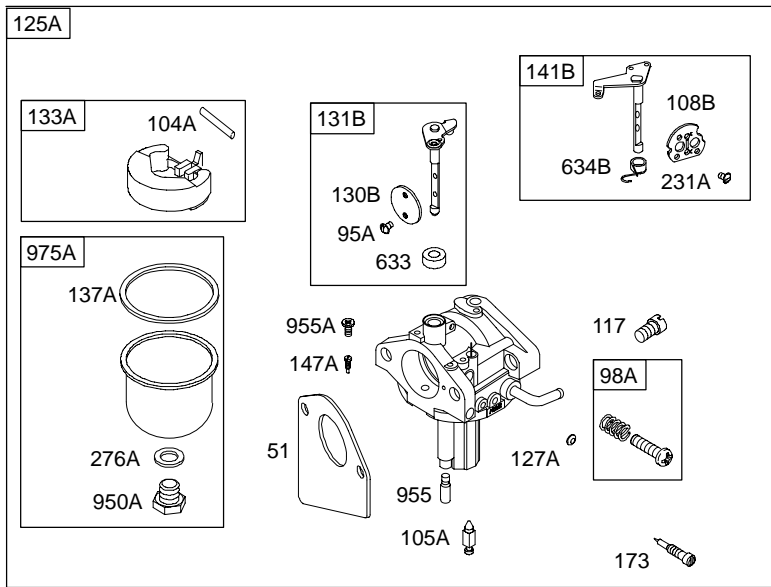 



**WALBRO**

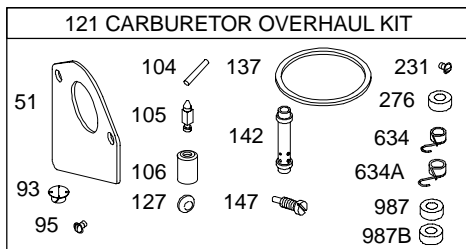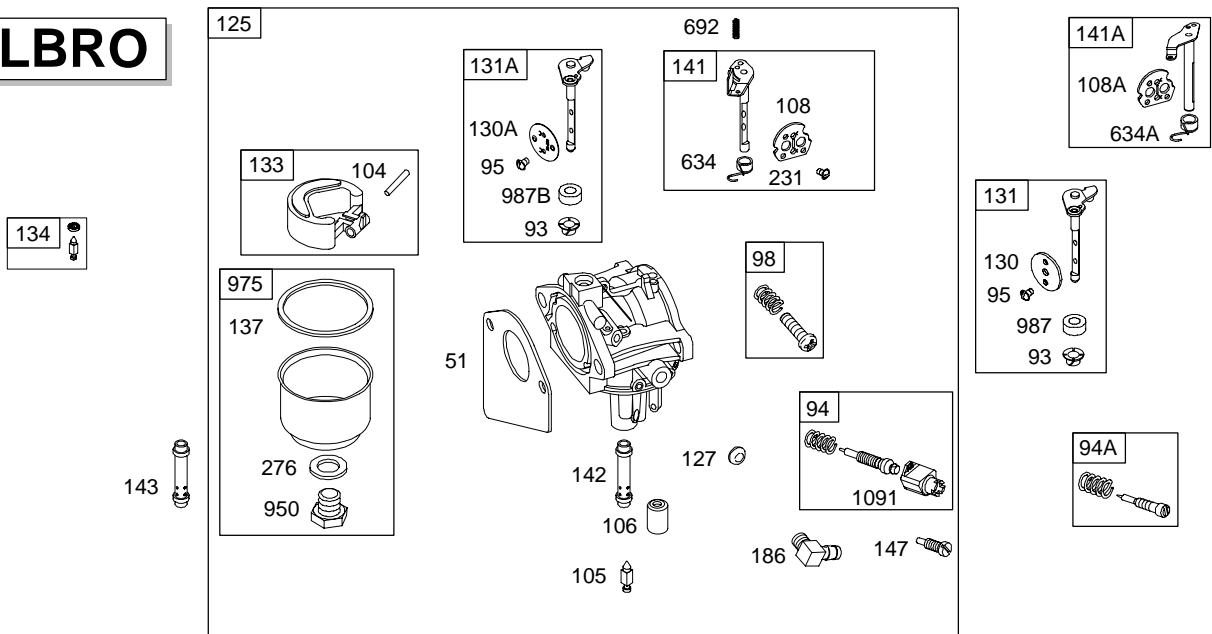  



**NIKKI**






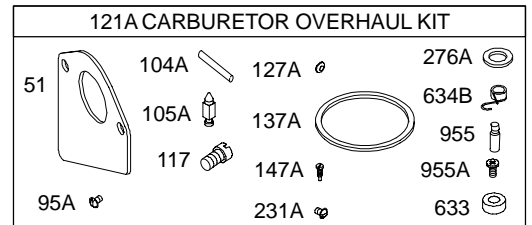 









**WALBRO**

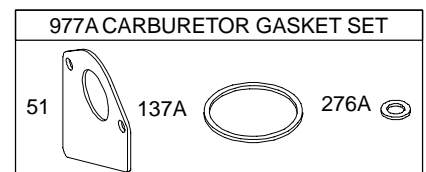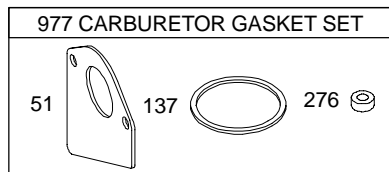  

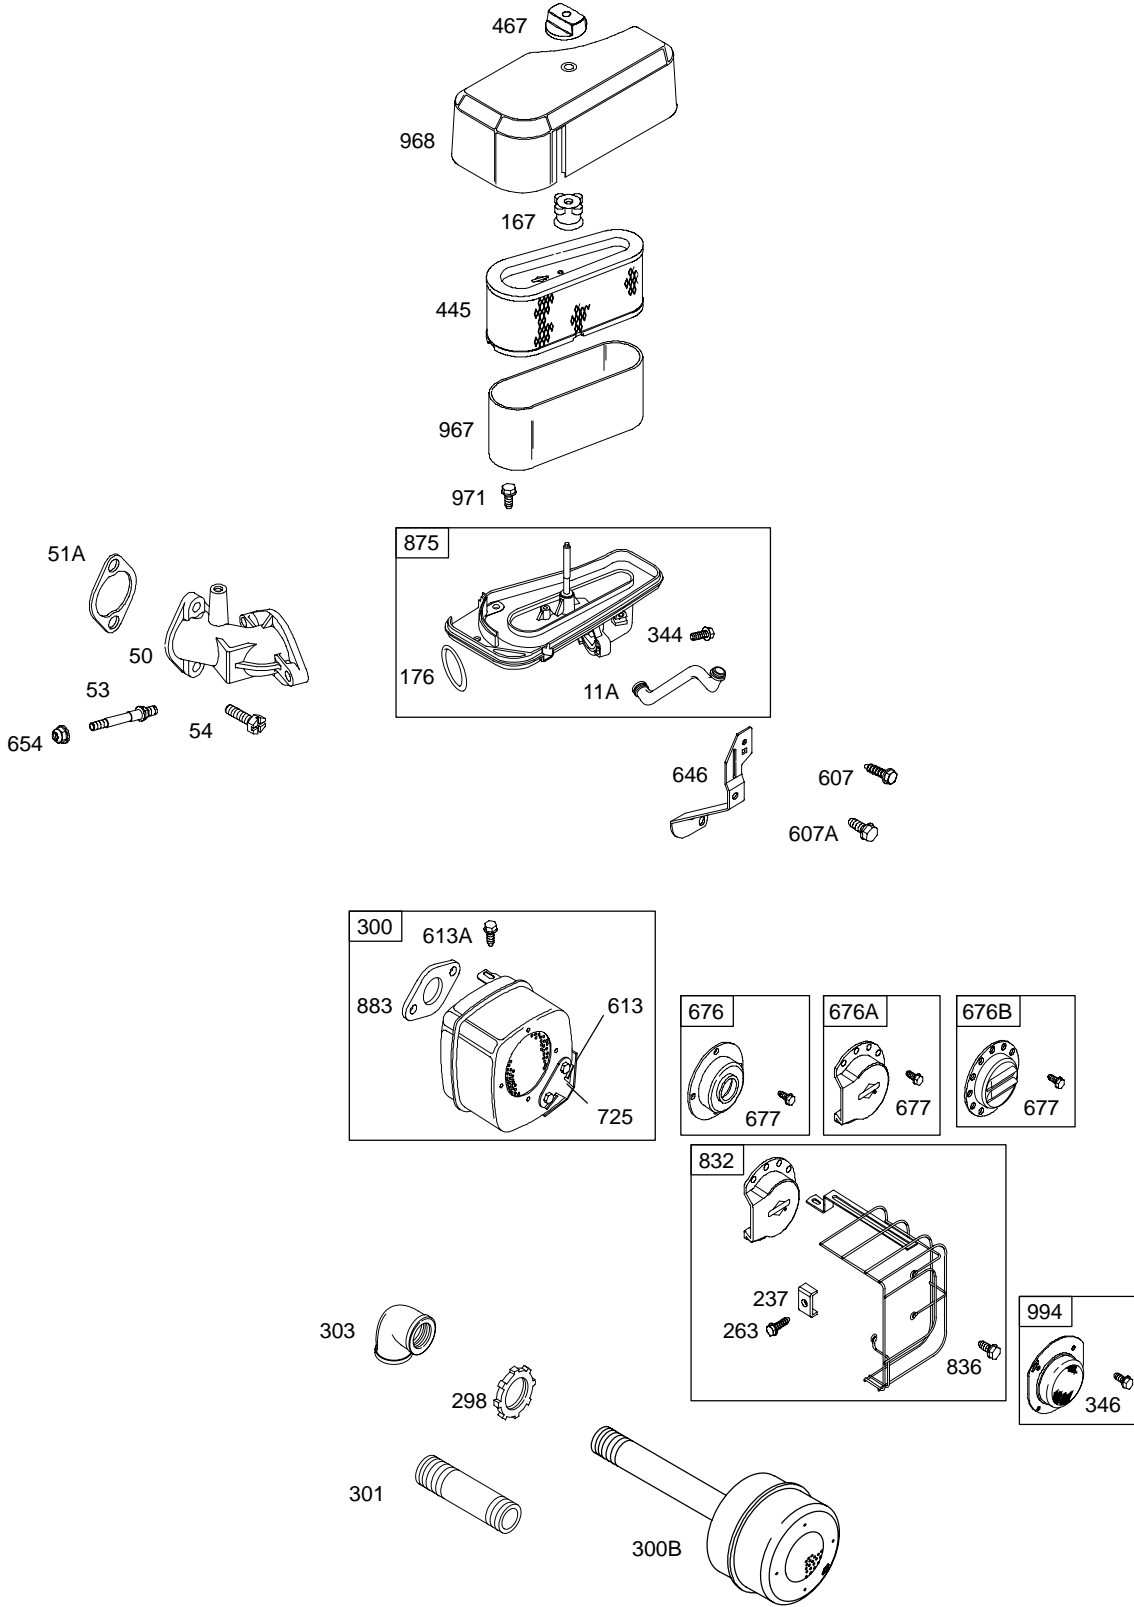 

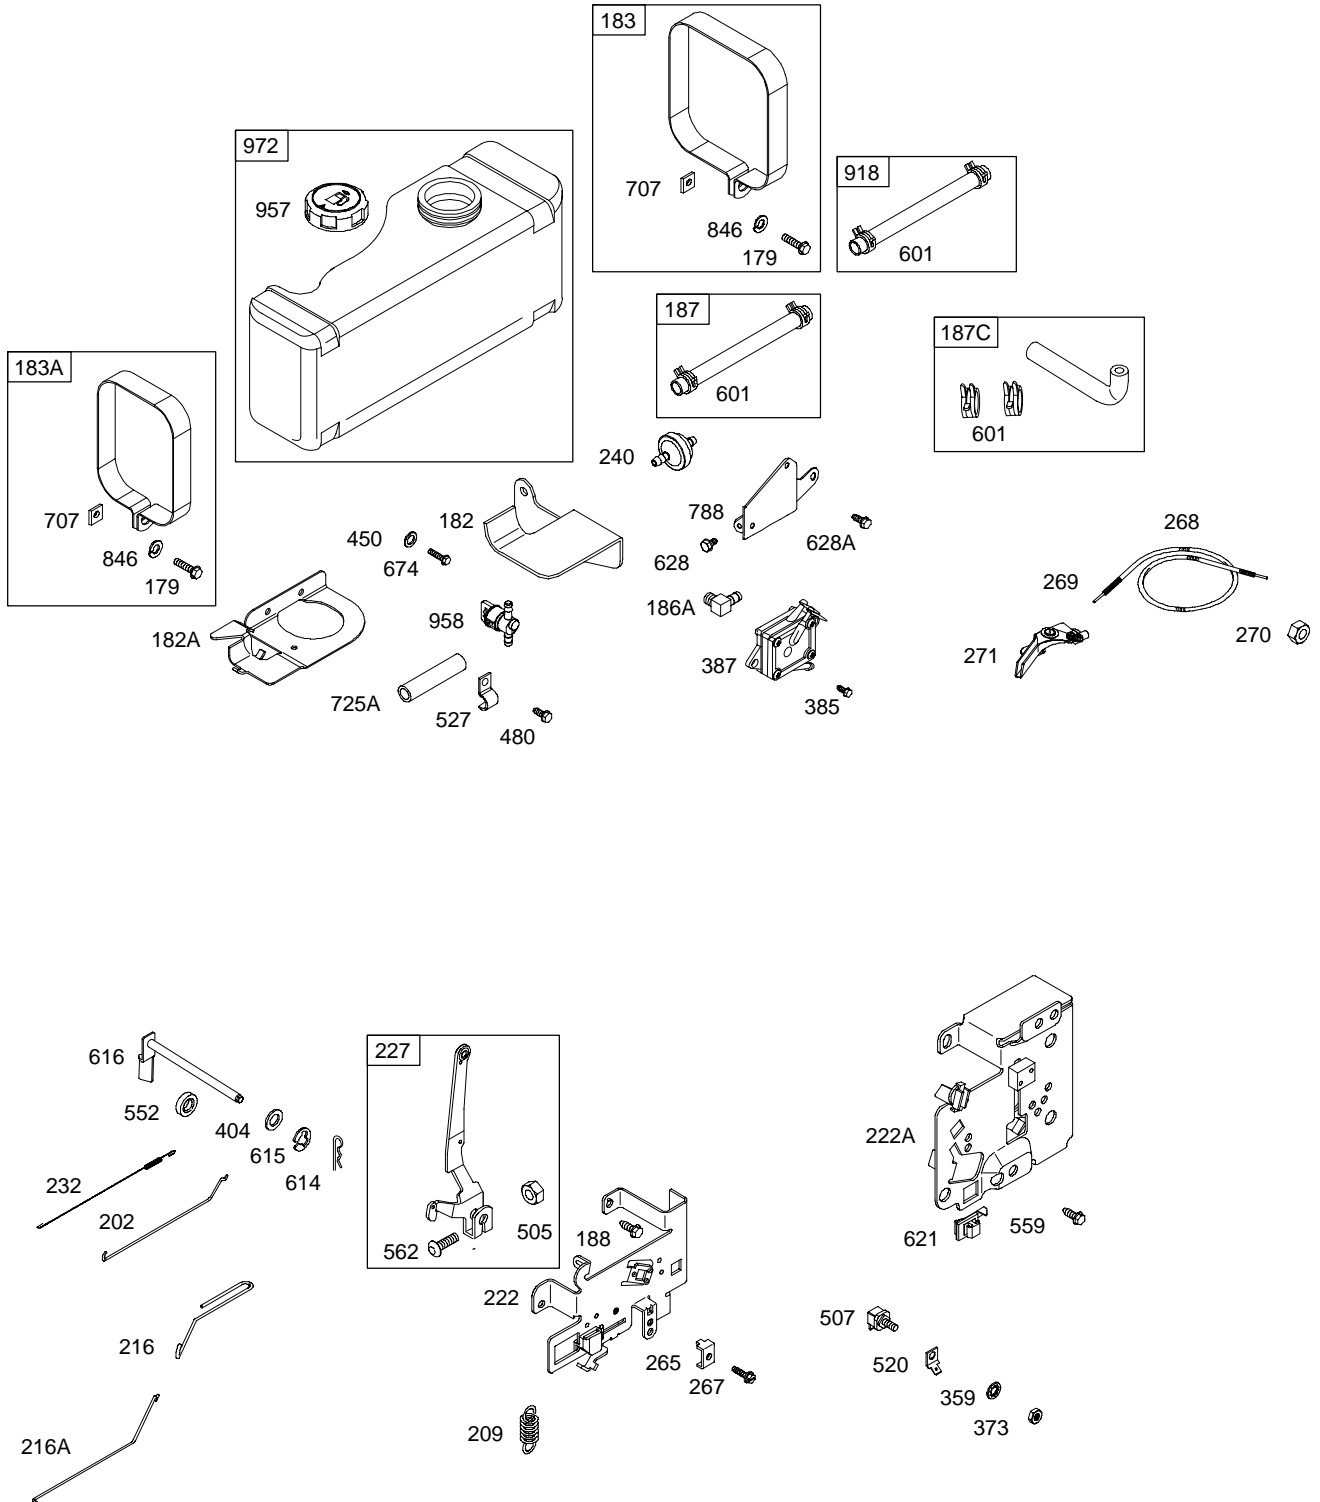              
 


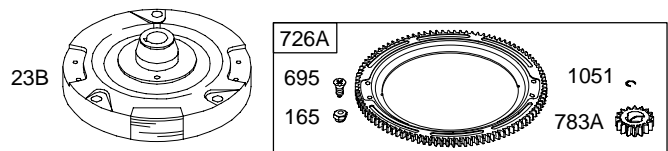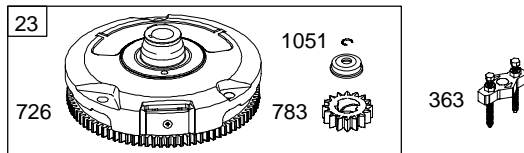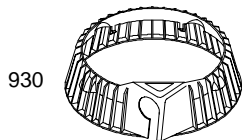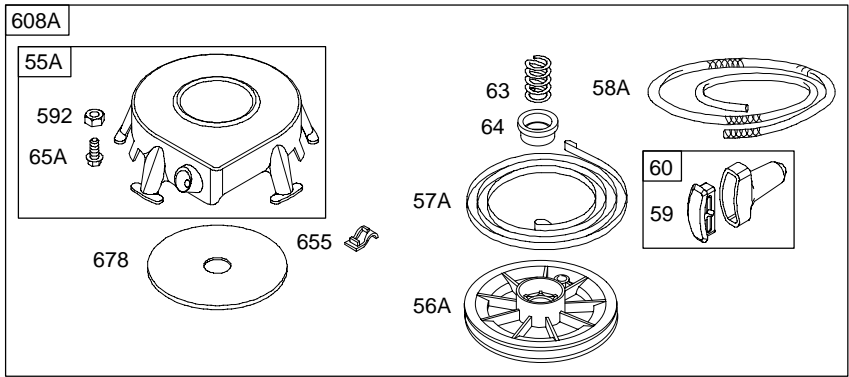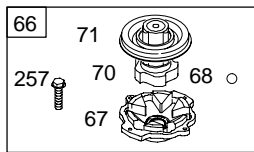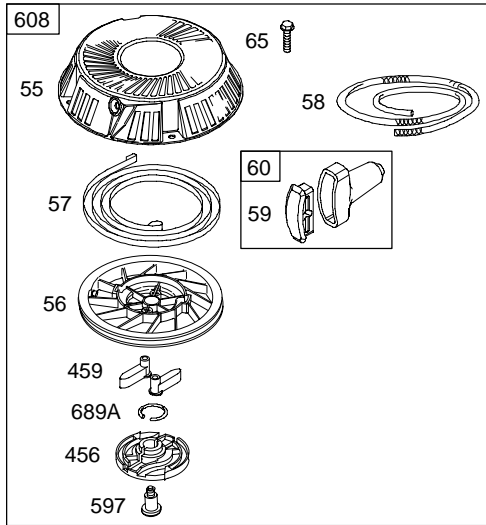

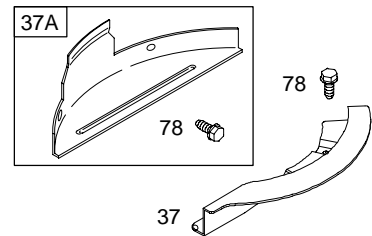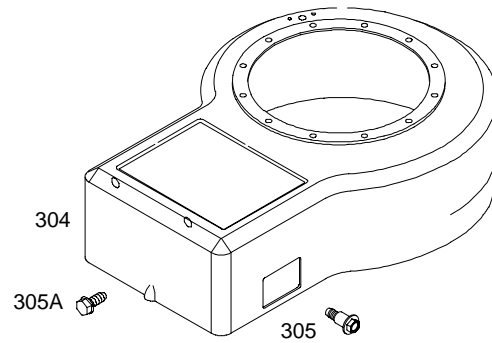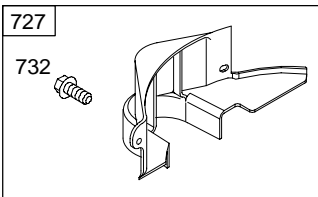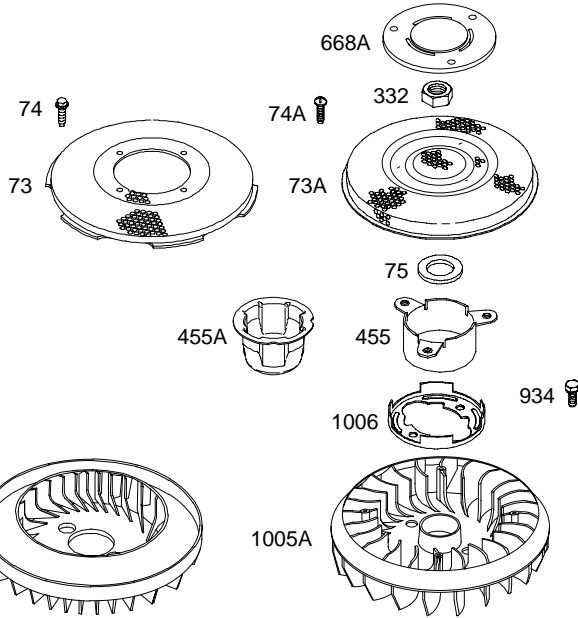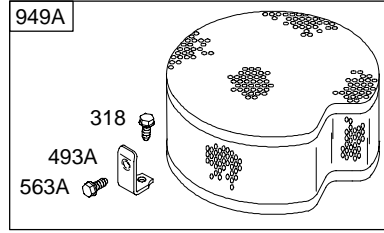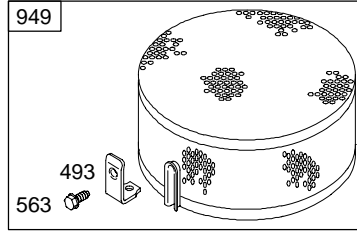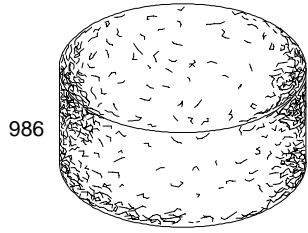 

 





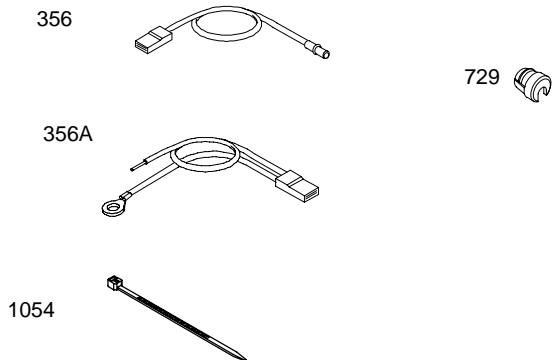 
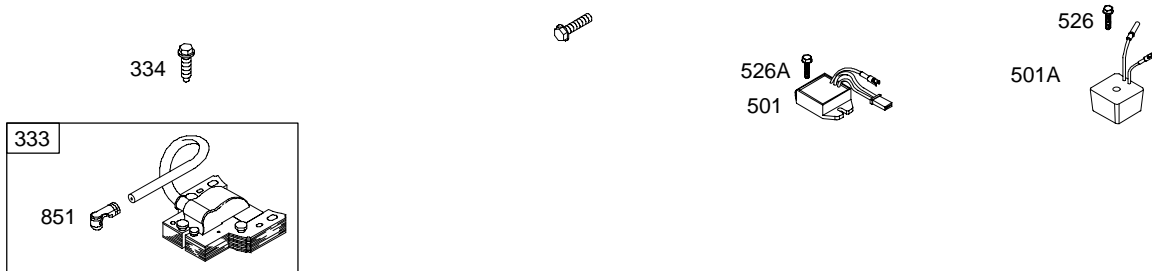 






1036 EMISSIONS LABEL

DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	10/16 AMP
<div data-bbox="407 289 597 562"> <p>474</p>  <p>877A</p> <div data-bbox="418 485 516 562"> <p>1059</p>  </div> </div>	<div data-bbox="602 289 792 562"> <p>474A</p>  <p>877</p> <div data-bbox="613 485 711 562"> <p>1059</p>  </div> </div>	<div data-bbox="797 289 987 562"> <p>474B</p>  <p>877B</p> <div data-bbox="808 485 906 562"> <p>1059</p>  </div> </div>	<div data-bbox="992 289 1182 562"> <p>474C</p>  <p>877C</p> <div data-bbox="1008 485 1105 562"> <p>1059</p>  </div> </div>
<div data-bbox="407 569 597 680"> <p>578</p>  </div>	<div data-bbox="602 569 792 680"> <p>878</p>  </div>	<div data-bbox="797 569 987 680"> <p>878A</p>  </div>	<div data-bbox="992 569 1182 680"> <p>578</p>  </div>

  NOTE: ALL STATORS USE REFERENCE 1119 MOUNTING SCREW





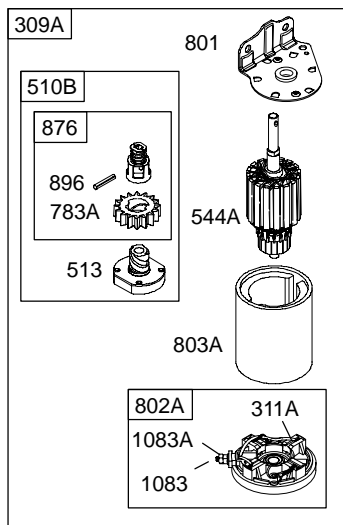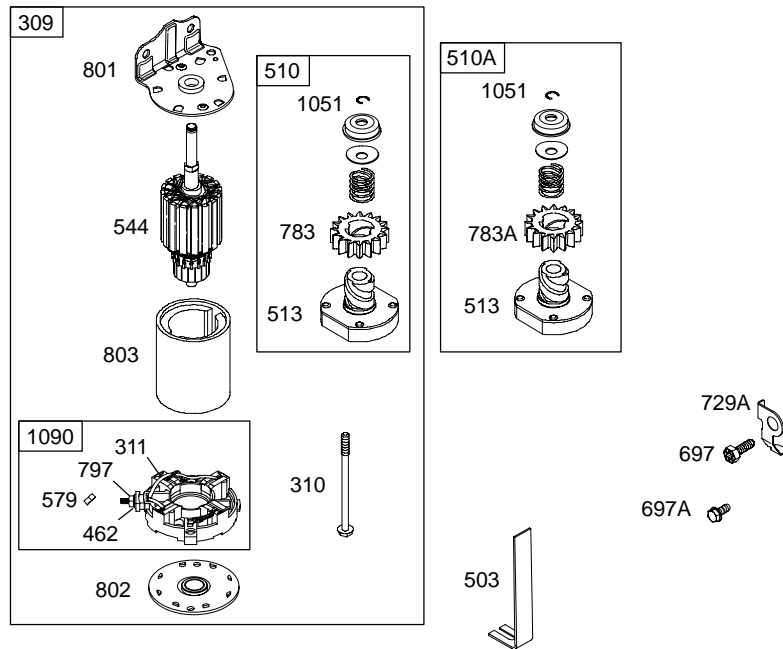

**NOTE:** For Replacement Starter Motor, See Reference 309.

# 283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	496413	Cylinder Assembly	16	693944	Crankshaft (Used After Code Date 95073100).	26	696403	Ring Set (Standard) (Used After Code Date 01060600).
2	399265	Kit-Bushing/Seal (Magneto Side)	16B	693653	Crankshaft (Used Before Code Date 95080100).			696404 Ring Set (.010" Oversize) (Used After Code Date 01060600).
3	★391086	Seal-Oil (Magneto Side)	20	★291675	Seal-Oil (PTO Side)			696405 Ring Set (.020" Oversize) (Used After Code Date 01060600).
4	494238	Sump-Engine	22	692125	Screw (Crankcase Cover/Sump)			696406 Ring Set (.030" Oversize) (Used After Code Date 01060600).
5	494240	Head-Cylinder	23	693557	Flywheel (Steel Ring Gear)			————— <b>Note</b> ————— 693556 Flywheel (Steel Ring Gear) Used on Type No(s). 0117, 0128, 0129, 0152, 4003, 4029.
6	691261	Washer (Cylinder Head)	23B	693555	Flywheel (Rewind Start)			————— <b>Note</b> ————— 499996 Ring Set (Standard) (Used Before Code Date 01060700).
7	★Ø271866	Gasket-Cylinder Head	24	222698	Key-Flywheel			392331 Ring Set (Standard) (Chrome) (Used Before Code Date 01060700).
8	495735	Breather Assembly ————— <b>Note</b> ————— 495734 Breather Assembly Used on Type No(s). 0115, 0126, 0128.	25	696397	Piston Assembly (Standard) (Used After Code Date 01060600).			696399 Piston Assembly (.020" Oversize) (Used After Code Date 01060600).
9	★Ø27803	Gasket-Breather			696400 Piston Assembly (.030" Oversize) (Used After Code Date 01060600).	27	691299	Lock-Piston Pin (Used After Code Date 95101500).
10	691666	Screw (Breather Assembly)			————— <b>Note</b> ————— 499284 Piston Assembly (Standard) (Used Before Code Date 01060700).			691792 Lock-Piston Pin (Used Before Code Date 95101600).
11	692253	Tube-Breather			499292 Piston Assembly (.020" Oversize) (Used Before Code Date 01060700).			
11A	691328	Tube-Breather						
12	★692226	Gasket-Crankcase (.015" Thick) (Standard) ————— <b>Note</b> ————— ★692406 Gasket-Crankcase (.005" Thick) ★692405 Gasket-Crankcase (.009" Thick)						
13	690904	Screw (Cylinder Head)						
14	691109	Stud (Cylinder Head)						
15	690946	Plug-Oil Drain						
15A	691680	Plug-Oil Drain Used on Type No(s). 0147, 0148, 0152, 0217, 1217.						

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
Ø Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
28	498319	Pin-Piston (Standard) (Used After Code Date 95101500). <b>Note</b> ——— 299691 Pin-Piston (Standard) (Used Before Code Date 95101600).	42	494553	Keeper-Valve	65	695453	Screw (Rewind Starter) (Used After Code Date 99102400).
		498320 Pin-Piston (.005" Oversize) (Used After Code Date 95101500). 391286 Pin-Piston (.005" Oversize) (Used Before Code Date 95101600).	43	691968	Slinger-Governor/Oil	65A	690837	Screw (Rewind Starter) (Used Before Code Date 99102500).
29	494504	Rod-Connecting (Standard) <b>Note</b> ——— 495490 Rod- Connecting (.020" Undersize)	45	691811	Tappet-Valve	66	399671	Clutch-Starter (Used Before Code Date 99102500).
31	222299	Lock-Rod Screw (Used Before Code Date 92090700).	46	697668	Camshaft	67	394897	Clutch-Housing (Used Before Code Date 99102500).
32	691133	Screw (Connecting Rod) (1 7/8" Long)	50	691711	Manifold-Intake	68	691604	Ball-Clutch (Used Before Code Date 99102500).
32A	690348	Screw (Connecting Rod) (1 5/8" Long)	51	692284	Gasket-Intake	70	691945	Ratchet-Clutch (Used Before Code Date 99102500).
33	262246	Valve-Exhaust	51A	272554	Gasket-Intake	71	691359	Cover-Ratchet (Used Before Code Date 99102500).
34	262247	Valve-Intake	53	690227	Stud (Carburetor)	73	691191	Screen-Rotating
35	691605	Spring-Valve (Intake)	54	690953	Screw (Intake Manifold)	73A	691748	Screen-Rotating
36	691597	Spring-Valve (Exhaust)	55	695130	Housing-Rewind Starter (Used After Code Date 99102400).	74	691627	Screw (Rotating Screen)
37	690456	Guard-Flywheel	55A	393576	Housing-Rewind Starter (Used Before Code Date 99102500).	74A	691655	Screw (Rotating Screen)
37A	490429	Guard-Flywheel Used on Type No(s). 0102, 0515, 1015, 1041, 1107, 4015, 4016.	56	695129	Pulley-Starter (Used After Code Date 99102400).	75	690582	Washer (Flywheel)
40	690656	Retainer-Valve (Intake)	56A	295871	Pulley-Starter (Used Before Code Date 99102500).	78	690661	Screw (Flywheel Guard)
40A	691939	Retainer-Valve (Exhaust) <b>Note</b> ——— 690274 Retainer- Valve (Exhaust) Used on Type No(s). 4030.	57	695131	Spring-Rewind Starter (Used After Code Date 99102400).	93	690602	Bushing-Throttle Shaft
			57A	490179	Spring-Rewind Starter (Used Before Code Date 99102500).	94	498030	Kit-Idle Mixture
			58	695132	Rope-Starter (Used After Code Date 99102400).	94A	494383	Kit-Idle Mixture
			58A	692188	Rope-Starter (Used Before Code Date 99102500).	95	691636	Screw (Throttle Valve)
			59	490653	Insert-Grip	95A	690718	Screw (Throttle Valve)
			60	490652	Grip-Starter Rope	98	495800	Kit-Idle Speed
			63	690547	Spring-Ratchet (Used Before Code Date 99102500).	98A	694907	Kit-Idle Speed
			64	691920	Adapter-Ratchet Spring (Used Before Code Date 99102500).			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
∅ Valve Gasket Set-Reference 1095

# 283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
104	●690525	Pin-Float Hinge	130	690468	Valve-Throttle (LMT 111, 169)	143	499040	Nozzle-Carburetor (High Altitude) (LMT 162, 165, 166, 168, 169)
104A	●694918	Pin-Float Hinge	130A	691750	Valve-Throttle			————— <b>Note</b> —————
105	●231855	Valve-Float Needle	130B	694917	Valve-Throttle			<b>498258</b> Nozzle- Carburetor (High Altitude) (LMT 63, 65, 66, 108, 111, 133, 135, 136)
105A	●694922	Valve-Float Needle	131	494885	Kit-Throttle Shaft (LMT 111, 169)			<b>497737</b> Nozzle- Carburetor (High Altitude) (LMT 92, 93, 96)
106	●690577	Seat-Inlet	131A	494379	Kit-Throttle Shaft	146	691639	Key-Timing
108	690464	Valve-Choke (Manual Choke)	131B	694909	Kit-Throttle Shaft (Nikki Carburetor)	147	●497472	Jet-Pilot (LMT 1, 2, 4, 5, 7, 37,38, 39, 40, 41, 77, 78,79, 80, 81)
108A	692344	Valve-Choke (Choke A Matic)	133	494381	Float-Carburetor	147A	●694927	Jet-Pilot
108B	694923	Valve-Choke	133A	694914	Float-Carburetor	165	693148	Nut (Ring Gear)
117	●690880	Jet-Main	134	494788	Kit-Needle/Seat (LMT 5, 6)	167	692297	Seal-Air Cleaner Nut
121	697884	Kit-Carburetor Overhaul (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	137	●♦281165	Gasket-Float Bowl	173	694926	Valve-Idle Mixture
		————— <b>Note</b> —————	137A	●♦694920	Gasket-Float Bowl	176	★∅691917	Seal-O Ring (Air Cleaner Base)
		<b>497481</b> Kit-Carburetor Overhaul (LMT 63, 65, 66)	141	495097	Kit-Choke Shaft (Manual Choke)	179	692331	Screw (Fuel Tank Strap)
		<b>497535</b> Kit-Carburetor Overhaul (LMT 5, 37, 77)	141A	495931	Kit-Choke Shaft (Choke A Matic)	182	690443	Bracket-Fuel Tank (Front)
		<b>499220</b> Kit-Carburetor Overhaul (LMT 92, 93, 96, 108, 111, 162, 165, 169)	141B	694913	Kit-Choke Shaft	182A	692535	Bracket-Fuel Tank
		<b>499231</b> Kit-Carburetor Overhaul (LMT 97, 99, 133, 135, 136, 157, 159, 166, 168)	142	●697592	Nozzle-Carburetor (Standard) (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	183	698459	Strap-Fuel Tank (Right Hand)
					————— <b>Note</b> —————	183A	692030	Strap-Fuel Tank (Left Hand)
					●497860 Nozzle- Carburetor (Standard) (LMT 63, 65, 66 97, 99, 100, 133, 134, 135, 136)	186	692317	Connector-Hose
					●498545 Nozzle- Carburetor (Standard) (LMT 108, 111)	186A	691609	Connector-Hose
					●499037 Nozzle- Carburetor (Standard) (LMT 162, 165, 169)	187	296004	Line-Fuel (Cut to Required Length)
					●499039 Nozzle- Carburetor (Standard) (LMT 166, 167, 168)	187C	697907	Line-Fuel (Formed) (Cut to Required Length)
					●691434 Nozzle- Carburetor (Standard) (LMT 92, 93, 94, 96)	188	691693	Screw (Control Bracket)
121A	694930	Kit-Carburetor Overhaul (Nikki Carburetor)						
125	698171	Carburetor (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)						
		————— <b>Note</b> —————						
		<b>498027</b> Carburetor (Gravity Feed)						
		<b>499158</b> Carburetor (Pump Feed)						
125A	694941	Carburetor (Nikki)						
127	●695005	Plug-Welch						
		————— <b>Note</b> —————						
		●694524 Plug-Welch (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)						
127A	●694916	Plug-Welch						

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
∅ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
202	691841	Link-Mechanical Governor	216	691840	Link-Choke	300	691874	Muffler
209	691278	Spring-Governor (Platinum)	216A	690574	Link-Choke	300B	391569	Muffler
		<b>Note</b> _____	222	694042	Bracket-Control	301	93768	Pipe-Muffler
	692208	Spring-Governor (Green)	222A	692002	Bracket-Control	303	690281	Elbow-Exhaust
		Used on Type No(s). 0134, 0138, 0515, 0634, 1015, 4015, 4030.	227	691374	Lever-Governor Control	304	695065	Housing-Blower (Black)
	690480	Spring-Governor (Red)	231	●691636	Screw (Choke Valve)			(Used After Code Date 99102400).
		Used on Type No(s). 0101, 0102, 0119, 0120, 0126, 0128, 0140, 0147, 0148, 0149, 0152, 0153, 0156, 0160, 0167, 0217, 0517, 0604, 0667, 1101, 1107, 1156, 1167, 1217.	231A	●690718	Screw (Choke Valve)			<b>Note</b> _____
	691795	Spring-Governor (Yellow)	232	691842	Spring -Governor Link		494268	Housing-Blower (Red)
		Used on Type No(s). 0159, 0161, 0166, 1137, 1166.	237	690409	Retainer-Muffler Guard			(Used Before Code Date 93071900).
	691798	Spring-Governor (Brown)	240	298090	Filter-Fuel (Red)			Used on Type No(s). 1041, 1068.
		Used on Type No(s). 0109, 0110, 0111, 0116, 0117, 0118, 0123, 0129, 0136, 0137, 0139, 0165, 0639, 1136, 1139.			<b>Note</b> _____			695065 Housing-Blower (Black)
	690576	Spring-Governor (Gold)	257	691660	Screw (Starter Clutch)			(Used After Code Date 00022000).
		Used on Type No(s). 0124, 0131.	263	691083	Screw (Muffler Guard Retainer)			Used on Type No(s). 1041, 1068.
			265	691024	Clamp-Casing		690846	Housing-Blower (Black)
			267	690804	Screw (Casing Clamp)			(Used Before Code Date 99102500 and After Code Date 93071800).
			268	691025	Casing-Control Wire (Cut to Required Length)			Used on Type No(s). 1041, 1068.
			269	691026	Wire-Control (Cut to Required Length)	305	692198	Screw (Blower Housing)
			270	691027	Nut (Control Wire Casing)	305A	692127	Screw (Blower Housing)
			271	691028	Lever-Control	306	698477	Shield-Cylinder
			276	◆692255	Washer-Sealing	307	691003	Screw (Cylinder Shield)
			276A	◆690997	Washer-Sealing	308	491490	Cover-Cylinder Head
			287	691002	Screw (Dipstick Tube)			
			298	691808	Locknut-Muffler/Elbow			

★ Engine Gasket Set-Reference 358  
 ● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
 ∅ Valve Gasket Set-Reference 1095

# 283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	693551	Motor–Starter (3 5/8" Housing Length) (Steel Ring Gear Only)	322	691681	Screw (Cylinder Head Cover)	462	691261	Washer (Starter Cable)
		<b>Note</b>	322A	692198	Screw (Cylinder Head Cover)	467	691668	Knob–Air Cleaner
	693552	Motor–Starter (4 3/8" Housing Length) (Steel Ring Gear Only)	332	690662	Nut (Flywheel)	474	696578	Alternator (DC Only)
	497595	Motor–Starter (3 5/8" Housing Length) (Plastic Ring Gear Only)	333	492341	Armature–Magneto	474A	696459	Alternator (Dual Circuit)
	497401	Motor–Starter (4 3/8" Housing Length) (Plastic Ring Gear Only)	334	691061	Screw (Magneto Armature)	474B	696457	Alternator (Tri Circuit)
	693054	Motor–Starter (3 5/8" Housing Length) (Aluminum Ring Gear Only)	337	802592	Plug–Spark	474C	696458	Alternator (10/16 Amp)
	499521	Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	344	693675	Screw (Cable Clamp)	480	690664	Screw (Tube Clamp)
	309A	Motor–Starter (For Replacement Starter Motor, See Reference 309)	346	691661	Screw (Spark Arrestor)	493	695450	Bracket–Mounting (Debris Screen Guard) (Used After Code Date 99102400).
	310	690323 Bolt (Starter Motor) (3 5/8" Housing Length)	349	691105	Nut (Cylinder Head Cover)	493A	692825	Bracket–Mounting (Debris Screen Guard) (Used Before Code Date 99102500).
		<b>Note</b>	356	690799	Wire–Stop	501	691185	Regulator
	691263	Bolt (Starter Motor) (4 3/8" Housing Length)	356A	398808	Wire–Stop	501A	691188	Regulator
	311	497608 Brush Set	358	494241	Gasket Set–Engine	503	691532	Strap–Starter
	311A	395538 Brush Set (3 5/8 Housing Length)	359	691077	Washer (Ground Terminal)	505	691251	Nut (Governor Control Lever)
	318	691617 Screw (Mounting Bracket)	363	19203	Flywheel Puller	507	691972	Insulator
			373	691612	Nut (Ground Terminal)	510	693699	Drive–Starter (Used With Steel Ring Gear)
			383	89838	Wrench–Spark Plug	510A	696541	Drive–Starter (Used With Aluminum And Plastic Ring Gears)
			385	692198	Screw (Fuel Pump)	510B	696540	Drive–Starter
			387	808656	Pump–Fuel	513	692024	Clutch–Drive
			404	691691	Washer (Governor Crank)	520	691084	Terminal–Ground
			441	224390	Bracket–Oil Fill	523	692014	Dipstick
			445	496894	Filter–Air Cleaner Cartridge	523A	692013	Dipstick Used on Type No(s). 0139, 0165, 0639, 1139.
			449	691678	Screw (Oil Fill Bracket)			
			450	691261	Washer (Fuel Tank Bracket) (Used on Rewind Start Engines)			
					<b>Note</b>			
					690259 Washer (Fuel Tank Bracket) (Used on Electric Start Engines)			
			455	691173	Cup–Flywheel			
			455A	695113	Cup–Flywheel			
			456	695128	Plate–Pawl Friction (Used After Code Date 99102400).			
			459	281505	Pawl–Ratchet (Used After Code Date 99102400).			

★ Engine Gasket Set–Reference 358  
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977  
∅ Valve Gasket Set–Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
524	★281370	Seal–Dipstick Tube	608	695058	Starter–Rewind	678	490817	Spacer–Rewind
525	691398	Tube–Dipstick			(Used After Code Date 99102400).			(Used Before Code Date 99102500).
		<b>Note</b>	608A	390391	Starter–Rewind	689A	691855	Spring–Friction
		690841 Tube–Dipstick			(Used Before Code Date 99102500).			(Used After Code Date 99102400).
		Used on Type No(s). 0139, 0165, 0639, 1139.	613	691416	Screw	691	★692407	Seal–Governor Shaft
525A	495768	Tube–Dipstick			(Muffler)	692	690572	Spring–Detent
526	690326	Screw	613A	691108	Screw	695	693109	Screw
		(Regulator)			(Muffler)			(Ring Gear)
526A	692198	Screw	614	691620	Pin–Cotter	697	690372	Screw
		(Regulator)	615	93307	Retainer–Governor Shaft			(Drive Cap)
527	690394	Clamp–Tube	616	692012	Crank–Governor			(11/16" Long)
544	692034	Armature–Starter	621	692310	Switch–Stop	697A	691058	Screw
		(3 5/8" Housing Length)	628	690661	Screw			(Drive Cap)
544A	390837	Armature–Starter			(Fuel Pump Bracket)	707	690279	Nut
		(3 5/8" Housing Length)	628A	692198	Screw			(Fuel Tank Strap)
		<b>Note</b>			(Fuel Pump Bracket)	709	262243	Eccentric
		490309 Armature–Starter	633	690998	Seal–Choke/Throttle Shaft	718	690959	Pin–Locating
		(4 3/8" Housing Length)	634	●690801	Spring/Seal Assembly	725	690420	Shield–Heat
552	491986	Bushing–Governor Crank			(Manual Choke)	725A	690403	Shield–Heat
559	690661	Screw	634A	●690802	Spring/Seal Assembly	726		Gear–Ring
		(Remote Choke Stop)			(Choke A Matic)			(Steel)
562	691119	Bolt	634B	●694912	Spring/Seal Assembly			(See Reference 23 for Service)
		(Governor Control Lever)	635	66538	Boot–Spark Plug	726A	696537	Gear–Ring
563	695449	Screw	638	691075	Washer			(Aluminum)
		(Debris Screen Guard)			(Cylinder Head Cover)			(Services Plastic Ring Gear Only)
		(Used After Code Date 99102400).	646	690460	Brace–Air Cleaner	727	490324	Cover–Starter Drive
563A	690859	Screw	654	690958	Nut	729	690596	Clip–Wire
		(Debris Screen Guard)			(Air Cleaner Base)	729A	691224	Clip–Wire
		(Used Before Code Date 99102500).	655	691734	Anchor–Rewind Spring	732	691002	Screw
578	691306	Wire Assembly			(Used Before Code Date 99102500).			(Starter Drive Cover)
579	691029	Nut	668	690510	Spacer			<b>Note</b>
		(Starter Cable)	668A	691323	Spacer			690661 Screw
592	690800	Nut			(Rotating Screen)			(Starter Drive Cover)
		(Rewind Starter)	674	691058	Screw			Used on Type No(s). 0102.
		(Used Before Code Date 99102500).			(Fuel Tank Bracket)	733	691658	Screw
597	691696	Screw			(Used on Rewind Start Only Engines)			(Crankshaft Extension)
		(Pawl Friction Plate)			<b>Note</b>	741	691284	Gear–Timing
		(Used After Code Date 99102400).			690341 Screw	757	691714	Link–Counterweight
601	95162	Clamp–Hose	676	396903	Deflector–Muffler	758	692423	Counterweight
607	691693	Screw	676A	393761	Deflector–Muffler	759	691239	Pin–Counterweight
		(Air Cleaner Brace)	676B	397630	Deflector–Muffler	761	691096	Screw
607A	690703	Screw	677	690661	Screw			(Counterweight)
		(Air Cleaner Brace)			(Muffler Deflector)	783	693713	Gear–Pinion
								(Steel Ring Gear Only)
						783A	695708	Gear–Pinion
						788	690458	Bracket–Fuel Pump
						797	693167	Nut
								(Brush Retainer)

★ Engine Gasket Set–Reference 358  
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977  
∅ Valve Gasket Set–Reference 1095

# 283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
801	691283	Cap-Drive	877	393456	Wire/Connector-Alternator	994	392390	Arrestor-Spark
802	691286	Cap-End	877A	393814	Wire/Connector-Alternator	1005	695056	Fan-Flywheel (Used After Code Date 99102400).
802A	395537	Cap-End (3 5/8" Housing Length)	877B	393537	Wire/Connector-Alternator	1005A	691905	Fan-Flywheel (Used Before Code Date 99102500).
803	693757	Housing-Starter (3 5/8" Housing Length)	877C	399916	Wire/Connector-Alternator	1006	690452	Retainer-Fan
		<b>Note</b> (4 3/8" Housing Length) (Served by Reference 309)	878	691237	Harness-Alternator	1019	491255	Kit-Label
803A	398159	Housing-Starter (3 5/8" Housing Length)	878A	691955	Harness-Alternator	1036	696770	Label-Emissions (Used After Code Date 01093000).
		<b>Note</b> 494205 Housing-Starter (4 3/8" Housing Length)	883	★692236	Gasket-Exhaust			<b>Note</b> 695699 Label-Emissions (Used After Code Date 00070200 and Before Code Date 01100100).
810	691779	Extension-Crankshaft	896	691641	Pin-Drive Retainer			695036 Label-Emissions (Used After Code Date 99093000 and Before Code Date 00070300).
832	692361	Guard-Muffler	918	393815	Hose-Vacuum (Cylinder To Impulse Pump) (Cut to Required Length)			694325 Label-Emissions (Used After Code Date 99010300 and Before Code Date 99100100).
836	690367	Screw (Muffler Guard)	930	691904	Guard-Rewind (Used Before Code Date 99102500).			499362 Label-Emissions (Used After Code Date 97063000 and Before Code Date 99010400).
842	★691870	Seal-O Ring (Dipstick/Tube Assembly)	934	691058	Screw (Fan Retainer)			694325 Label-Emissions (Used After Code Date 99010300 and Before Code Date 99100100).
846	690371	Washer (Fuel Tank Strap)	949	695448	Guard-Debris Screen (Used After Code Date 99102400).			499361 Label-Emissions (Used Before Code Date 97070100).
847	496415	Dipstick/Tube Assembly	949A	397530	Guard-Debris Screen (Used Before Code Date 99102500).			1051 691265 Ring-Retaining
847B	496367	Dipstick/Tube Assembly Used on Type No(s). 0139, 0165, 0639, 1139.	950	691657	Screw-Float Bowl			1054 280275 Tie-Cable
851	493880	Terminal-Spark Plug	950A	694919	Screw-Float Bowl			1058 274787 Operator's Manual
869	691802	Seat-Valve (Intake)	955	●694924	Plug-Carburetor (Idle Chamber)			1059 698516 Kit-Screw/Washer (Alternator)
870	691844	Seat-Valve (Exhaust)	955A	●694921	Plug-Carburetor (Pilot Jet)			1083 691626 Nut (End Cap)
871	261961	Bushing-Valve Guide	957	493988	Cap-Fuel Tank			1083A 690958 Nut (End Cap) (Serrated)
		<b>Note</b> 231218 Bushing-Valve Guide (Brass)	958	698183	Valve-Fuel Shut Off			1090 497605 Retainer-Brush
875	696129	Base-Air Cleaner	967	272403	Filter-Pre Cleaner			1091 691333 Cap-Limiter
876	696539	Kit-Pinion Spring	968	691916	Cover-Air Cleaner			1095 498539 Gasket Set-Valve
			971	691108	Screw (Air Cleaner Base)			1119 691183 Screw (Alternator)
			972	390225	Tank-Fuel			
			975	495933	Bowl-Float			
			975A	694908	Bowl-Float			
			977	690192	Gasket Set-Carburetor			
			977A	694931	Gasket Set-Carburetor			
			986	271735	Filter-Debris			
			987	●691326	Seal-Throttle Shaft			
			987B	●692001	Seal-Throttle Shaft			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
∅ Valve Gasket Set-Reference 1095