

284H00

Illustrated Parts List

Model Series

284H00

TYPE NUMBERS
0110 Through 0132.


TABLE OF CONTENTS

Air Cleaner	5
Alternator	7
Blower Housing	5
Camshaft	2
Carburetor	4
Controls	7
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	5
Flywheel	6
Fuel Supply	4
Gasket Set – Engine	2
Gasket Set – Valve	3
Governor Spring	7
Ignition	7
Intake Manifold	3
Kit – Carburetor Overhaul	4
Lubrication	3
Piston, Rings, Connecting Rod	2
Rewind Starter	6
Valves	3

PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

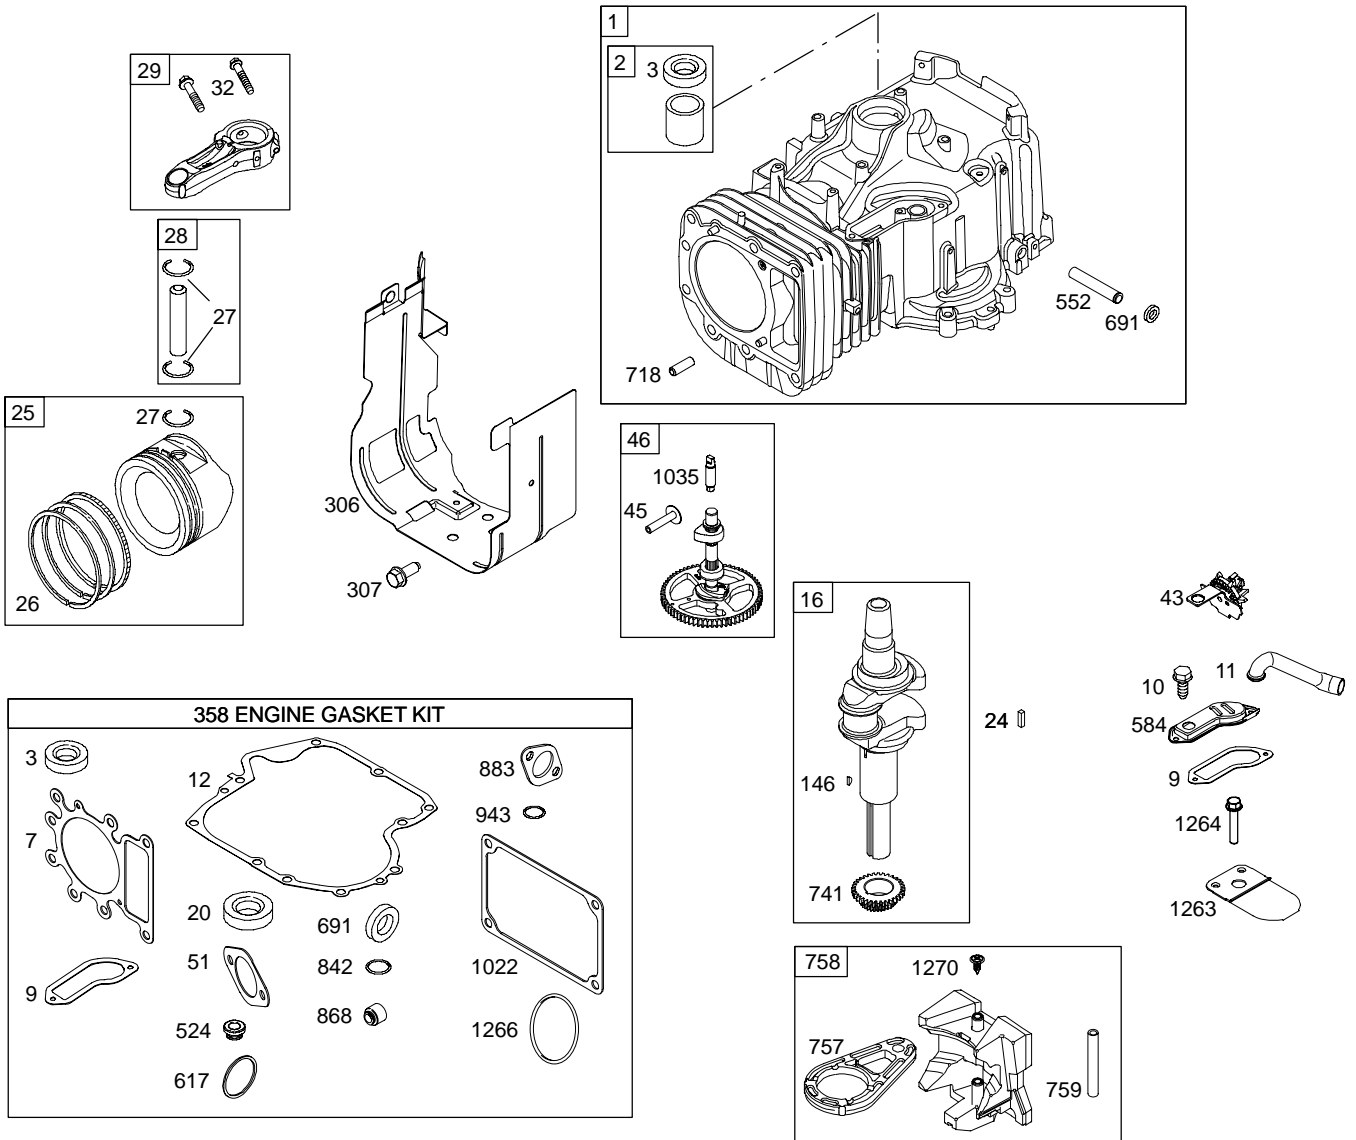


1019 LABEL KIT










1058 OWNER'S MANUAL

1330 REPAIR MANUAL




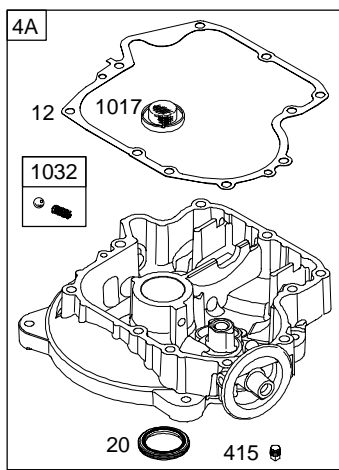
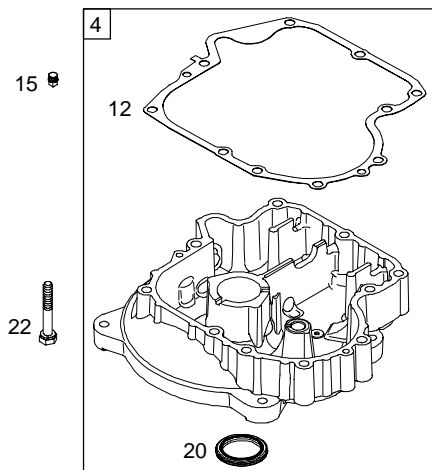


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.







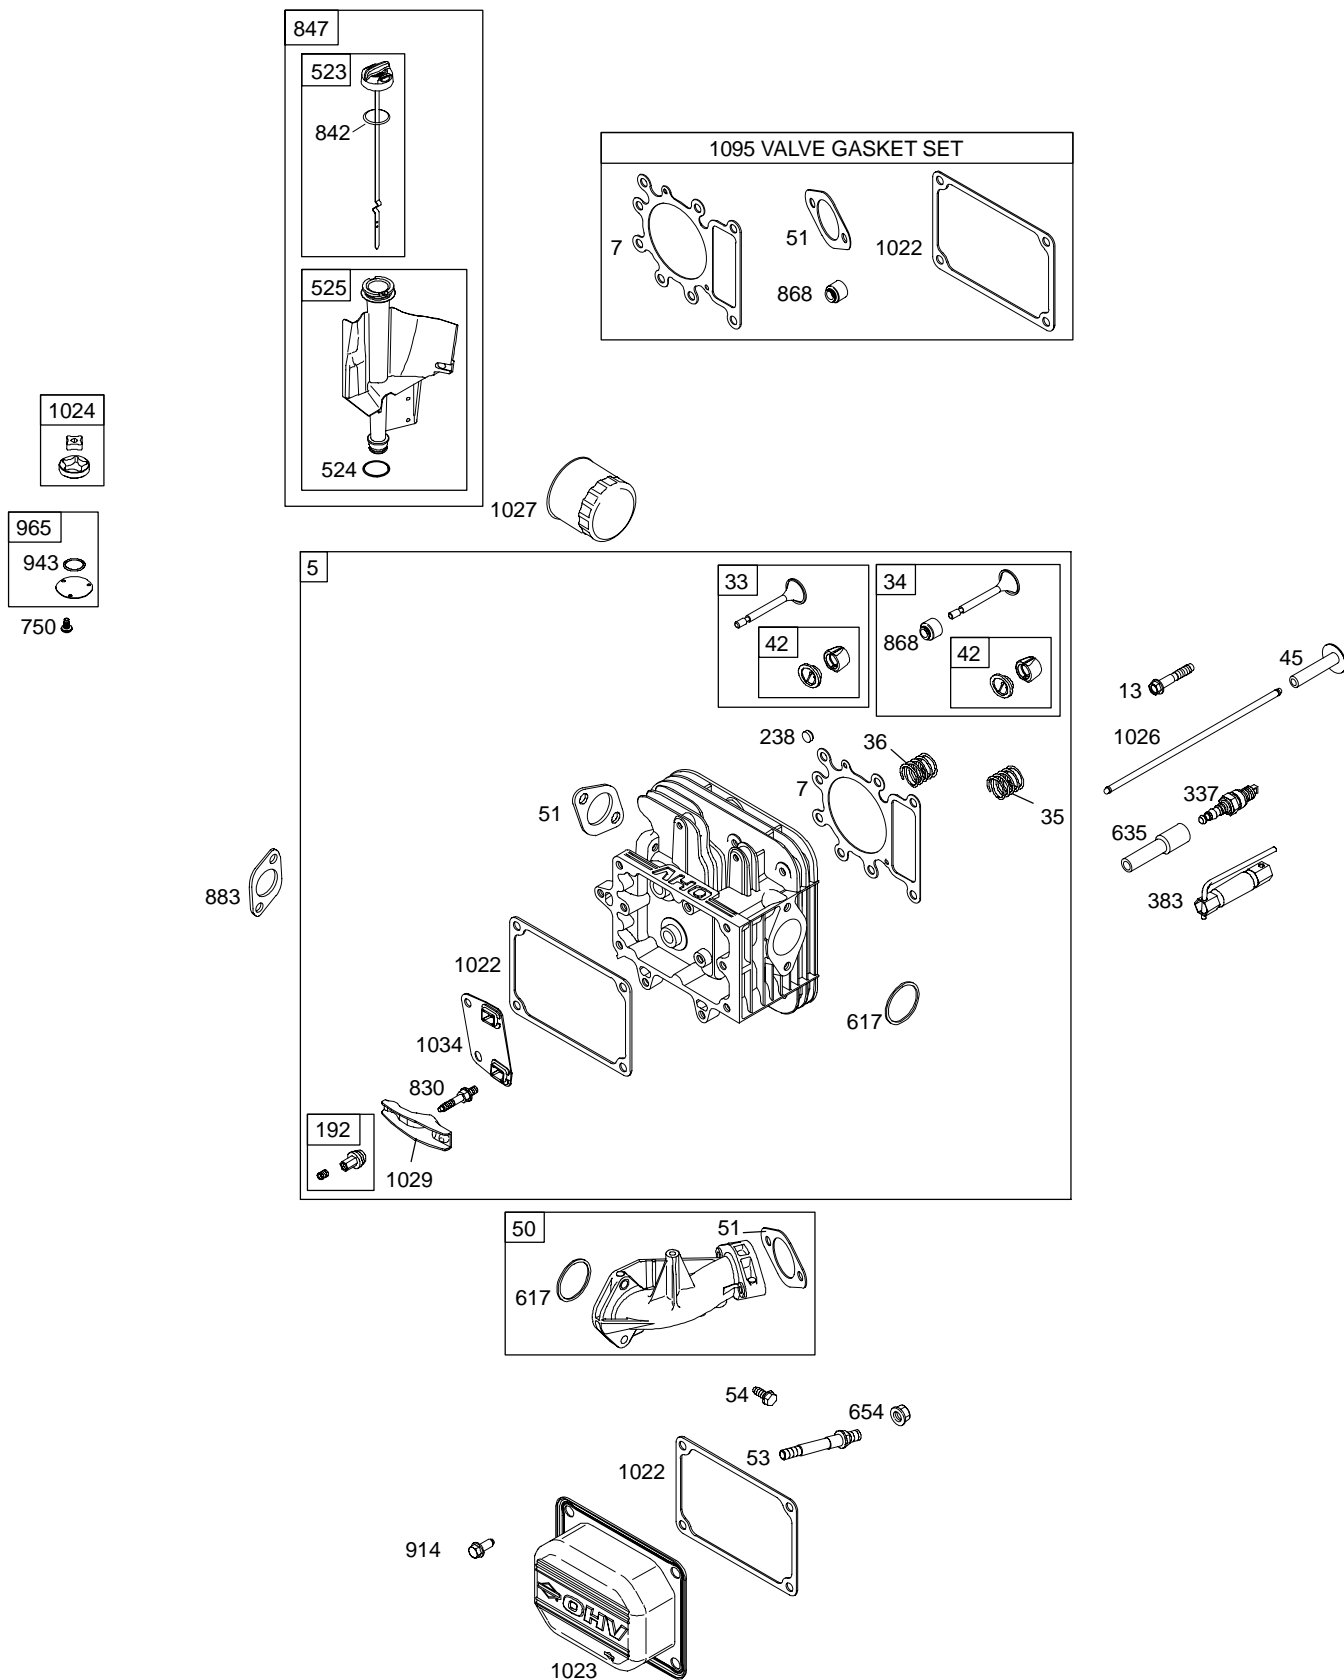


 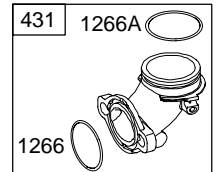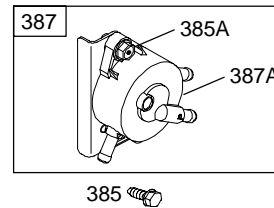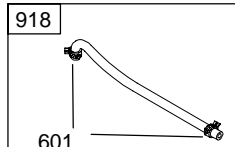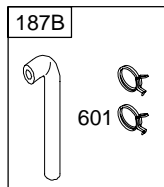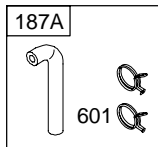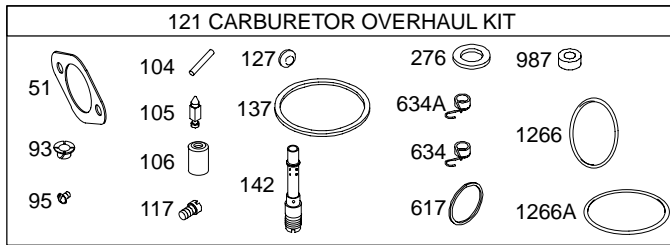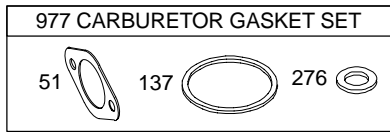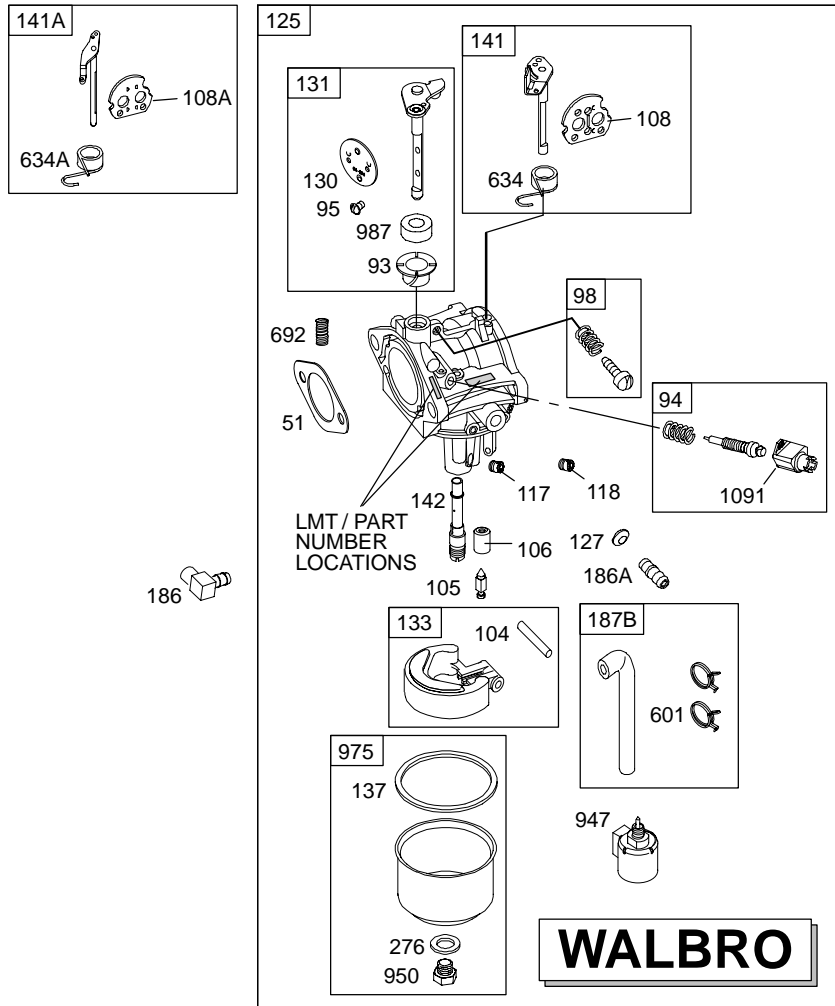


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

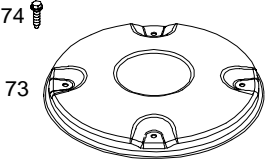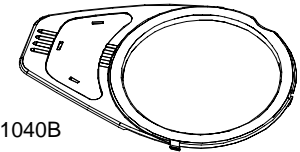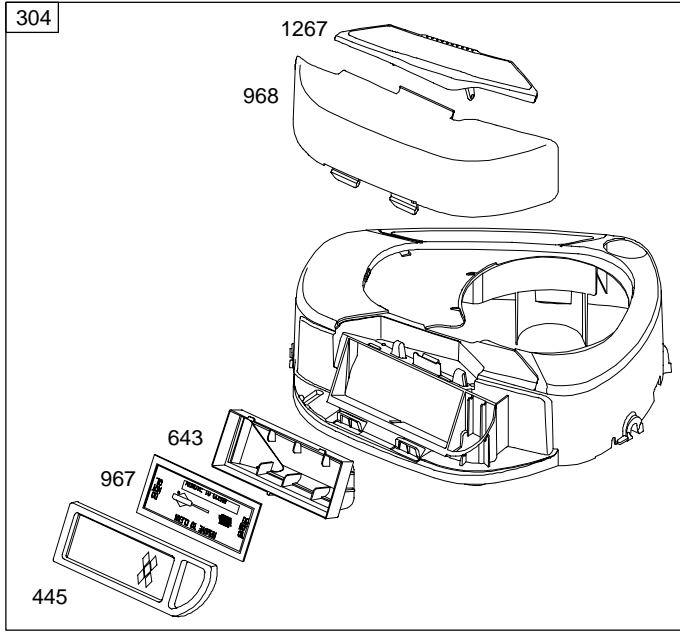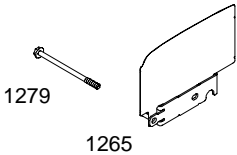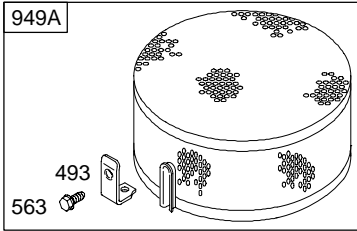

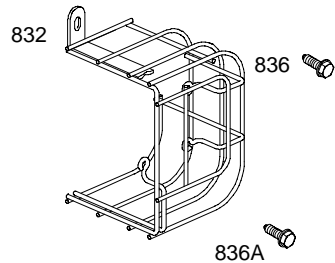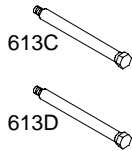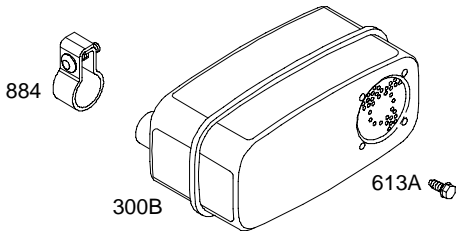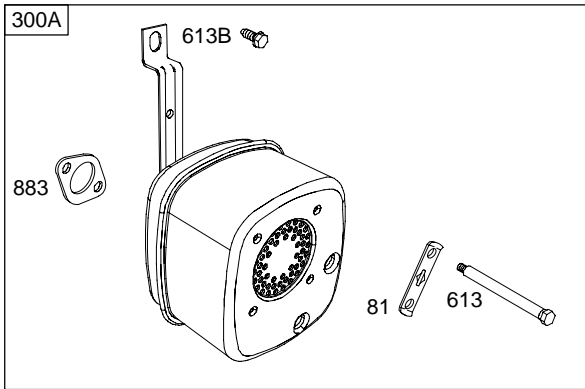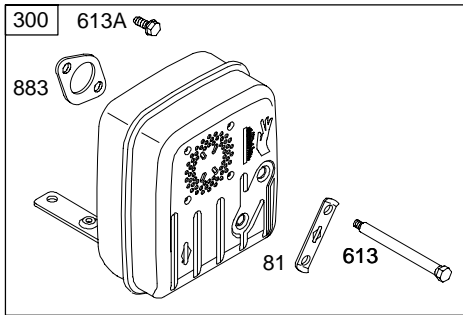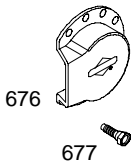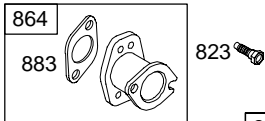


 



 

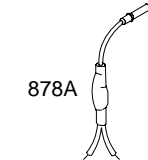
 
1036 EMISSION LABEL

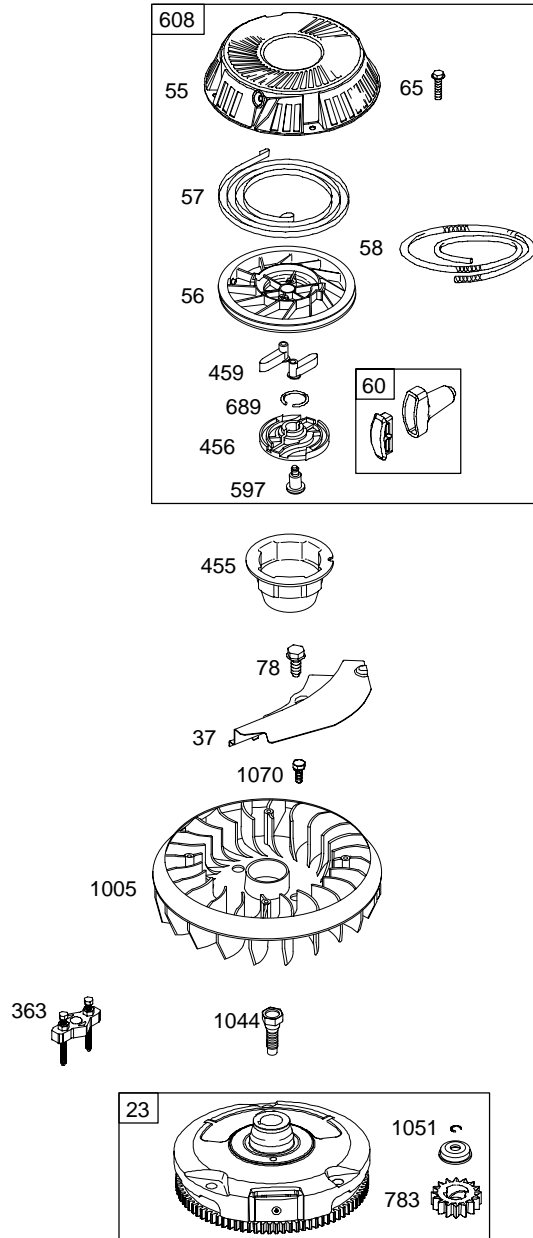



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.









Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	10 AMP
474	474A  1059	474B  1059	474C  1059
877A 	877 	877B 	877C 
578 	878 	878A 	578 

 

NOTE: All stators use a No. 1119 mounting screw. 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

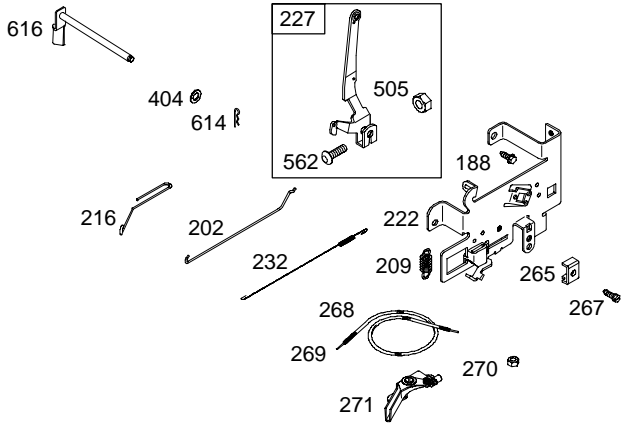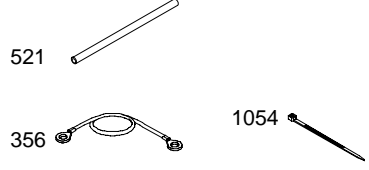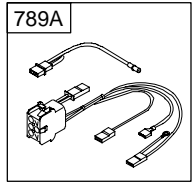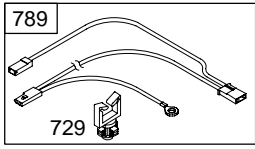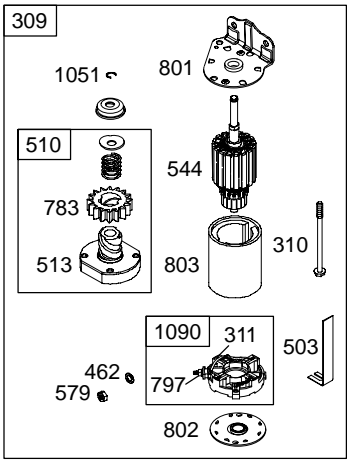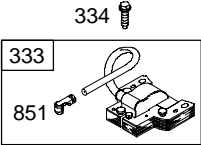

284H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697132	Cylinder Assembly	24	222698	Key-Flywheel	42	499586	Keeper-Valve
2	399265	Kit-Bushing/Seal (Magneto Side)	25	698371	Piston Assembly (Standard)	43	691968	Slinger-Governor/Oil
3	★391086	Seal-Oil (Magneto Side)		698393	Piston Assembly (.010" Oversize)	45	690564	Tappet-Valve
4	697106	Sump-Engine Used on Type No(s). 0110, 0111, 0115, 0131, 0132.		698394	Piston Assembly (.020" Oversize)	46	698492	Camshaft
4A	697188	Sump-Engine Used on Type No(s). 0101, 0105, 0113, 0114, 0116, 0117, 0118, 0119, 0121, 0125, 0126, 0129, 0130.		698395	Piston Assembly (.030" Oversize)	50	690193	Manifold-Intake
5	698148	Head-Cylinder	26	698375	Ring Set (Standard)	51△★◆●692137	692137	Gasket-Intake
7	△★273280	Gasket-Cylinder Head		698396	Ring Set (.010" Oversize)	53	690227	Stud (Carburetor)
9	★697109	Gasket-Breather		698397	Ring Set (.020" Oversize)	54	691148	Screw (Intake Manifold)
10	697157	Screw (Breather Assembly)		698398	Ring Set (.030" Oversize)	55	695130	Housing-Rewind Starter
11	697113	Tube-Breather	27	698469	Lock-Piston Pin	56	695129	Pulley-Starter
12	★697110	Gasket-Crankcase (.015" Thick) (Standard)	28	697099	Pin-Piston (Standard)	57	695131	Spring-Rewind Starter
13	690360	Screw (Cylinder Head)	29	697126	Rod-Connecting (Standard)	58	695132	Rope-Starter
15	690946	Plug-Oil Drain (Square Head)				60	494212	Grip-Starter Rope
16	697127	Crankshaft				65	695453	Screw (Rewind Starter)
20	★690947	Seal-Oil (PTO Side)						————— Note —————
22	692125	Screw (Crankcase Cover/ Sump)				73	697133	Screen-Rotating
23	693556	Flywheel Used on Type No(s). 0101, 0105, 0110, 0111, 0114, 0116, 0118, 0119, 0121, 0125, 0126, 0129, 0130, 0131, 0132.				74	697897	Screw (Rotating Screen)
		————— Note —————				78	691003	Screw (Flywheel Guard)
		790835 Flywheel (Used After Code Date 04072800). Used on Type No(s). 0113.	32	692852	Screw (Connecting Rod)	81	691178	Lock-Muffler Screw
		693556 Flywheel (Used Before Code Date 04072900). Used on Type No(s). 0113.	33	695760	Valve-Exhaust	93	●690602	Bushing-Throttle Shaft
		693557 Flywheel Used on Type No(s). 0115, 0117.	34	695761	Valve-Intake	94	498030	Kit-Idle Mixture
			35	691279	Spring-Valve (Intake)	95	●691636	Screw (Throttle Valve)
			36	691279	Spring-Valve (Exhaust)	98	495800	Kit-Idle Speed
			37	697108	Guard-Flywheel Used on Type No(s). 0101, 0105, 0110, 0111, 0113, 0114, 0117, 0118, 0119, 0125, 0126, 0129.	104	●690525	Pin-Float Hinge
		————— Note —————				105	●231855	Valve-Float Needle
						106	●690577	Seat-Inlet (Gravity Feed)
								————— Note —————
								●691780 Seat-Inlet (Pump Feed)
						108	690464	Valve-Choke (697204, 697205)
						108A	692344	Valve-Choke (696179, 696181, 697202, 697203)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	●694352	Jet—Main (Standard)	209	692208	Spring—Governor Used on Type No(s). 0101, 0110, 0114, 0116, 0117, 0118, 0119, 0125, 0126, 0130, 0132.	267	690804	Screw (Casing Clamp)
118	697228	Jet—Main (High Altitude)				268	691025	Casing—Control Wire (Cut to Required Length)
121	697241	Kit—Carburetor Overhaul				269	691026	Wire—Control (Cut to Required Length)
125	698445	Carburetor (697204)(Gravity Feed)(Use to replace pump and gravity feed carburetors)			————— Note —————	270	691027	Nut (Control Wire Casing)
127	●695005	Plug—Welch (5/16" Diameter)			690576 Spring—Governor Used on Type No(s). 0111.	271	691028	Lever—Control
130	691750	Valve—Throttle			690480 Spring—Governor Used on Type No(s). 0113, 0115.	276	●692255	Washer—Sealing
131	494379	Kit—Throttle Shaft			691795 Spring—Governor Used on Type No(s). 0105, 0129, 0131.	300	697349	Muffler Used on Type No(s). 0116, 0119, 0121.
133	494381	Float—Carburetor				300A	698356	Muffler Used on Type No(s). 0114, 0117, 0118, 0126, 0129, 0130, 0132.
137	●♦281165	Gasket—Float Bowl						
141	495097	Kit—Choke Shaft (697204, 697205)	216	691840	Link—Choke	300B	498984	Muffler Used on Type No(s). 0113.
141A	495931	Kit—Choke Shaft (696179, 696181, 697202, 697203)	222	694042	Bracket—Control	304	698804	Housing—Blower (Black) (Used After Code Date 02081100). Used on Type No(s). 0110, 0111, 0114, 0117, 0118, 0119, 0125, 0126, 0129.
142	●697140	Nozzle—Carburetor (Standard)	227	691374	Lever—Governor Control (Standard)			
146	691639	Key—Timing	232	691842	Spring—Governor Link			
186	692317	Connector—Hose (90 Degree)	238	691843	Cap—Valve			
186A	698174	Connector—Hose (Straight)	240	298090	Filter—Fuel ((Red, 150 Microns) Used on Type No(s). 0114.			
187	691050	Line—Fuel (Cut to Required Length)			————— Note —————			
187A	698821	Line—Fuel (Formed)(4 1/2" Long) (Cut to Required Length)			394358 Filter—Fuel (White, 75 Microns) Used on Type No(s). 0101, 0105, 0113, 0115, 0116, 0117, 0125, 0126, 0130.			————— Note —————
		————— Note —————						697784 Housing—Blower (Black) (Used Before Code Date 02081200). Used on Type No(s). 0110, 0114, 0117.
		698600 Line—Fuel (Formed)(9" Long) (Cut to Required Length)	240B	691035	Filter—Fuel (Includes Paper Element With A 40 Micron Rating) Used on Type No(s). 0110, 0111, 0118, 0119, 0129, 0131, 0132.			698599 Housing—Blower (Black) Used on Type No(s). 0115, 0116, 0121, 0130, 0131, 0132.
187B	698417	Line—Fuel (Formed)(10 1/4" Long) (Cut to Required Length)						698803 Housing—Blower (Red) Used on Type No(s). 0101, 0105, 0113.
188	691693	Screw (Control Bracket)	265	691024	Clamp—Casing			
192	691986	Adjuster—Rocker Arm						
202	691841	Link—Mechanical Governor						

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

284H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	697102	Screw (Blower Housing)	404	691691	Washer (Governor Crank)	521	690581	Shield—Cable
305A	697103	Screw (Blower Housing)	415	690283	Plug (Sump)	523	699908	Dipstick
306	697107	Shield—Cylinder	431	697122	Elbow—Intake	524	★691032	Seal—Dipstick Tube
307	691003	Screw (Cylinder Shield)	445	698083	Filter—Air Cleaner (Non Washable)	525	697184	Tube—Dipstick Used on Type No(s). 0101, 0105, 0114, 0115, 0117, 0121, 0126, 0130.
309	693551	Motor—Starter	455	695113	Cup—Flywheel	————— Note —————		
310	690323	Bolt (Starter Motor)	456	695128	Plate—Pawl Friction	697085		Tube—Dipstick Used on Type No(s). 0110, 0111, 0113, 0116, 0118, 0119, 0125, 0129, 0131, 0132.
311	497608	Brush Set	459	281505	Pawl—Ratchet	526	697088	Screw (Regulator) ————— Note —————
333	492341	Armature—Magneto	462	691261	Washer	697348		Screw (Regulator) Used on Type No(s). 0121.
334	691061	Screw (Magneto Armature)	474	696578	Alternator (DC Only) Used on Type No(s). 0117.	544	692034	Armature—Starter
337	491055	Plug—Spark (Standard) Used on Type No(s). 0101, 0110, 0114, 0115, 0116, 0117, 0118, 0119, 0121, 0125, 0126, 0129, 0130, 0132, ————— Note —————	474A	696459	Alternator (Dual Circuit) Used on Type No(s). 0115.	552	697144	Bushing—Governor
		691043 Plug—Spark Used on Type No(s). 0105, 0111, 0113, 0131.	474B	696457	Alternator (Tri—Circuit) Used on Type No(s). 0101, 0105, 0110, 0111, 0113, 0114, 0116, 0118, 0119, 0125, 0126, 0129, 0130, 0131, 0132.	562	691119	Bolt (Governor Control Lever)
356	697089	Wire—Stop	474C	696458	Alternator (10 Amp Circuit) Used on Type No(s). 0121.	563	695449	Screw (Debris Screen Guard)
358	697151	Gasket Set—Engine	493	695450	Bracket—Mounting Used on Type No(s). 0116.	578	692306	Wire Assembly (Alternator to Regulator) Used on Type No(s). 0115.
363	19203	Flywheel Puller	501	691188	Regulator ————— Note —————	579	691029	Nut (Starter Cable)
383	89838	Wrench—Spark Plug	503	691532	Strap—Starter	584	697112	Cover—Breather Passage
385	694476	Screw (Fuel Pump)	505	691251	Nut (Governor Control Lever)	597	691696	Screw (Pawl Friction Plate)
385A	690297	Screw (Fuel Pump)	510	693699	Drive—Starter	601	95162	Clamp—Hose
387	697090	Pump—Fuel (Includes Mounting Bracket) Used on Type No(s). 0110, 0111, 0113, 0116, 0118, 0119, 0125, 0129, 0131, 0132.	513	692024	Clutch—Drive	608	695058	Starter—Rewind Used on Type No(s). 0115, 0116.
387A	808656	Pump—Fuel						

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
613	691416	Screw (Muffler)	783	693713	Gear–Pinion (For Steel Ring Gear)	877A	393814	Wire/Connector– Alternator (DC Only) Used on Type No(s). 0117.
613A	690297	Screw (Muffler)	789	692037	Harness–Wiring Used on Type No(s). 0101, 0113, 0115, 0114, 0116, 0117, 0119, 0121, 0125.	877B	393537	Wire/Connector– Alternator (Tri Circuit) Used on Type No(s). 0101, 0105, 0110, 0111, 0113, 0114, 0116, 0118, 0119, 0125, 0126, 0129, 0130, 0131, 0132.
613B	691678	Screw (Muffler)	789A	698329	Harness–Wiring Used on Type No(s). 0105, 0110, 0111, 0118, 0126, 0129, 0130, 131, 0132,	877C	393916	Wire/Connector– Alternator (DC Only) Used on Type No(s). 0121.
613C	698941	Screw (Muffler) Used on Type No(s). 0125.	797	693167	Nut (Brush Retainer)	878	691237	Harness–Alternator (Alternator to Regulator) Used on Type No(s). 0115.
613D	691416	Screw (Muffler) Used on Type No(s). 0125.	801	691283	Cap–Drive	878A	691955	Harness–Alternator (Alternator to Regulator) Used on Type No(s). 0101, 0105, 0110, 0111, 0113, 0114, 0116, 0118, 0119, 0125, 0126, 0129, 0130, 0131, 0132.
614	691620	Pin–Cotter	802	691286	Cap–End			
616	692012	Crank–Governor	803	693757	Housing–Starter			
617	◆★692138	Seal–O Ring (Intake Manifold)	823	690363	Screw (Muffler Adapter)			
634	●690801	Spring/Seal Assembly (697204, 697205)	830	691095	Stud–Rocker Arm Used on Type No(s). 0130.			
634A	●690802	Spring/Seal Assembly (696179, 696181, 697202, 697203)	832	790244	Guard–Muffler			
635	691909	Boot–Spark Plug	836	691676	Screw (Muffler Guard)			
643	698401	Retainer–Air Filter	836A	690367	Screw (Muffler Guard)			
654	690958	Nut (Carburetor)	842	★691031	Seal–O Ring (Dipstick Tube)			
676	393761	Deflector–Muffler Used on Type No(s). 0113, 0116, 0119, 0126, 0129, 0130.	847	790442	Dipstick/Tube Used on Type No(s). 0101, 0105, 0114, 0115, 0117, 0121, 0126, 0130.			
677	690661	Screw (Muffler Deflector)			Note	883	★692236	Gasket–Exhaust
689	691855	Spring–Friction			790443	884	691956	Clamp–Muffler
691	★692407	Seal–Governor Shaft			790443	914	691108	Screw (Rocker Cover)
692	690572	Spring–Detent			790443	918	697091	Hose–Vacuum
697	690372	Screw (Drive Cap)			790443	943	★690589	Seal–O Ring (Oil Pump Cover)
718	690959	Pin–Locating			790443	947	694393	Solenoid–Fuel
729	691335	Clip–Wire (Wire Saddle)	851	692424	Terminal–Spark Plug	949A	695448	Guard–Debris Screen Used on Type No(s). 0116.
729A	691224	Clip–Wire (Aluminum Coated Steel)	864	697346	Adapter–Muffler Used on Type No(s). 0114, 0116, 0117, 0118, 0119, 0121, 0126, 0129, 0130, 0132.	950	691657	Screw–Float Bowl
729B	694123	Clip–Wire (Nylon)	868	Δ★690968	Seal–Valve	965	499613	Cover–Oil Pump Used on Type No(s). 0101, 0105, 0113, 0114, 0116, 0117, 0118, 0119, 0125, 0126, 0129. (Black) Used on Type No(s). 0115, 0116, 0130, 0131.
741	697128	Gear–Timing	877	393456	Wire/Connector– Alternator (Dual Circuit) Used on Type No(s). 0115.			
750	790832	Screw (Oil Pump Cover)						
757	697607	Link–Counterweight						
758	697134	Counterweight						
759	697392	Pin–Counterweight						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

284H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
967	697015	Filter-Pre Cleaner	1024	499054	Pump-Oil	1090	691293	Retainer-Brush
968	697084	Cover-Air Cleaner (Black) Used on Type No(s). 0110, 0111, 0114, 0117, 0118, 0119, 0125, 0126, 0129.			Used on Type No(s). 0101, 0105, 0113, 0114, 0116, 0117, 0118, 0119, 0121, 0125, 0126, 0129, 0130.	1091	691333	Cap-Limiter
		Note	1026	692003	Rod-Push (Intake)	1095	691581	Gasket Set-Valve
	697446	Cover-Air Cleaner (Red) Used on Type No(s). 0101, 0105, 0113.			Note	1119	691183	Screw (Alternator)
	698403	Cover-Air Cleaner Used on Type No(s). 0115, 0116, 0121, 0130, 0131, 0132.	1027	492932	Filter-Oil	1263	697124	Reed-Breather
975	495933	Bowl-Float	1029	691751	Arm-Rocker	1264	697104	Screw (Breather Reed)
977	690192	Gasket Set-Carburetor	1032	491710	Ball-Oil Pump	1265	697125	Support-Blower Housing
987	691326	Seal-Throttle Shaft	1034	690822	Guide-Push Rod	1266	691917	Seal-O Ring (Intake Elbow)
1005	697111	Fan-Flywheel Used on Type No(s). 0101, 0105, 0110, 0111, 0113, 0114, 0117, 0118, 0119, 0125, 0126, 0129.	1035	693784	Shaft-Pump	1266A	697123	Seal-O Ring (Intake Elbow)
		Note	1036	790464	Label-Emission (Used After Code Date 04063000).	1267	697135	Latch-Blower Housing (Black) Used on Type No(s). 0110, 0111, 0114, 0117, 0118, 0119, 0125, 0126, 0129.
	699043	Fan-Flywheel Used on Type No(s). 0115, 0116, 0130, 0131, 0132.			Note			Note
1017	690770	Screen- Oil Pump	1036A	698979	Label-Emission Used on Type No(s). 0113.			697419 Latch-Blower Housing (Black) Used on Type No(s). 0115, 0116, 0121, 0130, 0131, 0132.
1019	699196	Kit-Label	1040B	699852	Plate-Trim Used on Type No(s). 0101, 0121, 0130, 0131, 0132.			697662 Latch-Blower Housing (Red) Used on Type No(s). 0101, 0105, 0113.
1022	272475	Gasket-Rocker Cover	1044	698139	Screw (Flywheel)	1270	697156	Plug-AVS Counterweight
1023	692492	Cover-Rocker	1051	691265	Ring-Retaining	1279	691108	Screw (Blower Housing Support)
			1054	282275	Tie-Cable	1330	272147	Repair Manual
			1058	275935	Owner's Manual			
			1059	698516	Kit-Screw/Washer			
			1070	690372	Screw (Flywheel Fan)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.