

406500

Illustrated Parts List

Model Series

406500

TYPE NUMBER
0106 through 0139.

TABLE OF CONTENTS


Air Cleaner	5
Alternators	7
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	4
Controls	6
Crankcase Sump	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	6
Exhaust	6
Flywheel	6
Ignition	7
Kit/Gasket Sets	4
Lubrication	2
Pistons	2
Valves	3













PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


406500

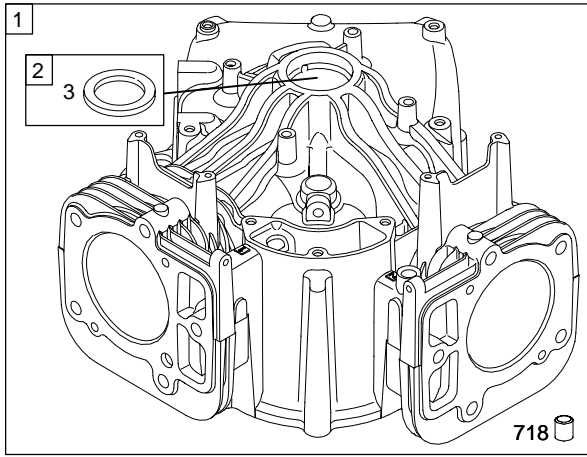

10

   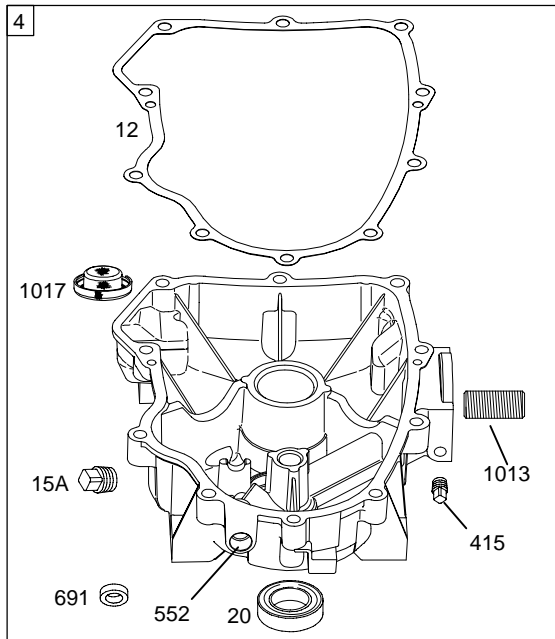
 
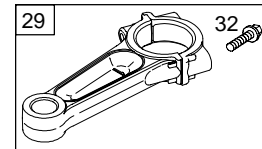
 
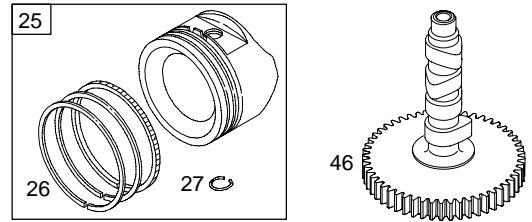
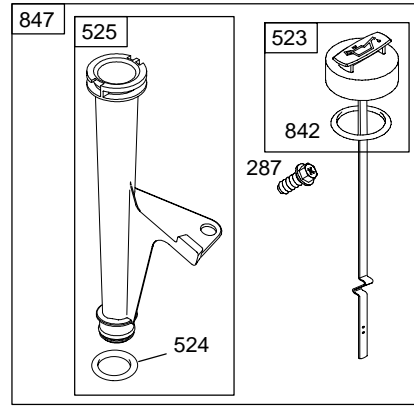
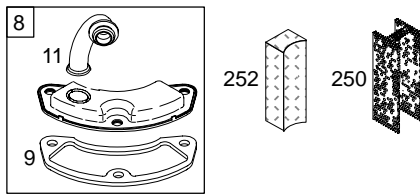








750

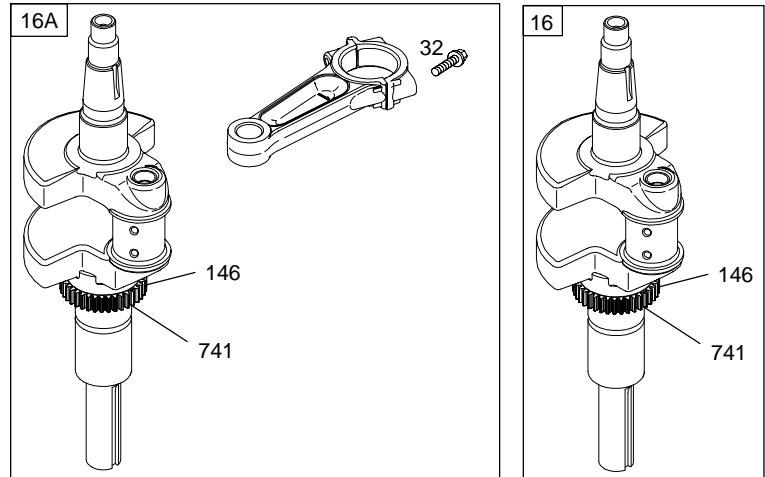





- 1019 LABEL KIT
- 1058 OPERATOR'S MANUAL
- 1330 REPAIR MANUAL

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5770-2 Assemblies include all parts shown in frames. 06/10/2004

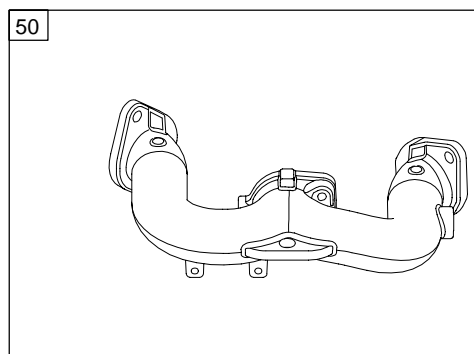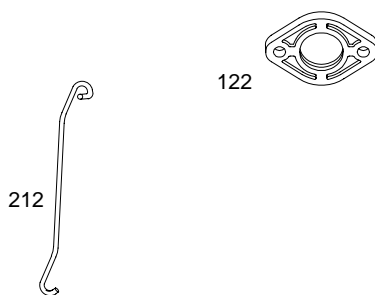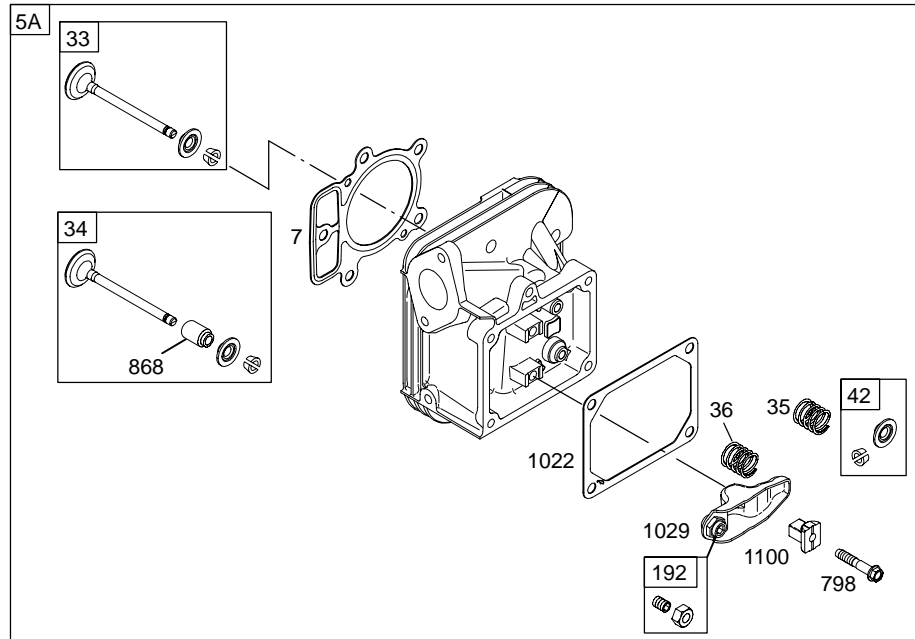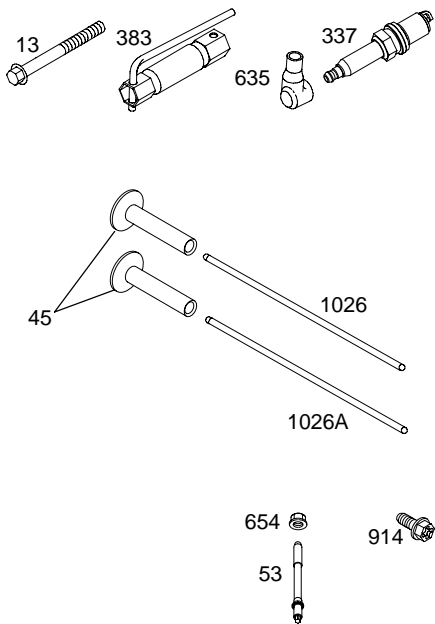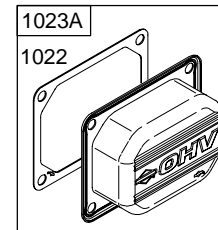
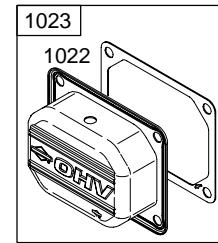
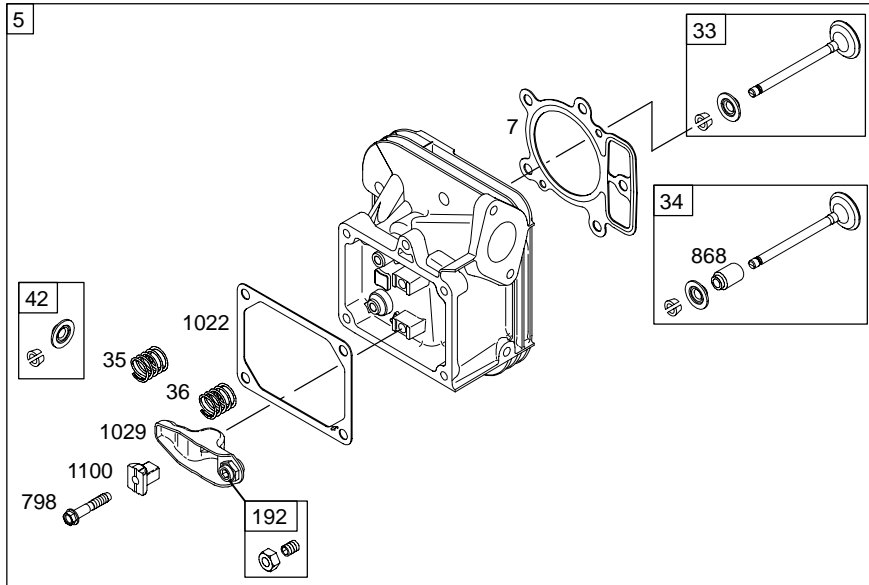


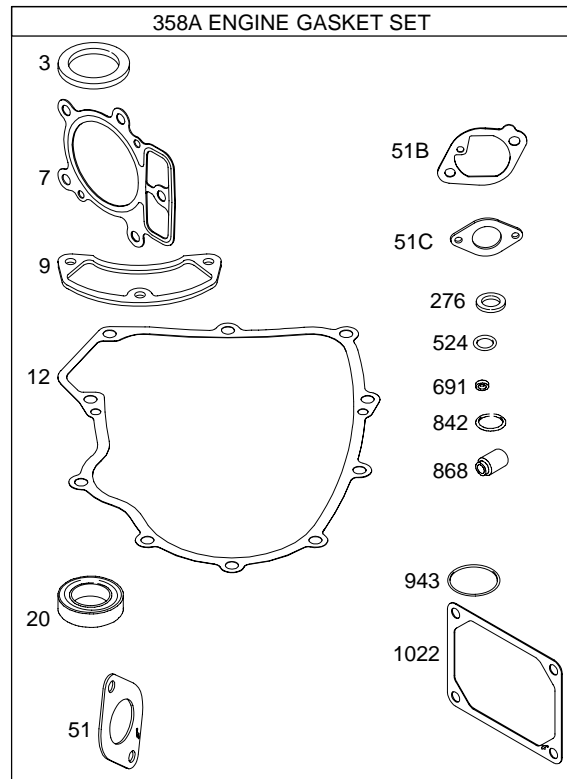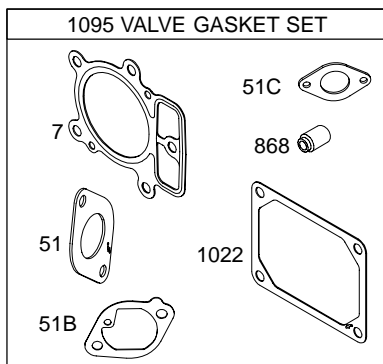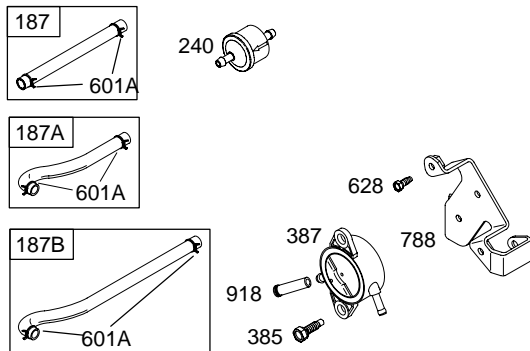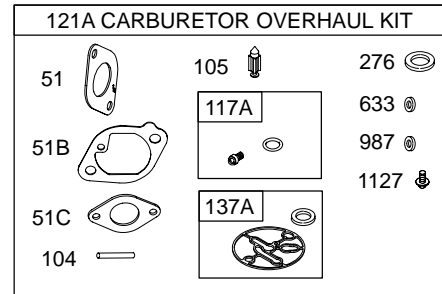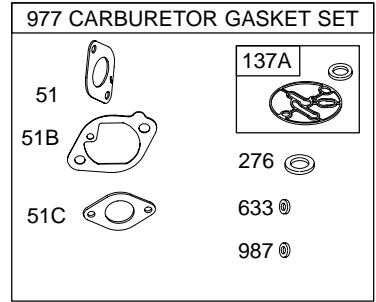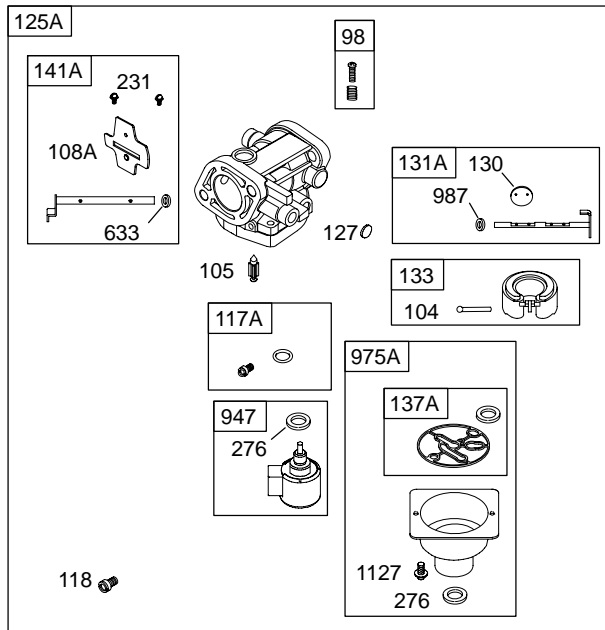

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

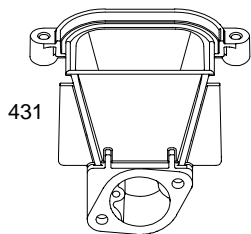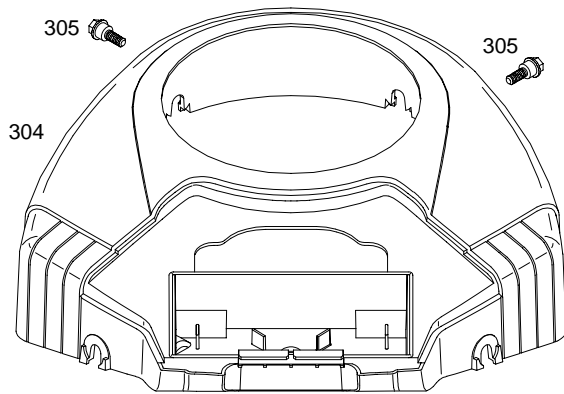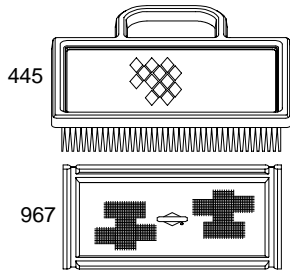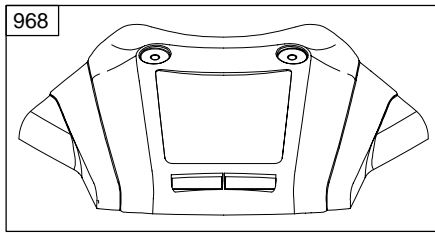


1036 EMISSIONS LABEL

 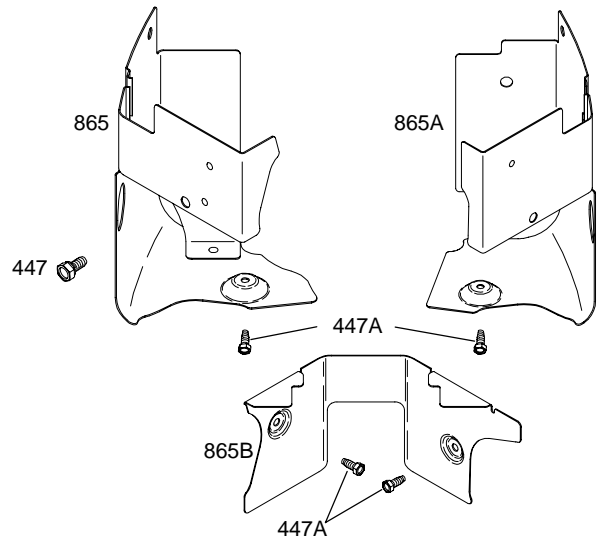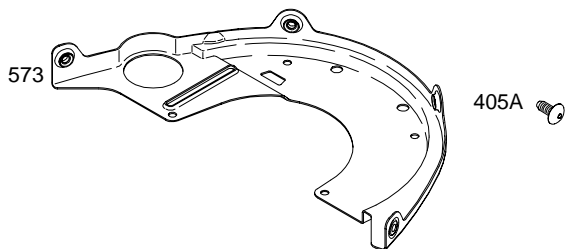





5770-5 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*




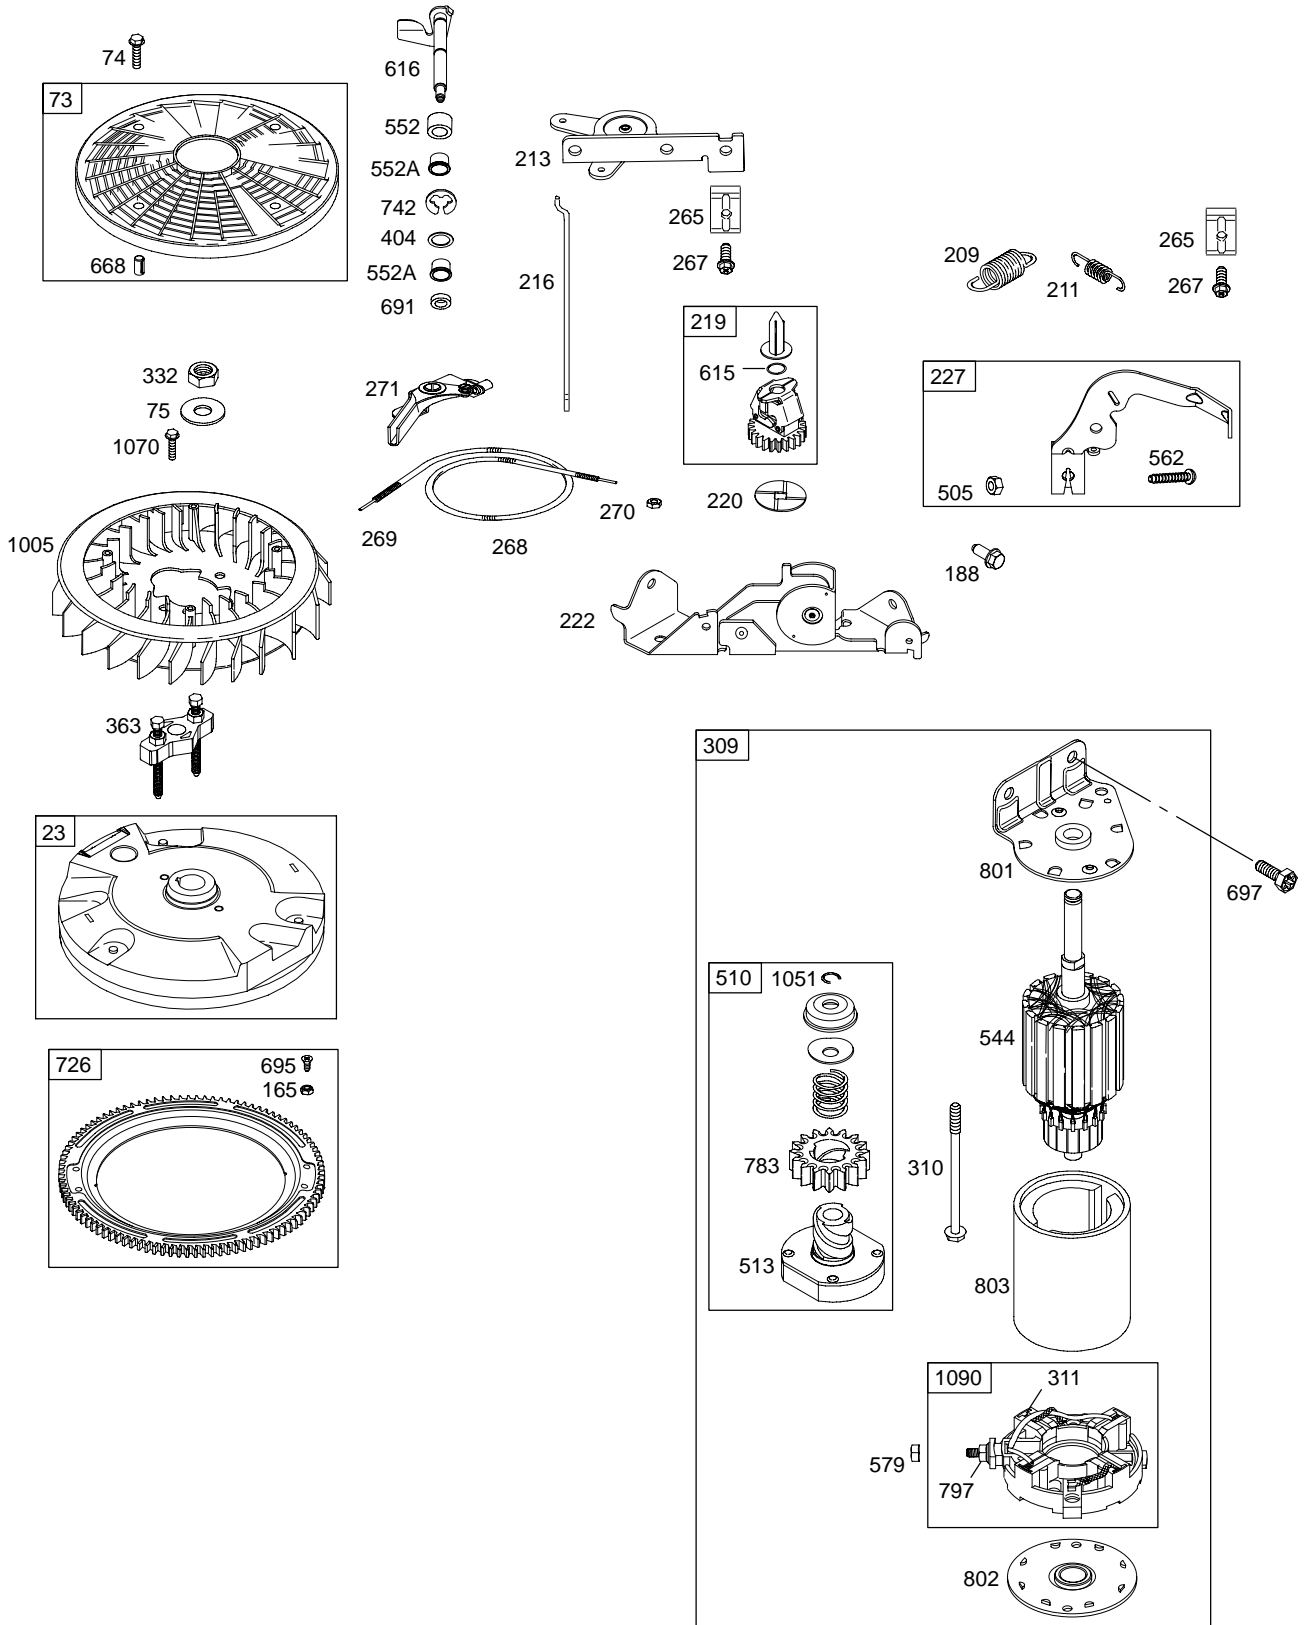
Assemblies include all parts shown in frames.

06/10/2004



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5770-6 Assemblies include all parts shown in frames. 06/10/2004

	<p>10 - 16 AMP</p> <p>474D</p> <p>877C</p> 
<p>NOTE: All stators use a No. 1119 mounting screw. </p> <p>NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.</p>	<p>526 </p> <p>501 </p>

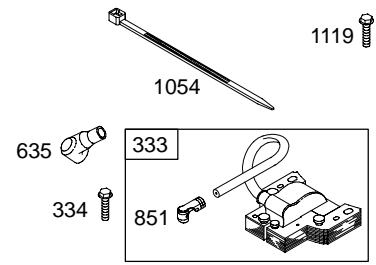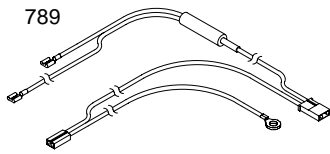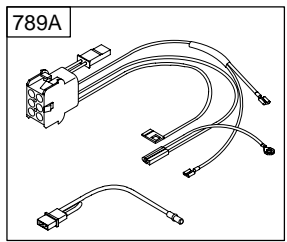 

406500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699751	Cylinder Assembly	26	499604	Ring Set (Standard)	73	494439	Screen - Rotating
2	499585	Kit - Bushing/Seal (Magneto Side)			----- Note -----	74	698425	Screw (Rotating Screen)
3	★391086	Seal - Oil (Magneto Side)			499606 Ring Set (.020" Oversize)	75	691056	Washer (Flywheel)
4	699747	Sump - Engine	27	690975	Lock - Piston Pin	98	699721	Kit - Idle Speed
5	693998	Head - Cylinder (Cylinder 1)	28	690229	Pin - Piston (Standard)	104	●694918	Pin - Float Hinge
5A	693999	Head - Cylinder (Cylinder 2)	29	699699	Rod - Connecting (Standard)	105	●698537	Valve - Float Needle
7	★Δ690962	Gasket - Cylinder Head			(Used After Code Date 03122700).	108A	699808	Valve - Choke
8	499601	Breather Assembly			----- Note -----	117A	●698784	Jet - Main (Standard)
9	★690937	Gasket - Breather			(Used Before Code Date 03122800).	118	●699820	Jet - Main (High Altitude)
10	691108	Screw (Breather Assembly)			For Replacement Rod See Ref 16A	121A	699814	Kit - Carburetor Overhaul
11	690942	Tube - Breather			697253 Rod - Connecting (.020" Undersize)	122	699802	Spacer - Carburetor
12	★697227	Gasket - Crankcase	32	690976	Screw (Connecting Rod)	125A	699807	Carburetor
13	690360	Screw (Cylinder Head)	33	499596	Valve - Exhaust	127	699810	Plug - Welch
15A	690946	Plug - Oil Drain (3/8" Standard)	34	697464	Valve - Intake	130	699809	Valve - Throttle
16	699700	Crankshaft (Used After Code Date 03122700).	35	690963	Spring - Valve (Intake)	131A	699812	Kit - Throttle Shaft
16A	699701	Crankshaft (Used Before Code Date 03122800).	36	690963	Spring - Valve (Exhaust)	133	694914	Float - Carburetor
20	★690947	Seal - Oil (PTO Side)	42	499586	Keeper - Valve	137A	●◆698781	Gasket - Float Bowl
22	694966	Screw (Crankcase Cover/ Sump)	45	690977	Tappet - Valve	141A	699811	Kit - Choke Shaft
23	691053	Flywheel	46	699748	Camshaft	146	690979	Key - Timing
24	222698	Key - Flywheel	50	699801	Manifold - Intake	165	693148	Nut (Ring Gear)
25	499588	Piston Assembly (Standard)	51	690949	Gasket - Intake	187	691049	Line - Fuel
		----- Note -----	51B	699800	Gasket - Intake	187A	699799	Line - Fuel
		499590 Piston Assembly (.020" Oversize)	51C	699803	Gasket - Intake	187B	693180	Line - Fuel Used on Type No(s). 0119.
			53	690951	Stud (Carburetor)	188	691003	Screw (Control Bracket)
			54A	699816	Screw (Intake Manifold)	192	690083	Adjuster - Rocker Arm

★ Included in Engine Gasket Set - Ref. No. 358.

● Included in Carburetor Overhaul Kit - Ref. No. 121.

◆ Included in Carburetor Gasket Set - Ref. No. 977.

Δ Included in Valve Gasket Set - Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5770-8

Assemblies include all parts shown in frames.

06/10/2004

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	698071	Spring-Governor (Yellow) ----- Note ----- 691018 Spring-Governor Used on Type No(s). 0119.	310	691263	Bolt (Starter Motor)	505	691029	Nut (Governor Control Lever)
211	691019	Spring-Governed Idle	311	497608	Brush Set	510	497606	Drive-Starter
212	699805	Link-Throttle	332	691059	Nut (Flywheel)	513	692024	Clutch-Drive
213	691021	Bracket-Choke Control	333	691060	Armature-Magneto	523	691036	Dipstick
216	691022	Link-Choke	334	691061	Screw (Magneto Armature)	524	★691032	Seal-Dipstick Tube
219	698231	Gear-Governor	337	491055	Plug-Spark ----- Note ----- 691043 Plug-Spark Used on Type No(s). 0119.	525	691037	Tube-Dipstick
220	690412	Washer (Governor Gear)	357	691483	Key-Drive Pulley	526	691108	Screw (Regulator) (10 To 16 Amp Regulated)
222	698761	Bracket-Control	358A	699823	Gasket Set-Engine	544	692034	Armature-Starter
227	691048	Lever-Governor Control	363	19203	Flywheel Puller	552	690552	Bushing-Governor Crank
231	690718	Screw (Choke Valve)	383	19374	Wrench-Spark Plug	562	690311	Bolt (Governor Control Lever)
239	491657	Switch-Oil Pressure	385	691108	Screw (Fuel Pump)	573	790444	Plate-Back
240	691035	Filter-Fuel	387	808656	Pump-Fuel	578	691208	Wire-Assembly
250	690957	Retainer-Breather	404	690442	Washer (Governor Crank)	579	691029	Nut (Starter Cable)
252	690956	Collector-Oil	405A	697820	Screw (Back Plate) (Mounting)	601A	691038	Clamp-Hose
265	691024	Clamp-Casing	415	690283	Plug	615	698290	Shaft-Governor Retainer
267	695134	Screw	431	699806	Elbow-Intake ----- Note ----- 790628 Elbow-Intake Used on Type No(s). 0119.	616	691045	Crank-Governor
268	691025	Casing-Control Wire (Cut to Required Length)	445	499486	Filter-Air Cleaner Cartridge	617	691917	Seal-O Ring (Intake Manifold)
269	691026	Wire-Control (Cut to Required Length)	447	691003	Screw (Air Guide Cover)	628	691108	Screw (Fuel Pump Bracket)
270	691027	Nut (Control Wire Casing)	447A	691108	Screw (Air Guide Cover)	633	◆695414	Seal-Choke/Throttle Shaft
271	691028	Lever-Control	474D	696458	Alternator (Dual Circuit) Used on Type No(s). 0106, 0119.	635	66538	Boot-Spark Plug
276★◆	695410	Washer-Sealing	501	691185	Regulator (10 To 16 Amp Regulated)	654	690958	Nut (Carburetor)
287	691108	Screw (Dipstick Tube)				668	691215	Spacer
304	695277	Housing-Blower (Black)				691	★690657	Seal-Governor Shaft
305	691005	Screw (Blower Housing)				695	693149	Screw (Ring Gear)
309	497595	Motor-Starter ----- Note ----- 697401 Motor-Starter Used on Type No(s). 0119.				697	690372	Screw (Drive Cap)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

406500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
703	691010	Clip	868	★△690968	Seal-Valve	1024	499054	Pump-Oil
718	690959	Pin-Locating	877C	399916	Wire/Connector-Alternator	1026	690981	Rod-Push (Steel)
726	499612	Gear-Ring	883	690970	Gasket-Exhaust	1026A	690982	Rod-Push (Aluminum)
741	690980	Gear-Timing	914	691127	Screw (Rocker Cover)	1027	492932	Filter-Oil
742	690328	Retainer-E Ring	918	694000	Hose-Vacuum	1029	690972	Arm-Rocker
750	696999	Screw (Oil Pump Cover)	934	691058	Screw (Fan Retainer)	1035	691042	Shaft-Pump
783	693058	Gear-Pinion	943	★690589	Seal-O Ring (Oil Pump Cover)	1036	695704	Label-Emissions
788	691039	Bracket-Fuel Pump	947	699728	Solenoid-Fuel	1051	691265	Ring-Retaining
789A	698330	Harness-Wiring	965	499613	Cover-Oil Pump	1054	280275	Tie-Cable
797	693167	Nut (Brush Retainer)	967	273638	Filter-Pre Cleaner	1058	275475	Owner's Manual (Emission)
798	697890	Screw (Rocker Arm)	968	790095	Cover-Air Cleaner	1070	691058	Screw (Flywheel Fan)
801	691283	Cap-Drive	975A	699502	Bowl-Float	1090	691293	Retainer-Brush
802	691286	Cap-End	977	699815	Gasket Set-Carburetor	1095	694013	Gasket Set-Valve
803	693757	Housing-Starter	987	◆699813	Seal-Throttle Shaft	1100	690973	Pivot-Rocker Arm
842	★691031	Seal-O Ring (Dipstick)	1005	499603	Fan-Flywheel	1119	691183	Screw (Alternator)
847	499602	Dipstick/Tube Assembly	1013	690954	Nipple-Oil Filter	1127	695407	Screw (Float Bowl)
851	493880	Terminal-Spark Plug	1017	690770	Screen-Oil Pump	1330	273521	Manual-Repair
865	691012	Cover-Air Guide (Cylinder 1)	1019	790094	Kit-Label			
865A	691014	Cover-Air Guide (Cylinder 2)	1022	★△690971	Gasket-Rocker Cover			
865B	691015	Cover-Air Guide (Valley)	1023	499599	Cover-Rocker Arm (Cylinder 1)			
			1023A	499600	Cover-Rocker Arm (Cylinder 2)			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5770-10

Assemblies include all parts shown in frames.

06/10/2004