

9L900

Illustrated Parts List

Model Series

9L900

TYPE NUMBERS
0213 through 0359.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Brake	9
Cams	3
Carburetor	4
Controls	5
Covers	7
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Flywheel	7
Fuel Tank	4
Governor Spring	5
Head	2
Ignition	5
Kits/Gaskets – Sets	2
Muffler Group	6
Oil Group	2
Piston Group	3
Rewind/Blower Housing 1	8
Rewind/Blower Housing 2	8
Valves	3


 



 







PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.




0 24847 09271 4

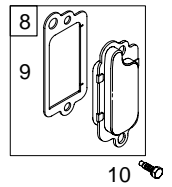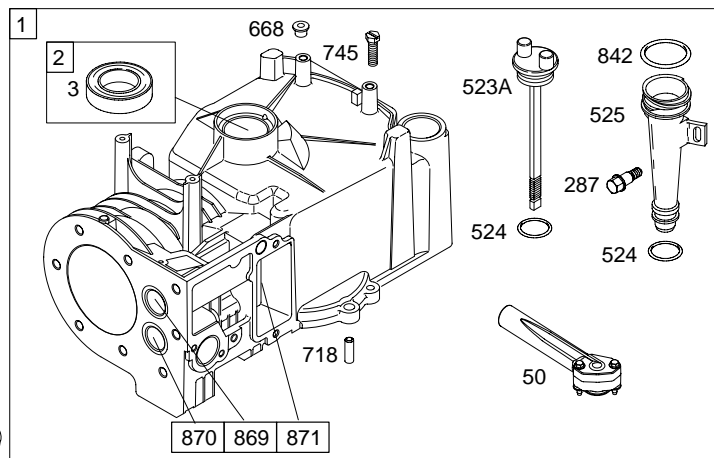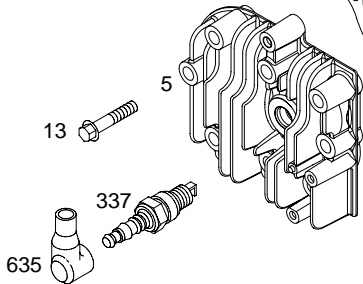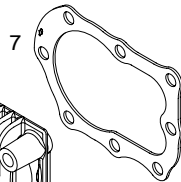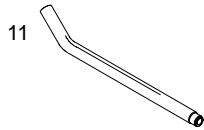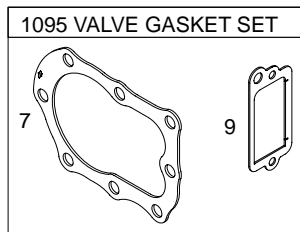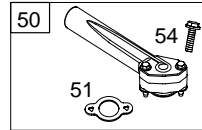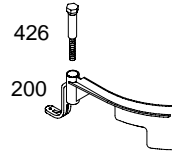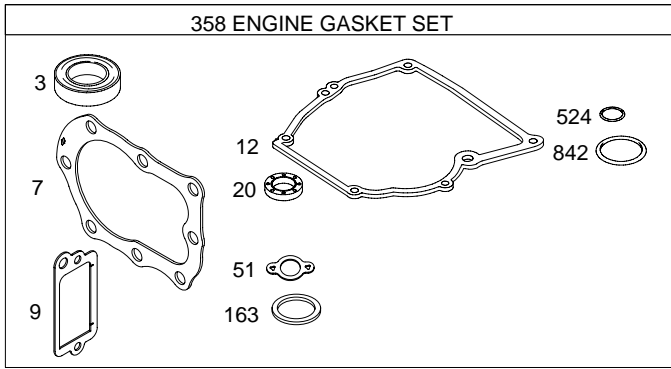



1019 LABEL KIT




1058 OWNER'S MANUAL

1330 REPAIR MANUAL


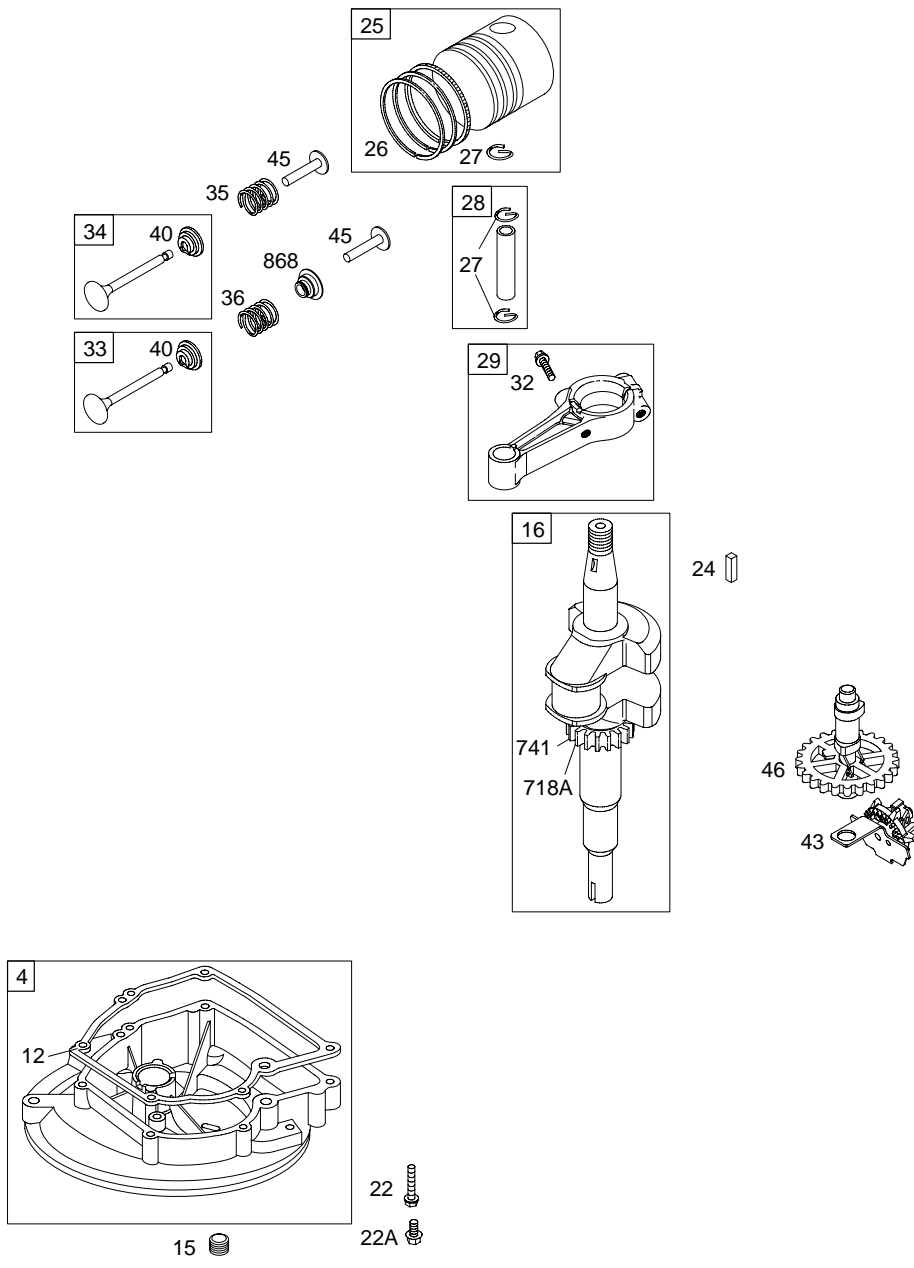



5739-3 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 05/18/2004

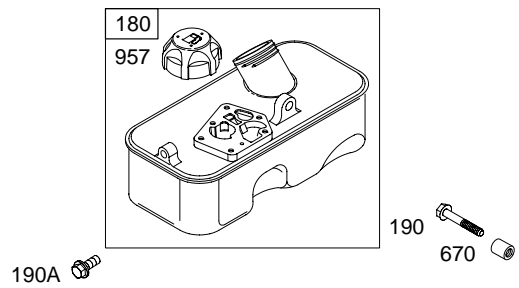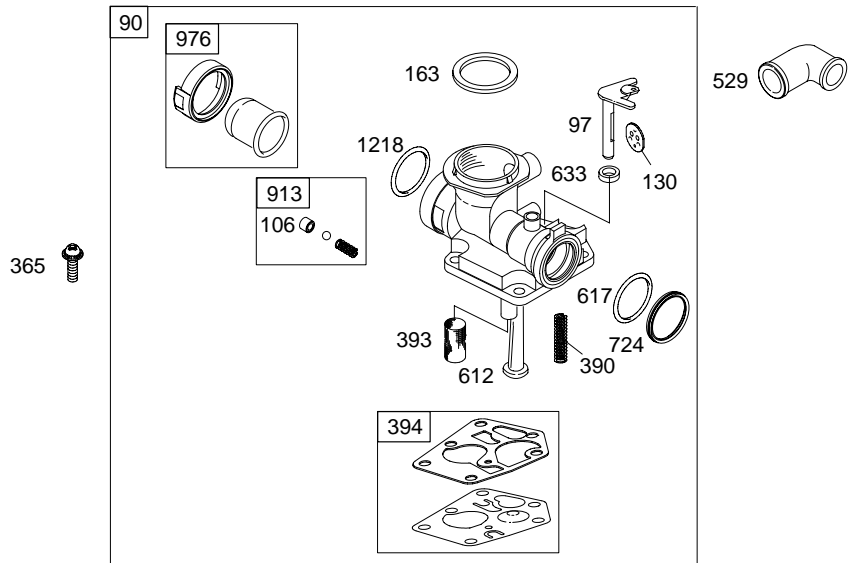

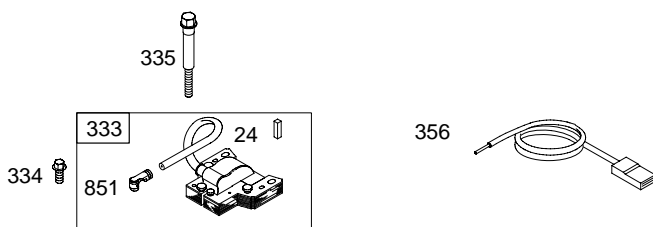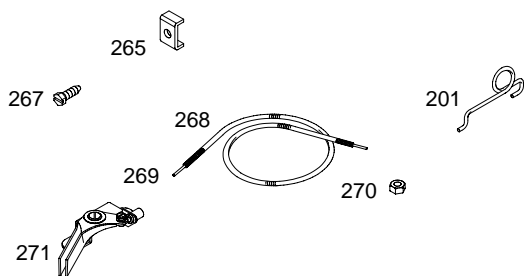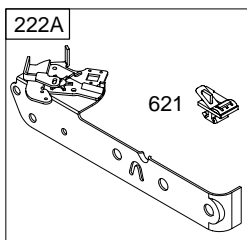



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5739-5 Assemblies include all parts shown in frames. 05/18/2004

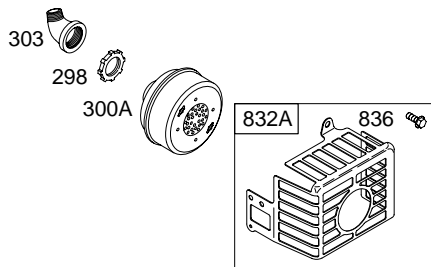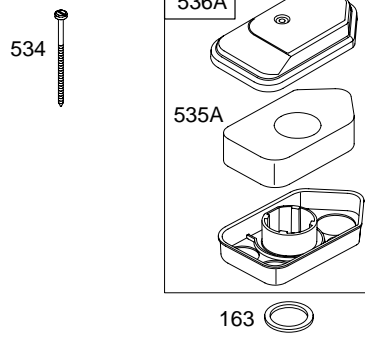

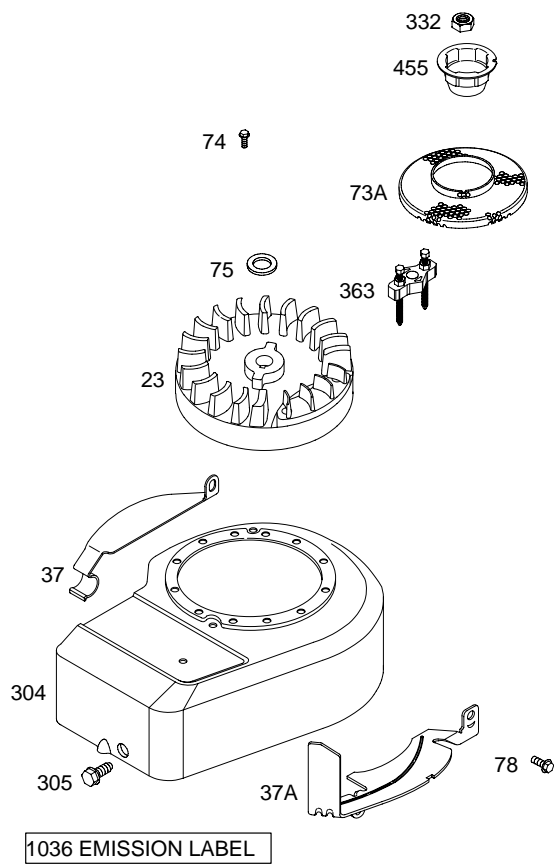

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5739-7 Assemblies include all parts shown in frames. 05/18/2004

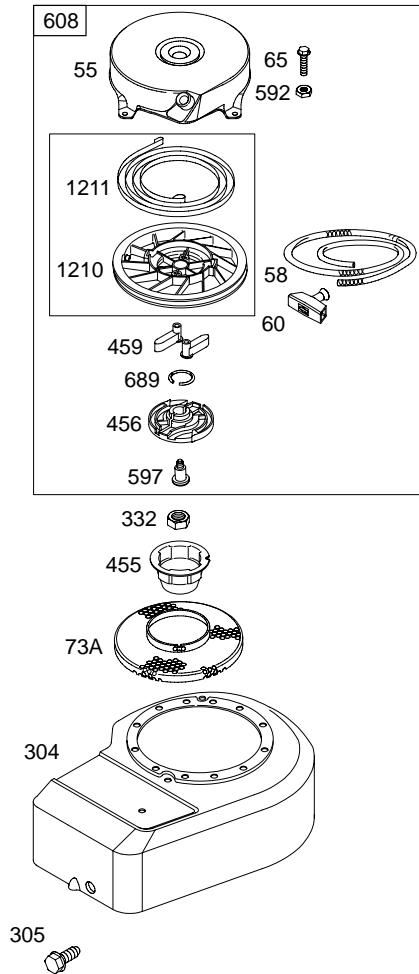

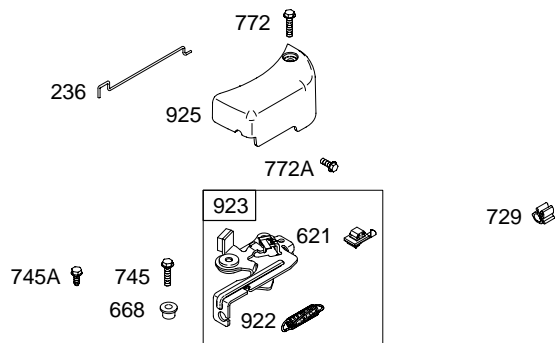

9L900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly	26	699658	Ring Set (Standard)	73A	699850	Screen—Rotating
2	399269	Kit—Bushing/Seal (Magneto Side)	27	691588	Lock—Piston Pin	74	691627	Screw (Rotating Screen)
3	★299819	Seal—Oil (Magneto Side)	28	699659	Pin—Piston (Standard)	75	691736	Washer (Flywheel)
4	698691	Sump—Engine	29	699655	Rod—Connecting (Standard)	78	692198	Screw (Flywheel Guard)
5	690386	Head—Cylinder	32	691664	Screw (Connecting Rod)	90	498811	Carburetor
7	★△698717	Gasket—Cylinder Head	33	296676	Valve—Exhaust	97	691931	Shaft—Throttle
8	699640	Breather Assembly	34	296677	Valve—Intake	106	691901	Seat—Inlet
9	★△695890	Gasket—Breather	35	690520	Spring—Valve (Intake)	130	691190	Valve—Throttle
10	691666	Screw (Breather Assembly)	36	690520	Spring—Valve (Exhaust)	163	★271139	Gasket—Air Cleaner
11	691245	Tube—Breather	37	690482	Guard—Flywheel (Carburetor Side)	180	494406	Tank—Fuel (Metal)
12	★692218	Gasket—Crankcase (Standard)	37A	691209	Guard—Flywheel (Muffler Side)	188	692198	Screw (Control Bracket)
13	691640	Screw (Cylinder Head)	40	692194	Retainer—Valve	190	691640	Screw (Fuel Tank)
15	691680	Plug—Oil Drain	43	698690	Slinger—Governor/Oil	190A	692198	Screw (Fuel Tank)
16	692991	Crankshaft	45	691762	Tappet—Valve	200	691912	Blade—Governor
		Note	46	691998	Camshaft	201	690347	Link—Air Vane
		492086 Crankshaft Used on Type No(s). 0356.	50	699644	Manifold—Intake	209	691297	Spring—Governor
		692990 Crankshaft Used on Type No(s). 0359.	51	★699649	Gasket—Intake			Note
20	★391483	Seal—Oil (PTO Side)	54	691111	Screw (Intake Manifold)			690251 Spring— Governor Used on Type No(s). 0245, 0305, 0356, 0359.
22	691662	Screw (Crankcase Cover/Sump)	55	692144	Housing—Rewind Starter	211	691859	Spring—Governed Idle
22A	691108	Screw (Crankcase Cover/Sump)	58	697316	Rope—Starter (1/8" Diameter, 88–5/8" Long) (Cut To Required Length)	222A	691446	Bracket—Control
23	692009	Flywheel	60	691915	Grip—Starter Rope (1 Piece)	236	691867	Link—Lockout
24	222698	Key—Flywheel	65	690837	Screw (Rewind Starter)	265	692179	Clamp—Casing
25	699657	Piston Assembly (Standard)				267	691044	Screw (Casing Clamp)
						268	691072	Casing—Control Wire
						269	691589	Wire—Control

★ Included in Engine Gasket Set—Ref. No. 358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
270	691027	Nut (Control Wire Casing)	535A	698369	Filter—Air Cleaner Foam	836	690664	Screw (Muffler Guard)
271	691028	Lever—Control	536A	698472	Cleaner—Air (Plastic)			Used on Type No(s). 0245.
287	691002	Screw (Dipstick Tube)	592	690800	Nut (Rewind Starter)	842	★691870	Seal—O Ring (Dipstick Tube)
298	691720	Locknut—Muffler/Elbow	597	691696	Screw (Pawl Friction Plate)	851	493880	Terminal—Spark Plug
300A	394569	Muffler (Round Lo Tone)	608	499706	Starter—Rewind	868	697338	Seal—Valve
303	690291	Elbow—Exhaust	612	496046	Tube—Pick Up	869	699641	Seat—Valve (Intake)
304	691484	Housing—Blower (Compliance Engines)	617	270344	Seal—O Ring (Intake Manifold)	870	699642	Seat—Valve (Exhaust)
305	692198	Screw (Blower Housing)	621	692310	Switch—Stop	871	699643	Bushing—Valve Guide (Exhaust Valve)
332	690662	Nut (Flywheel)	633	691321	Seal—Choke/Throttle Shaft (Throttle)			Note
333	496914	Armature—Magneto	635	66538	Boot—Spark Plug			63709 Bushing—Valve Guide (Intake Valve)
334	691061	Screw (Magneto Armature)	668	692889	Spacer	913	494409	Seat—Check Valve
335	691107	Screw (Magneto Armature With Air Vane)	670	691633	Spacer—Fuel Tank (Non Compliance Engines)	922	692135	Spring—Brake
337	802592	Plug—Spark	689	691855	Spring—Friction	923	691487	Brake
356	692390	Wire—Stop	718	690959	Pin—Locating	925	691349	Cover—Linkage
358	699933	Gasket Set—Engine	718A	499047	Pin—Locating	957	497929	Cap—Fuel Tank (Plastic)
363	19069	Puller—Flywheel	724	697478	Retainer—Seal	976	694394	Primer—Carburetor
365	692200	Screw (Carburetor)	729	690586	Clip—Wire	1019	699934	Kit—Label
383	89838	Wrench—Spark Plug	741	691805	Gear—Timing	1036	699930	Label—Emissions
390	691839	Spring—Choke Diaphragm	745	691146	Screw (Brake)	1058	275508	Operator's Manual (Emission)
393	691837	Screen—Carburetor	745A	690859	Screw (Brake)	1095	498526	Gasket Set—Valve
394	495770	Diaphragm—Carburetor	772	691111	Screw (Linkage Cover)	1210	499901	Pulley/Spring Assembly (Pulley)
426	691107	Screw (Governor Blade)	772A	690345	Screw (Linkage Cover)	1211	499901	Pulley/Spring Assembly (Spring)
455	691236	Cup—Flywheel	832A	699670	Guard—Muffler Used on Type No(s). 0245.	1218	695866	Seal—O Ring (Carburetor)
456	692299	Plate—Pawl Friction				1330	270962	Repair Manual
459	281505	Pawl—Ratchet						
523A	691913	Dipstick						
524	★692296	Seal—Dipstick Tube						
525	691320	Tube—Dipstick						
529	692189	Grommet						
534	691417	Screw (Air Cleaner)						

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5739—11 Assemblies include all parts shown in frames. **05/18/2004**

