


EB4424 OWNER'S MANUAL

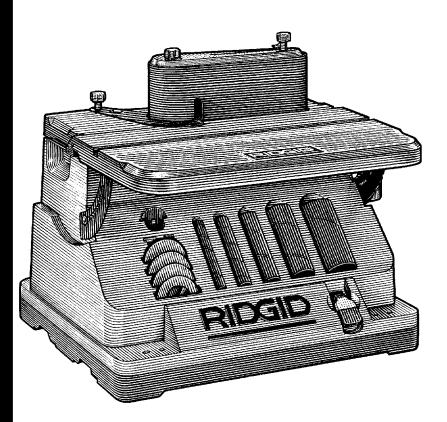

OSCILLATING EDGE BELT/SPINDLE SANDER


- Assembly
- Operation
- Repair Parts

For Your Safety:
Read all instructions carefully
QUESTIONS OR COMMENTS?
CALL 1-800-4-RIDGID
www.ridgidwoodworking.com

Part No. SP6001 Printed in U.S.A.

Parts List For RIDGID Oscillating Edge Belt/Spindle Sander Model EB44240

RIDGID parts are available on-line at www.ridgidparts.com Figure 1

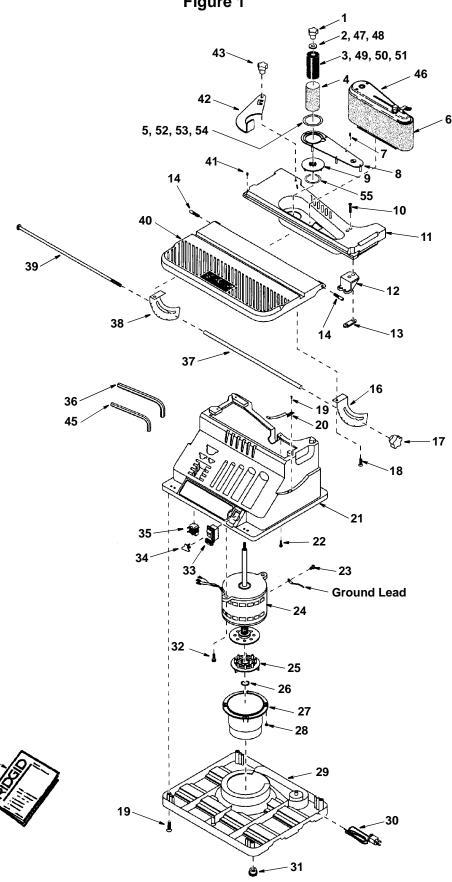

Parts List For RIDGID Oscillating Edge Belt/Spindle Sander Model EB44240

RIDGID parts are available on-line at www.ridgidparts.com Figure 1

Always order by Part Number—Not by Key Number

| Key No. | Part No. | Description |
|------------|------------|--------------------------------|
| 1 | 826358 | Knob Spindle |
| 2 | 805553-2 | Washer 21/64 x 5/8 x 1/32 |
| 3 | 822304 | Drum Sanding 3/4" |
| 4 | † | Drum Sandpaper |
| 5 | 825808 | Plate Throat 2" |
| 6 | † | Belt Sanding 4" x 24" |
| 7 | 810993-2 | Screw Set Half Dog 10/32 x 1/2 |
| 8 | 825841 | Adapter Throat Plate |
| 9 | 825544 | Fan |
| 10 | 805297-9 | Screw Flat Hd 1/4-20 x 5/8 |
| 11 | 825523 | Table Rear |
| 12 | 825548 | Plate Wear |
| 13 | 825844 | Nut Special Twin 1/4-20 |
| 14 | 825842 | Screw Shoulder 1/4-20 |
| 15 | | |
| 16 | 825537 | Bracket Table Lock |
| 17 | 825852 | Knob 1/4-20 x 3/4 |
| 18 | 159572-138 | Screw Wash/Hd |
| | | Ty "T" 10-32 x 3/8 |
| 19 | 808380-7 | Screw Pan Hd 10-14 x 1/2 |
| 20 | 825840 | Spring Detent |
| 21 | 826803 | Base |
| 22 | 159572-186 | Screw Hex Hd |
| | | Ty "T" 1/4-20 x 1 |
| 23 | 824604 | Screw Hex Wash/Hd |
| | | Ty "T" 8-32 x 3/8 |
| 24 | 826783 | Motor Asm |
| 25 | 826469 | Follower Cam |
| 26 | 805641-1 | Ring Retaining 5133-31 |
| 27 | 826470 | Housing |
| | I . | I . |

| Key No. | Part No. | Description |
|------------|-----------|---------------------------------|
| 28 | 822356 | Nut Hex Flange Lock 8-32 |
| 29 | 826801 | Enclosure |
| 30 | 825854 | Cord w/Plug |
| 31 | 819012 | Foot |
| 32 | 9416630 | Screw Hex Hd Ty "T" 5/16-18 x 1 |
| 33 | 826347 | Switch Locking |
| 34 | AC1000 | † Key Switch |
| 35 | 817399-11 | Relay |
| 36 | 37837 | Wrench Hex "L" 5/32 |
| 37 | 825549 | Spacer Table Lock |
| 38 | 825537-1 | Bracket Table Lock Left |
| 39 | 825543 | Bolt Table Lock |
| 40 | 825524 | Table Front |
| 41 | 803309-2 | Screw Soc Set Lock 10-32 x 3/8 |
| 42 | 825525 | Plate Stop |
| 43 | 825539-1 | Knob 1/4-20 |
| 44 | SP6001 | Owners Manual |
| 45 | 37836 | Wrench Hex "L" 3/32 |
| 46 | _ | Belt Sanding Assembly |
| | | (See Fig. 2) |
| 47 | 60358 | * Washer 5/8 x 1-3/4 x 1/8 |
| 48 | 805553-24 | Washer 21/64 x 7/8 x 3/64 |
| 49 | 822304-1 | Drum Sanding 1" |
| 50 | 822304-2 | Drum Sanding 1-1/2" |
| 51 | 822304-3 | Drum Sanding 2" |
| 52 | 825808-1 | Plate Throat 1-1/2" |
| 53 | 825808-2 | Plate Throat 1" |
| 54 | 825808-3 | Plate Throat 1/2" |
| 55 | 805642 | Ring, Retaining 5160-50 |


^{*} Standard Hardware Item - May be purchased locally

[†] These parts are available where you purchased your sander.

[•] Any attempt to repair this motor may create a hazard unless repair is done by a qualified service technician. Repair service is available at your nearest Authorized Service Center.

Parts List For RIDGID Oscillating Edge Belt/ Spindle Sander Model EB44240

RIDGID parts are available on-line at www.ridgidparts.com Figure 2

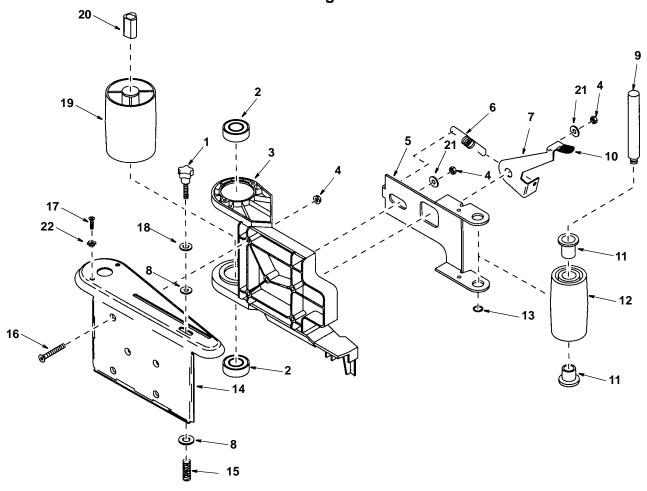

Always order by Part Number—Not by Key Number

| Key No. | Part No. | Description |
|------------|----------|-----------------------------|
| 1 | 825539 | Knob 10-32 x 1-1/4 |
| 2 | 825541 | Bearing Ball |
| 3 | 825526 | Bed |
| 4 | 37482 | Nut Lock |
| 5 | 825528 | Guide |
| 6 | 825531 | Spring Extension |
| 7 | 825529 | Lever |
| 8 | 805549-5 | * Washer 13/64 x 1/2 x 3/64 |
| 9 | 825532 | Shaft Idle |
| 10 | 826163-2 | Cap Grip |
| 11 | 825838 | Bushing |

^{*} Standard Hardware Item - May be purchased locally

| Key No. | Part No. | Description |
|------------|----------|---------------------------------|
| 12 | 825542 | Drum Idle |
| 13 | 805642 | Ring Retaining 5160-50 |
| 14 | 826802 | Platen |
| 15 | 30521 | Spring Swivel |
| 16 | 821166-1 | Screw Flat Hd Hex 10/32 x 1-1/2 |
| 17 | 808380-5 | Screw Pan hd #8 x 3/4 |
| 18 | 820175 | Washer Rubber |
| 19 | 825547 | Drum Drive |
| 20 | 509547 | Coupling |
| 21 | 9416712 | * Washer 3/16 x 5/8 x 1/16 |
| 22 | 114603 | * Lockwasher Ext. #10 |

Maintenance .

WARNING: For your own safety, turn switch "OFF" and remove plug from power source outlet before adjusting or maintaining your sander.

WARNING: To reduce the risk of electrocution or fire, any repairs to electrical systems should be done only by qualified service technicians. Unit must be reassembled exactly to factory specifications.

If power cord is worn or cut, or damaged in anyway, have it replaced immediately.

Frequently blow out or vacuum out any dust that may accumulate inside the motor.

Lubrication

All bearings in tool are self-lubricating. They require no further lubrication.

RIDGID Recommends the Following Accessories

WARNING: Use only accessories recommended for this sander. Using other accessories may be dangerous.

| Item | SKU No. |
|-------------|---------|
| Miter Gauge | AC1021 |
| Switch Kev | AC1000 |

Do not use any accessory unless you have received and read complete instructions for its use.

Wiring Diagram

