


MS1050 OWNER'S MANUAL

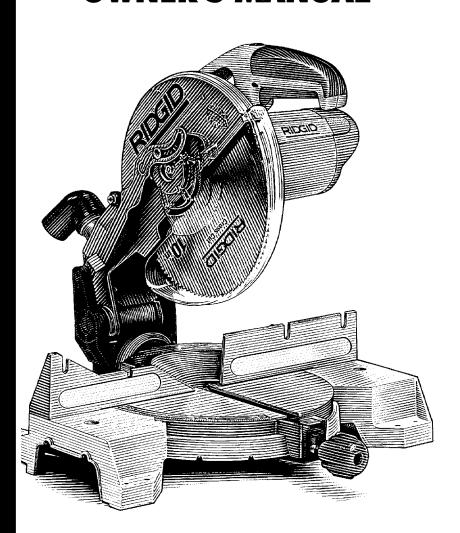

10 INCH COMPOUND MITER SAW

- Assembly
- Operation
- Repair Parts

For Your Safety:


Read all instructions carefully

QUESTIONS OR COMMENTS?

CALL 1-800-4-RIDGID

Part No. SP6126 Printed in U.S.A.

Parts List for RIDGID 10" Compound Miter Saw Model No. MS10500

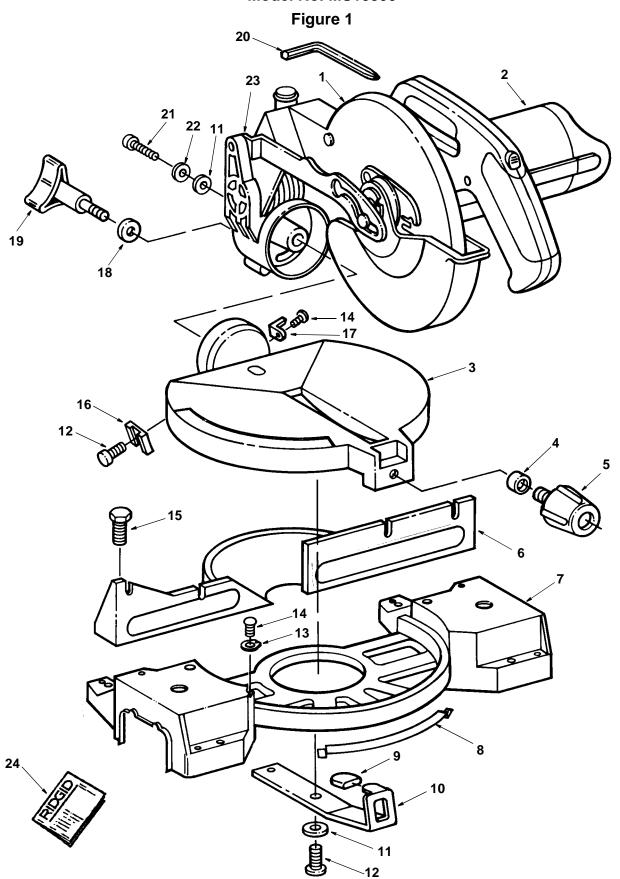

Repair Parts

Parts List for RIDGID 10" Compound Miter Saw Model No. MS10500

Figure 1

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	See Fig. 4	Blade Guard Assembly
2	See Fig. 2	Motor Assembly
3	826213	Table
4	823296	Foot Locking
5	826055	▲ Knob
6	826078	Fence
7	826073	Base
8	823295-1	Shim Table
9	826163	Cap Grip
10	823297-1	Spring Index
11	805553-4	▲ Washer 21/64 x 9/16 x 1/16
12	9421621	▲ Scr Soc Cap 5/16-18 x 5/8


Key No.	Part No.	Description
13	826057	Pointer
14	*	Screw Pan Hd. Type "T" 8-32 x 5/16
15	*	Screw Hex Type "T" 5/16-18 x 1
16	823326	Stop Bevel
17	826068	Indicator Bevel
18	*	Washer .380 x 47/64 x 1/16
19	826054	Knob Bevel
20	823314	Wrench Combination
21	*	Screw Hex Type "T" 5/16-18 x 3/4
22	821421-6	O-Ring
23	See Fig. 3	Pivot Asm.
24	SP6126	Owners Manual

^{*} Standard hardware item - may be purchased locally.

▲ WARNING: These items are important to the safety of this tool. Do not substitute common parts.

Repair Parts

Parts List For RIDGID 10" Compound Miter Saw Model No. MS10500 Figure 2 Motor Assembly

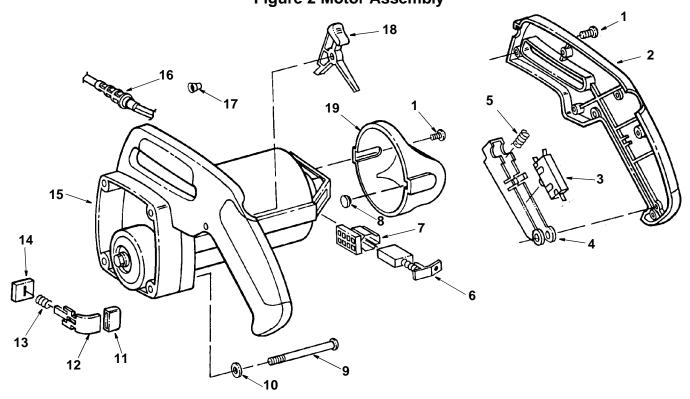

WARNING: For your safety, this miter saw is specially insulated. To reduce the risk of electrical shock, fire or injury, use only parts identical to those identified in the parts list. Reassemble exactly as originally assembled.

Always order by Part Number — Not by Key Number

Key No.	Part No.	Description
1	*	Screw Pan Cr #8 Plastite
2	826119	Handle Right Half
3	826066	♠ Switch SPDT
4	826012	Trigger
5	826053	▲ Spring Compression
6	826016	▲ Brush
7	826017	▲ Holder Brush
8	354653	Bumper
9	826453	Screw Pn. Hd. 10-32 x 2-1/4
10	*	Washer 13/64 x 3/8 x 1/32

^{*} Standard hardware - may be purchased locally


Key No.	Part No.	Description
11	826163	Cap Grip
12	826062	Lock Arbor
13	823322	Spring Arbor Lock
14	823417	Seal
15	826488	▲ Motor
16	826040	▲• Cord w/Plug
17	803709-1	▲ Connector Wire
18	826120	▲ Button Lock
19	826064	Cap Motor Housing

 WARNING: Any attempt to repair or replace electrical parts on this unit may create a hazard unless repair is done by a qualified service technician. Repair service is available from authorized RIDGID Service Center.

[▲] WARNING: These items are important to the safety of this tool. Do not substitute common parts.

Parts List For RIDGID 10" Compound Miter Saw Model No. MS10500

Figure 3 - Pivot Assembly

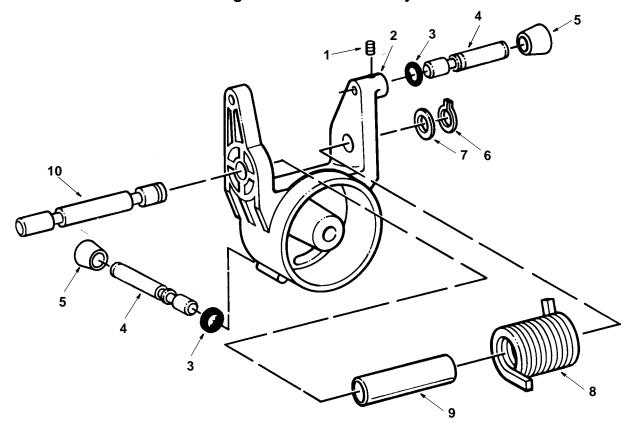

Always order by Part Number — Not by Key Number

Key No.	Part No.	Description
1	803309-2	Screw Set Hex Soc. Locking 10-32 x 3/8
2	826096	Pivot
3	821421-2	O-Ring
4	826058	Shaft Stop
5	826357	Knob
6	805606	Ring Retaining
7	803899-5	Washer Thrust
8	823328	▲ •‡ Spring Torsion
9	823298-1	Spacer Spring
10	823301	Shaft Pivot

^{*} Standard hardware - may be purchased locally


▲ WARNING: These items are important to the safety of this tool. Do not substitute common parts.

‡ CAUTION: See mechanical assembly caution on page 31.

 WARNING: Uncontrolled spring release or misinstallation of these parts may create a hazard unless repair is done by a qualified service technician. Repair service is available from authorized RIDGID Service Center.

Repair Parts

Parts List For RIDGID 10" Compound Miter Saw Model No. MS10500 Figure 4

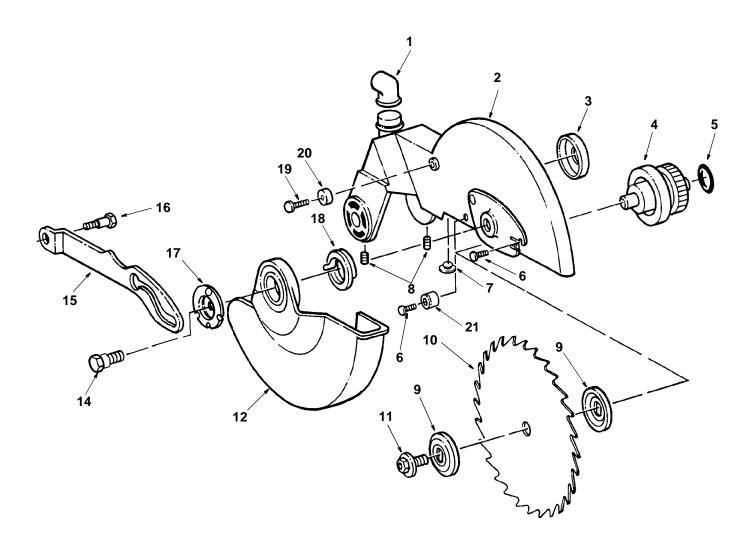

Parts List For RIDGID 10" Compound Miter Saw Model No. MS10500

Figure 4

Always order by Part Number — Not by Key Number

Key No.	Part No.	Description
1	820536	Dust Elbow
2	826487	Arm/Guard
3	823300-1	Washer Cup
4	823316	Arbor
5	821421-3	Ring "O"
6	*	Screw Pan Cr Ty "T"
		10-32 x 5/8
7	826031	Bumper Guard
8	826481	Screw Lock Set 1/4-20 x 3/8
9	823303	▲ Collar Blade
10	826667	Blade Saw 104 Tooth

Key No.	Part No.	Description
11	823304	Screw Blade
12	826039	‡ Guard Lower
13		
14	821521-2	▲ Screw Shoulder
15	826026	Link Actuator
16	821521-1	▲ Screw Shoulder
17	823840-2	Retainer Guard
18	823292	•‡ Spring Guard
19	821521	Screw Shoulder
20	823306-1	Bearing Cam
21	826720	Bumper

▲ WARNING: These items are important to the safety of this tool. Do not substitute common parts.

‡ CAUTION: See mechanical assembly caution below.


 WARNING: Uncontrolled spring release or misinstallation of these parts may create a hazard unless repair is done by a qualified service technician. Repair service is available from authorized RIDGID Service Center.

CAUTION: Mechanical Assembly, to qualified service technician.

- 1. Wear approved eye protection when working with coil spring including spring, arbor lock 823322.
- 2. Incorrect reassembly of torsion spring 823328 can cause an unsafe condition because cutting head fails to rise fully to stop, or because spring fails through over-stress.
- 3. Improper reassembly of mechanisms controlling movement of lower guard 826039 can cause an unsafe condition because guard fails to operate freely as cutting head is moved up and down.

^{*} Standard hardware - may be purchased locally


Wiring Diagram

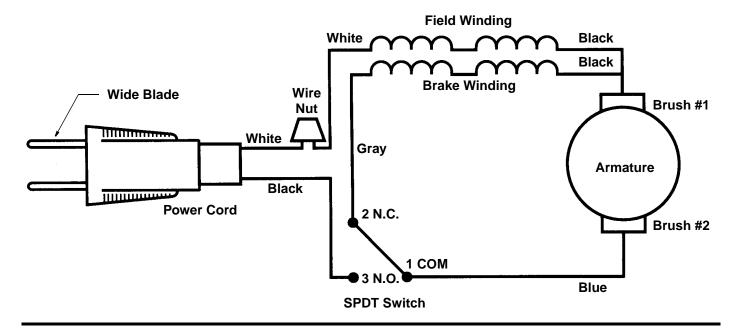

Troubleshooting Of Brake By Qualified Service Person Only

- 1. Check commutation at no load. If there is a heavy sparking which follows the curvature of the commutator replace the armature.
- 2. To continue trouble shooting, now unplug the power cord.
- 3. Install new brushes, especially if delayed come-in of brake has been noticed before failure.
- 4. Check brake circuit for continuity: Remove motor cap and brushes. Use ohmmeter to check continuity from brush terminal to brush terminal. If open, locate exact place using ohmmeter. As indicated by test, tighten connection, replace field assembly, or replace switch.
- 5. After repair, check direction of blade rotation vs. guard arrow.

Motor Parts List for RIDGID 10 Inch Miter Saw Model Nos. MS10500, MS10501

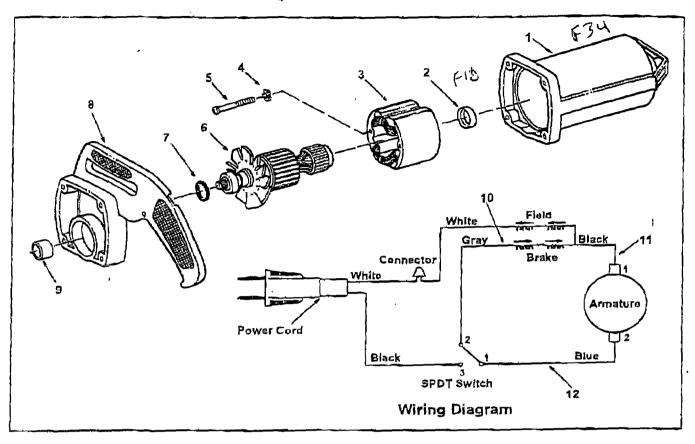

When ordering repair parts, always give the following information as shown in this list:

- 1. The part number
- 2. The part name

- 3. The model no.
- 4. The name of item

Always order by part number - Not by key number

Motor Number 826488

Key No.	Part No.	Description
1	825102	Housing Motor
2	326023	Sleeve
3	824988-3	Field
4	•	Lockwasher #10
5	809380-13	Screw Рал Hd. #8 x 2-1/4
Ę.	824986-3	Armature
7	821421-5	Ring "O"
8	826013	Housing Gear
9	818682	Bearing Needle HK0910
10	824987-2	Lead Gray
11	824 9 87	Lead Black
12	823264-6	Lead Blue
	509241	Grease (Not Illustrated)

^{*} Standard Hardwaro Item - May be Purchased Locally