


# PARTS LIST



## C1U TYPE

# C1U TYPE

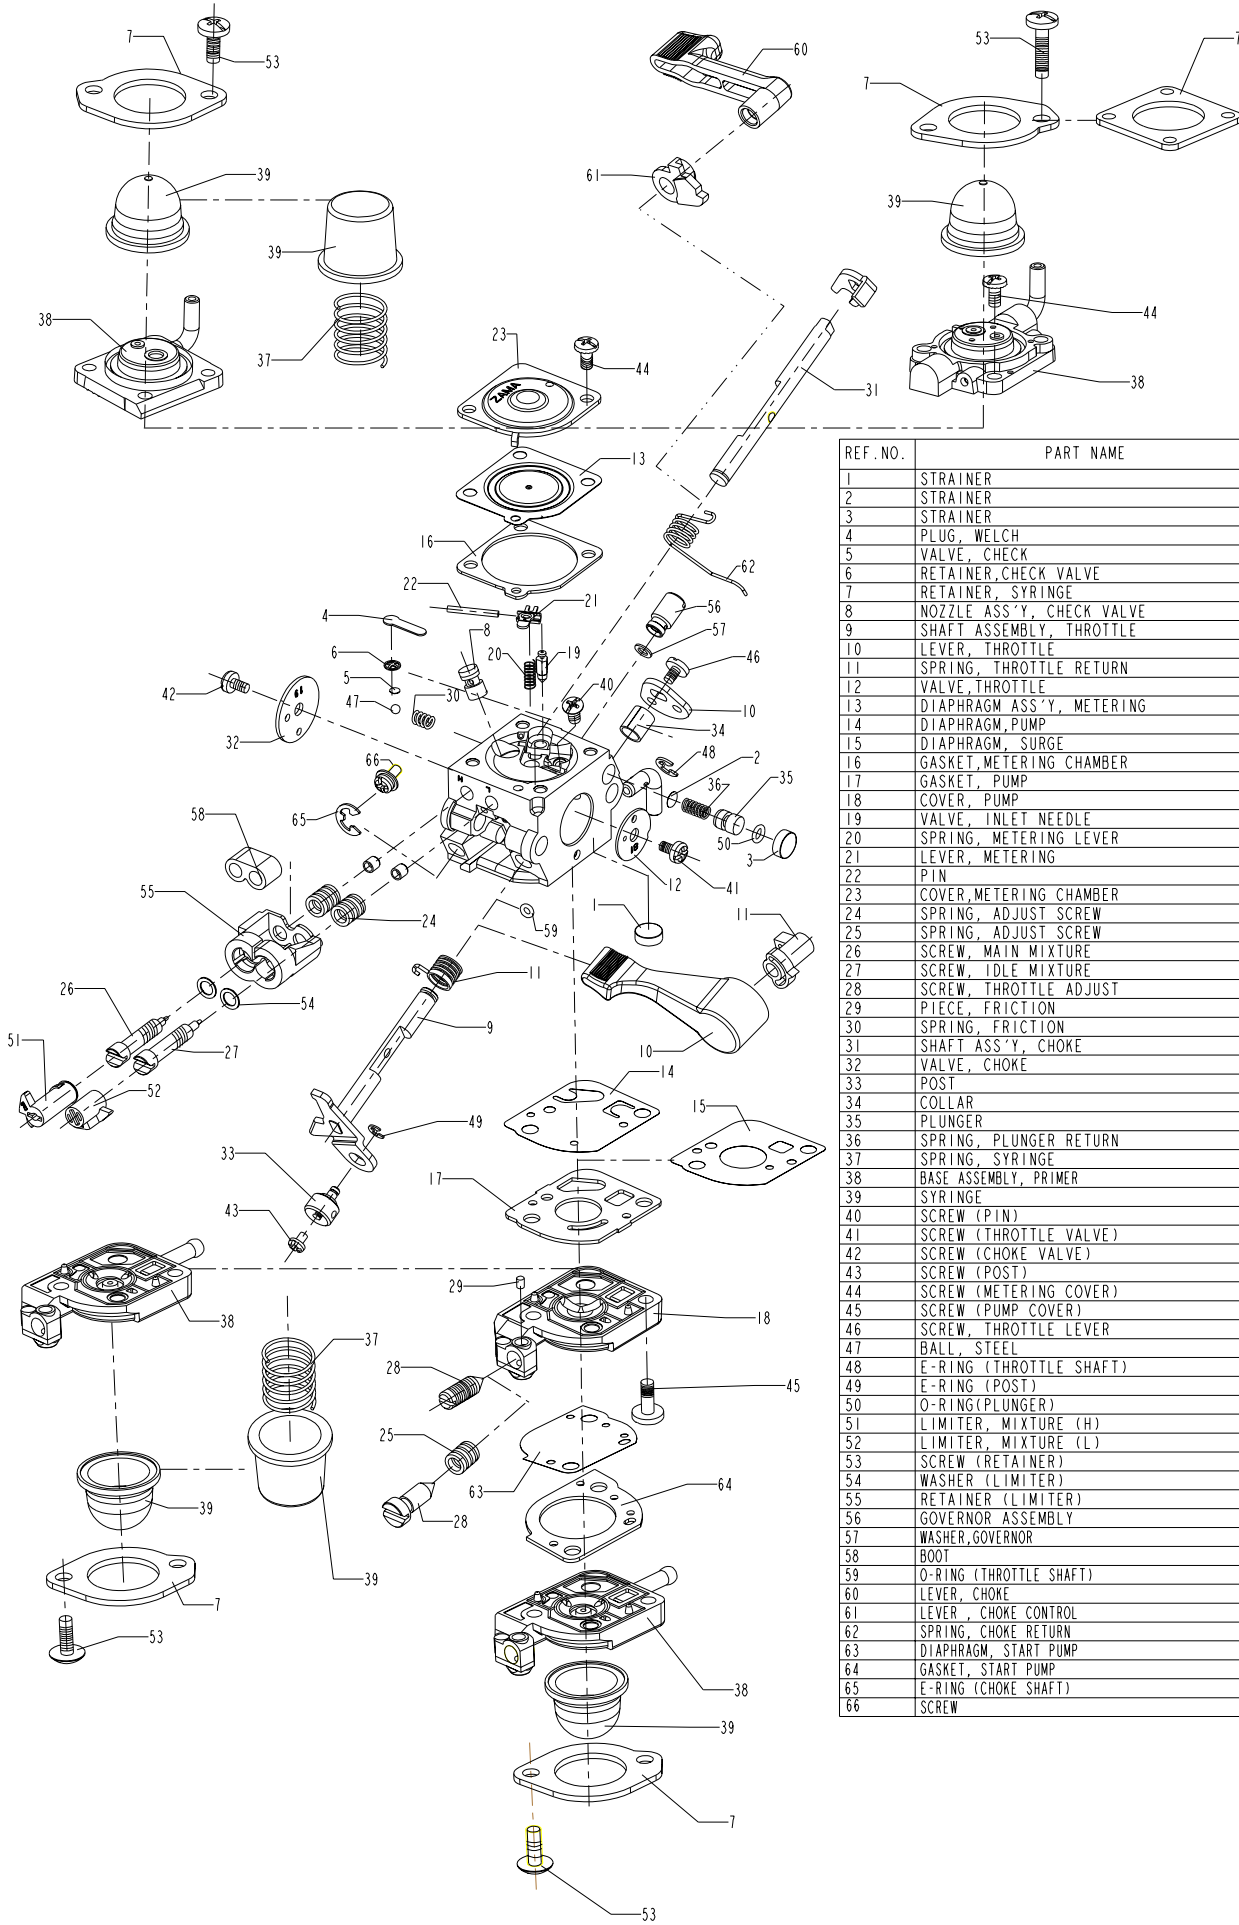

REF. NO.	PART NAME
1	STRAINER
2	STRAINER
3	STRAINER
4	PLUG, WELCH
5	VALVE, CHECK
6	RETAINER, CHECK VALVE
7	RETAINER, SYRINGE
8	NOZZLE ASS'Y, CHECK VALVE
9	SHAFT ASSEMBLY, THROTTLE
10	LEVER, THROTTLE
11	SPRING, THROTTLE RETURN
12	VALVE, THROTTLE
13	DIAPHRAGM ASS'Y, METERING
14	DIAPHRAGM, PUMP
15	DIAPHRAGM, SURGE
16	GASKET, METERING CHAMBER
17	GASKET, PUMP
18	COVER, PUMP
19	VALVE, INLET NEEDLE
20	SPRING, METERING LEVER
21	LEVER, METERING
22	PIN
23	COVER, METERING CHAMBER
24	SPRING, ADJUST SCREW
25	SPRING, ADJUST SCREW
26	SCREW, MAIN MIXTURE
27	SCREW, IDLE MIXTURE
28	SCREW, THROTTLE ADJUST
29	PIECE, FRICTION
30	SPRING, FRICTION
31	SHAFT ASS'Y, CHOKE
32	VALVE, CHOKE
33	POST
34	COLLAR
35	PLUNGER
36	SPRING, PLUNGER RETURN
37	SPRING, SYRINGE
38	BASE ASSEMBLY, PRIMER
39	SYRINGE
40	SCREW (PIN)
41	SCREW (THROTTLE VALVE)
42	SCREW (CHOKE VALVE)
43	SCREW (POST)
44	SCREW (METERING COVER)
45	SCREW (PUMP COVER)
46	SCREW, THROTTLE LEVER
47	BALL, STEEL
48	E-RING (THROTTLE SHAFT)
49	E-RING (POST)
50	O-RING (PLUNGER)
51	LIMITER, MIXTURE (H)
52	LIMITER, MIXTURE (L)
53	SCREW (RETAINER)
54	WASHER (LIMITER)
55	RETAINER (LIMITER)
56	GOVERNOR ASSEMBLY
57	WASHER, GOVERNOR
58	BOOT
59	O-RING (THROTTLE SHAFT)
60	LEVER, CHOKE
61	LEVER, CHOKE CONTROL
62	SPRING, CHOKE RETURN
63	DIAPHRAGM, START PUMP
64	GASKET, START PUMP
65	E-RING (CHOKE SHAFT)
66	SCREW

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U D1AB	C1U D1B	C1U DM4	C1U DM4A-B	C1U DM4C	C1U FD1	C1U H10, A-B
	Venturi	8 mm	8 mm	9 mm	9MM	9MM	9 mm	9 mm
*	Rebuild Kit	RB-63	RB-63	RB-20	RB-20	RB-20	RB-48	RB-20
●	Gasket & Diaphragm Kit	* GND-17	* GND-17	* GND-12	* GND-12	* GND-12	* GND-18	* GND-12
▲	Cover Kit, Pump	K017030	K017030	K017030	K017030	K017030		K017030
■	Base Kit, Primer						K056030	
‡	Plunger kit							
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer							
3	Strainer							
4	Plug, Welch	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005005
5	Valve, Check							0008004
6	Retainer, Check Valve							0009008
7	Retainer, Syringe						0009015	0009027
8	Nozzle Ass'y, Check Valve	A007029	A007029	A007039	A007039	A007039	A007042	A007022
9	Shaft Ass'y, Throttle	A011019	A011019	A011136	A011136	A011206	A011069	A011033
10	Lever, Throttle			0012132	0012132	0012132		
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013038	0013016
12	Valve, Throttle	0014016	0014016	0014048	0014044	0014044	0014020	0014015
13	Diaphragm Ass'y, Metering	●● A015010	●● A015010	●● A015011	●● A015011	●● A015011	●● A015010	●● A015011
14	Diaphragm, Pump	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015031V
15	Diaphragm, Surge							
16	Gasket, Metering Chamber	●● 0016018	●● 0016018	●● 0016021	●● 0016021	●● 0016021	●● 0016019	●● 0016021
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	▲ 0017046	▲ 0017046	▲ 0017046	▲ 0017046	▲ 0017046	▲ 0017046	▲ 0017046
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019005	* 0019005	* 0019002	* 0019002	* 0019002	* 0019014	* 0019002
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001
23	Cover, Metering Chamber	0028015	0028022	0028023	0028023	0028023	0028022	
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029001	0029005
25	Spring, Adjust Screw							
26	Screw, Main Mixture	0030040	0030040	0030144	0030144	0030144	0030107	0030023
27	Screw, Idle Mixture	0031041	0031041	K031138	K031138	K031138	0031090	0031025
28	Screw, Throttle Adjust	▲ 0035007	▲ 0035007	▲ 0035007	▲ 0035007	▲ 0035007	■ 0035035	▲ 0035007
29	Piece, Friction	▲ 0036001	▲ 0036001	▲ 0036001	▲ 0036001	▲ 0036001	■ 0036001	▲ 0036001
30	Spring, Friction			0038001	0038001	0038001		0038001
31	Shaft Ass'y, Choke			0041077	0041077	0041077		A041009
32	Valve, Choke			0043015	0043015	0043015		0043008
33	Post	0045002	0045002	0045002	0045002	0045002		0045003
34	Collar							
35	Plunger							
36	Spring (Plunger Return)							
37	Spring (Syringe)							
38	Base Ass'y, Primer						■ A056089	A056001
39	Syringe						0057004	0057003
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	15603004	15603004	15603004	15603004	156030045	15603004
42	Screw (Choke Valve)			156030045	156030045	156030045		156030045
43	Screw (Post)			17103004	17103004	17103004		16103005
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	
45	Screw (Pump Cover)	17104009	17104009	17104010	17104010	17104010	17104015	17104009
46	Screw (Throttle Lever)							
47	Ball, Steel			19290030	19290030	19290030		19290030
48	E-Ring (Throttle Shaft)	19500030	19500030	19500040	19500040	19500040	19500040	19500030
49	E-Ring (Post)	19500040	19500040					19500020
50	O-Ring (Plunger)							
51	Limiter, Mixture (H)	0061001	0061001				0061025	
52	Limiter, Mixture (L)	0061002	0061002				0061026	
53	Screw (Retainer)							17203012
54	Washer (Limiter)	0026014	0026014				0026014	
55	Retainer (Limiter)						0009028	
56	Governor Ass'y							
57	Washer (Governor)							
58	Boot							
59	O-Ring (Throttle Shaft)							
60	Lever, Choke							
61	Lever, Choke Control							
62	Spring, Choke Return							
63	Diaphragm, Start Pump							
64	Gasket, Start Pump							
65	E-Ring (Choke Shaft)							
66	SCREW							

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U H10C	C1U H10D-F	C1U H11, A-J	C1U H11K	C1U H12, A-B	C1U H12, C-D	C1U H13, A-E
	Venturi	9 mm	9 mm	10 mm	10 mm	7 mm	7 mm	10 mm
*	Rebuild Kit	RB-20	RB-20	RB-20	RB-20	RB-20	RB-29	RB-20
●	Gasket & Diaphragm Kit	* GND-12	* GND-12	* GND-12	* GND-12	* GND-12	* GND-12	* GND-12
▲	Cover Kit, Pump	K017030	K017030	-----	-----	KS017030	KS017030	-----
■	Base Kit, Primer	-----	-----	-----	-----	-----	-----	-----
‡	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	* 0005005	* 0005005	* 0005005	* 0005005	* 0005005	* 0005005	* 0005005
5	Valve, Check	0008004	0008004	0008004	0008004	0008004	0008004	0008004
6	Retainer, Check Valve	0009008	0009008	0009008	0009008	0009008	0009008	0009008
7	Retainer, Syringe	0009027	0009010	0009027	0009027	0009010	0009010	0009027
8	Nozzle Ass'y, Check Valve	A007022	A007022	A007031	A007064	A007031	A007022	A007064
9	Shaft Ass'y, Throttle	A011033	A011033	A011061	A011103	A011048	A011048	A011055
10	Lever, Throttle	-----	-----	-----	A012007	-----	-----	-----
11	Spring, Throttle Return	0013016	0013016	0013024	0013016	0013016	0013016	0013027
12	Valve, Throttle	0014015	0014015	0014016	0014016	0014015	0014041	0014047
13	Diaphragm Ass'y, Metering	●● A015011	●● A015011	●● A015011	●● A015011	●● A015011	●● A015011	●● A015011
14	Diaphragm, Pump	●● 0015031V	●● 0015031V	●● 0015051	●● 0015051	●● 0015031V	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016021	●● 0016021	●● 0016021	●● 0016021	●● 0016021	●● 0016021	●● 0016021
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	▲ 0017046	▲ 0017046	0017045	0017045	▲	▲	0017045
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019002	* 0019002	* 0019002	* 0019002	* 0019002	* 0019014	* 0019002
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001
23	Cover, Metering Chamber	-----	-----	-----	-----	-----	-----	-----
24	Spring, Adjust Screw	0029005	0029005	0029005	0029001	0029005	0029005	0029001
25	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030024	0030024	0030092	0030092	0030023	0030046	0030092
27	Screw, Idle Mixture	0031025	0031025	0031090	0031090	0031025	0031023	0031090
28	Screw, Throttle Adjust	▲ 0035007	▲ 0035007	-----	-----	▲	▲	-----
29	Piece, Friction	▲ 0036001	▲ 0036001	-----	-----	▲	▲	-----
30	Spring, Friction	0038001	0038001	0038001	0038001	0038001	0038001	0038001
31	Shaft Ass'y, Choke	A041009	A041009	0041039	0041039	0041015	A041015	0041039
32	Valve, Choke	0043008	0043008	0043024	0043024	0043015	0043015	0043024
33	Post	0045003	-----	-----	-----	0045003	0045003	0045003
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	A056011	A056011	A056010	A056010	A056012	A056012	A056010
39	Syringe	0057003	0057003	0057003	0057003	0057003	0057003	0057003
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	15603004	15603004	15603004	15603004	15603004	15603004
42	Screw (Choke Valve)	15603004	15603004	-----	-----	15603004	15603004	-----
43	Screw (Post)	16103005	-----	-----	-----	16103005	16103005	16103005
44	Screw (Metering Cover)	17103008	17103008	17103008	17103008	17103008	17103008	17103008
45	Screw (Pump Cover)	17104009	17104009	17104010	17104010	17104009	17104010	17104010
46	Screw (Throttle Lever)	-----	-----	-----	17103004	-----	-----	-----
47	Ball, Steel	19290030	19290030	19290030	19290030	19290030	19290030	19290030
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500040	19500030	19500030	19500040
49	E-Ring (Post)	19500020	-----	-----	-----	19500020	19500020	19500020
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiters, Mixture (H)	-----	-----	0061025	0061025	-----	-----	0061025
52	Limiters, Mixture (L)	-----	-----	0061026	0061026	-----	-----	0061026
53	Screw (Retainer)	17203012	17203012	17203012	17203012	17203012	17203012	17203012
54	Washer (Limiters)	-----	-----	0026006	0026014	-----	-----	0026014
55	Retainer (Limiters)	-----	-----	0009028	0009028	-----	-----	0009028
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U H18, A-D	C1U H28	C1U H29	C1U H30,B	C1U H31, A-C	C1U H33	C1U H36
	Venturi	9 mm	9 mm	9 mm	8 mm	9 mm	7 mm	10 mm
*	Rebuild Kit	RB-29	RB-28	RB-29	RB-29	RB-29	RB-29	RB-20
●	Gasket & Diaphragm Kit	* GND-12	* GND-18	* GND-18	* GND-18	* GND-18	* GND-12	* GND-12
▲	Cover Kit, Pump	KS017030	K017030	-----	K017035	-----	K017037	-----
■	Base Kit, Primer	-----	-----	K056005	-----	K056029	-----	-----
‡	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	* 0005005	* 0005005	* 0005005	* 0005005	* 0005005	* 0005004	* 0005005
5	Valve, Check	0008004	0008004	0008004	0008004	0008004	-----	0008004
6	Retainer, Check Valve	0009008	0009008	0009008	0009008	0009008	-----	0009008
7	Retainer, Syringe	0009027	-----	0009015	-----	0009015	0009027	0009027
8	Nozzle Ass'y, Check Valve	A007022	A007163	A007022	A007039	A007022	A007163	A007064
9	Shaft Ass'y, Throttle	A011048	A011033	A011048	A011095	A011048	A011104	A011103
10	Lever, Throttle	-----	-----	-----	-----	-----	-----	A012007
11	Spring, Throttle Return	0013016	0013016	0013016	0013043	0013016	0013016	0013016
12	Valve, Throttle	0014045	0014015	0014045	0014041	0014045	0014015	0014016
13	Diaphragm Ass'y, Metering	●● A015011	●● A015010	●● A015010	●● A015010	●● A015010	●● A015011	●● A015011
14	Diaphragm, Pump	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016021	●● 0016019	●● 0016019	●● 0016019	●● 0016019	●● 0016021	●● 0016021
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	▲ 0017046	▲ 0017046	-----	▲ 0017046	▲ 0017046	▲ 0017046	-----
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019014	* 0019002	* 0019014	* 0019014	* 0019014	* 0019014	* 0019002
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001
23	Cover, Metering Chamber	-----	0028022	0028022	0028022	0028022	-----	-----
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029001	0029001	0029001
25	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030076	0030040	0030076	0030096	0030096	0030102	0030092
27	Screw, Idle Mixture	0031075	0031041	0031075	0031091	0031091	0031100	0031090
28	Screw, Throttle Adjust	▲ 0035007	▲ 0035007	■ 0035007	▲ 0035033	▲ 0035033	▲ 0035033	-----
29	Piece, Friction	▲ 0036001	▲ 0036001	■ 0036001	▲ 0036001	■ 0036001	▲ 0036001	-----
30	Spring, Friction	0038001	0038001	0038001	-----	0038001	0038001	0038001
31	Shaft Ass'y, Choke	0041047	A041009	0041047	-----	0041078	A041015	0041039
32	Valve, Choke	0043024	0043008	0043024	-----	0043024	0043015	0043024
33	Post	-----	-----	-----	-----	-----	0045003	-----
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	A056011	-----	■ 0057003	-----	■ A056050	A056024	A056025
39	Syringe	0057003	-----	0057003	-----	0057004	0057003	0057003
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	15603004	15603004	156030045	15603004	15603004	15603004
42	Screw (Choke Valve)	-----	156030045	-----	-----	-----	156030045	-----
43	Screw (Post)	-----	-----	-----	-----	-----	15603005	-----
44	Screw (Metering Cover)	17103008	17203006	17203006	17203006	17203006	17103008	17103008
45	Screw (Pump Cover)	17104009	17104009	17104015	17104010	17104015	17104010	17104010
46	Screw (Throttle Lever)	-----	-----	-----	-----	-----	-----	17103004
47	Ball, Steel	19290030	19290030	19290030	-----	19290030	19290030	19290030
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500040
49	E-Ring (Post)	-----	-----	-----	-----	-----	19500020	-----
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiters, Mixture (H)	0061015	0061001	0061015	0061025	0061025	0061025	0061025
52	Limiters, Mixture (L)	0061016	0061002	0061016	0061026	0061026	0061026	0061026
53	Screw (Retainer)	17203012	-----	-----	-----	-----	17203012	17203012
54	Washer (Limiters)	0026014	0026014	0026014	0026006	0026014	0026014	0026014
55	Retainer (Limiters)	0009025	-----	0009025	0009028	0009028	0009028	0009028
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U H37	C1U H39	C1U H39A	C1U H40	C1U H41	C1U H47	C1U H48,A
	Venturi	10 mm	9 mm	9 mm	7 mm	9 mm	9mm	9mm
*	Rebuild Kit	RB-20	RB-29	RB-29	RB-29	RB-29	RB-29	RB-29
●	Gasket & Diaphragm Kit	* GND-12	* GND-18	* GND-18	* GND-12	* GND-18	* GND-18	* GND-18
▲	Cover Kit, Pump	-----	-----	-----	K017040	-----	-----	-----
■	Base Kit, Primer	-----	K056029	K056029	-----	K056029	K056029	K056029
‡	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	* 0005005	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004
5	Valve, Check	0008004	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	0009008	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009027	0009015	0009015	-----	0009015	0009015	0009015
8	Nozzle Ass'y, Check Valve	A007031	-----	-----	-----	A007163	-----	A007163
9	Shaft Ass'y, Throttle	A011055	A011164	A011164	A011104	A011143	A011104	A011143
10	Lever, Throttle	-----	-----	-----	-----	-----	-----	-----
11	Spring, Throttle Return	0013027	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014047	0014057	0014057	0014041	0014041	0014057	0014041
13	Diaphragm Ass'y, Metering	●● A015011	●● A015010	●● A015010	●● A015011	●● A015010	●● A015010	●● A015010
14	Diaphragm, Pump	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016021	●● 0016019	●● 0016019	●● 0016021	●● 0016019	●● 0016019	●● 0016019
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	0017045	-----	-----	▲ 0017046	-----	-----	-----
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019002	* 0019014	* 0019014	* 0019014	* 0019014	* 0019014	* 0019014
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001
23	Cover, Metering Chamber	-----	0028022	0028022	-----	0028022	0028022	0028022
24	Spring, Adjust Screw	0029001	0029001	-----	0029001	-----	-----	-----
25	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030092	-----	-----	-----	0030173	-----	0030173
27	Screw, Idle Mixture	0031090	0031091	0031175	0031091	0031174	0031151	0031174
28	Screw, Throttle Adjust	-----	■ 0035033	■ 0035033	▲ 0035035	■ 0035033	■ 0035033	■ 0035033
29	Piece, Friction	-----	■ 0036001	■ 0036001	▲ 0036001	■ 0036001	■ 0036001	■ 0036001
30	Spring, Friction	0038001	-----	-----	0038001	0038001	-----	0038001
31	Shaft Ass'y, Choke	0041039	0041078	0041078	A041015	0041078	0041088	0041114
32	Valve, Choke	0043024	0043024	0043024	0043015	0043024	0043024	0043024
33	Post	0045003	-----	-----	0045003	-----	-----	-----
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	A056025	■ A056050	■ A056050	A056024	■ A056050	■ A056050	■ A056050
39	Syringe	0057003	0057004	0057004	0057004	0057004	0057004	0057004
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	15603004	15603004	156030045	156030045	15603004	156030045
42	Screw (Choke Valve)	-----	-----	-----	156030045	-----	-----	-----
43	Screw (Post)	16103005	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17103008	17203006	17203006	17103008	17203006	17203006	17203006
45	Screw (Pump Cover)	17104010	17104015	17104015	17104010	17104015	17104015	17104015
46	Screw (Throttle Lever)	-----	-----	-----	-----	-----	-----	-----
47	Ball, Steel	19290030	19290030	19290030	19290030	19290030	19290030	19290030
48	E-Ring (Throttle Shaft)	19500040	19500030	19500030	19500030	19500030	19500030	19500030
49	E-Ring (Post)	19500020	-----	-----	19500020	-----	-----	-----
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiter, Mixture (H)	0061025	0061025	0061025	0061025	0061025	0061025	0061025
52	Limiter, Mixture (L)	0061026	-----	-----	-----	0061026	-----	0061026
53	Screw (Retainer)	17203012	-----	-----	17203012	-----	-----	-----
54	Washer (Limiter)	0026014	0026014	0026014	0026014	0026014	0026014	0026014
55	Retainer (Limiter)	0009028	0009028	0009028	0009027	0009028	0009028	0009028
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	0051027	-----	0051027
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U H60	C1U H60A	C1U H60B	C1U H60C,D	C1U H60E	C1U H61	C1U H61A
	Venturi	9mm	9mm	9mm	9mm	9mm	9.5 mm	9.5 mm
★	Rebuild Kit	RB-29	RB-29	RB-29	RB-29	RB-29	RB-20	RB-20
●	Gasket & Diaphragm Kit	★ GND-18	★ GND-18	★ GND-18	★ GND-18	★ GND-18	★ GND-12	★ GND-12
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	-----
■	Base Kit, Primer	K056029	K056029	K056029	K056029	K056029	-----	-----
⊕	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	0009015	0009015	0009015	0009065	0009065
8	Nozzle Ass'y, Check Valve	A007058	A007058	A007058	A007058	A007058	A007196	A007196
9	Shaft Ass'y, Throttle	A011143	A011143	A011198	A011198	A011198	A011194	A011194
10	Lever, Throttle	-----	-----	-----	-----	-----	A012007	A012007
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014041	0014041	0014041	0014041	0014041	0014103	0014103
13	Diaphragm Ass'y, Metering	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010	★● A015011	★● A015011
14	Diaphragm, Pump	★● 0015051	★● 0015051	★● 0015051	★● 0015051	★● 0015051	★● 0015051	★● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016021	★● 0016021
17	Gasket, Pump	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046
18	Cover, Pump	-----	-----	-----	-----	-----	0017045	0017045
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019014	★ 0019014	★ 0019014	★ 0019014	★ 0019014	★ 0019002	★ 0019002
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028022	0028022	-----	-----
24	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
25	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030152	0030152	0030152	0030152	0030241	0030206	0030206
27	Screw, Idle Mixture	0031151	0031151	0031151	0031151	0031241	0031174	0031174
28	Screw, Throttle Adjust	■ 0035033	■ 0035033	■ 0035033	■ 0035033	■ 0035033	-----	-----
29	Piece, Friction	■ 0036001	■ 0036001	■ 0036001	■ 0036001	■ 0036001	-----	-----
30	Spring, Friction	-----	-----	-----	-----	-----	0038001	0038001
31	Shaft Ass'y, Choke	0041088	0041114	0041114	0041114	0041114	0041115	0041115
32	Valve, Choke	0043024	0043024	0043024	0043059	0043059	0043024	0043024
33	Post	-----	-----	-----	-----	-----	-----	-----
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056050	■ A056050	■ A056050	■ A056050	■ A056050	A056098	A056098
39	Syringe	★ 0057004	★ 0057004	★ 0057004	★ 0057004	★ 0057004	0057003	0057003
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	156030045	156030045	156030045	156030045	15603045	15603045
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	-----	-----
45	Screw (Pump Cover)	17104015	17104015	17104015	17104015	17104015	-----	-----
46	Screw (Throttle Lever)	-----	-----	-----	-----	-----	17103004	17103004
47	Ball, Steel	19290030	19290030	19290030	19290030	19290030	19290030	19290030
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500040	19500040
49	E-Ring (Post)	-----	-----	-----	-----	-----	-----	-----
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiter, Mixture (H)	0061025	0061025	0061062	0061062	-----	0061025	0061062
52	Limiter, Mixture (L)	0061026	0061026	0061026	0061026	-----	0061026	0061026
53	Screw (Retainer)	-----	-----	-----	-----	-----	17203012	17203012
54	Washer (Limiter)	0026014	0026014	0026014	0026014	-----	0026014	0026014
55	Retainer (Limiter)	0009028	0009028	0009028	0009028	-----	0009028	0009028
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	0051027	0051027	0051027	0051027	-----	0051027	0051027
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U H62	C1U K4	C1U K7, A	C1U K8, A	C1U K9, A	C1U K10	C1U K10A
	Venturi	9mm	8 mm	8 mm	8 mm	8 mm	8 mm	8 mm
★	Rebuild Kit	RB-141	RB-21	RB-21	RB-21	RB-21	RB-21	RB-27
●	Gasket & Diaphragm Kit	★ GND-77	★ GND-18	★ GND-18	★ GND-18	★ GND-18	★ GND-18	★ GND-17
▲	Cover Kit, Pump	-----	K017013	K017065	-----	K017065	K017030	K017013
■	Base Kit, Primer	K056042	-----	-----	K056033	-----	-----	-----
⊕	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004011	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009084	-----	-----	0009015	-----	-----	-----
8	Nozzle Ass'y, Check Valve	A007163	A007021	A007189	A007026	A007189	A007021	A007021
9	Shaft Ass'y, Throttle	A011238	A011019	A011019	A011019	A011019	A011019	A011019
10	Lever, Throttle	0012253	-----	-----	-----	-----	-----	-----
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014041	0014016	0014016	0014016	0014016	0014016	0014016
13	Diaphragm Ass'y, Metering	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010
14	Diaphragm, Pump	★● 0015103	★● 0015031V	★● 0015051	★● 0015051	★● 0015051	★● 0015031V	★● 0015031V
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016018
17	Gasket, Pump	★● 0016091	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046
18	Cover, Pump	-----	▲ 0017018	▲ 0017046	▲ 0017046	▲ 0017046	▲ 0017046	▲ 0017018
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019005	★ 0019007	★ 0019007	★ 0019007	★ 0019007	★ 0019007	★ 0019007
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028022	0028022	0028014	0028022
24	Spring, Adjust Screw	-----	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	-----	-----	▲ 0029032	■ 0029032	▲ 0029032	-----	-----
26	Screw, Main Mixture	0030241	0030024	0030004	0030024	0030004	0030004	0030024
27	Screw, Idle Mixture	0031241	0031023	0031023	0031023	0031023	0031023	0031023
28	Screw, Throttle Adjust	0035035	▲ 0035007	▲ 0035033	■ 0035033	▲ 0035033	▲ 0035007	▲ 0035007
29	Piece, Friction	0036001	▲ 0036001	-----	-----	-----	▲ 0036001	▲ 0036001
30	Spring, Friction	-----	-----	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	A041118	-----	-----	-----	-----	-----	-----
32	Valve, Choke	-----	-----	-----	-----	-----	-----	-----
33	Post	-----	0045002	0045002	0045002	0045002	0045002	0045002
34	Collar	0052006	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	0054004	-----	-----	-----
38	Base Ass'y, Primer	-----	-----	-----	■ A056004	-----	-----	-----
39	Syringe	0057004	-----	-----	0057003	-----	-----	-----
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	15603004	15603004	15603004	15603004	15603004	15603004
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	-----	17104009	17104009	17104015	17104009	17104009	17104009
46	Screw (Throttle Lever)	17103004	-----	-----	-----	-----	-----	-----
47	Ball, Steel	-----	-----	-----	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	-----	19500030	19500030	19500030	19500030	19500030	19500030
49	E-Ring (Post)	-----	19500040	19500040	19500040	19500040	19500040	19500040
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiter, Mixture (H)	-----	-----	-----	-----	-----	-----	-----
52	Limiter, Mixture (L)	-----	-----	-----	-----	-----	-----	-----
53	Screw (Retainer)	17203012	-----	-----	-----	-----	-----	-----
54	Washer (Limiter)	-----	-----	-----	-----	-----	-----	-----
55	Retainer (Limiter)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	0042155	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	0013085	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	19500035	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----



# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U K11	C1U K12	C1U K13	C1U K14	C1U K15A	C1U K15B	C1U K16, A
	Venturi	8 mm	8 mm	8 mm	7 mm	8 mm	8 mm	8 mm
*	Rebuild Kit	RB-21	RB-27	RB-63	RB-21	RB-21	RB-21	RB-21
●	Gasket & Diaphragm Kit	* GND-18	* GND-17	* GND-17	* GND-18	* GND-18	* GND-18	* GND-18
▲	Cover Kit, Pump	K017030	K017013	K017030	K017020	-----	-----	-----
■	Base Kit, Primer	-----	-----	-----	-----	K056039	K056034	K056034
⊕	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	-----	-----	-----	-----	0009015	0009015	0009015
8	Nozzle Ass'y, Check Valve	A007021	A007026	A007034	A007044	A007026	A007026	A007026
9	Shaft Ass'y, Throttle	A011040	A011019	A011019	A011040	A011019	A011019	A011019
10	Lever, Throttle	0012042	-----	-----	-----	-----	-----	-----
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014016	0014016	0014031	-----	0014016	0014016	0014016
13	Diaphragm Ass'y, Metering	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010
14	Diaphragm, Pump	●● 0015031V	●● 0015031V	●● 0015031V	●● 0015031V	●● 0015031V	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016019	●● 0016018	●● 0016018	●● 0016019	●● 0016019	●● 0016019	●● 0016019
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	▲ 0017046	▲ 0017018	▲ 0017046	▲ 0017018	-----	-----	-----
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019007	* 0019007	* 0019005	* 0019007	* 0019007	* 0019007	* 0019007
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028022	0028022	0028022	0028015
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	-----	-----	-----	-----	-----	■ 0029032	■ 0029032
26	Screw, Main Mixture	0030024	0030023	0030046	0030046	0030024	0030024	0030023
27	Screw, Idle Mixture	0031023	0031023	0031023	0031028	0031023	0031023	0031023
28	Screw, Throttle Adjust	▲ 0035007	▲ 0035007	▲ 0035007	▲ 0035023	■ 0035007	■ 0035033	■ 0035033
29	Piece, Friction	▲ 0036001	▲ 0036001	▲ 0036001	▲ 0036001	■ 0036001	-----	-----
30	Spring, Friction	-----	-----	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	-----	-----	-----	-----	-----	-----
32	Valve, Choke	-----	-----	-----	-----	-----	-----	-----
33	Post	-----	0045002	0045002	-----	0045002	0045002	0045002
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	-----	-----	-----	-----	■ A056089	■ A056089	■ A056089
39	Syringe	-----	-----	-----	-----	0057003	0057004	0057004
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	15603004	15603004	15603004	15603004	15603004	15603004
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	17104009	17104009	17104009	17104009	17104015	17104015	-----
46	Screw (Throttle Lever)	17103004	-----	-----	17103004	-----	-----	-----
47	Ball, Steel	-----	-----	-----	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500040	19500030	19500030	19500040	19500030	19500030	19500030
49	E-Ring (Post)	-----	19500040	19500040	-----	19500040	19500040	19500040
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiter, Mixture (H)	-----	-----	-----	-----	-----	-----	-----
52	Limiter, Mixture (L)	-----	-----	-----	-----	-----	-----	-----
53	Screw (Retainer)	-----	-----	-----	-----	-----	-----	-----
54	Washer (Limiter)	-----	-----	-----	-----	-----	-----	-----
55	Retainer (Limiter)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U K17	C1U K18, A-B	C1U K19	C1U K20, A-C	C1U K21	C1U K21A-B	C1U K22, A
	Venturi	8 mm	8 mm	11 mm	11 mm	11 mm	11 mm	11 mm
★	Rebuild Kit	RB-23	RB-63	RB-25	RB-26	RB-27	RB-26	RB-27
●	Gasket & Diaphragm Kit	★ GND-12	★ GND-17	★ GND-17	★ GND-17	★ GND-17	★ GND-17	★ GND-17
▲	Cover Kit, Pump	K017013	-----	-----	-----	-----	-----	-----
■	Base Kit, Primer	-----	K056034	K056039	K056034	K056034	K056034	K056034
⊕	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005010	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009010	0009015	0009015	0009015	0009015	0009015	0009015
8	Nozzle Ass'y, Check Valve	A007059	0007036	A007029	A007057	A007046	A007057	A007190
9	Shaft Ass'y, Throttle	A011019	A011019	A011019	A011019	A011019	A011019	A011069
10	Lever, Throttle	-----	-----	-----	-----	-----	-----	-----
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014016	0014031	0014016	0014033	0014034	0014033	0014016
13	Diaphragm Ass'y, Metering	●● A015011	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010
14	Diaphragm, Pump	●● 0015031V	●● 0015051	●● 0015031V	●● 0015051	●● 0015031V	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016021	●● 0016018	●● 0016018	●● 0016018	●● 0016018	●● 0016018	●● 0016018
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	▲ 0017018	-----	-----	-----	-----	-----	-----
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019007	★ 0019005	★ 0019014	★ 0019009	★ 0019007	★ 0019009	★ 0019007
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	-----	0028022	0028022	0028022	0028010	0028022	0028010
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	-----	■ 0029032	-----	■ 0029032	■ 0029032	■ 0029032	■ 0029032
26	Screw, Main Mixture	0030024	0030046	0030024	0030049	0030048	0030049	0030024
27	Screw, Idle Mixture	0031059	0031023	0031023	0031023	0031033	0031023	0031023
28	Screw, Throttle Adjust	▲ 0035007	■ 0035033	■ 0035007	■ 0035033	■ 0035033	■ 0035033	■ 0035033
29	Piece, Friction	▲ 0036001	-----	■ 0036001	-----	-----	-----	-----
30	Spring, Friction	-----	-----	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	-----	-----	-----	-----	-----	-----
32	Valve, Choke	-----	-----	-----	-----	-----	-----	-----
33	Post	0045002	0045002	0045002	0045002	0045002	0045002	0045002
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	A056012	■ A056089	■ A056089	■ A056089	■ A056089	■ A056089	■ A056089
39	Syringe	0057003	0057004	0057003	0057004	0057003	0057003	0057003
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	15603004	15603004	156030045	15603004	15603004	15603004
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203012	17203006	17203006	17203006	17103007	17103007	17103007
45	Screw (Pump Cover)	17104009	17104015	17104015	17104015	17104015	17104015	17104015
46	Screw (Throttle Lever)	-----	-----	-----	-----	-----	-----	-----
47	Ball, Steel	-----	-----	-----	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500030
49	E-Ring (Post)	19500040	19500040	19500040	19500040	19500040	19500040	19500040
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiters, Mixture (H)	-----	-----	-----	-----	-----	-----	-----
52	Limiters, Mixture (L)	-----	-----	-----	-----	-----	-----	-----
53	Screw (Retainer)	17103008	-----	-----	-----	-----	-----	-----
54	Washer (Limiters)	-----	-----	-----	-----	-----	-----	-----
55	Retainer (Limiters)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U K23	C1U K23A-B	C1U K26	C1U K26A, B	C1U K27, A-C	C1U K27D	C1U K28, A
	Venturi	11 mm	11 mm	7 mm	7 mm	8 mm	8 mm	8 mm
★	Rebuild Kit	RB-26	RB-27	RB-21	RB-52	RB-23	RB-23	RB-48
●	Gasket & Diaphragm Kit	★ GND-17	★ GND-17	★ GND-18	★ GND-18	★ GND-12	★ GND-12	★ GND-18
▲	Cover Kit, Pump	-----	-----	-----	-----	K017065	K017065	-----
■	Base Kit, Primer	K056039	K056039	K056028	K056028	-----	-----	K056039
✦	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005010	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	0009015	0009015	0009027	0009065	0009015
8	Nozzle Ass'y, Check Valve	A007045	A007045	A007191	A007191	A007059	A007059	A007059
9	Shaft Ass'y, Throttle	A011019	A011019	A011040	A011083	A011077	A011077	A011077
10	Lever, Throttle	-----	-----	0012042	0012042	-----	-----	-----
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014033	0014016	0014016	0014016	0014016	0014016	0014010
13	Diaphragm Ass'y, Metering	●● A015010	●● A015010	●● A015010	●● A015010	●● A015011	●● A015011	●● A015010
14	Diaphragm, Pump	●● 0015031V	●● 0015051	●● 0015031V	●● 0015051	●● 0015051	●● 0015051	●● 0015031V
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016018	●● 0016018	●● 0016019	●● 0016019	●● 0016021	●● 0016021	●● 0016019
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	-----	-----	-----	-----	▲ 0017046	▲ 0017046	-----
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019009	★ 0019007	★ 0019007	★ 0019005	★ 0019007	★ 0019007	★ 0019014
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028010	0028022	0028010	0028022	-----	-----	0028022
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	-----	-----	-----	-----	▲ 0029032	▲ 0029032	-----
26	Screw, Main Mixture	0030049	0030049	0030046	0030062	0030024	0030024	0030046
27	Screw, Idle Mixture	0031023	0031044	0031023	0031023	0031059	0031059	0031023
28	Screw, Throttle Adjust	■ 0035007	■ 0035007	■ 0035023	■ 0035023	▲ 0035033	▲ 0035033	■ 0035007
29	Piece, Friction	■ 0036001	■ 0036001	■ 0036001	■ 0036001	-----	-----	■ 0036001
30	Spring, Friction	-----	-----	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	-----	-----	-----	-----	-----	-----
32	Valve, Choke	-----	-----	-----	-----	-----	-----	-----
33	Post	0045002	0045002	-----	-----	0045002	0045002	0045002
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056089	■ A056089	■ A056089	■ A056089	A056012	A056066	■ A056089
39	Syringe	0057003	0057003	0057003	0057003	0057004	0057004	0057003
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	15603004	15603004	15603004	15603004	15603004	156030045
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17103007	17203006	17103007	17203006	17203012	17203012	17203006
45	Screw (Pump Cover)	17104015	17104015	17104015	17104015	17104009	17104009	17104015
46	Screw (Throttle Lever)	-----	-----	17103004	17103004	-----	-----	-----
47	Ball, Steel	-----	-----	-----	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500040	19500040	19500030	19500030	19500030
49	E-Ring (Post)	19500040	19500040	-----	-----	19500040	19500040	19500040
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiter, Mixture (H)	-----	-----	-----	-----	-----	-----	-----
52	Limiter, Mixture (L)	-----	-----	-----	-----	-----	-----	-----
53	Screw (Retainer)	-----	-----	-----	-----	17103008	-----	-----
54	Washer (Limiter)	-----	-----	-----	-----	-----	-----	-----
55	Retainer (Limiter)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U K29, A	C1U K30, A	C1U K31	C1U K31A, B	C1U K32, A	C1U K34	C1U K34A
	Venturi	8 mm	8 mm	8 mm	8 mm	8 mm	1.1 mm	1.1 mm
★	Rebuild Kit	RB-21	RB-27	RB-26	RB-27	RB-21	RB-26	RB-26
●	Gasket & Diaphragm Kit	★ GND-18	GND-17	★ GND-17	★ GND-17	★ GND-18	★ GND-17	★ GND-17
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	-----
■	Base Kit, Primer	K056034	K056034	K056039	K056034	K056028	K056039	K056034
✦	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005010	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	0009015	0009015	0009015	0009015	0009015
8	Nozzle Ass'y, Check Valve	A007026	-----	-----	A007060	A007045	A007057	A007057
9	Shaft Ass'y, Throttle	A011019	A011019	A011019	A011019	A011083	A011019	A011019
10	Lever, Throttle	-----	-----	-----	-----	0012042	-----	-----
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014016	0014037	0014031	0014016	0014016	0014033	0014033
13	Diaphragm Ass'y, Metering	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010
14	Diaphragm, Pump	★● 0015051	★● 0015051	★● 0015031V	★● 0015051	★● 0015051	★● 0015031V	★● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	★● 0016019	★● 0016018	★● 0016018	★● 0016018	★● 0016019	★● 0016018	★● 0016018
17	Gasket, Pump	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046
18	Cover, Pump	-----	-----	-----	-----	-----	-----	-----
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019007	★ 0019007	★ 0019009	★ 0019007	★ 0019007	★ 0019009	★ 0019009
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028022	0028010	0028015	0028022	0028022	0028022	0028022
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	■ 0029032	■ 0029032	-----	■ 0029032	-----	-----	■ 0029032
26	Screw, Main Mixture	0030023	0030059	0030046	0030065	0030046	0030049	0030046
27	Screw, Idle Mixture	0031023	0031033	0031025	0031023	0031023	0031023	0031023
28	Screw, Throttle Adjust	■ 0035033	■ 0035033	■ 0035007	■ 0035033	■ 0035023	■ 0035007	■ 0035033
29	Piece, Friction	-----	-----	■ 0036001	-----	■ 0036001	■ 0036001	-----
30	Spring, Friction	-----	-----	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	-----	-----	-----	-----	-----	-----
32	Valve, Choke	-----	-----	-----	-----	-----	-----	-----
33	Post	0045002	0045002	0045002	0045002	-----	0045002	-----
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056089	■ A056089	■ A056089	■ A056089	■ A056089	■ A056089	■ A056089
39	Syringe	0057004	0057004	0057003	0057004	0057004	0057003	0057004
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	156030045	15603004	15603004	15603004	156030045	156030045
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17103007	17203006	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	17104015	17104015	17104015	17104015	17104015	17104015	17104015
46	Screw (Throttle Lever)	-----	-----	-----	-----	17103004	-----	-----
47	Ball, Steel	-----	-----	-----	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500040	19500030	19500040
49	E-Ring (Post)	19500040	19500040	19500040	19500040	-----	19500040	-----
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiters, Mixture (H)	-----	-----	-----	-----	-----	-----	-----
52	Limiters, Mixture (L)	-----	-----	0061003	0061003	-----	-----	-----
53	Screw (Retainer)	-----	-----	-----	-----	-----	-----	-----
54	Washer (Limiters)	-----	-----	0026014	0026014	-----	-----	-----
55	Retainer (Limiters)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U K35, A	C1U K36, A	C1U K39A-B	C1U K41A-B	C1U K42, A	C1U K42B	C1U K43, A
	Venturi	8 mm	9 mm	9 mm	8 mm	8 mm	8 mm	7 mm
*	Rebuild Kit	RB-27	RB-48	RB-62	RB-62	RB-59	RB-59	RB-59
●	Gasket & Diaphragm Kit	* GND-17	* GND-18	* GND-40	* GND-40	* GND-38	* GND-38	* GND-38
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	-----
■	Base Kit, Primer	K056034	K056034	K056039	K056039	K056028	K056028	K056028
✦	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	0009015	0009015	0009015	0009015	0009015
8	Nozzle Ass'y, Check Valve	A007060	A007062	A007060	A007065	A007067	A007067	A007068
9	Shaft Ass'y, Throttle	A011019	A011019	A011019	A011019	A011083	A011083	A011083
10	Lever, Throttle	-----	-----	-----	-----	0012094	0012094	0012094
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013038	0013038	0013038
12	Valve, Throttle	0014016	0014031	0014007	0014048	0014050	0014050	0014050
13	Diaphragm Ass'y, Metering	●● A015010	●● A015010	●● A015019	●● A015019	●● A015011	●● A015011	●● A015011
14	Diaphragm, Pump	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016018	●● 0016019	●● 0016021	●● 0016021	●● 0016035	●● 0016035	●● 0016035
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	-----	-----	-----	-----	-----	-----	-----
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019007	* 0019014	* 0019007	* 0019007	* 0019005	* 0019005	* 0019005
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028023	0028023	0028023	0028023
24	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	■ 0029032	■ 0029032	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030065	0030048	0030086	0030086	0030087	0030087	0030087
27	Screw, Idle Mixture	0031023	0031023	A031066	0031082	A031084	A031084	A031084
28	Screw, Throttle Adjust	■ 0035033	■ 0035033	■ 0035007	■ 0035007	■ 0035023	■ 0035023	■ 0035023
29	Piece, Friction	-----	-----	■ 0036001	■ 0036001	■ 0036001	■ 0036001	■ 0036001
30	Spring, Friction	-----	-----	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	-----	-----	-----	-----	-----	-----
32	Valve, Choke	-----	-----	-----	0014048	-----	-----	-----
33	Post	0045002	0045002	0045002	0045002	-----	-----	-----
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056089	■ A056089	■ A056089	■ A056089	■ A056089	■ A056089	■ A056089
39	Syringe	0057004	0057004	0057003	0057003	0057004	0057004	0057004
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	15603004	15603004	15603004	156030045	156030045	156030045
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	17104015	17104015	17104015	17104015	17104015	17104015	17104015
46	Screw (Throttle Lever)	-----	-----	-----	-----	17103004	17103004	17103004
47	Ball, Steel	-----	-----	-----	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500040	19500040	19500040
49	E-Ring (Post)	19500040	19500040	19500040	19500040	-----	-----	-----
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiters, Mixture (H)	0061003	-----	0061007	0061007	0061007	0061007	0061007
52	Limiters, Mixture (L)	-----	-----	0061010	0061010	0061010	0061010	0061010
53	Screw (Retainer)	-----	-----	-----	-----	-----	-----	-----
54	Washer (Limiters)	0026014	-----	0026014	0026014	0026014	0026014	0026014
55	Retainer (Limiters)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U K43B	C1U K44, A	C1U K44B	C1U K45	C1U K46	C1U K47	C1U K51
	Venturi	8 mm	8 mm	8 mm	8.5 mm	8.5 mm	8.5 mm	8.5 mm
★	Rebuild Kit	RB-59	RB-59	RB-59	RB-27	RB-65	RB-64	RB-64
●	Gasket & Diaphragm Kit	★ GND-38	★ GND-38	★ GND-38	★ GND-17	★ GND-38	★ GND-41	★ GND-41
▲	Cover Kit, Pump	-----	-----	-----	-----	K017066	-----	-----
■	Base Kit, Primer	K056028	K056028	K056028	K056028	-----	K056035	K056035
✦	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	0009015	0009015	0009027	0009015	0009015
8	Nozzle Ass'y, Check Valve	A007067	A007067	A007067	A007070	A007070	A007070	A007109
9	Shaft Ass'y, Throttle	A011083	A011083	A011083	A011100	A011100	A011100	A011112
10	Lever, Throttle	0012094	0012094	0012094	-----	-----	-----	-----
11	Spring, Throttle Return	0013038	0013038	0013038	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014050	0014048	0014050	0014053	0014053	0014053	0014053
13	Diaphragm Ass'y, Metering	●● A015011	●● A015011	●● A015011	●● A015010	●● A015011	●● A015018	●● A015018
14	Diaphragm, Pump	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016035	●● 0016035	●● 0016035	●● 0016018	●● 0016035	●● 0016018	●● 0016018
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	-----	-----	-----	-----	▲ 0017046	-----	-----
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019005	★ 0019005	★ 0019005	★ 0019007	★ 0019007	★ 0019007	★ 0019007
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028023	0028023	0028023	0028022	-----	0028022	0028022
24	Spring, Adjust Screw	0029005	-----	0029005	0029005	0029005	0029005	-----
25	Spring, Adjust Screw	-----	-----	-----	-----	▲ 0029007	■ 0029007	■ 0029007
26	Screw, Main Mixture	0030117	0030087	0030117	0030090	0030101	0030090	0030117
27	Screw, Idle Mixture	0031170	A031067	0031171	0031086	0031099	0031086	0031111
28	Screw, Throttle Adjust	■ 0035023	■ 0035023	■ 0035023	■ 0035023	▲ 0035062	■ 0035062	■ 0035062
29	Piece, Friction	■ 0036001	■ 0036001	■ 0036001	■ 0036001	-----	-----	-----
30	Spring, Friction	-----	-----	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	-----	-----	-----	-----	-----	-----
32	Valve, Choke	-----	-----	-----	-----	-----	-----	-----
33	Post	-----	-----	-----	0045002	0045002	0045002	0045002
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	K053011
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	0054055
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056089	■ A056089	■ A056089	■ A056089	A056012	■ A056062	■ A056062
39	Syringe	0057004	0057004	0057004	0057004	0057004	0057004	0057004
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	15603004	156030045	15603004	15603004	15603004	15603004
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17103008	17203006	17203006
45	Screw (Pump Cover)	17104015	17104015	17104015	17104015	17104009	17104015	17104015
46	Screw (Throttle Lever)	17103004	17103004	17103004	-----	-----	-----	-----
47	Ball, Steel	-----	-----	-----	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500040	19500040	19500040	19500030	19500030	19500030	19500030
49	E-Ring (Post)	-----	-----	-----	19500040	19500040	19500040	19500040
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiters, Mixture (H)	0061007	0061007	0061007	0061009	0061009	0061009	0061009
52	Limiters, Mixture (L)	0061010	0061010	0061010	0061010	0061010	0061010	0061010
53	Screw (Retainer)	-----	-----	-----	-----	17203012	-----	-----
54	Washer (Limiters)	0026014	-----	-----	0026014	0026014	0026014	-----
55	Retainer (Limiters)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U K52	C1U K53	C1U K53A	C1U K53B	C1U K54	C1U K54A	C1U K55
	Venturi	8.5 mm	8.5 mm	8.5mm	8.5mm	8.5 mm	8.5 mm	8.5 mm
*	Rebuild Kit	RB-64	RB-64	RB-121	RB-121	RB-71	RB-71	RB-64
●	Gasket & Diaphragm Kit	* GND-41	* GND-41	* GND-41	* GND-41	* GND-44	* GND-44	* GND-41
▲	Cover Kit, Pump	-----	-----	-----	-----	K017066	K017066	-----
■	Base Kit, Primer	K056035	K056035	K056039	K056039	-----	-----	K056035
‡	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	0009015	0009015	0009027	0009065	0009015
8	Nozzle Ass'y, Check Valve	A007109	A007188	A007188	A007188	A007109	A007109	A007188
9	Shaft Ass'y, Throttle	A011112	A011100	A011154	A011154	A011112	A011192	A011112
10	Lever, Throttle	-----	-----	-----	-----	-----	-----	-----
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014053	0014053	0014053	0014053	0014053	0014053	0014056
13	Diaphragm Ass'y, Metering	●● A015018	●● A015018	●● A015018	●● A015018	●● A015019	●● A015019	●● A015018
14	Diaphragm, Pump	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016018	●● 0016018	●● 0016018	●● 0016018	●● 0016035	●● 0016035	●● 0016018
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	-----	-----	-----	-----	▲ 0017046	▲ 0017046	-----
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019007	* 0019007	* 0019009	* 0019009	* 0019007	* 0019007	* 0019007
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001
23	Cover, Metering Chamber	0028022	0028022	-----	0028015	-----	-----	0028022
24	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
25	Spring, Adjust Screw	■ 0029007	■ 0029007	-----	-----	▲ 0029007	▲ 0029007	■ 0029007
26	Screw, Main Mixture	0030117	0030142	0030142	0030217	0030117	0030117	0030117
27	Screw, Idle Mixture	0031111	0031136	0031136	0031219	0031111	0031111	0031112
28	Screw, Throttle Adjust	■ 0035062	■ 0035062	■ 0035007	■ 0035007	▲ 0035062	▲ 0035062	■ 0035062
29	Piece, Friction	-----	-----	■ 0036001	■ 0036001	-----	-----	-----
30	Spring, Friction	-----	-----	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	-----	-----	-----	-----	-----	-----
32	Valve, Choke	-----	-----	-----	-----	-----	-----	-----
33	Post	0045002	0045002	0045003	0045003	0045002	0045002	0045002
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	K053011	-----	-----	-----	K053011	K053011	K053011
36	Spring (Plunger Return)	-----	-----	-----	-----	0054055	0054055	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056062	■ A056062	■ A056089	■ A056089	A056012	A056087	■ A056062
39	Syringe	0057004	0057004	0057004	0057004	0057004	0057004	0057004
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	15603004	15603004	15603004	15603004	15603004	15603004
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17203006	17103006	17103006	17203012	17203012	17203006
45	Screw (Pump Cover)	17104015	17104015	17104015	17104015	17104010	17104010	17104015
46	Screw (Throttle Lever)	-----	-----	-----	-----	-----	-----	-----
47	Ball, Steel	-----	-----	-----	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500030
49	E-Ring (Post)	19500040	19500040	-----	-----	19500040	19500040	19500040
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiters, Mixture (H)	0061009	-----	-----	0061064	0061009	0061009	0061009
52	Limiters, Mixture (L)	0061010	-----	-----	0061010	0061010	0061010	0061010
53	Screw (Retainer)	-----	-----	-----	-----	17203012	17203012	-----
54	Washer (Limiters)	-----	-----	-----	-----	-----	-----	-----
55	Retainer (Limiters)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U K58	C1U K59	C1U K62	C1U K68	C1U K78	C1U K81	C1U K82
	Venturi	8.5mm	8.5mm	8.5mm	8.5 mm	8.5 mm	8.5 mm	8.5 mm
	★ Rebuild Kit	RB-64	RB-64	RB-64	RB-104	RB-125	RB-71	RB-71
	● Gasket & Diaphragm Kit	★ GND-41	★ GND-41	★ GND-41	★ GND-41	★ GND-68	★ GND-44	★ GND-44
	▲ Cover Kit, Pump	-----	-----	-----	-----	-----	K017066	K017066
	■ Base Kit, Primer	K056035	K056035	K056028	K056028	-----	-----	-----
	✦ Plunger kit	-----	-----	-----	-----	K053011	K053011	-----
1	Strainer	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	◆ 0004006	◆ 0004006	-----
4	Plug, Welch	★ 0005006	★ 0005006	★ 0005006	★ 0005006	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	0009015	0009015	0009015	0009065	0009065
8	Nozzle Ass'y, Check Valve	A007109	A007109	A007139	A007139	A007139	A007229	A007109
9	Shaft Ass'y, Throttle	A011154	A011154	A011163	A011163	A011210	A011213	A011192
10	Lever, Throttle	-----	-----	0012094	0012094	0012094	K012002	-----
11	Spring, Throttle Return	0013016	0013016	0013038	0013038	0013016	0013016	0013016
12	Valve, Throttle	0014053	0014053	0014053	0014053	0014053	0014053	0014053
13	Diaphragm Ass'y, Metering	★● A015018	★● A015018	★● A015018	★● A015018	★● A015047	★● A015019	★● A015019
14	Diaphragm, Pump	★● 0015051	★● 0015051	★● 0015051	★● 0015051	★● 0015051	★● 0015051	★● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	★● 0016018	★● 0016018	★● 0016018	★● 0016018	★● 0016076	★● 0016035	★● 0016035
17	Gasket, Pump	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046
18	Cover, Pump	-----	-----	-----	-----	-----	▲ 0017046	▲ 0017046
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019007	★ 0019007	★ 0019007	★ 0019002	★ 0019006	★ 0019007	★ 0019007
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028022	0028022	-----	-----
24	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
25	Spring, Adjust Screw	■ 0029007	■ 0029007	-----	-----	-----	▲ 0029007	▲ 0029007
26	Screw, Main Mixture	0030168	0030171	0030168	0030168	0030168	0030117	0030117
27	Screw, Idle Mixture	-----	-----	-----	-----	-----	0031111	0031111
28	Screw, Throttle Adjust	■ 0035062	■ 0035062	■ 0035023	■ 0035023	0035023	▲ 0035062	▲ 0035062
29	Piece, Friction	-----	-----	■ 0036001	■ 0036001	0036001	0036003	-----
30	Spring, Friction	-----	-----	-----	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	-----	-----	-----	-----	-----	-----
32	Valve, Choke	-----	-----	-----	-----	-----	-----	-----
33	Post	0045002	0045002	-----	-----	-----	-----	0045002
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	◆ 0053009	◆ 0053009	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	◆ 0054055	◆ 0054055	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056062	■ A056062	■ A056089	■ A056089	A056089	A056105	A056087
39	Syringe	0057004	0057004	0057004	0057004	0057004	0057004	0057004
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	15603004	15603004	15603004	15603004	15603004	15603004
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17103006	17103006	17203006	17203006	-----	-----
45	Screw (Pump Cover)	17104015	17104015	17104015	17104015	-----	17104010	17104010
46	Screw (Throttle Lever)	-----	-----	17103004	17103004	17103004	-----	-----
47	Ball, Steel	-----	-----	-----	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500040	19500040	19500040	19500040	19500030
49	E-Ring (Post)	19500040	19500040	-----	-----	-----	-----	19500040
50	O-Ring (Plunger)	-----	-----	-----	-----	◆ 195502308	◆ 195502308	-----
51	Limiters, Mixture (H)	0061007	-----	-----	-----	-----	0061009	0061009
52	Limiters, Mixture (L)	-----	-----	-----	-----	-----	0061010	0061010
53	Screw (Retainer)	-----	-----	-----	-----	17104015	17203012	17203012
54	Washer (Limiters)	-----	-----	-----	-----	-----	-----	-----
55	Retainer (Limiters)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----



# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U K83	C1U M16	C1U M20	C1U M21, A-B	C1U M21C	C1U M29, A-B	C1U M29C
	Venturi	9.5 mm	8 mm	8 mm	9 mm	9 mm	9 mm	9 mm
★	Rebuild Kit	RB-136	RB-28	RB-28	RB-20	RB-20	RB-48	RB-48
●	Gasket & Diaphragm Kit	★ GND-75	★ GND-18	★ GND-18	★ GND-12	★ GND-12	★ GND-18	GND-18
▲	Cover Kit, Pump	K017066	-----	KS017030	-----	-----	K017023	K017023
■	Base Kit, Primer	-----	K056039	-----	-----	-----	-----	-----
⊕	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005005	★ 0005005	★ 0005005	★ 0005005	★ 0005005	★ 0005005
5	Valve, Check	-----	0008004	0008004	0008004	0008004	0008004	0008004
6	Retainer, Check Valve	-----	0009008	0009008	0009008	0009008	0009008	0009008
7	Retainer, Syringe	0009065	0009015	-----	0009027	0009027	-----	-----
8	Nozzle Ass'y, Check Valve	A007109	A007022	A007022	A007022	A007042	A007042	A007042
9	Shaft Ass'y, Throttle	A011154	A011039	A011039	A011044	A011044	A011091	A011091
10	Lever, Throttle	-----	-----	-----	-----	-----	0012017	0012017
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014053	0014007	0014007	0014035	0014035	0014020	0014020
13	Diaphragm Ass'y, Metering	●● A015051	●● A015010	●● A015010	●● A015011	●● A015011	●● A015010	●● A015010
14	Diaphragm, Pump	●● 0015051	●● 0015031V	●● 0015031V	●● 0015031V	●● 0015031V	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016035	●● 0016019	●● 0016019	●● 0016021	●● 0016021	●● 0016019	●● 0016019
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	▲ 0017046	-----	▲	0017016	0017016	▲ 0017018	▲ 0017018
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019007	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019014	★ 0019014
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	-----	0028022	0028022	-----	-----	0028015	0028022
24	Spring, Adjust Screw	-----	0029005	0029005	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	▲ 0029007	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030117	0030024	0030024	0030046	0030082	0030023	0030082
27	Screw, Idle Mixture	0031111	0031028	0031028	0031033	0031087	0031023	0031080
28	Screw, Throttle Adjust	▲ 0035062	■ 0035007	▲	-----	-----	▲ 0035025	▲ 0035025
29	Piece, Friction	0036003	■ 0036001	▲	-----	-----	▲ 0036001	▲ 0036001
30	Spring, Friction	-----	-----	-----	-----	-----	0038001	0038001
31	Shaft Ass'y, Choke	-----	-----	-----	-----	-----	A041029	A041029
32	Valve, Choke	-----	-----	-----	-----	-----	0043008	0043008
33	Post	0045002	-----	-----	-----	-----	-----	-----
34	Collar	-----	-----	-----	-----	-----	0052001	0052001
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	A056112	■ A056089	-----	A056012	A056012	-----	-----
39	Syringe	0057004	0057003	-----	0057003	0057003	-----	-----
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	15603004	15603004	15603004	15603004	15603004	156030045
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	156030045	156030045
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	-----	17203006	17203006	17103008	17103008	17203006	17203006
45	Screw (Pump Cover)	17104010	17104015	17104009	17104009	17104009	17104009	17104009
46	Screw (Throttle Lever)	-----	-----	-----	-----	-----	17103004	17103004
47	Ball, Steel	-----	-----	-----	-----	-----	19290030	19290030
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	-----	-----
49	E-Ring (Post)	19500040	-----	-----	-----	-----	-----	-----
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiters, Mixture (H)	0061009	-----	-----	-----	0061009	-----	0061009
52	Limiters, Mixture (L)	0061010	-----	-----	-----	0061010	-----	0061010
53	Screw (Retainer)	172030135	-----	-----	17203012	17203012	-----	-----
54	Washer (Limiters)	-----	-----	-----	-----	0026014	-----	0026006
55	Retainer (Limiters)	0009030	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U M29D	C1U M29E	C1U M32, A	C1U M32B,C	C1U M35A	C1U M37	C1U M37A
	Venturi	9 mm	9 mm	9 mm	9 mm	9 mm	9MM	9MM
★	Rebuild Kit	RB-48	RB-48	RB-28	RB-28	RB-29	RB-48	RB-48
●	Gasket & Diaphragm Kit	GND-18	★ GND-18	GND-18	GND-18	GND-12	★ GND-18	★ GND-18
▲	Cover Kit, Pump	K017037	K017037	KS017030	K017040	K017040	K017037	K017037
■	Base Kit, Primer							
‡	Plunger kit							
1	Strainer	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004	★ 0004004
2	Strainer							
3	Strainer							
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check							
6	Retainer, Check Valve							
7	Retainer, Syringe							
8	Nozzle Ass'y, Check Valve	A007042	A007042	A007042	A007042	A007042	A007042	A007042
9	Shaft Ass'y, Throttle	A011091	A011091	A011048	A011048	A011109	A011091	A011091
10	Lever, Throttle	0012017	0012017			0012042	0012017	0012017
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014020	0014020	0014041	0014041	0014020	0014020	0014020
13	Diaphragm Ass'y, Metering	★● A015010	★● A015010	★● A015010	★● A015010	★● A015011	★● A015010	★● A015010
14	Diaphragm, Pump	★● 0015051	★● 0015051	★● 0015031V	★● 0015051	★● 0015051	★● 0015051	★● 0015051
15	Diaphragm, Surge							
16	Gasket, Metering Chamber	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016021	★● 0016019	★● 0016019
17	Gasket, Pump	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046
18	Cover, Pump	▲ 0017046	▲ 0017046	▲	▲ 0017046	▲ 0017046	▲ 0017046	▲ 0017046
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019014	★ 0019014	★ 0019002	★ 0019002	★ 0019014	★ 0019014	★ 0019014
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028022		0028022	0028022
24	Spring, Adjust Screw	0029001		0029005	0029001	0029001	0029001	0029001
25	Spring, Adjust Screw							
26	Screw, Main Mixture	0030158	0030158	0030099	0030111	0030106	0030107	0030158
27	Screw, Idle Mixture	0031156	0031156	0031096	0031106	0031090	0031090	0031156
28	Screw, Throttle Adjust	▲ 0035033	▲ 0035033	▲	▲ 0035035	▲ 0035035	▲ 0035033	▲ 0035033
29	Piece, Friction	▲ 0036001	▲ 0036001	▲	▲ 0036001	▲ 0036001	▲ 0036001	▲ 0036001
30	Spring, Friction	0038001	0038001	0038001	0038001	0038001	0038001	0038001
31	Shaft Ass'y, Choke	A041029	A041029	A041039	A041039	0041039	A041029	A041029
32	Valve, Choke	0043008	0043008	0043015	0043015	0043024	0043008	0043008
33	Post							
34	Collar	0052001	0052001			0052001	0052001	0052001
35	Plunger							
36	Spring (Plunger Return)							
37	Spring (Syringe)							
38	Base Ass'y, Primer					A056028		
39	Syringe					0057003		
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
42	Screw (Choke Valve)	156030045	156030045	156030045	156030045		156030045	156030045
43	Screw (Post)							
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17103008	17203006	17203006
45	Screw (Pump Cover)	17104009	17104009	17104009	17104009	17104010	17104009	17104009
46	Screw (Throttle Lever)	17103004	17103004			17103004	17103004	17103004
47	Ball, Steel	19290030	19290030	19290030	19290030	19290030	19290030	19290030
48	E-Ring (Throttle Shaft)			19500030	19500030			
49	E-Ring (Post)							
50	O-Ring (Plunger)							
51	Limiter, Mixture (H)	0061025	0061025	0061009	0061025	0061025	0061025	0061025
52	Limiter, Mixture (L)	0061026	0061026	0061010	0061026	0061026	0061026	0061026
53	Screw (Retainer)					17203012		
54	Washer (Limiter)	0026014	0026014	0026006	0026014	0026014	0026014	0026014
55	Retainer (Limiter)	0009028	0009028		0009028	0009028	0009028	0009028
56	Governor Ass'y			A059008	A059004		A059034	A059034
57	Washer (Governor)			0026011	0026011		0026011	0026011
58	Boot		0051027					
59	O-Ring (Throttle Shaft)							
60	Lever, Choke							
61	Lever, Choke Control							
62	Spring, Choke Return							
63	Diaphragm, Start Pump							
64	Gasket, Start Pump							
65	E-Ring (Choke Shaft)							
66	SCREW							

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U M38	C1U M40	C1U M42	C1U P5	C1U P6,A	C1U P7	C1U P10, A
	Venturi	9 mm	9 mm	9 mm	8 mm	8 mm	8 mm	8 mm
*	Rebuild Kit	RB-28	RB-28	RB-28	RB-29	RB-29	RB-29	RB-29
●	Gasket & Diaphragm Kit	* GND-18	* GND-18	* GND-18	* GND-18	* GND-18	* GND-18	* GND-18
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	K017034
■	Base Kit, Primer	K056030	K056030	-----	-----	-----	-----	-----
‡	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	* 0005004	* 0005004	* 0005004	* 0005005	* 0005004	* 0005004	* 0005004
5	Valve, Check	-----	-----	-----	0008004	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	0009008	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	-----	-----	-----	-----	-----
8	Nozzle Ass'y, Check Valve	A007135	A007207	A007196	A007040	A007063	A007063	A007063
9	Shaft Ass'y, Throttle	A011156	A011156	A011164	A011038	A011038	A011038	A011099
10	Lever, Throttle	-----	-----	-----	-----	-----	-----	-----
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0004041	0014041	0014041	0014020	0014037	0014037	0014037
13	Diaphragm Ass'y, Metering	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010
14	Diaphragm, Pump	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016019	●● 0016019	●● 0016019	●● 0016019	●● 0016019	●● 0016019	●● 0016019
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	-----	-----	0017046	0017045	0017045	0017045	▲ 0017044
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019002	* 0019002	* 0019002	* 0019014	* 0019014	* 0019014	* 0019014
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028022	0028022	0028022	0028022
24	Spring, Adjust Screw	-----	-----	-----	0029005	0029005	0029005	0029005
25	Spring, Adjust Screw	-----	-----	-----	0029003	0029003	0029003	-----
26	Screw, Main Mixture	0030152	0030219	0030209	0030028	0030074	0030066	0030145
27	Screw, Idle Mixture	0031146	0031221	0031213	0031044	0031073	0031072	0031079
28	Screw, Throttle Adjust	■ 0035035	■ 0035035	-----	0035015	0035015	0035015	▲ 0035033
29	Piece, Friction	■ 0036001	■ 0036001	-----	-----	-----	-----	▲ 0036001
30	Spring, Friction	-----	-----	0038001	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	-----	A041039	-----	-----	-----	-----
32	Valve, Choke	-----	-----	0043015	-----	-----	-----	-----
33	Post	0045002	-----	-----	0045010	0045010	0045010	0045010
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056089	■ A056089	-----	-----	-----	-----	-----
39	Syringe	0057004	0057004	-----	-----	-----	-----	-----
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
42	Screw (Choke Valve)	-----	-----	156030045	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	17104015	17104015	17104009	17104010	17104010	17104009	17104010
46	Screw (Throttle Lever)	-----	-----	-----	-----	-----	-----	-----
47	Ball, Steel	-----	-----	19290030	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500030
49	E-Ring (Post)	19500040	-----	-----	19500020	19500020	19500020	19500020
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiters, Mixture (H)	0061027	-----	-----	-----	-----	-----	0061009
52	Limiters, Mixture (L)	0061028	-----	-----	-----	-----	-----	0061017
53	Screw (Retainer)	-----	-----	-----	-----	-----	-----	-----
54	Washer (Limiters)	0026014	-----	-----	-----	-----	-----	0026014
55	Retainer (Limiters)	0009031	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	A059004	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	0026011	-----
58	Boot	0051027	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U P11	C1U P11A, B	C1U P12, A	C1U P14, A	C1U P17	C1U P21	C1U P21A
	Venturi	8 mm	8 mm	8 mm	8 mm	8 mm	8 mm	8 mm
*	Rebuild Kit	RB-29	RB-29	RB-29	RB-29	RB-98	RB-98	RB-98
●	Gasket & Diaphragm Kit	* GND-18	* GND-18	* GND-18	* GND-18	* GND-18	* GND-18	* GND-18
▲	Cover Kit, Pump		K017034	K017067	K017067	K017072	K017072	K017072
■	Base Kit, Primer							
‡	Plunger kit							
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer							
3	Strainer							
4	Plug, Welch	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004
5	Valve, Check							
6	Retainer, Check Valve							
7	Retainer, Syringe							
8	Nozzle Ass'y, Check Valve	A007063	A007063	A007063	A007063	A007169	A007169	A007169
9	Shaft Ass'y, Throttle	A011038	A011099	A011099	A011099	A011179	A011179	A011179
10	Lever, Throttle							
11	Spring, Throttle Return	0013016	0013016	0013015	0013015	0013015	0013015	0013015
12	Valve, Throttle	0014037	0014037	0014037	0014037	0014080	0014108	0014108
13	Diaphragm Ass'y, Metering	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010
14	Diaphragm, Pump	●● 0015051	●● 0015051	●● 0015081	●● 0015081	●● 0015081	●● 0015081	●● 0015081
15	Diaphragm, Surge							
16	Gasket, Metering Chamber	●● 0016019	●● 0016019	●● 0016019	●● 0016019	●● 0016019	●● 0016019	●● 0016019
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016073	●● 0016073	●● 0016073	●● 0016073	●● 0016073
18	Cover, Pump	0017045	▲ 0017044	▲ 0017077	▲ 0017077	▲ 0017077	▲ 0017077	▲ 0017077
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019014	* 0019014	* 0019014	* 0019014	* 0019005	* 0019005	* 0019005
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	0021001	0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028022	0028022	0028022	0028022
24	Spring, Adjust Screw	0029005	0029005	0029005				
25	Spring, Adjust Screw	0029003		▲ 0029003	▲ 0029003	▲ 0029034	▲ 0029034	▲ 0029034
26	Screw, Main Mixture	0030080	0030145	0030156	0030166	0030190	0030202	0030236
27	Screw, Idle Mixture	0031079	0031079	0031155	0031165	0031165	0031154	0031237
28	Screw, Throttle Adjust	0035015	▲ 0035033	▲ 0035070	▲ 0035070	▲ 0035073	▲ 0035073	▲ 0035073
29	Piece, Friction		▲ 0036001					
30	Spring, Friction							
31	Shaft Ass'y, Choke							
32	Valve, Choke							
33	Post	0045010	0045010					
34	Collar							
35	Plunger							
36	Spring (Plunger Return)							
37	Spring (Syringe)							
38	Base Ass'y, Primer							
39	Syringe							
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
42	Screw (Choke Valve)							
43	Screw (Post)							
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	17104010	17104010	17104010	17104010	17104010	17104010	17104010
46	Screw (Throttle Lever)							
47	Ball, Steel							
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500030
49	E-Ring (Post)	19500020	19500020					
50	O-Ring (Plunger)							
51	Limiter, Mixture (H)	0061009	0061009	0061025	0061025	0061056	0061056	
52	Limiter, Mixture (L)	0061017	0061017	0061026	0061026	0061026	0061026	
53	Screw (Retainer)							
54	Washer (Limiter)	0026006	0026014	0026014	0026014	0026014	0026014	
55	Retainer (Limiter)			0009028	0009028	0009028	0009028	
56	Governor Ass'y	A059004	A059033					
57	Washer (Governor)	0026011	0026011					
58	Boot				0051027	0051027	0051027	
59	O-Ring (Throttle Shaft)							
60	Lever, Choke							
61	Lever, Choke Control							
62	Spring, Choke Return							
63	Diaphragm, Start Pump							
64	Gasket, Start Pump							
65	E-Ring (Choke Shaft)							
66	SCREW							

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U P21B	C1U P23	C1U SK11	C1U SK12	C1U SK13	C1U SK13A	C1U SK14
	Venturi	8 mm	8 mm	7 mm	7 mm	7 mm	7 mm	8 mm
*	Rebuild Kit	RB-98	RB-98	RB-26	RB-26	RB-26	RB-26	RB-26
●	Gasket & Diaphragm Kit	* GND-18	* GND-18	* GND-17	* GND-17	* GND-17	* GND-17	* GND-17
▲	Cover Kit, Pump	K017072	K017072					
■	Base Kit, Primer			K056039	K056039	K056031	K056031	K056039
⊕	Plunger kit							
1	Strainer	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004	* 0004004
2	Strainer						0004005	
3	Strainer						0004006	
4	Plug, Welch	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004	* 0005004
5	Valve, Check							
6	Retainer, Check Valve							
7	Retainer, Syringe			0009015	0009015	0009015	0009015	0009015
8	Nozzle Ass'y, Check Valve	A007169		A007070	A007070	A007070	A007070	A007070
9	Shaft Ass'y, Throttle	A011179	A011179	A011138	A011138		A011141	A011138
10	Lever, Throttle					0012139	0012139	
11	Spring, Throttle Return	0013015	0013015	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014108	0014033	0014031	0014031	0014031	0014031	0014031
13	Diaphragm Ass'y, Metering	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010	●● A015010
14	Diaphragm, Pump	●● 0015081	●● 0015081	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051
15	Diaphragm, Surge							
16	Gasket, Metering Chamber	●● 0016019	●● 0016019	●● 0016018	●● 0016018	●● 0016018	●● 0016018	●● 0016018
17	Gasket, Pump	●● 0016073	●● 0016073	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	▲ 0017077	▲ 0017077					
19	Valve, Inlet Needle	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002	* 0018002
20	Spring, Metering Lever	* 0019005	* 0019005	* 0019009	* 0019009	* 0019009	* 0019009	* 0019009
21	Lever, Metering	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012	* 0020012
22	Pin	0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001	* 0021001
23	Cover, Metering Chamber	0028022	0028022	0028015	0028015	0028022	0028015	0028015
24	Spring, Adjust Screw			0029005	0029005			
25	Spring, Adjust Screw	▲ 0029034	▲ 0029034					
26	Screw, Main Mixture	0030241		0030081	0030081	0030117	0030117	0030160
27	Screw, Idle Mixture	0031241	0031206	0031095	0031095	0031112	0031112	0031158
28	Screw, Throttle Adjust	▲ 0035073	▲ 0035073	0035007	0035007	■	■	■ 0035007
29	Piece, Friction			■ 0036001	■ 0036001	■	■	■ 0036001
30	Spring, Friction							
31	Shaft Ass'y, Choke							
32	Valve, Choke							
33	Post							
34	Collar							
35	Plunger						0053009	
36	Spring (Plunger Return)						0054055	
37	Spring (Syringe)							
38	Base Ass'y, Primer			■ A056089	■ A056089	■	■	■ A056089
39	Syringe			0057004	0057004	0057004	0057004	0057004
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	156030045	15603004	15603004	15603004	15603004	15603004
42	Screw (Choke Valve)							
43	Screw (Post)							
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	17104010	17104010	17104015	17104015	17104015	17104015	17104015
46	Screw (Throttle Lever)					17103004	17103004	
47	Ball, Steel							
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500030
49	E-Ring (Post)							
50	O-Ring (Plunger)						195502308	
51	Limiters, Mixture (H)		0061056	0061009	0061009	0061009	0061009	0061009
52	Limiters, Mixture (L)			0061010	0061010	0061010	0061010	0061010
53	Screw (Retainer)							
54	Washer (Limiters)			0026014	0026014	0026001	0026001	
55	Retainer (Limiters)		0009028					
56	Governor Ass'y			A059005	A059005			A059035
57	Washer (Governor)			0026011	0026011			0026011
58	Boot							
59	O-Ring (Throttle Shaft)							
60	Lever, Choke							
61	Lever, Choke Control							
62	Spring, Choke Return							
63	Diaphragm, Start Pump							
64	Gasket, Start Pump							
65	E-Ring (Choke Shaft)							
66	SCREW							

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U SK17	C1U W4A-B	C1U W4C-E	C1U W7A-B	C1U W7C-D	C1U W10	C1U W10B
	Venturi	8.5 mm	7 mm	7 mm	7.5 mm	7.5 mm	7mm	7mm
★	Rebuild Kit	RB-64	RB-73	RB-73	RB-78	RB-73	RB-47	RB-47
●	Gasket & Diaphragm Kit	★ GND-41	★ GND-12	★ GND-12	★ GND-17	★ GND-18	★ GND-18	★ GND-18
▲	Cover Kit, Pump	-----	K017040	K017040	-----	-----	-----	-----
■	Base Kit, Primer	K056038	-----	-----	K056032	K056032	K056032	K056032
✦	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004004	★ 0004032	★ 0004032	★ 0004032	★ 0004032	★ 0004032	★ 0004032
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005005	★ 0005005	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	-----	0009065	0009015	0009015	0009015	0009015
8	Nozzle Ass'y, Check Valve	A007070	A007022	A007022	-----	-----	A007063	A007198
9	Shaft Ass'y, Throttle	A011154	A011106	A011106	A011106	A011106	A011172	A011172
10	Lever, Throttle	-----	-----	-----	-----	-----	-----	-----
11	Spring, Throttle Return	0013016	0013016	0013016	0013038	0013016	0013038	0013016
12	Valve, Throttle	0014053	0014041	0014041	0014053	0014053	0014041	0014041
13	Diaphragm Ass'y, Metering	●● A015018	●● A015011	●● A015011	●● A015010	●● A015010	●● A015010	●● A015010
14	Diaphragm, Pump	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051	●● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	●● 0016018	●● 0016021	●● 0016021	●● 0016018	●● 0016019	●● 0016019	●● 0016019
17	Gasket, Pump	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046	●● 0016046
18	Cover, Pump	-----	▲ 0017046	▲ 0017046	-----	-----	-----	-----
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019007	★ 0019014	★ 0019014	★ 0019014	★ 0019014	★ 0019002	★ 0019002
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028015	-----	-----	0028022	0028022	0028022	0028022
24	Spring, Adjust Screw	-----	0029005	-----	-----	-----	-----	-----
25	Spring, Adjust Screw	■ 0029007	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030160	0030104	0030161	-----	-----	0030161	0030194
27	Screw, Idle Mixture	0031110	0031102	0031159	0031160	0031200	0031159	0031192
28	Screw, Throttle Adjust	■ 0035062	▲ 0035035	▲ 0035035	■ 0035035	■ 0035035	■ 0035035	■ 0035035
29	Piece, Friction	-----	▲ 0036001	▲ 0036001	■ 0036001	■ 0036001	■ 0036001	■ 0036001
30	Spring, Friction	-----	0038001	0038001	-----	-----	-----	-----
31	Shaft Ass'y, Choke	-----	A041015	A041015	-----	-----	-----	-----
32	Valve, Choke	-----	0043015	0043015	-----	-----	-----	-----
33	Post	0045002	-----	-----	-----	-----	-----	-----
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056084	A056026	A056079	■ A056054	■ A056054	■ A056054	■ A056054
39	Syringe	0057004	★ 0057025	★ 0057025	★ 0057025	★ 0057025	★ 0057025	★ 0057025
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	15603004	156030045	156030045	15603004	15603004	156030045	156030045
42	Screw (Choke Valve)	-----	156030045	156030045	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17103008	-----	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	17104015	17104010	17104010	17104015	17104015	-----	-----
46	Screw (Throttle Lever)	-----	-----	-----	-----	-----	-----	-----
47	Ball, Steel	-----	19290030	19290030	-----	-----	-----	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500030
49	E-Ring (Post)	-----	-----	-----	-----	-----	-----	-----
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limiter, Mixture (H)	-----	-----	-----	-----	-----	-----	-----
52	Limiter, Mixture (L)	-----	-----	-----	-----	-----	-----	-----
53	Screw (Retainer)	-----	17203012	17203012	-----	-----	17104015	17104015
54	Washer (Limiter)	-----	-----	-----	-----	-----	-----	-----
55	Retainer (Limiter)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U W10C	C1U W12,A	C1U W12B	C1U W13,A	C1U W13B	C1U W16	C1U W16B
	Venturi	7mm	7mm	7mm	7mm	7mm	9.5 mm	9.5 mm
★	Rebuild Kit	RB-47	RB-47	RB-47	RB-47	RB-47	RB-47	RB-47
●	Gasket & Diaphragm Kit	★ GND-18	★ GND-18	★ GND-18	★ GND-18	★ GND-18	★ GND-18	★ GND-18
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	-----
■	Base Kit, Primer	K056032	-----	-----	K056037	K056037	K056032	K056032
⊕	Plunger kit	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004032	★ 0004032	★ 0004032	★ 0004032	★ 0004032	★ 0004032	★ 0004032
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	0009015	0009015	0009015	0009015	0009015
8	Nozzle Ass'y, Check Valve	A007198	A007198	A007198	A007198	A007198	A007179	A007179
9	Shaft Ass'y, Throttle	A011172	0011122	0011122	A011106	A011106	A011106	A011106
10	Lever, Throttle	-----	0012162	0012162	-----	-----	-----	-----
11	Spring, Throttle Return	0013016	0013074	0013074	0013016	0013016	0013038	0013016
12	Valve, Throttle	0014041	0014041	0014041	0014041	0014041	0014103	0014103
13	Diaphragm Ass'y, Metering	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010
14	Diaphragm, Pump	★● 0015051	★● 0015051	★● 0015051	★● 0015051	★● 0015051	★● 0015051	★● 0015051
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016019
17	Gasket, Pump	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046	★● 0016046
18	Cover, Pump	-----	-----	-----	-----	-----	-----	-----
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028022	0028022	0028022	0028022
24	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
25	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030210	0030194	0030210	0030194	0030210	0030187	0030195
27	Screw, Idle Mixture	0031213	0031192	0031213	0031192	0031213	0031159	0031192
28	Screw, Throttle Adjust	■ 0035035	-----	-----	■	■	0035035	■ 0035035
29	Piece, Friction	■ 0036001	-----	-----	■	■	0036001	■ 0036001
30	Spring, Friction	-----	0038001	0038001	0038001	0038001	-----	-----
31	Shaft Ass'y, Choke	-----	0041098	0041098	0041102	0041102	-----	-----
32	Valve, Choke	-----	0043024	0043024	0043024	0043024	-----	-----
33	Post	-----	-----	-----	-----	-----	-----	-----
34	Collar	-----	-----	-----	-----	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	-----
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	-----
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056054	A056076	A056076	■	■	A056054	■ A056054
39	Syringe	★ 0057025	★ 0057025	★ 0057025	★ 0057025	★ 0057025	★ 0057025	★ 0057025
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
42	Screw (Choke Valve)	-----	-----	-----	-----	-----	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	-----	-----	-----	-----	-----	17104015	17104015
46	Screw (Throttle Lever)	-----	-----	-----	-----	-----	-----	-----
47	Ball, Steel	-----	19290030	19290030	19290030	19290030	-----	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	19500030	19500030	19500030	19500030
49	E-Ring (Post)	-----	-----	-----	-----	-----	-----	-----
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	-----
51	Limitier, Mixture (H)	-----	-----	-----	-----	-----	-----	-----
52	Limitier, Mixture (L)	-----	-----	-----	-----	-----	-----	-----
53	Screw (Retainer)	17104015	17104015	17104015	17104015	17104015	-----	-----
54	Washer (Limitier)	-----	-----	-----	-----	-----	-----	-----
55	Retainer (Limitier)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	195505015	195505015	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	-----	-----	-----	-----
61	Lever, Choke Control	-----	-----	-----	-----	-----	-----	-----
62	Spring, Choke Return	-----	-----	-----	-----	-----	-----	-----
63	Diaphragm, Start Pump	-----	-----	-----	-----	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	-----	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	-----	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	-----

# PARTS LIST

# C1U TYPE

REF	PART NAME	C1U W16C	C1U W18	C1U W18A	C1U W19	C1U W22	C1U W24	C1U W32
	Venturi	9.5 mm	8mm	8mm	8mm	7mm	8mm	7mm
★	Rebuild Kit	RB-47	RB-115	RB-115	RB-117	RB-47	RB-115	RB-142
●	Gasket & Diaphragm Kit	★ GND-18	★ GND-12	★ GND-12	★ GND-64	★ GND-18	★ GND-12	★ GND-78
▲	Cover Kit, Pump	-----	-----	-----	K049004	-----	-----	-----
■	Base Kit, Primer	K056032	K056037	K056037	-----	K056037	K056037	K056043
⊕	Plunger kit	-----	-----	-----	-----	-----	-----	K053015
1	Strainer	★ 0004032	★ 0004032	★ 0004032	★ 0004032	★ 0004032	★ 0004032	★ 0004032
2	Strainer	-----	-----	-----	-----	-----	-----	0004005
3	Strainer	-----	-----	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Valve, Check	-----	-----	-----	-----	-----	-----	-----
6	Retainer, Check Valve	-----	-----	-----	-----	-----	-----	-----
7	Retainer, Syringe	0009015	0009015	0009015	0009015	0009015	0009015	-----
8	Nozzle Ass'y, Check Valve	A007179	A007169	A007169	A007169	A007063	A007169	A007169
9	Shaft Ass'y, Throttle	A011106	A011172	A011172	A011231	A011207	A011172	A011241
10	Lever, Throttle	-----	-----	-----	0012181	0012106	-----	0012252
11	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016	0013016	0013016
12	Valve, Throttle	0014103	0014103	0014103	0014103	0014041	0014103	0014016
13	Diaphragm Ass'y, Metering	★● A015010	★● A015011	★● A015011	★● A015011	★● A015010	★● A015011	★● A015049
14	Diaphragm, Pump	★● 0015051	★● 0015051	★● 0015051	★● 0015059	★● 0015051	★● 0015051	★● 0015103
15	Diaphragm, Surge	-----	-----	-----	-----	-----	-----	-----
16	Gasket, Metering Chamber	★● 0016019	★● 0016021	★● 0016021	★● 0016021	★● 0016019	★● 0016021	★● 0016014
17	Gasket, Pump	★● 0016046	★● 0016046	★● 0016046	★● 0016049	★● 0016046	★● 0016046	★● 0016091
18	Cover, Pump	-----	-----	-----	▲ A049026	-----	-----	-----
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019002	★ 0019009
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028022	0028040	0028042	0028042	0028022	0028042	0028022
24	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
25	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
26	Screw, Main Mixture	0030209	0030194	0030210	0030210	0030210	0030194	0030210
27	Screw, Idle Mixture	0031213	0031192	0031213	0031213	0031213	0031192	0031213
28	Screw, Throttle Adjust	■ 0035035	■	■	▲ 0035033	■ 0035035	■	■
29	Piece, Friction	■ 0036001	■	■	▲ 0036001	■ 0036001	■	■
30	Spring, Friction	-----	0038001	0038001	-----	0038001	0038001	-----
31	Shaft Ass'y, Choke	-----	0041113	0041113	A041094	A041103	0041120	A041119
32	Valve, Choke	-----	0043055	0043055	-----	0043008	0043055	-----
33	Post	-----	-----	-----	-----	-----	-----	-----
34	Collar	-----	-----	-----	0052006	-----	-----	-----
35	Plunger	-----	-----	-----	-----	-----	-----	⊕
36	Spring (Plunger Return)	-----	-----	-----	-----	-----	-----	0054057
37	Spring (Syringe)	-----	-----	-----	-----	-----	-----	-----
38	Base Ass'y, Primer	■ A056054	■	■	A056058	■ A056078	■	■
39	Syringe	★ 0057025	★ 0057025	★ 0057025	★ 0057025	★ 0057025	★ 0057025	-----
40	Screw (Pin)	14903006	14903006	14903006	14903006	14903006	14903006	14903006
41	Screw (Throttle Valve)	156030045	156030045	156030045	156030045	156030045	156030045	15603004
42	Screw (Choke Valve)	-----	-----	-----	-----	156030045	-----	-----
43	Screw (Post)	-----	-----	-----	-----	-----	-----	-----
44	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
45	Screw (Pump Cover)	17104015	-----	-----	17104023	-----	-----	-----
46	Screw (Throttle Lever)	-----	-----	-----	17103004	17103004	-----	17103004
47	Ball, Steel	-----	19290030	19290030	-----	19290030	19290030	-----
48	E-Ring (Throttle Shaft)	19500030	19500030	19500030	-----	19500030	19500030	19500040
49	E-Ring (Post)	-----	-----	-----	-----	-----	-----	-----
50	O-Ring (Plunger)	-----	-----	-----	-----	-----	-----	⊕
51	Limiter, Mixture (H)	-----	-----	-----	-----	-----	-----	-----
52	Limiter, Mixture (L)	-----	-----	-----	-----	-----	-----	-----
53	Screw (Retainer)	-----	17104015	17104015	-----	17104015	17104015	17103012
54	Washer (Limiter)	-----	-----	-----	-----	-----	-----	-----
55	Retainer (Limiter)	-----	-----	-----	-----	-----	-----	-----
56	Governor Ass'y	-----	-----	-----	-----	-----	-----	-----
57	Washer (Governor)	-----	-----	-----	-----	-----	-----	-----
58	Boot	-----	-----	-----	-----	-----	-----	-----
59	O-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
60	Lever, Choke	-----	-----	-----	0042134	0042132	-----	0042154
61	Lever, Choke Control	-----	-----	-----	-----	0042088	-----	-----
62	Spring, Choke Return	-----	-----	-----	0013085	0013093	-----	0013112
63	Diaphragm, Start Pump	-----	-----	-----	★● 0015060	-----	-----	-----
64	Gasket, Start Pump	-----	-----	-----	★● 0016050	-----	-----	-----
65	E-Ring (Choke Shaft)	-----	-----	-----	19500040	-----	-----	-----
66	SCREW	-----	-----	-----	-----	-----	-----	16403006