


PARTS LIST



Simple Start® C1U TYPE

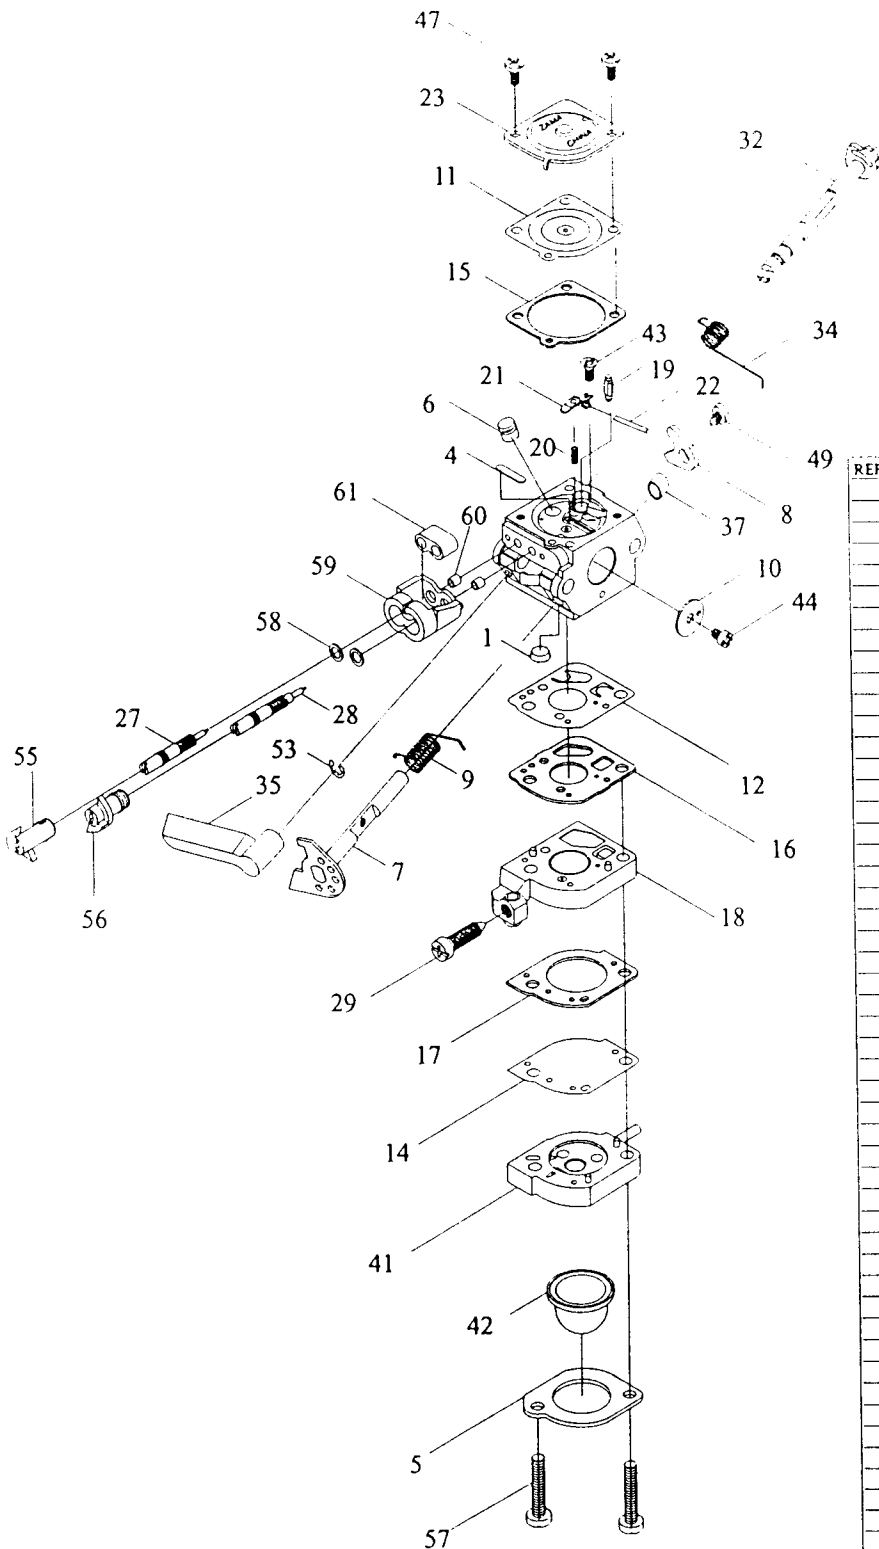

REF. NO.	PART NAME	
1	STRAINER	
2	STRAINER	NOT SHOWN
3	STRAINER	NOT SHOWN
4	PLUG, WELCH	
5	RETAINER, SYRINGE	
6	NOZZLE ASS'Y, CHECK VALVE	
7	SHAFT ASS'Y, THROTTLE	
8	LEVER, THROTTLE	
9	SPRING, THROTTLE RETURN	
10	VALVE, THROTTLE	
11	DIAPHRAGM ASS'Y, METERING	
12	DIAPHRAGM, PUMP	
13	DIAPHRAGM, SURGE	NOT SHOWN
14	DIAPHRAGM, START PUMP	
15	GASKET, METERING CHAMBER	
16	GASKET, PUMP	
17	GASKET, START PUMP	
18	COVER, STARTER PUMP	
19	VALVE, INLET NEEDLE	
20	SPRING, METERING LEVER	
21	LEVER, METERING	
22	PIN	
23	COVER, METERING CHAMBER	
24	COVER ASS'Y METERING CHAMBER	NOT SHOWN
25	SPRING, ADJUST SCREW	NOT SHOWN
26	SPRING, ADJUST SCREW	NOT SHOWN
27	SCREW, MAIN MIXTURE	
28	SCREW, IDLE MIXTURE	
29	SCREW, THROTTLE ADJUST	
30	PIECE, FRICTION	NOT SHOWN
31	SPRING, FRICTION	NOT SHOWN
32	SHAFT ASS'Y CHOKE	
33	VALVE, CHOKE	NOT SHOWN
34	SPRING CHOKE RETURN	
35	CHOKE ACTUATOR LEVER	
36	POST	NOT SHOWN
37	COLLAR	
38	PLUNGER	NOT SHOWN
39	SPRING (PLUNGER RETURN)	NOT SHOWN
40	SPRING (SYRINGE)	NOT SHOWN
41	BASE ASS'Y, PRIMER	
42	SYRINGE	
43	SCREW (PIN)	
44	SCREW (THROTTLE VALVE)	
45	SCREW (CHOKE VALVE)	NOT SHOWN
46	SCREW (POST)	NOT SHOWN
47	SCREW (METERING COVER)	
48	SCREW (PUMP COVER)	NOT SHOWN
49	SCREW (THROTTLE LEVER)	
50	BALL, STEEL	NOT SHOWN
51	E-RING (THROTTLE SHAFT)	NOT SHOWN
52	E-RING (POST)	NOT SHOWN
53	E-RING (CHOKE SHAFT)	
54	O-RING (PLUNGER)	NOT SHOWN
55	LIMITER, MIXTURE (H)	
56	LIMITER, MIXTURE (L)	
57	SCREW (RETAINER)	
58	WASHER (LIMITER)	
59	RETAINER (LIMITER)	
60	RETAINER (MIXTURE)	
61	BOOT	

PARTS LIST

SIMPLE START® C1U TYPE

REF	PART NAME	C1U H46	C1U H46A	C1U H49	C1U W17	C1U W17A
	Venturi	9mm	9mm	9mm	9.5mm	9.5mm
★	Rebuild Kit	RB-82	RB-82	RB-82	RB-111	RB-111
●	Gasket & Diaphragm Kit	★ GND-49	★ GND-49	★ GND-49	★ GND-49	★ GND-49
▲	Start Kit, Pump	K049001	K049001	K049001	K049004	K049004
■	Base Kit, Primer	-----	-----	-----	-----	-----
1	Strainer	★ 0004004	★ 0004004	★ 0004004	★ 0004032	★ 0004032
2	Strainer	-----	-----	-----	-----	-----
3	Strainer	-----	-----	-----	-----	-----
4	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
5	Retainer, Syringe	0009015	0009015	0009015	0009015	0009015
6	Nozzle Ass'y, Check Valve	A007163	A007163	-----	A007179	A007179
7	Shaft Ass'y, Throttle	A011158	A011158	A011161	A011191	A011191
8	Lever, Throttle	0012154	0012181	0012154	0012181	0012181
9	Spring, Throttle Return	0013016	0013016	0013016	0013016	0013016
10	Valve, Throttle	0014041	0014041	0014057	0014103	0014103
11	Diaphragm Ass'y, Metering	★● A015010	★● A015010	★● A015010	★● A015010	★● A015010
12	Diaphragm, Pump	★● 0015059	★● 0015059	★● 0015059	★● 0015059	★● 0015059
13	Diaphragm, Surge	-----	-----	-----	-----	-----
14	Diaphragm, Start Pump	★● 0015060	★● 0015060	★● 0015060	★● 0015060	★● 0015060
15	Gasket, Metering Chamber	★● 0016019	★● 0016019	★● 0016019	★● 0016019	★● 0016019
16	Gasket, Pump	★● 0016049	★● 0016049	★● 0016049	★● 0016049	★● 0016049
17	Gasket, Start Pump	★● 0016050	★● 0016050	★● 0016050	★● 0016050	★● 0016050
18	Cover, Starter Pump	▲	▲	▲	▲ A049026	▲ A049026
19	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
20	Spring, Metering Lever	★ 0019014	★ 0019014	★ 0019014	★ 0019002	★ 0019002
21	Lever, Metering	★ 0020012	★ 0020012	★ 0020012	★ 0020012	★ 0020012
22	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
23	Cover, Metering Chamber	0028022	0028022	0028022	0028022	0028022
24	Cover Ass'y, Meter'g Chamber	-----	-----	-----	-----	-----
25	Spring, Adjust Screw	-----	-----	-----	-----	-----
26	Spring, Adjust Screw	-----	-----	-----	-----	-----
27	Screw, Main Mixture	0030173	0030173	-----	0030195	0030209
28	Screw, Idle Mixture	0031174	0031174	0031175	0031192	0031213
29	Screw, Throttle Adjust	▲	▲	▲	▲ 0035033	▲ 0035033
30	Piece, Friction	▲	▲	▲	▲ 0036001	▲ 0036001
31	Spring, Friction	-----	-----	-----	-----	-----
32	Shaft Ass'y, Choke	A041081	A041094	A041081	A041094	A041094
33	Valve, Choke	-----	-----	-----	-----	-----
34	Spring Choke Return	0013068	0013068	0013068	0013085	0013085
35	Choke Actuator Lever	0042084	0042127	0042084	0042105	0042105
36	Post	-----	-----	-----	-----	-----
37	Collar	0052006	0052006	0052006	0052006	0052006
38	Plunger	-----	-----	-----	-----	-----
39	Spring (Plunger Return)	-----	-----	-----	-----	-----
40	Spring (Syringe)	-----	-----	-----	-----	-----
41	Base Ass'y, Primer	A056058	A056058	A056058	A056058	A056058
42	Syringe	0057004	0057004	0057004	★ 0057025	0057025
43	Screw (Pin)	14903006	14903006	14903006	14903006	14903006
44	Screw (Throttle Valve)	156030045	156030045	15603004	156030045	156030045
45	Screw (Choke Valve)	-----	-----	-----	-----	-----
46	Screw (Post)	-----	-----	-----	-----	-----
47	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006
48	Screw (Pump Cover)	17104023	17104023	17104023	17104023	17104023
49	Screw (Throttle Lever)	17103004	17103004	17103004	17103004	17103004
50	Ball, Steel	-----	-----	-----	-----	-----
51	E-Ring (Throttle Shaft)	-----	-----	-----	-----	-----
52	E-Ring (Post)	-----	-----	-----	-----	-----
53	E-Ring (Choke Shaft)	19500030	19500040	19500030	19500040	19500040
54	O-Ring (Plunger)	-----	-----	-----	-----	-----
55	Limiters, Mixture (H)	0061025	0061025	0061025	-----	-----
56	Limiters, Mixture (L)	0061026	0061026	-----	-----	-----
57	Screw (Retainer)	-----	-----	-----	-----	-----
58	Washer (Limiters)	0026014	0026014	0026014	-----	-----
59	Retainer (Limiters)	0009028	0009028	0009028	-----	-----
60	Retainer (Mixture)	-----	-----	-----	-----	-----
61	Boot	0051027	0051027	-----	-----	-----