


PARTS LIST



C3 TYPE

C3 TYPE

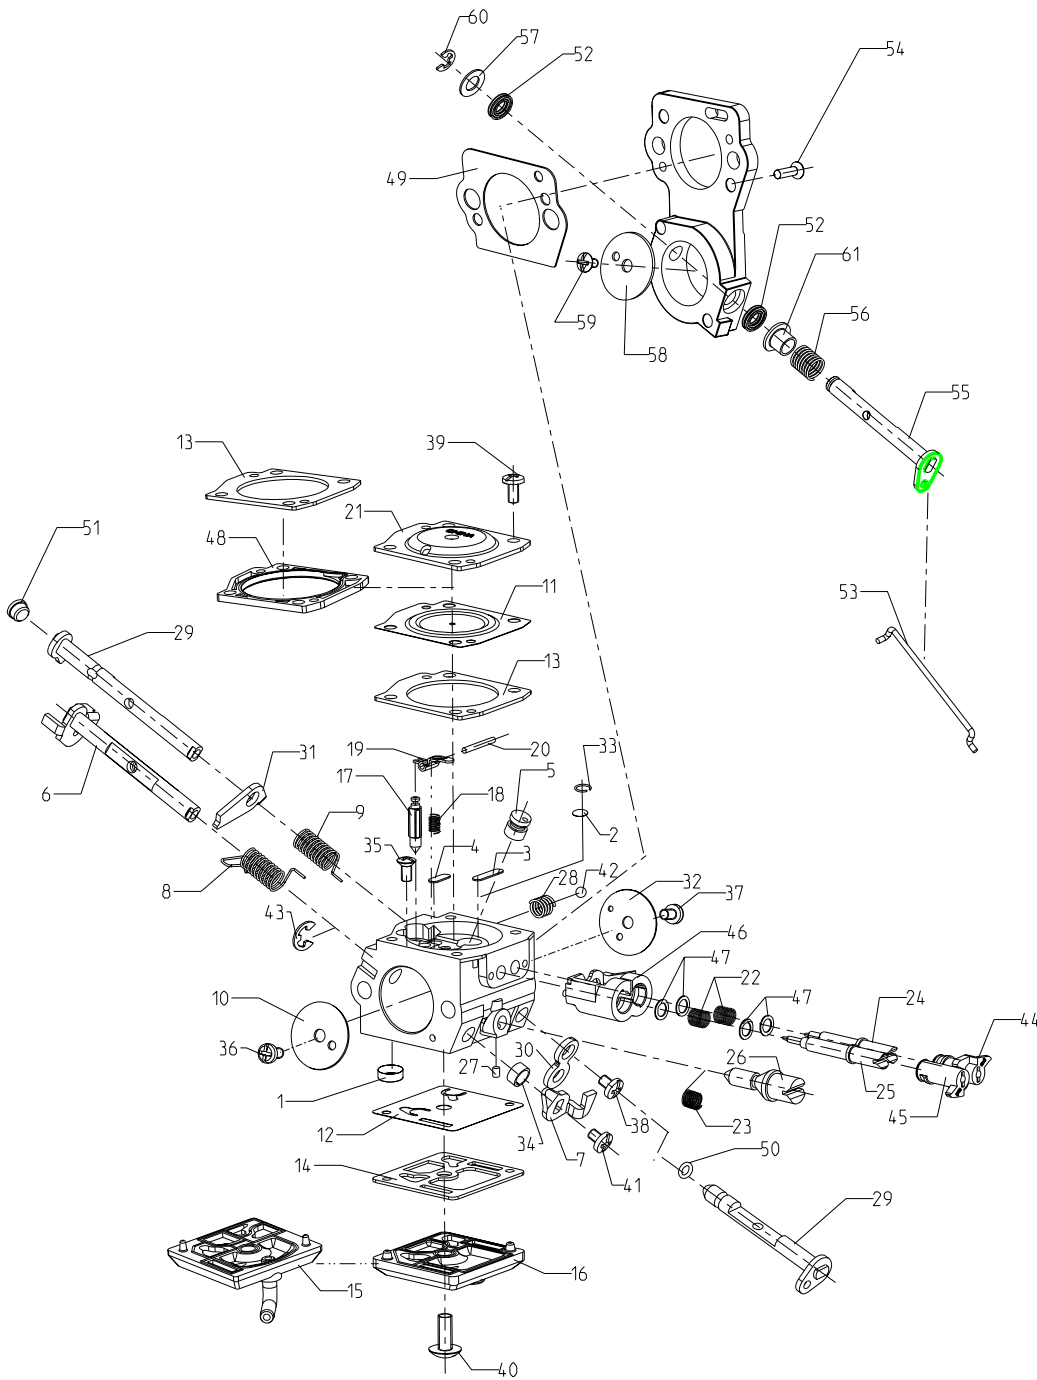

REF. NO	PART NAME
1	STRAINER
2	STRAINER
3	PLUG, WELCH
4	PLUG, WELCH
5	NOZZLE ASS'Y, CHECK VALVE
6	SHAFT ASS'Y, THROTTLE
7	LEVER, THROTTLE
8	SPRING, THROTTLE RETURN
9	SPRING, CHOKE RETURN
10	VALVE, THROTTLE
11	DIAPHRAGM ASS'Y, METERING
12	DIAPHRAGM, PUMP
13	GASKET, METERING CHAMBER
14	GASKET, PUMP
15	COVER ASS'Y, PUMP
16	COVER, PUMP
17	VALVE, INLET NEEDLE
18	SPRING, METERING LEVER
19	LEVER, METERING
20	PIN
21	COVER, METERING CHAMBER
22	SPRING, ADJUST SCREW
23	SPRING, ADJUST SCREW
24	SCREW, MAIN MIXTURE
25	SCREW, IDLE MIXTURE
26	SCREW, THROTTLE ADJUST
27	PIECE, FRICTION
28	SPRING, FRICTION
29	SHAFT ASS'Y, CHOKE
30	LEVER, CHOKE
31	LEVER, CHOKE
32	VALVE, CHOKE
33	RING, WIRE
34	COLLAR
35	SCREW (PIN)
36	SCREW (THROTTLE VALVE)
37	SCREW (CHOKE VALVE)
38	SCREW (CHOKE LEVER)
39	SCREW (METERING COVER)
40	SCREW (PUMP COVER)
41	SCREW (THROTTLE LEVER)
42	BALL, STEEL
43	E-RING (THROTTLE SHAFT)
44	LIMITER (H)
45	LIMITER (L)
46	RETAINER (LIMITER)
47	WASHER (LIMITER)
48	COVER, COMPENSATOR
49	GASKET (AIR HEAD)
50	O-RING
51	PLUG (CHOKE SHAFT)
52	QUAD RING
53	ROD LINKAGE (AIR HEAD)
54	SCREW (BODY AIR HEAD)
55	SHAFT ASS'Y(AIR HEAD)
56	SPRING (AIR HEAD ,RETURN)
57	WASHER
58	VALVE(AIR HEAD)
59	SCREW (VALVE, AIR HEAD)
60	E-RING (SHAFT, AIR HEAD)
61	COLLAR (SHAFT, AIR HEAD)

PARTS LIST

C3 TYPE

REF	PART NAME	C3 E8,A	C3 E9,A	C3 EL15,A	C3 EL16,A	C3 EL17	C3 EL17A	C3 EL17B
	Venturi	15 mm	15 mm	15 mm	15 mm	15 mm	15 mm	15 mm
★	Rebuild Kit	RB-95	RB-95	RB-95	RB-95	RB-122	RB-122	RB-122
●	Gasket & Diaphragm Kit	★ GND-54	★ GND-54	★ GND-54	★ GND-54	★ GND-65	★ GND-65	★ GND-65
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----	-----
‡	Body Ass'y, AirHead	-----	-----	-----	-----	-----	-----	-----
1	Strainer	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011
2	Strainer	-----	-----	-----	-----	-----	-----	-----
3	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004
4	Plug, Welch	★ 0005006	★ 0005006	★ 0005006	★ 0005006	★ 0005006	★ 0005006	★ 0005006
5	Nozzle Ass'y, Check Valve	A007202	A007203	A007165	A007166	A007193	A007219	A007219
6	Shaft Ass'y, Throttle	A011205	A011205	A011175	A011175	A011184	A011184	A011184
7	Lever, Throttle	0012194	0012194	0012163	0012163	0012163	0012163	0012163
8	Spring, Throttle Return	0013089	0013089	0013076	0013076	0013076	0013076	0013076
9	Spring, Choke Return	0013090	0013090	0013077	0013077	0013077	0013077	0013077
10	Valve, Throttle	0014113	0014113	0014098	0014098	0014106	0014106	0014106
11	Diaphragm Ass'y, Metering	★● A015040	★● A015040	★● A015040	★● A015040	★● A015040	★● A015040	★● A015040
12	Diaphragm, Pump	★● 0015039	★● 0015039	★● 0015039	★● 0015039	★● 0015049	★● 0015049	★● 0015049
13	Gasket, Metering Chamber	★● 0016051	★● 0016051	★● 0016051	★● 0016051	★● 0016051	★● 0016051	★● 0016051
14	Gasket, Pump	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032
15	Cover Ass'y, Pump	A017045	A017045	-----	-----	-----	-----	-----
16	Cover, Pump	-----	-----	0017041	0017041	0017041	0017041	0017041
17	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002
18	Spring, Metering Lever	★ 0019013	★ 0019013	★ 0019013	★ 0019013	★ 0019013	★ 0019013	★ 0019013
19	Lever, Metering	★ 0020033	★ 0020033	★ 0020033	★ 0020033	★ 0020033	★ 0020033	★ 0020033
20	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001
21	Cover, Metering Chamber	A028026	A028026	0028012	0028012	0028044	0028044	0028044
22	Spring, Adjust Screw	0029005	0029005	0029005	0029005	0029005	0029005	0029005
23	Spring, Adjust Screw	-----	-----	-----	-----	-----	-----	-----
24	Screw, Main Mixture	0030213	0030214	0030189	0030183	0030182	0030182	0030182
25	Screw, Idle Mixture	0031215	0031216	0031184	0031185	0031195	0031195	0031195
26	Screw, Throttle Adjust	0035072	0035072	0035072	0035072	0035072	0035072	0035072
27	Piece, Friction	0036001	0036001	0036001	0036001	0036001	0036001	0036001
28	Spring, Friction	-----	-----	0038001	0038001	0038001	0038001	0038001
29	Shaft Ass'y, Choke	A041102	A041102	A041086	A041086	A041092	A041092	A041092
30	Lever, Choke	0042118	0042118	0042092	0042092	0042092	0042092	0042092
31	Lever, Choke	0042120	0042120	0042094	0042094	0042094	0042094	0042144
32	Valve, Choke	0043063	0043063	0043009	0043009	0043010	0043010	0043010
33	Ring, Wire	-----	-----	-----	-----	-----	-----	-----
34	Collar	0052007	0052007	0052005	0052005	0052005	0052005	0052005
35	Screw (Pin)	14803006	14803006	14803006	14803006	14803006	14803006	149030055
36	Screw (Throttle Valve)	156030055	156030055	156030055	156030055	156030055	156030055	156030055
37	Screw (Choke Valve)	156030045	156030045	156030045	156030045	156030045	156030045	156030045
38	Screw (Choke Lever)	17103004	17103004	17103004	17103004	17103004	17103004	17103004
39	Screw (Metering Cover)	17203006	17203006	17203006	17203006	17203006	17203006	17203006
40	Screw (Pump Cover)	17004010	17004010	17004010	17004010	17004010	17004010	17004010
41	Screw (Throttle Lever)	17103004	17103004	17103004	17103004	17103004	17103004	17103004
42	Ball, Steel	-----	-----	19290030	19290030	19290030	19290030	19290030
43	E-Ring (Throttle Shaft)	-----	-----	-----	-----	-----	-----	-----
44	Limit, Mixture (H)	-----	0061027	-----	0061027	-----	-----	-----
45	Limit, Mixture (L)	-----	0061028	-----	0061028	-----	-----	-----
46	Retainer (Limit)	-----	0009031	-----	0009031	-----	-----	-----
47	Washer (Limit)	-----	0026006	-----	0026006	-----	-----	-----
48	Cover, Compensator	-----	-----	-----	-----	-----	-----	-----
49	Gasket, Air Head	-----	-----	-----	-----	-----	-----	-----
50	O-Ring	-----	-----	-----	-----	-----	-----	-----
51	Plug, Choke Shaft	-----	-----	-----	-----	-----	-----	-----
52	Quad Ring	-----	-----	-----	-----	-----	-----	-----
53	Rod Linkage, AirHead	-----	-----	-----	-----	-----	-----	-----
54	Screw, Body AirHead	-----	-----	-----	-----	-----	-----	-----
55	Shaft Ass'y, AirHead	-----	-----	-----	-----	-----	-----	-----
56	Spring, AirHead Return	-----	-----	-----	-----	-----	-----	-----
57	Washer	-----	-----	-----	-----	-----	-----	-----
58	Valve AirHead	-----	-----	-----	-----	-----	-----	-----
59	Screw, Valve AirHead	-----	-----	-----	-----	-----	-----	-----
60	E-Ring, Shaft AirHead	-----	-----	-----	-----	-----	-----	-----
61	Collar, Shaft AirHead	-----	-----	-----	-----	-----	-----	-----

PARTS LIST

C3 TYPE

REF	PART NAME	C3 EL18	C3 EL18A	C3 EL18B	C3 EL29,A	C3 EL32	C3 K5		
	Venturi	15 mm	15 mm	15 mm	14 mm	15 mm	13.5 mm		
★	Rebuild Kit	RB-122	RB-122	RB-122	RB-133	RB-122	RB-43		
●	Gasket & Diaphragm Kit	★ GND-65	★ GND-65	★ GND-65	★ GND-73	★ GND-65	★ GND-19		
▲	Cover Kit, Pump	-----	-----	-----	-----	-----	-----		
+	Body Ass'y, AirHead	-----	-----	-----	A088004	-----	-----		
1	Strainer	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004011	★ 0004004		
2	Strainer	-----	-----	-----	-----	-----	★ 0004008		
3	Plug, Welch	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005004	★ 0005002		
4	Plug, Welch	★ 0005006	★ 0005006	★ 0005006	★ 0005006	★ 0005006	★ 0005007		
5	Nozzle Ass'y, Check Valve	A007194	A007220	A007220	A007218	A007220	-----		
6	Shaft Ass'y, Throttle	A011184	A011184	A011184	A011222	A011184	-----		
7	Lever, Throttle	0012163	0012163	0012163	-----	0012163	0048001		
8	Spring, Throttle Return	0013076	0013076	0013076	0013099	0013076	0013017		
9	Spring, Choke Return	0013077	0013077	0013077	-----	0013077	-----		
10	Valve, Throttle	0014106	0014106	0014106	0014098	0014106	0014017		
11	Diaphragm Ass'y, Metering	★● A015040	★● A015040	★● A015040	★● A015055	★● A015040	★● A015012		
12	Diaphragm, Pump	★● 0015049	★● 0015049	★● 0015049	★● 0015039	★● 0015049	★● 0015021		
13	Gasket, Metering Chamber	★● 0016051	★● 0016051	★● 0016051	★● 0016093	★● 0016051	★● 0016024		
14	Gasket, Pump	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016032	★● 0016023		
15	Cover Ass'y, Pump	-----	-----	-----	A017047	-----	A017007		
16	Cover, Pump	0017041	0017041	0017041	-----	0017041	-----		
17	Valve, Inlet Needle	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018002	★ 0018004		
18	Spring, Metering Lever	★ 0019013	★ 0019013	★ 0019013	★ 0019009	★ 0019013	★ 0019007		
19	Lever, Metering	★ 0020033	★ 0020033	★ 0020033	★ 0020033	★ 0020033	★ 0020003		
20	Pin	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021001	★ 0021002		
21	Cover, Metering Chamber	0028044	0028044	0028044	0028047	0028044	0028012		
22	Spring, Adjust Screw	0029005	0029005	0029005	-----	0029005	0029005		
23	Spring, Adjust Screw	-----	-----	-----	-----	-----	0029006		
24	Screw, Main Mixture	0030183	0030183	0030183	0030226	0030183	0030025		
25	Screw, Idle Mixture	0031196	0031196	0031196	0031228	0031196	0031024		
26	Screw, Throttle Adjust	0035072	0035072	0035072	0035022	0035072	-----		
27	Piece, Friction	0036001	0036001	0036001	0036001	0036001	-----		
28	Spring, Friction	0038001	0038001	0038001	0038001	0038001	0038001		
29	Shaft Ass'y, Choke	A041092	A041092	A041092	A041110	A041092	A041010		
30	Lever, Choke	0042092	0042092	0042092	-----	0042092	-----		
31	Lever, Choke	0042094	0042094	0042144	-----	0042144	-----		
32	Valve, Choke	0043010	0043010	0043010	0043061	0043065	0043009		
33	Ring, Wire	-----	-----	-----	-----	-----	-----		
34	Collar	0052005	0052005	0052005	0052015	0052005	-----		
35	Screw (Pin)	14803006	14803006	149030055	149030055	149030055	17103004		
36	Screw (Throttle Valve)	156030055	156030055	156030055	15702545	156030055	15603004		
37	Screw (Choke Valve)	156030045	156030045	156030045	156030045	156030045	15603004		
38	Screw (Choke Lever)	17103004	17103004	17103004	-----	17103004	-----		
39	Screw (Metering Cover)	17203006	17203006	17203006	17203009	17203006	17103007		
40	Screw (Pump Cover)	17004010	17004010	17004010	17004010	17004010	17004010		
41	Screw (Throttle Lever)	17103004	17103004	17103004	-----	17103004	17103004		
42	Ball, Steel	19290030	19290030	19290030	19290030	19290030	19290030		
43	E-Ring (Throttle Shaft)	-----	-----	-----	19500030	-----	-----		
44	Limiters, Mixture (H)	0061027	0061027	0061027	-----	0061027	-----		
45	Limiters, Mixture (L)	0061028	0061028	0061028	-----	0061028	-----		
46	Retainer (Limiters)	0009031	0009031	0009031	-----	0009031	-----		
47	Washer (Limiters)	0026006	0026006	0026006	-----	0026006	-----		
48	Cover, Compensator	-----	-----	-----	0028048	-----	-----		
49	Gasket, Air Head	-----	-----	-----	★● 0016094	-----	-----		
50	O-Ring	-----	-----	-----	★ 195503010	-----	-----		
51	Plug, Choke Shaft	-----	-----	-----	0005047	-----	-----		
52	Quad Ring	-----	-----	-----	★+ 195505178	-----	-----		
53	Rod Linkage, AirHead	-----	-----	-----	0063026	-----	-----		
54	Screw, Body AirHead	-----	-----	-----	14902509	-----	-----		
55	Shaft Ass'y, AirHead	-----	-----	-----	+ A011223	-----	-----		
56	Spring, AirHead Return	-----	-----	-----	+ 0013100	-----	-----		
57	Washer	-----	-----	-----	+ 0026036	-----	-----		
58	Valve AirHead	-----	-----	-----	+ 0014098	-----	-----		
59	Screw, Valve AirHead	-----	-----	-----	+ 15702545	-----	-----		
60	E-Ring, Shaft AirHead	-----	-----	-----	+ 19500030	-----	-----		
61	Collar, Shaft AirHead	-----	-----	-----	+ 0052015	-----	-----		