


**MODEL: A5000L
5 HP COUNTER-ROTATING REAR-TINE TILLER**

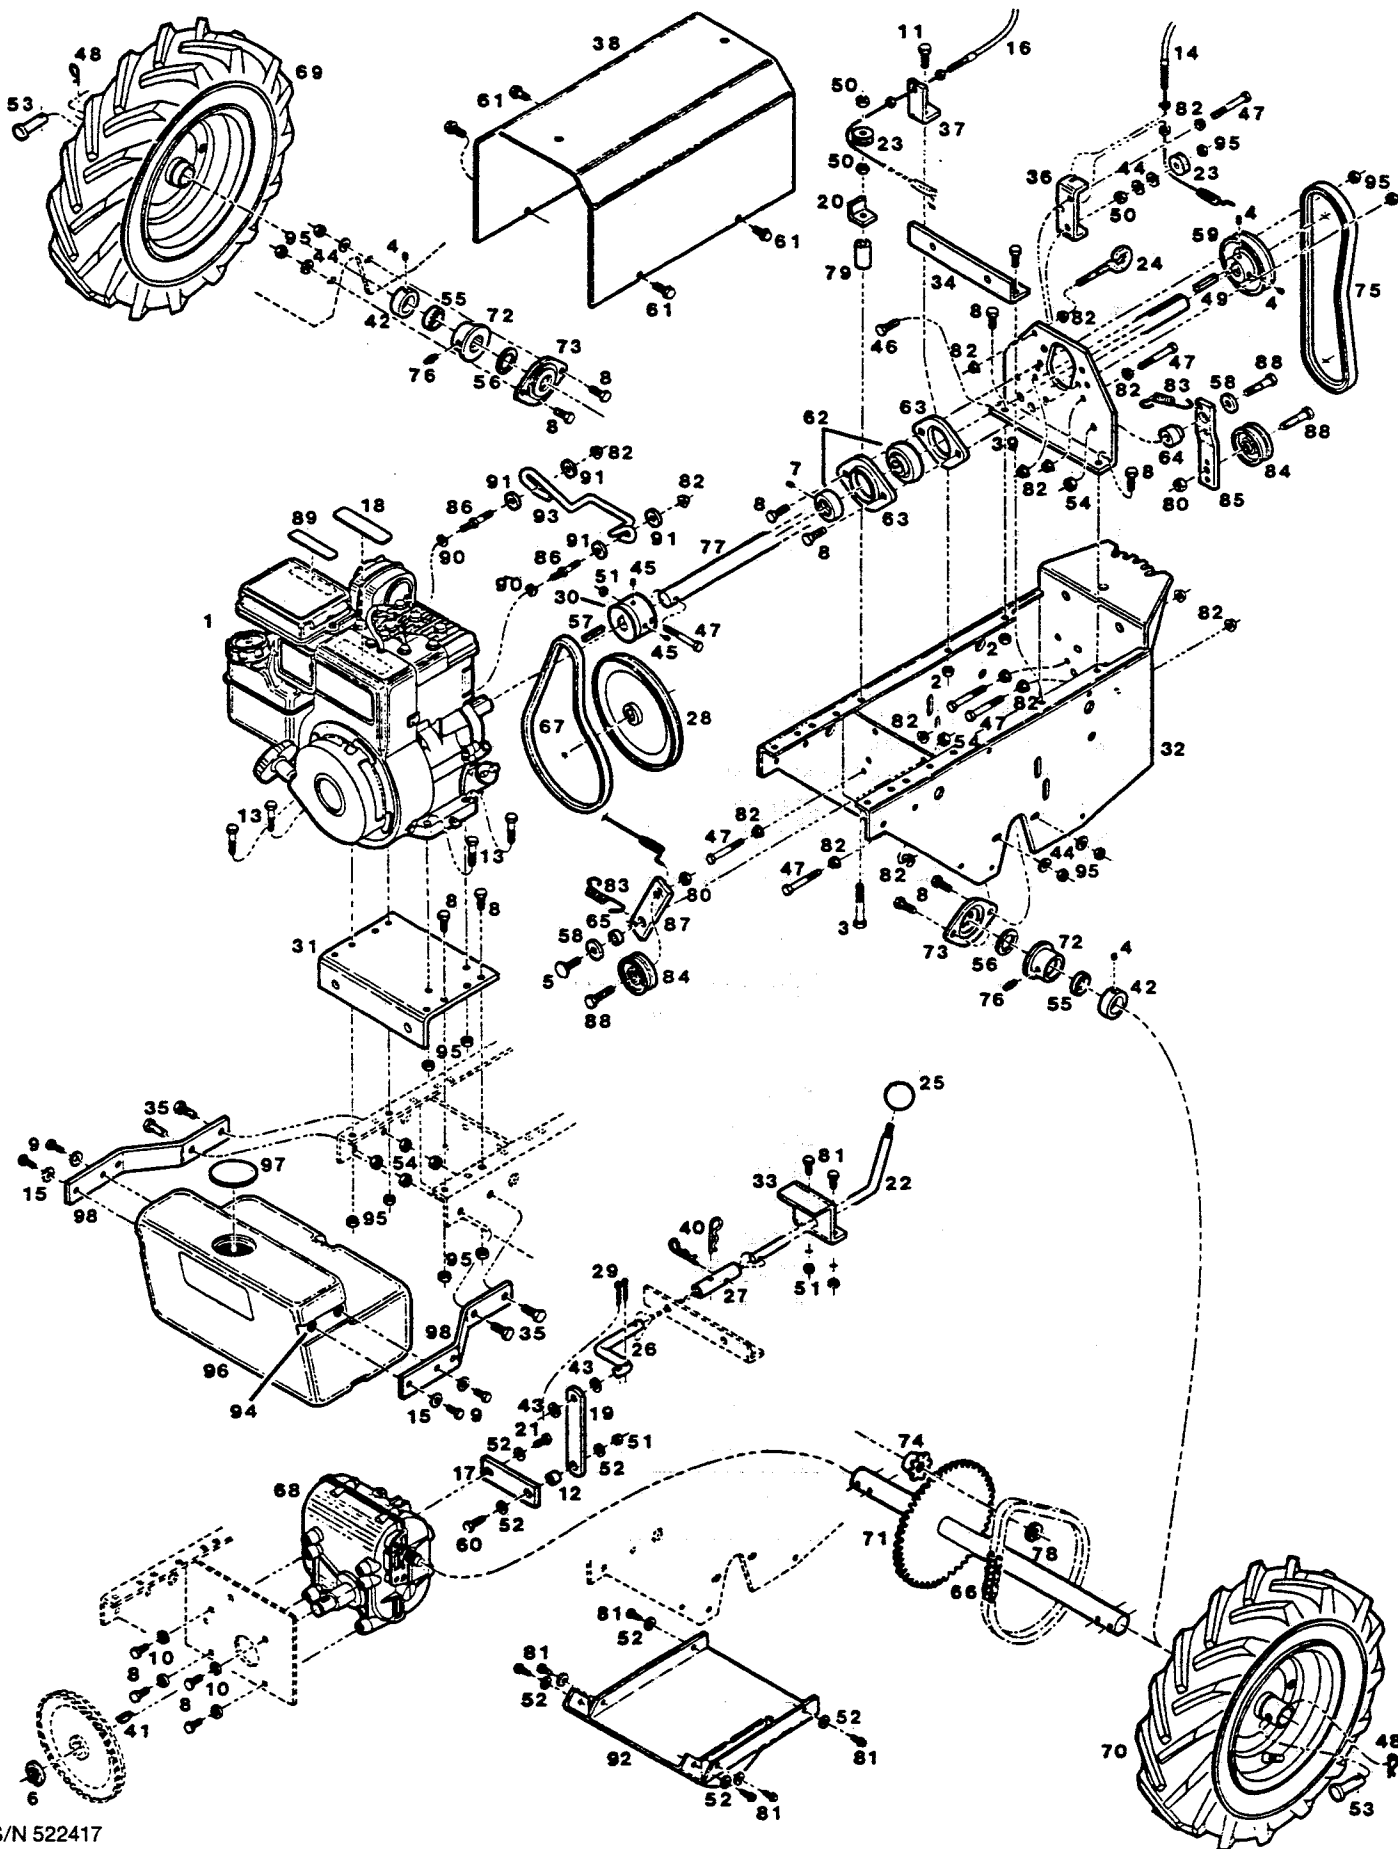

S/N 522417
O/M 541631
E/M 082093
P/B 554592

**MODEL: A500L
5 HP COUNTER-ROTATING REAR-TINE TILLER**

Index No.	Part No.	Description
1	*	Engine - 5 H.P.
2	157610	Nut - hex lock 5/16-18 flange
3	623439	Bolt - hex 5/16-18 x 2-1/2
4	315093	Set screw 5/16-18 x 1/4
5	154369	Bolt - hex shoulder 3/8-16 x 1-1/4
6	170035	Ring - retaining
7	157305	Set screw 1/4-20 x 1/4
8	450346	Bolt - hex 5/16-18 x 3/4
9	159004	Screw - hex 1/4-20 x 3/4
10	311118	Washer - split lock 5/16
11	152108	Bolt - hex 5/16-18 x 1
12	467829	Bushing - arm
13	460311	Bolt - hex 5/16-18 x 1-3/4
14	530493	Cable - engaging, tine drive
15	461715	Washer - ext, tooth lock
16	530501	Cable - engaging, ground drive
17	558189	Lever - shift, on transmission
18	402016	Decal - Place Free Hand Here
19	558171	Link - shifter
20	555318	Bracket - angle
21	616144	Bolt - hex 1/4-28 x 1/2
22	098897	Lever - shift
23	112177	Roller - cable
24	555359	Guide - cable
25	616359	Knob - shift lever
26	557512	Rod - shift
27	557520	Connector - shift rod/lever
28	098863	Pulley - wheel drive transmission
29	317016	Pin - cotter
30	584698	Pulley - drive, on engine
31	014639	Plate - engine mount
32	576330	Frame - chassis
33	558247	Guide - shift lever
34	558163	Bracket - shift rod
35	715326	Bolt - hex 3/8-16 x 1
36	558148	Support - cable
37	558155	Bracket - cable
38	014647	Cover - belts and pulleys
39	575670	Support - rear bearing
40	317040	Hairpin cotter
41	615534	Key - woodruff #9
42	557447	Collar - axle
43	159921	Washer - flat
44	715185	Washer - flat 5/16
45	159608	Set screw 5/16-18 x 7/16
46	380402	Bolt - hex 5/16-18 x 1-1/2
47	616094	Bolt - hex 1/4-20 x 2-1/2
48	715011	Hairpin cotter
49	382184	Key - square 3/16 x 1-3/8
50	616342	Nut - hex lock 5/16-18

Index No.	Part No.	Description
51	715508	Nut - hex lock 1/4-20
52	615690	Washer - flat 1/4
53	616532	Pin - clevis
54	715086	Nut - hex lock 3/8-16
55	616565	Seal - dust
56	584110	Seal - felt ring
57	446757	Key - square 3/16 x 1-7/8
58	616854	Washer - flat 3/8 special
59	616870	Pulley - drive, tine transmission
60	158972	Bolt - hex 1/4-20 x 1
61	617514	Bolt - hex self tap 5/16-18 x 5/8
62	617795	Bearing - drive shaft
63	617811	Flange - bearing retainer
64	617878	Bushing - pilot, idler arm
65	617886	Bushing - idler arm
66	584086	Chain - drive 53 links
67	584128	Belt - wheel drive
68	171447**	Transmission - wheel drive (Tecumseh/Peerless Model 700-033)
69	558858	Wheel - drive, w/tire RH
70	558866	Wheel - drive, w/tire LH
71	099044	Axle - drive wheels w/sprocket
72	584227	Bearing - axle
73	558023	Flange - bearing retainer
74	620021	Sprocket - axle drive
75	584367	Belt - tine drive
76	624890	Fitting - lubrication
77	623181	Shaft - drive, tiller tines
78	620807	Ring - retaining
79	156489	Spacer
80	624908	Nut - hex lock 3/8-16
81	158089	Screw - hex self tap 1/4-20 x 1/2
82	715078	Nut - hex 1/4-20 whiz flange
83	584383	Spring - idler
84	170530	Pulley - idler
85	557579	Arm - tine idler
86	156885	Stud - belt keeper
87	558254	Arm - drive idler
88	159020	Bolt - hex 3/8-16 x 1-1/2
89	551846	Decal - CAUTION Disengage
90	715094	Washer - split lock 1/4
91	158956	Washer - flat 1/4
92	552836	Shield - dirt
93	557298	Keeper - belt, engine
94	403337	Insert - threaded 1/4-20
95	715490	Nut - hex top lock 5/16-18
96	592543	Tank - front weight
97	584417	Cap - weight tank
98	575340	Bracket - weight tank


*Contact engine manufacturer's authorized service dealer for parts and warranty.

**Contact Tecumseh/Peerless authorized service dealer or distributor for parts and warranty.

- When servicing this unit use only genuine General Power OEM replacement parts that are specifically designed and engineered for this particular model.
- Do not operate unit unless all parts are properly attached and in good working order.
- Parts are right or left hand as viewed from the operator's position.
- Specifications are subject to change without notice.


Optional Accessory

Model No.	Part No.	Description
RSWW	522136	2 Pak Tiller Wheel Weights

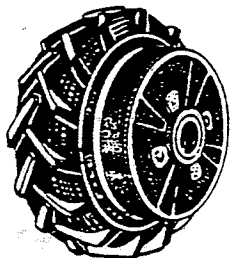

S/N 522417
O/M 541631
E/M 082093
P/B 554592

**MODEL: A5000L
5 HP COUNTER-ROTATING REAR-TINE TILLER**

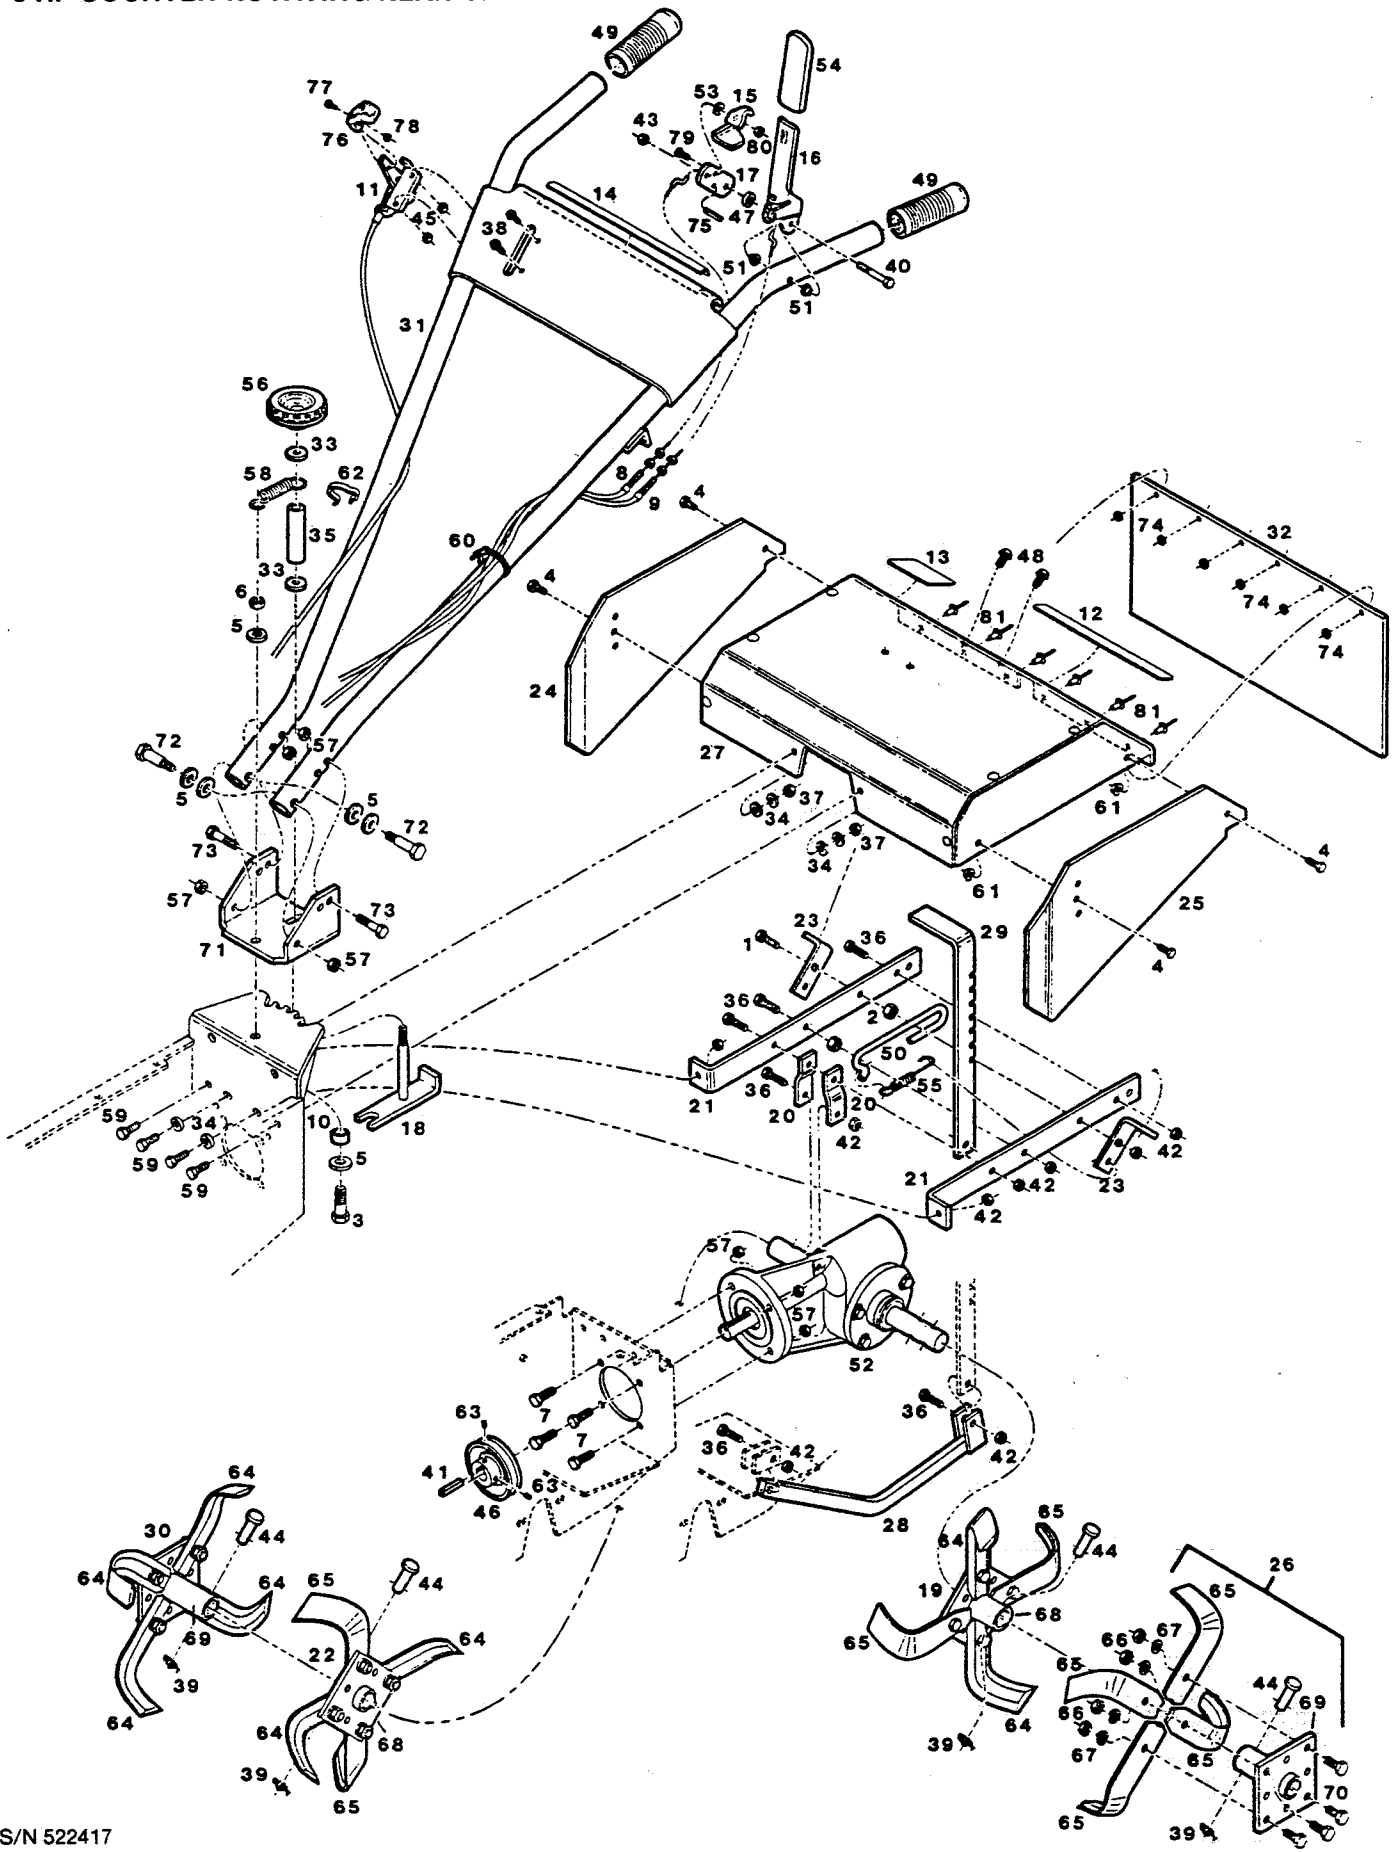

S/N 522417
O/M 541631
E/M 082093
P/B 554592


**MODEL: A5000L
5 HP COUNTER-ROTATING REAR-TINE TILLER**

Index No.	Part No.	Description	Index No.	Part No.	Description
1	150250	Bolt - hex 5/16-18 x 1-1/2	42	616342	Nut - hex lock 5/16-18
2	310003	Nut - hex 1/2-13	43	715508	Nut - hex lock 1/4-20
3	615922	Bolt - hex 1/2-13 x 1-3/4	44	616532	Pin - clevis
4	158089	Screw - hex self tap 1/4-20 x 1/2	45	452318	Nut - hex lock #10-24
5	156075	Washer - flat 1/2	46	616870	Pulley - tine transmission
6	157537	Nut - hex lock 1/2-13	47	156182	Washer - plastic
7	457176	Bolt - hex 3/8-16 x 1-1/4	48	617514	Screw - tapping 5/16-18 x 5/8
8	530493	Cable - engaging, tine drive	49	619221	Grip - handle
9	530501	Cable - engaging, ground drive	50	620310	Pusher - depth bar
10	617787	Spacer - latch	51	584375	Bushing - nylon
11	530485	Control - throttle w/cable	52	592030	Transmission - tine drive
12	551648	Decal - CAUTION	53	154120	Washer - nylon
13	551655	Decal - WARNING	54	622662	Cover - clutch lever
14	552885	Decal - Grd Drive, Tine	55	584383	Spring - depth bar
15	558064	Catch - tine clutch arm	56	620195	Knob - handle lock
16	558049	Lever - clutch, ground drive	57	715086	Nut - hex lock 3/8-16
17	558080	Arm - clutch, tine drive	58	620203	Spring - pull bar
18	555615	Pull Bar - handle latch	59	152108	Bolt - hex 5/16-18 x 1
19	575654	Tine Assembly - LH inner	60	621672	Tie - cable
20	558098	Bracket - transmission	61	715078	Nut - hex lock 1/4-20 whiz
21	571372	Support - dirt shield	62	621003	Clip - throttle cable
22	575662	Tine Assembly - RH inner	63	315093	Set screw 5/16-18 x 1/4
23	558106	Bracket - dirt shield	64	574756	Tine - 13" RH
24	525253	Plate - side RH	65	574764	Tine - 13" LH
25	525261	Plate - side LH	66	615633	Nut - hex 3/8-24
26	575647	Tine Assembly - LH outer	67	150185	Washer - split lock 3/8
27	575357	Shield - dirt w/end plates	68	575969	Hub - tines, short
28	571679	Bar - skid	69	575977	Hub - tines, long
29	575704	Bar - depth	70	624940	Bolt - hex 3/8-24 x 1 GR5
30	575639	Tine Assembly - RH outer	71	575696	Bracket - handlebar
31	575688	Handlebar Assembly	72	157495	Bolt - shoulder 3/8-16 x 2-1/8
32	584359	Flap - dirt	73	312355	Bolt - hex 3/8-16 x 2
33	715417	Washer - flat 3/8	74	382192	Washer - flat
34	715185	Washer - flat 5/16	75	380477	Pin - roll
35	620187	Spacer - pull bar pin	76	112730	Knob - throttle control
36	615831	Bolt - hex 5/16-18 x 1-1/4	77	159335	Screw - phillips #8-32 x 3/8
37	157610	Nut - hex lock 5/16-18 flange	78	159244	Nut - hex #8-32
38	150326	Screw - hex #10-24 x 1/2	79	155366	Screw - hex #10-24 x 5/8
39	584391	Pin - retainer	80	452318	Nut - hex #10-24
40	615781	Bolt - hex 1/4-20 x 2-1/4	81	764225	Pop rivet
41	382184	Key - square 3/16 x 1-3/8			

- When servicing this unit use only genuine General Power OEM replacement parts that are specifically designed and engineered for this particular model.
- Do not operate unit unless all parts are properly attached and in good working order.
- Parts are right or left hand as viewed from the operator's position.
- Specifications are subject to change without notice.

S/N 522417
O/M 541631
E/M 082093
P/B 554592

MODEL: A5000L
5 HP COUNTER-ROTATING REAR-TINE TILLER

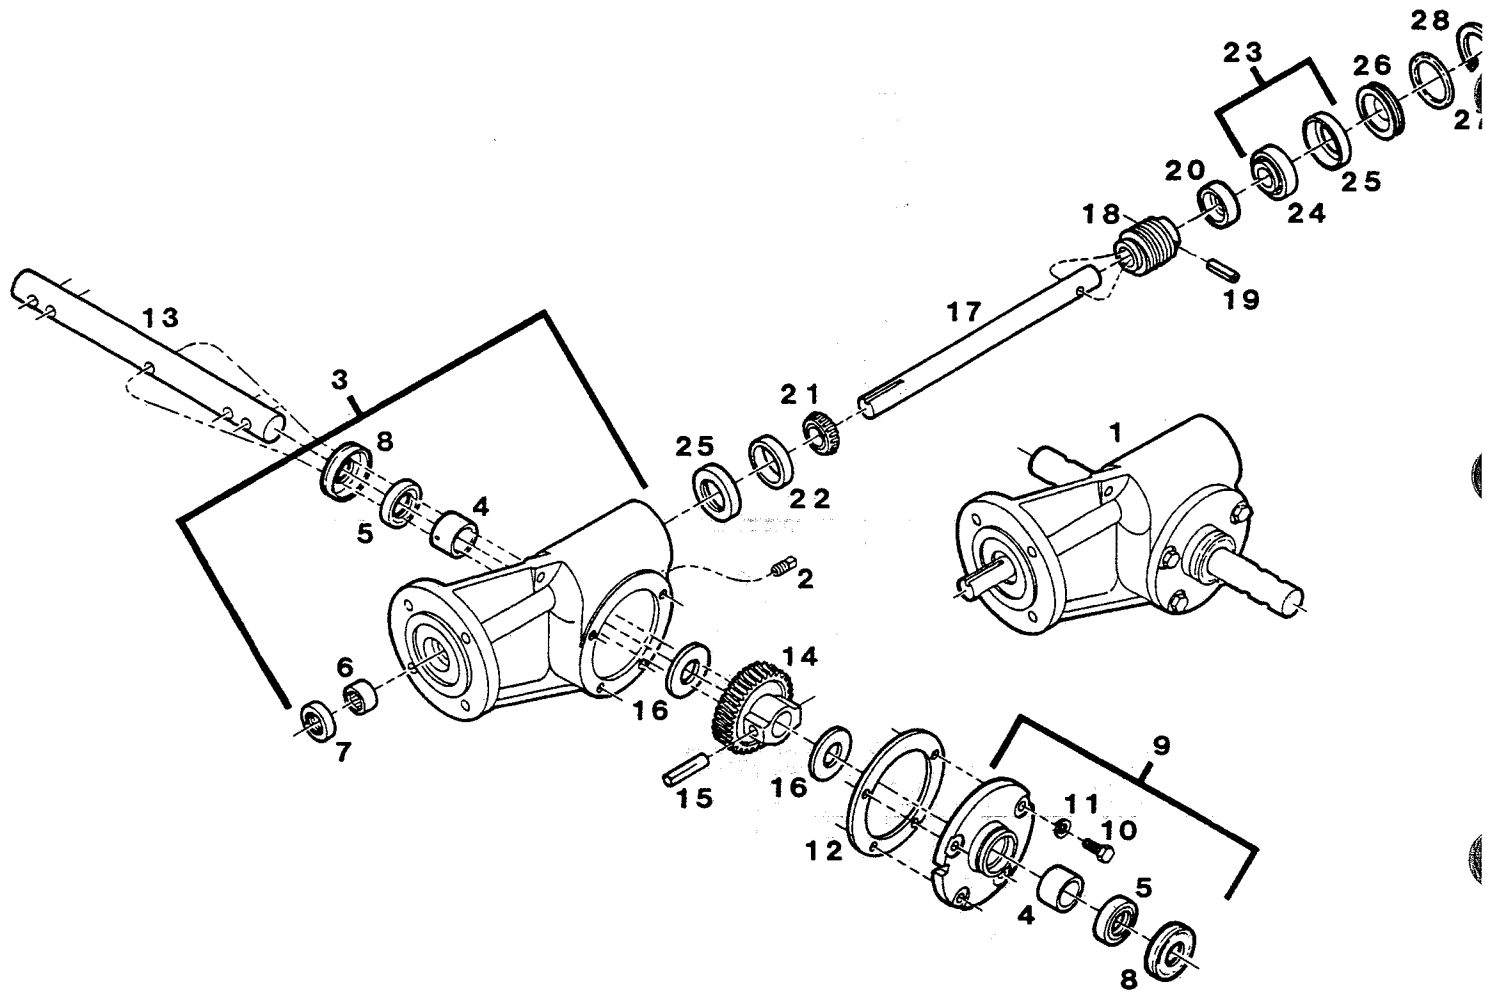

S/N 522417
O/M 541631
E/M 082093
P/B 554592

**MODEL: A5000L
5 HP COUNTER-ROTATING REAR-TINE TILLER**

TINE DRIVE TRANSMISSION

Index No.	Part No.	Description	Index No.	Part No.	Description
1	592030	Transmission Assembly - tine drive	14	619536	Gear - worm
2	615500	Plug - pipe	15	616466	Pin - drive lok 3/8 x 2
	616912	Plug - breather	16	616417	Washer - thrust
3	592154	Case - transmission w/brngs & seals includes one each of 4,5,6,7 and 8	17	617084	Shaft - worm
4	617241	Bearing - needle	18	624262	Worm - drive
5	616391	Seal - oil, double	19	155515	Pin - spirol 1/4 x 1-1/8
6	616524	Bearing - needle	20	623504	Collar - pin retainer
7	616383	Seal - oil	21	617530	Cone - bearing
8	762245	Cover - axle seal	22	617548	Cup - bearing
9	592162	Cover - side w/brng & seals includes one each of 4,5 and 8	23	620898	Bearing - ball, with sleeve includes next two parts:
10	617019	Bolt - hex 5/16-18 x 7/8	24	620880	Bearing - ball
11	311118	Washer - split lock 5/16	25	617522	Sleeve - bearing
12	616755	Gasket - cover	26	616433	Plug - seal
13	617845	Axle - tine	27	616441	O-ring
			28	616425	Ring - retaining

- When servicing this unit use only genuine General Power OEM replacement parts that are specifically designed and engineered for this particular model.
- Do not operate unit unless all parts are properly attached and in good working order.
- Parts are right or left hand as viewed from the operator's position.
- Specifications are subject to change without notice.

S/N 522417
O/M 541631
E/M 082093
P/B 554592