

21" REAR BAGGING ROTARY MOWER

MODEL: FURB21-J


ORB21-J

WRB21-J

Grass Catcher Model: SBRBGB P/N 127084

Repl. Bag: P/N 160184

See Page 13 for Assembly

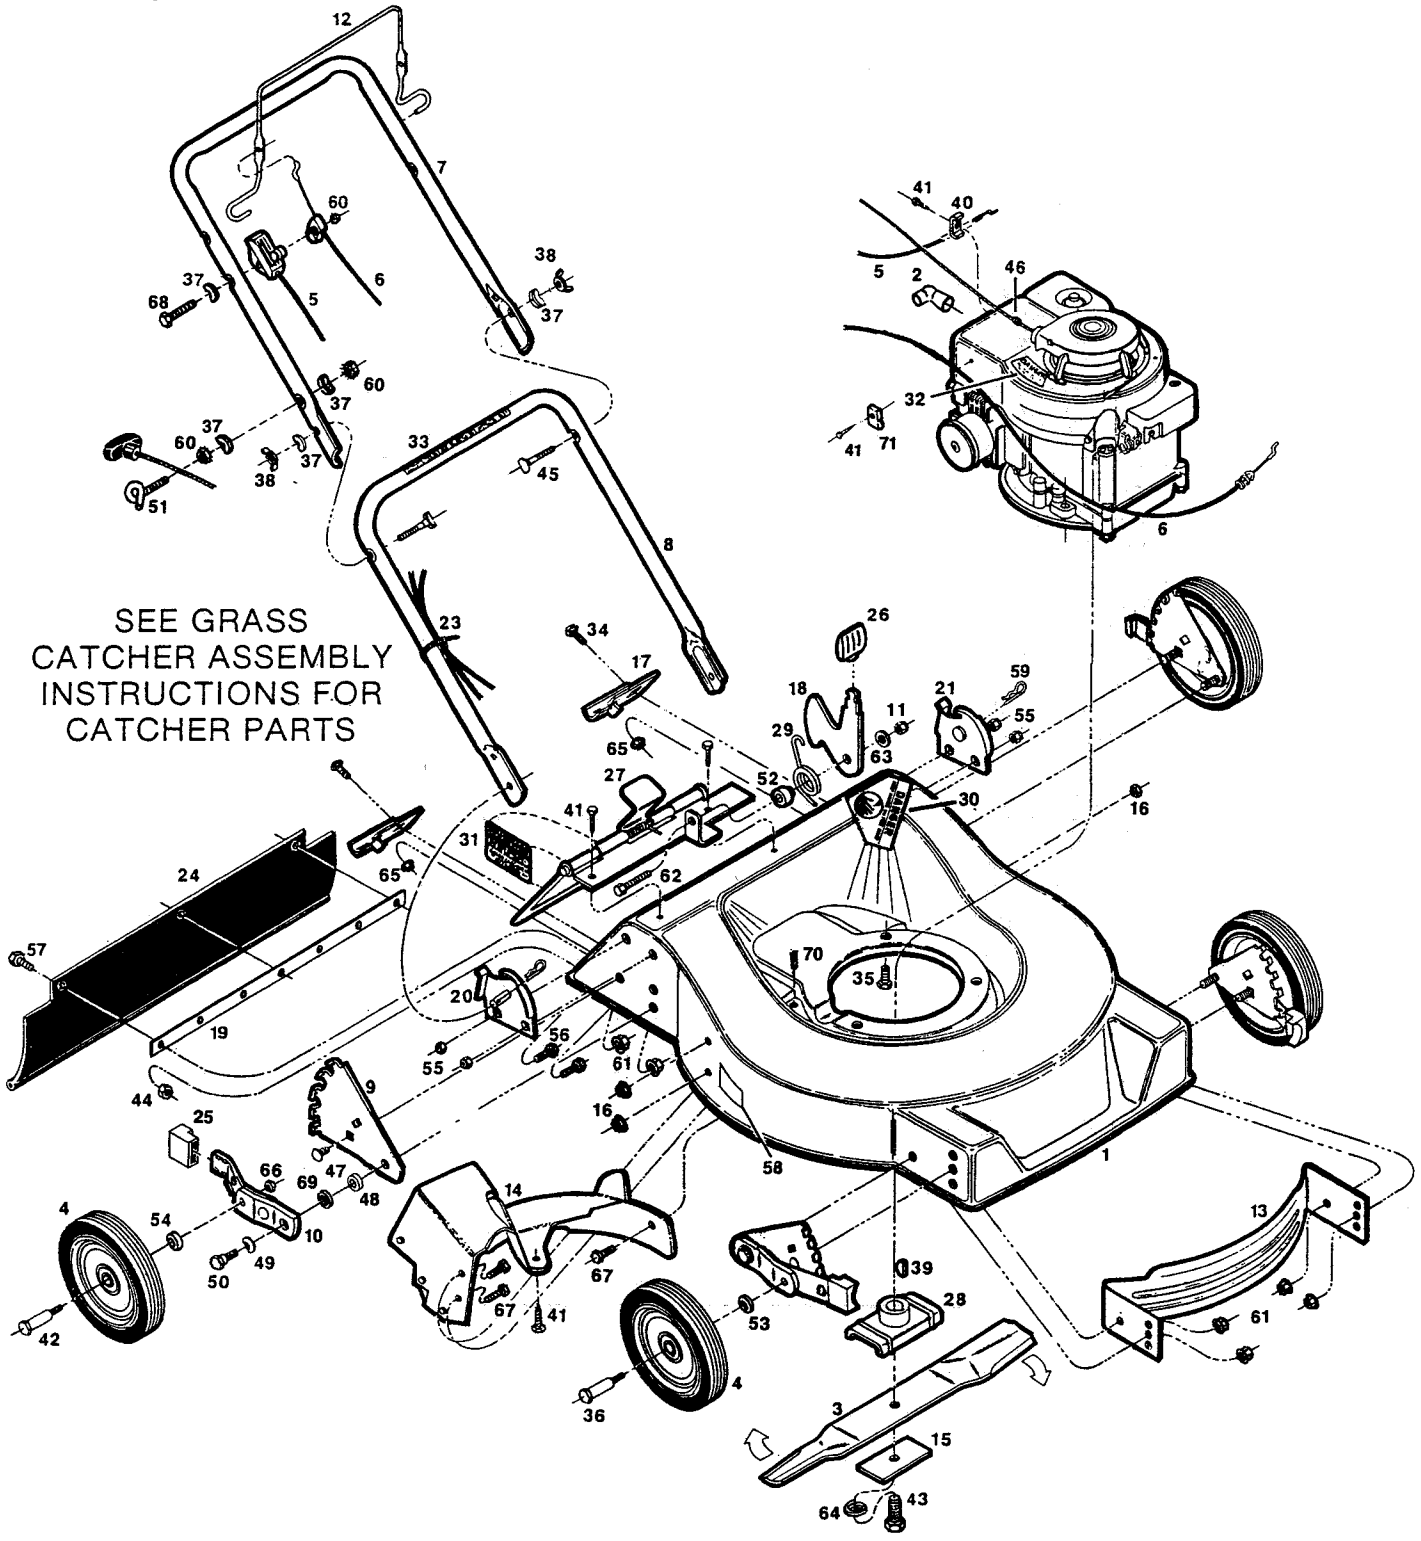

SEE GRASS
CATCHER ASSEMBLY
INSTRUCTIONS FOR
CATCHER PARTS

21" REAR BAGGING ROTARY MOWER
MODEL: FURB21-J
ORB21-J
WRB21-J

Grass Catcher Model: SBRBGB P/N 127084
 Repl. Bag: P/N 160184
 See Page 13 for Assembly

Index No.	Part No.	Description	Index No.	Part No.	Description
1	018622	Deck—21"	35	457168	Bolt—3/8-16 x 7/8 Thread Forming
2	110833	Cover-Spark Plug	36	150730	Shoulder Bolt—Wheel Front
3	030338	Blade—21"	37	150201	Washer—Curved 5/16
4		Wheel Assemblies*	38	150235	Wing Nut 5/16-18
	040741	8" Plastic-White-Cog-Nylon Bearing	39	150276	Woodruff Key #6
	041111	8" Steel-White-Rib-Flange Bearing	40	150318	Cable Clamp
	042432	8" Plastic-White-Diamond-Nylon Bearing	41	150623	Screw—Hex Head Sheet Metal #10 x 5/8
5	052472	Control—Throttle w/Cable	42	156133	Shoulder Bolt—Wheel Rear
6	052464	Cable—Engine/Blade Control	43	157255	Bolt—Blade 3/8-24 x 1 Gr. 5
7	071076	Handle—Upper	44	452318	Locknut—10-24 Hex
8	071449	Handle—Lower	45	151928	Bolt—Curved Head Crg 5/16-18 x 1-3/4
9	091249	Back Plate—Height Adjuster	46	152074	Rope Stop
10	085019	Wheel Arm Assy	47	152405	Bolt—Carriage 3/8-16 x 3/4
11	715508	Locknut 1/4-20 Top	48	156182	Washer—Plastic—Height Adjuster
12	104687	Bail—Engine/Blade Control	49	152421	Washer—Spring—Height Adjuster
13	105825	Baffle—Front	50	156125	Shoulder Bolt—Height Adjuster
14	085100	Baffle Assembly-Rear	51	152371	Rope Guide
15	106005	Blade Washer	52	152637	Spacer—Catcher Latch
16	451419	Locknut 1/4-20 Flanged Top	53	715607	Washer - 3/8 Belleville
17	109546	Catcher Frame Bracket	54	152686	Spacer—Rear Wheel
18	108324	Catcher Latch	55	310151	Locknut—5/16-18 Nylok
19	109496	Trailing Shield Mounting Strip	56	450346	Bolt-5/16-18 x 3/4
20	097162	Handle Bracket—Right Hand	57	458687	Bolt—Hex Head 10-24 x 1/2
21	097170	Handle Bracket—Left Hand	58	714170	Decal—Rating Plate
22	151613	Screw—Hex Washer Head 10-32 x 3/8	59	715011	Hitch Pin #3
23	110379	Cable Tie	60	715037	Locknut 1/4-20 Keps
24	111633	Trailing Shield—Plastic	61	451492	Nut-3/8-16 TopLock Flange
25	112540	Plastic Tip—Height Adjuster	62	715292	Bolt—Hex Head 1/4-20 x 1
26	111724	Knob—Catcher Latch	63	462093	Washer 1/4"
27	013706	Door Assembly	64	156919	Lockwasher 3/8 HD Split
28	126466	Blade Adapter	65	715078	Nut-Flange Whiz 1/4-20
29	133371	Torsion Spring—Catcher Latch	66	715524	Nut-3/8-16 Lock
30	143115	Decal—Danger	67	156851	Bolt 1/4-20 x3/8 Shaved HD
31	795039	Decal—Door Warning	68	153874	Bolt-1/4-20 x 2 1/4 Hex Head
32	001461	Decal—Blade Warning	69	156877	Washer-3/8 Hardened
33	715557	Decal—Starting Instructions	70	111856	Cap - Bolt
34	150011	Bolt—Carriage 1/4-20 x 5/8 Gr. 5	71	157552	Clamp—Cable

• INDICATES OPTIONAL EQUIPMENT

- This parts list covers several different mower models; not all of the parts listed may be used on the particular model you are working with.
- When servicing use only **Genuine Factory Replacement Parts (OEM)** that are specifically designed for the particular model that you are working with.
- Parts are right or left hand as viewed from the operator's position.
- Model specifications are subject to change without prior notice.
- **Do not operate** the mower unless all parts are attached and in good working order.
- Lawn mower deck and/or other painted parts differing in color may be substituted without notice.