




BRUSH CUTTER

model
636-796 241
See Bushwacker

OK
THANK

Model NB16F


PARTS MANUAL

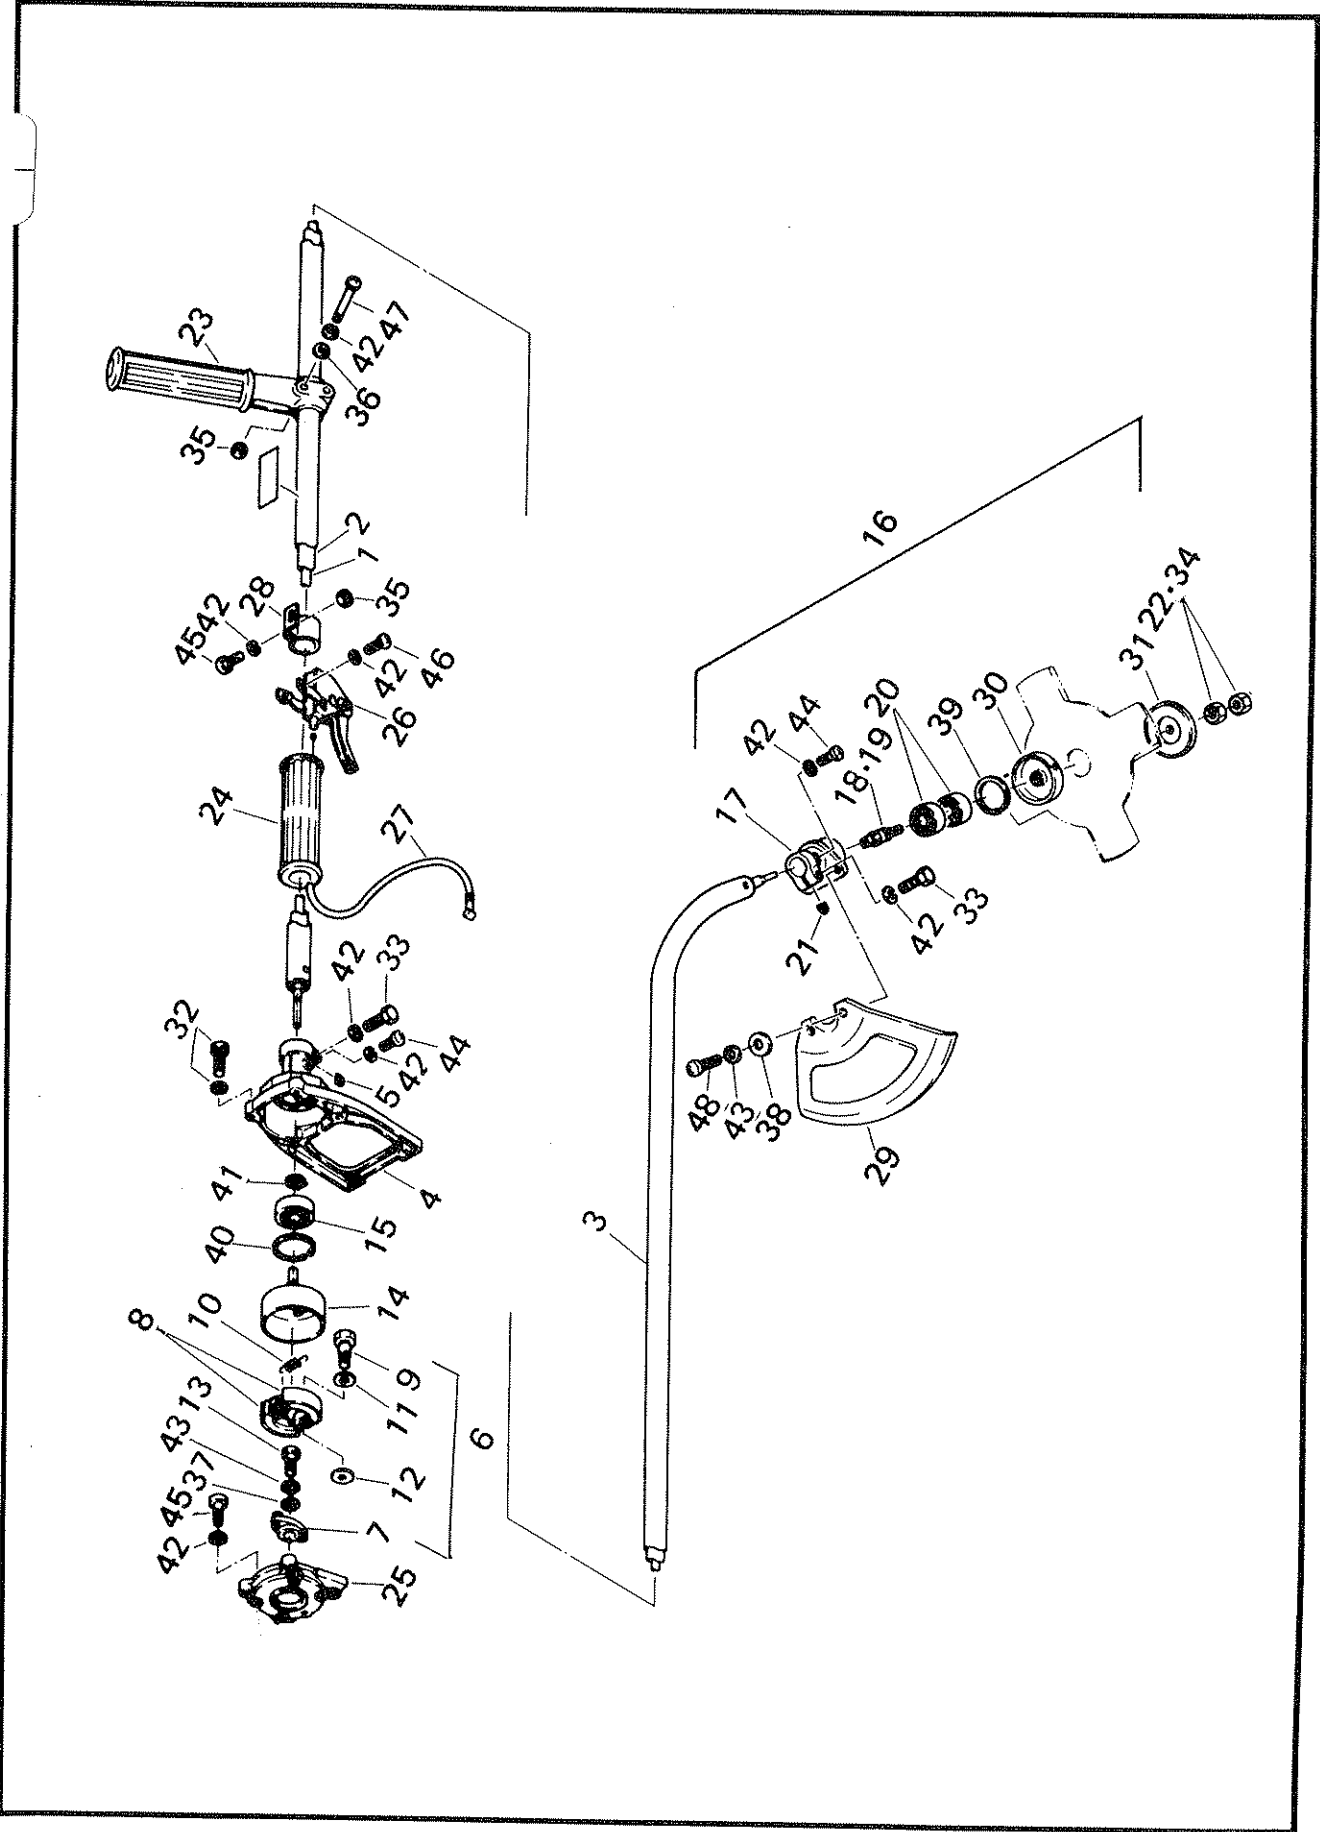

Machine Body

NB16F

Ref. No.	Manufacturer's Number	Part Name	Our Part No.	Quantity		Description
				NB16F	NB23F	
1	NB16F-1050	Flexible shaft compl.	1666	1		
1	NB23F-1050	Flexible shaft compl.	1684		1	
2	NB16F-1051	Line compl.	1667	1	1	
3	NB16F-1101	Pipe case	1668	1	1	
4	NB16F-1111/1	Pipe case holder	1669	1	1	
5	0210 06997 0	Gasket (fiber)	1718	1	1	NB16F-3106
6	NB16F-2002b	Clutch ass'y	1670	1		Including 7~12
6	NB02A-094b	Clutch ass'y	1138		1	Including 7~12
7	NB02A-201a	Holder	1662	1	1	
8	NB02A-202b	Clutch shoe	1663	2	2	
9	NB02A-203a	Clutch bolt	1664	2	2	
10	NB02A-204	Spring	1142	1	1	
11	NB02A-206	Washer (A)	1143	2	2	
12	NB02A-207	Washer (B)	1144	2	2	
13	NB02A-205	Holder clamping bolt	1147	1	1	
14	NB16F-2050a	Clutch drum compl.	1671	1	1	
15	NB25-2115	Ball bearing	1688	1	1	
16	NB16F-0301	Head case ass'y	1665	1		Including 17, 18, 20~22, 30, 31, 33, 39, 42, 44
16	NB23F-0301	Head case ass'y	1683		1	Including 17, 19~21, 30, 31, 33, 34, 39, 42, 44
17	NB16F-310a	Head case	1672	1	1	
18	NB16F-3102b	Cutter shaft	1673	1		
19	NB23F-3102b	Cutter shaft	1685		1	
20	NB16F-3110	Ball bearing	1687	2	2	
21	NB25-1114	Gasket (fiber)	1687	1	1	
22	0170 08996 0	Lock nut (left)	1278	2		
23	NB16F-4101	Handle	1675	1	1	
24	NB16F-4102a	Glip	1676	1	1	
25	NB02A-102	Locating plate	1146	1	1	
26	NB16F-5001a	Throttle lever	1677	1	1	
27	NB16F-5050a	Throttle wire	1678	1	1	
28	NB16F-7111b	Hanger	1679	1	1	
29	NB25-8110	Safety cover	1689	1	1	
30	NB16F-8101a	Disk washer (upper)	1680	1	1	
31	NB16F-8102a	Disk washer (lower)	1681	1	1	
32	00110 0625 0	Bolt ass'y	1700	4	4	M6 x 25
33	00166 0525 0	Bolt	1701	2	2	M5 x25
34	00218 0800 0	Lock nut	1702		2	M8 p1.25
35	00227 0500 0	Nut	1703	3	3	M5
36	00310 0500 0	Washer	1183	2	2	M5
37	00310 0600 0	Washer	1184	1	1	M6
38	00312 0600 0	Washer	1395	2	2	M6
39	00314 3000 0	Snap ring (inner) (30Φ)	1188	1	1	
40	00314 3200 0	Snap ring (inner) (32Φ)	1189	1	1	
41	00315 1200 0	Snap ring (outer) (12Φ)	1398	1	1	
42	00320 0500 0	Spring washer	1286	12	12	M5
43	00320 0600 0	Spring washer	1294	3	3	M6
44	00431 0510 0	Screw (pan head)	1287	2	2	M5 x 10
45	00431 0516 0	Screw (pan head)	1074	5	5	M5 x 16
46	00431 0518 0	Screw (pan head)	1707	1	1	M5 x 18
47	00431 0540 0	Screw (pan head)	1708	2	2	M5 x 40
48	00431 0620 0	Screw (pan head)	1711	2	2	M6 x 20

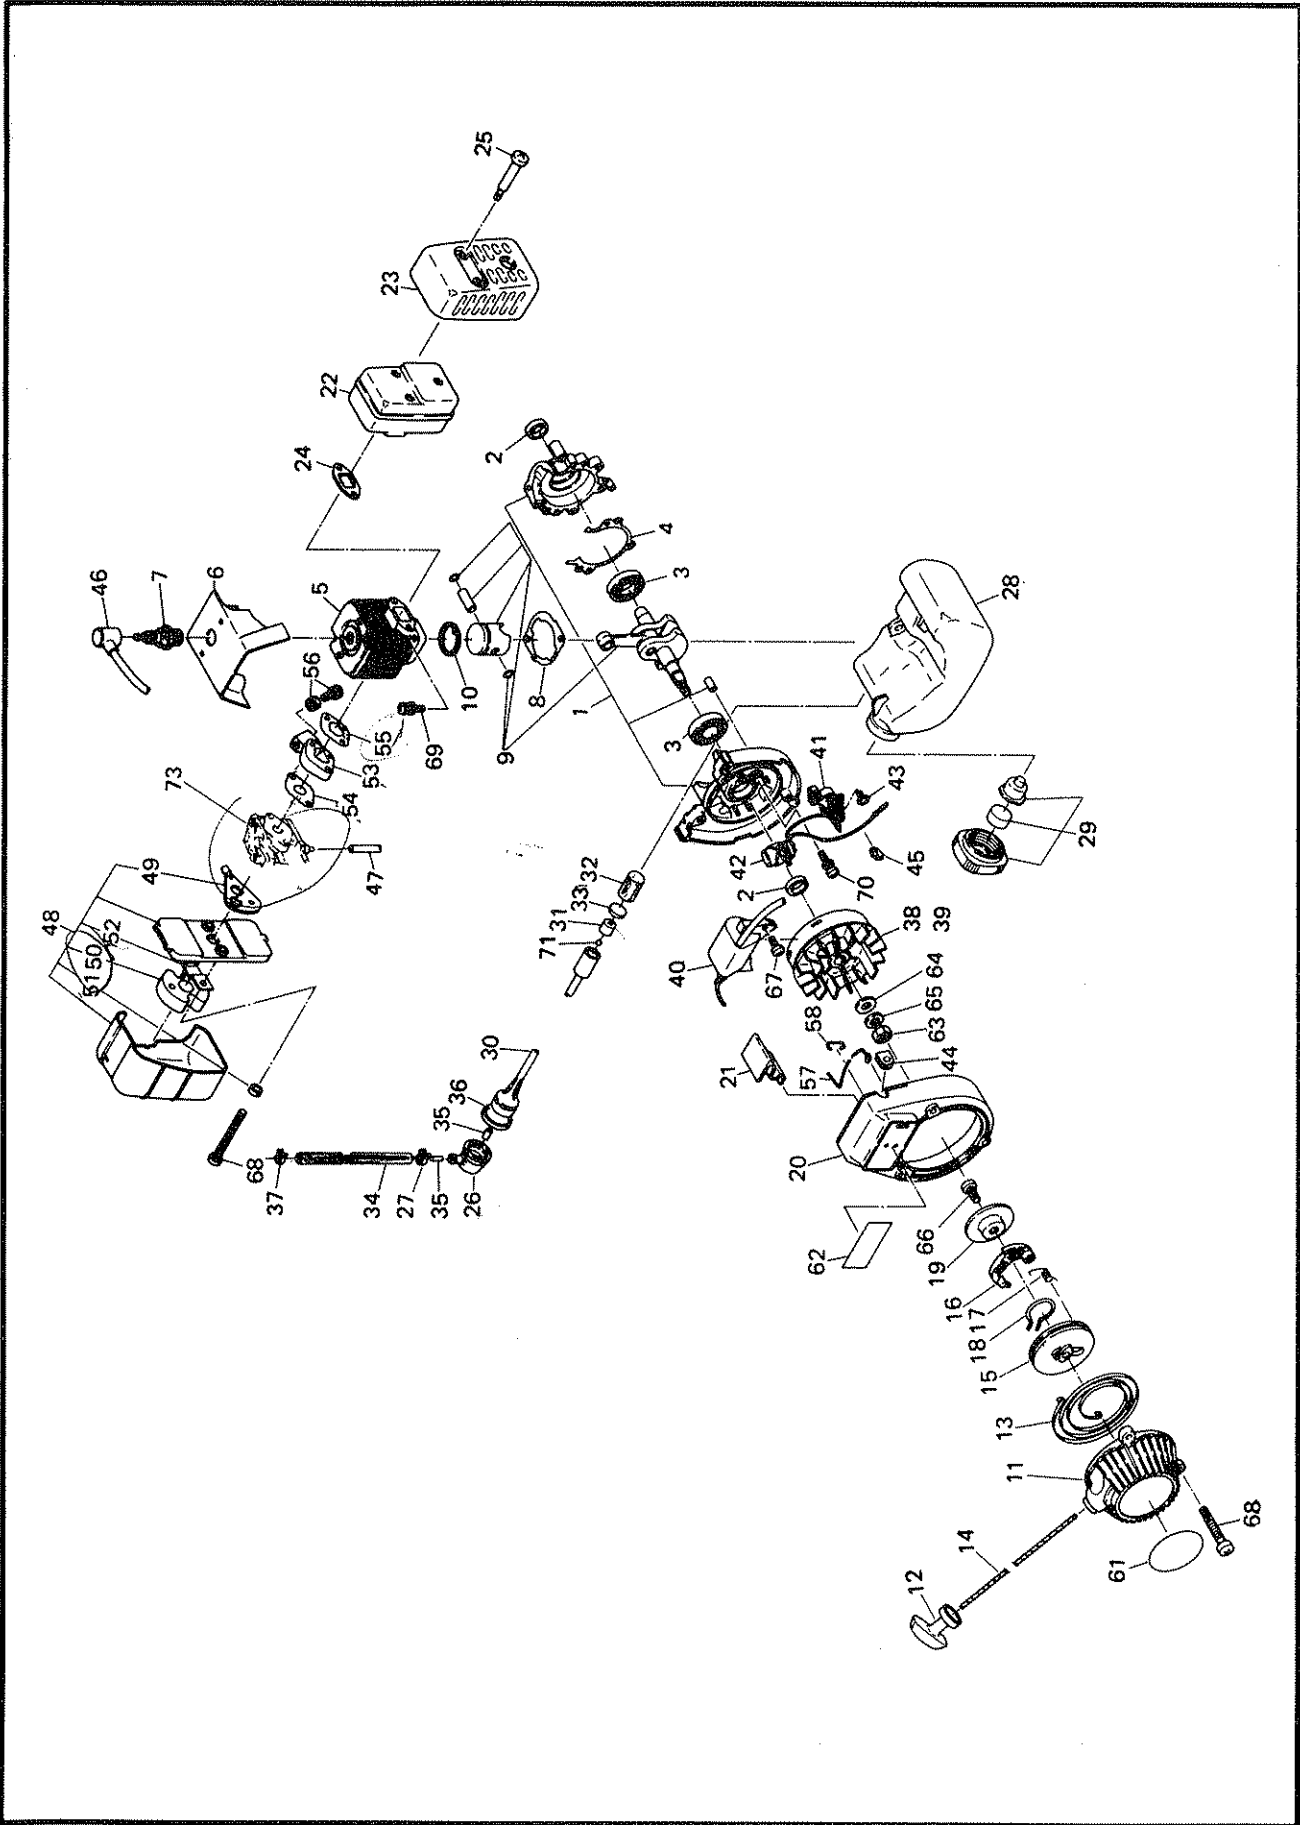


Engine body

NB16F

Ref. No.	Manufacturer's Number	Part Name	Our Part No.	Quantity				Description
1	EC01A-0099	Crank case compli.	1609	1				Including 2~4
2	0440 12999 1	Oil seal	1002	2				(EC03-111a TC12227)
3	0600 12992 0	Ball bearing	1003	2				(EC02-130 6001C3)
4	EC01A-1031	Crank case packing	1617	1				
5	EC01A-1020	Cylinder <i>311</i>	1615	1				
6	EC01A-5010G	Cylinder cover	1626	1				(NB16F)
7	0650 14981 0	Spark plug	1007	1				(EC04-701)
8	EC01A-1030a	Cylinder packing	1616	1				
9	EC01A-0098	Crank shaft ass'y	1608	1				Including 10
10	EC01A-2031	Piston ring	1618	1				
11	EC01A-0501	Recoil starter compl.	1611	1				Including 12~19
12	A57200100001	Starter knob	1018	1				
13	A60002600100	Spiral spring	1604	1				
14	A57100890000	Starter rope	1021	1				
15	A54102600200	Reel	1601	1				
16	A55002620000	Ratchet	1602	1				
17	A60503220000	Return spring	1606	1				
18	A60102600000	Friction spring	1024	1				
19	A56002600291	Friction plate	1603	1				
20	EC01A-5001	Fun cover	1715	1				
21	EC01A-5015	Wind preventive plate	1627	1				
22	EC01A-0399TA	Muffler compl.	1610	1				
23	EC01A-3001SA	Muffler cover	1619	1				
24	EC01A-3020	Muffler gasket	1620	1				
25	EC01A-3070a	Muffler clamping bolt	1624	2				
26	EC02-0098	Fuel pump ass'y	1642	1				Including 27
27	0561 0800 10	Hose clamp	1031	1				
28	EC01A-6010	Fuel tank	1628	1				
29	EC02-0668	Fuel tank cap compl.	1651	1				
30	EC02-6405	Rubber tube	1657	1				
31	EC02-627b	Weight <i>1035</i>	1650	1				
32	EC02-624	Felt	1036	1				
33	EC02-6701	Filter	1659	1				
34	EC01A-6030	Fuel pipe	1631	1				
35	EC02-6706	Spacer	1660	2				
36	EC02-6601	Ring	1658	1				
37	EC01A-6070	Hose clamp.	1632	1				
38	EC01A-0701	Magneto compl.	1614	1				Including 39~42
39	M-62940	Flywheel	1693	1				
40	M-23667	Ignition coil	1692	1				
41	M-14816H51	Breaker	1691	1				
42	M-14815H51	Condenser	1690	1				
43	0140 04998 0	Plus & minus threads with plain washer	1277					
44	EC01A-7001	Grommet (second)	1635	1				
45	EC01A-7002	Grommet (first)	1636	1				
46	EC02-090b	Plug cap	1051	1				
47	EC01-6020	Pipe	1629	1				
48	EC01A-0650/1	Air cleaner compl.	1613	1				Including 49~52
49	EC01A-6103a	Choke lever	1633	1				
50	EC01A-6104	Cleaner element	1634	1				




MEMO

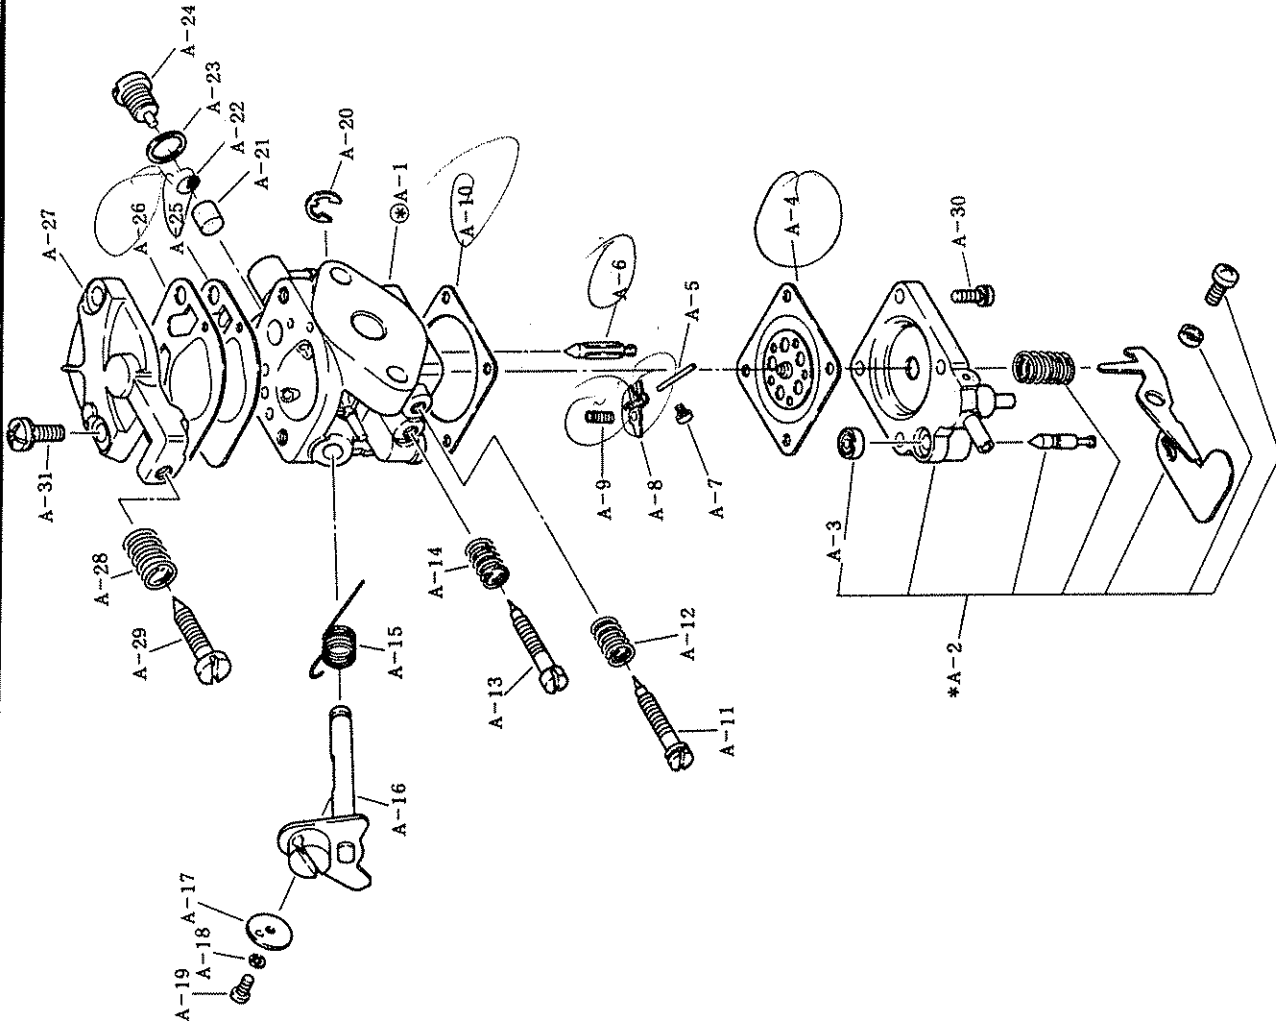

Carburetor

NB16F

Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
A-1	EC01A-0601/1	Carburetor compl. <i>AK</i>	4067	1					
A-2	1009-1250-20-9	Diaphragm cover ass'y	4068	1					
A-3	1001-3261-01-6	Rubber seat	4069	1					
A-4	1625-8720-20-9	Main diaphragm ass'y ✓	4070	1			<i>Air Filter</i>		
A-5	1625-6742-10-0	Hinge pin	4071	1					
A-6	1102-2132-00-2	Needle valve ✓	1095	1			1634		
A-7	9326-0130-04-4	Screw (pan head)	4072	1					
A-8	1625-2721-00-5	Control lever	4073	1					
A-9	1625-8512-10-9	Needle valve spring ✓	4074	1					
A-10	1625-7134-10-4	Main diaphragm packing ✓	4075	1					
A-11	1625-6111-10-5	Main jet adjusting screw	4076	1					
A-12	1603-8511-00-0	Adjusting spring	4077	1					
A-13	1625-5121-20-8	Slow idle screw	4078	1					
A-14	1625-8513-00-2	Adjusting spring	4079	1					
A-15	1625-8511-11-7	Throttle return spring	4080	1					
A-16	1625-2304-10-4	Throttle shaft ass'y	4081	1					
A-17	1625-2113-21-2	Throttle valve	4082	1					
A-18	9451-1024-00-9	Spring washer	4083	1					
A-19	9311-0123-04-0	Screw (pan head)	4084	1					
A-20	9616-0603-06-4	E-ring	4085	1					
A-21	1625-7515-00-9	Felt	4086	1					
A-22	1625-7551-31-0	Filter net	4087	1					
A-23	1625-7125-00-4	Packing	4088	1					
A-24	1625-5141-00-2	Drain plug	4089	1					
A-25	1625-8721-21-5	Pump diaphragm ✓	4090	1					
A-26	1625-7171-20-5	Pump packing ✓	4091	1					
A-27	1625-1242-11-7	Pump cover	4092	1					
A-28	1311-8515-02-9	Adjusting spring	4093	1					
A-29	1625-5122-00-0	Slow stop screw	4094	1					
A-30	00435 0310 0	Screw ass'y	1116	4					
A-31	00435 0410 0	Screw ass'y	1118	2					

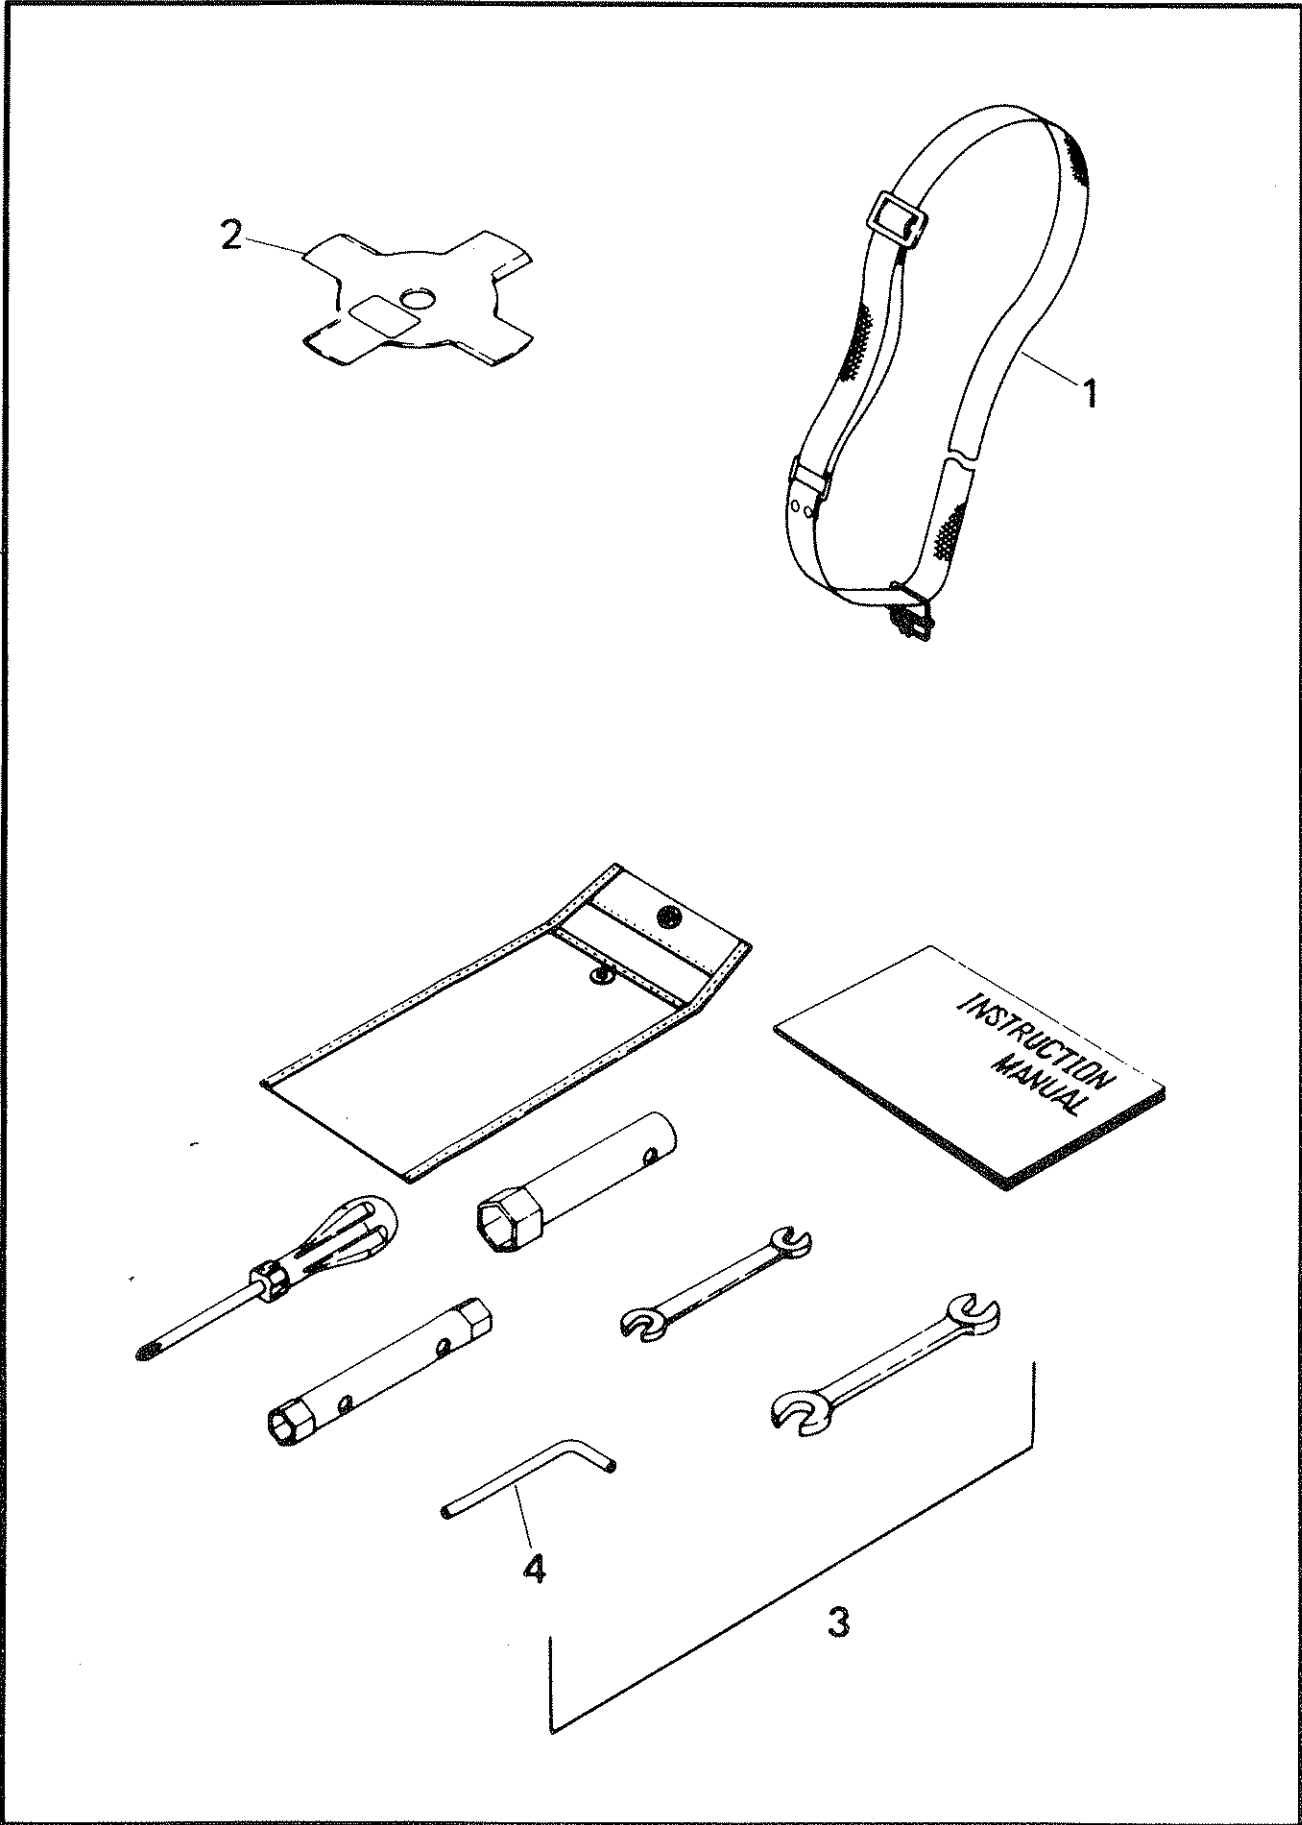

Carswell Import & Marketing Associates, Inc./Carswell Distributing Company

3750 N. Liberty Street, P.O. Box 4193
WINSTON-SALEM, NORTH CAROLINA 27115