

10L900

Illustrated Parts List

Model Series

10L900

TYPE NUMBER
0441.

TABLE OF CONTENTS












Air Cleaner	6
Blower Housing	7
Brake	9
Cams	3
Carburetor	4
Controls	5
Covers	7
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Flywheel	7
Fuel Tank	4
Governor Spring	5
Head	2
Ignition	5
Kits/Gaskets - Sets	2
Muffler Group	6
Oil Group	2
Piston Group	3
Rewind/Blower Housing 1	8
Valves	3



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

10L900

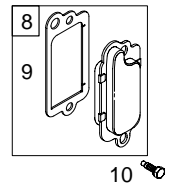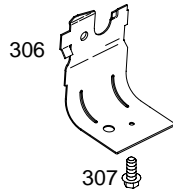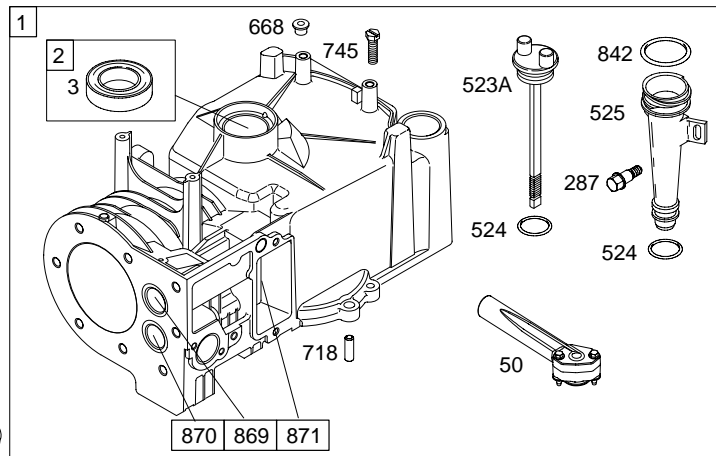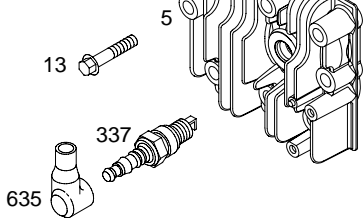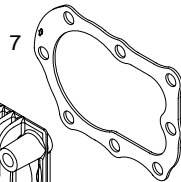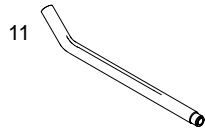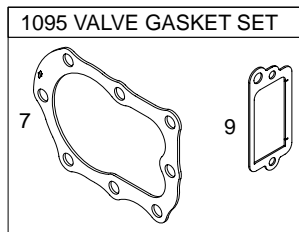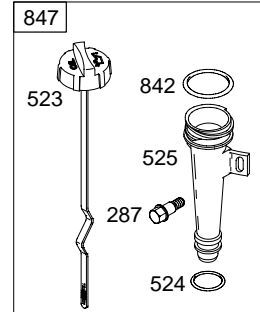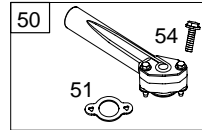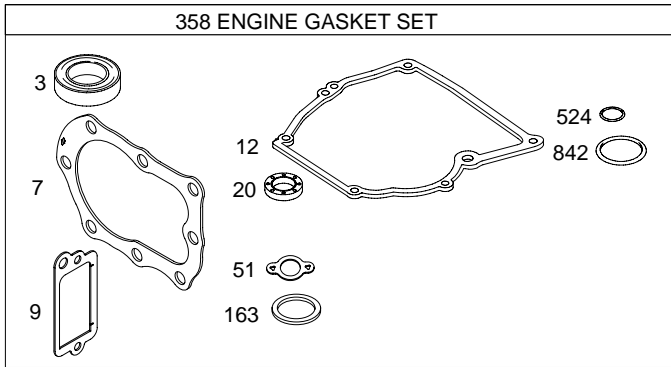


1019 LABEL KIT



1058 OWNER'S MANUAL


1330 REPAIR MANUAL

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


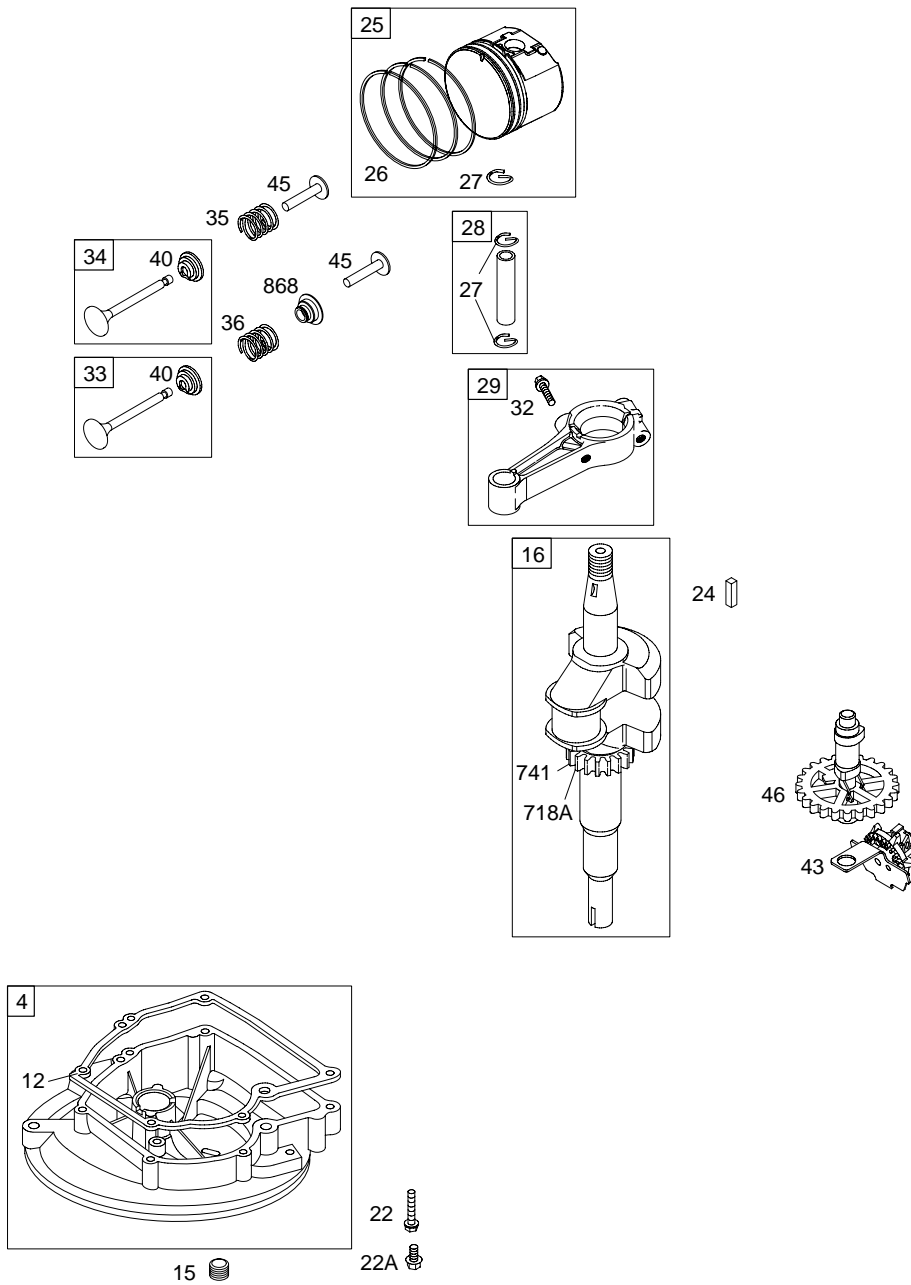



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3279-3 Assemblies include all parts shown in frames. 10/21/2004

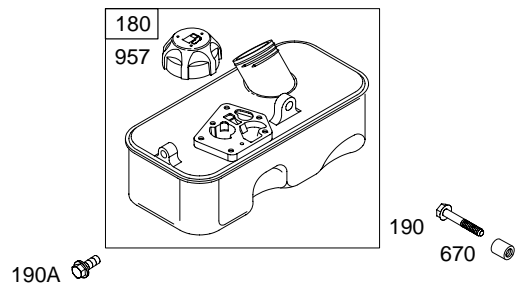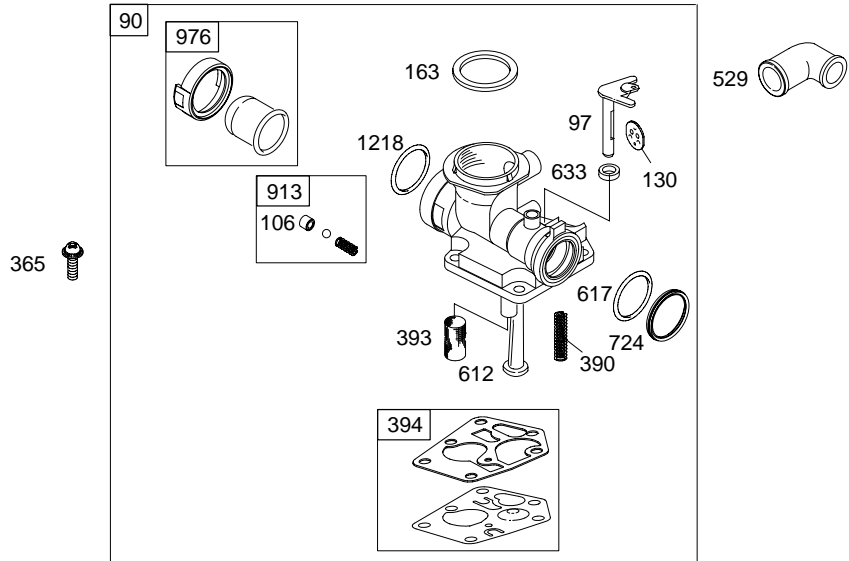

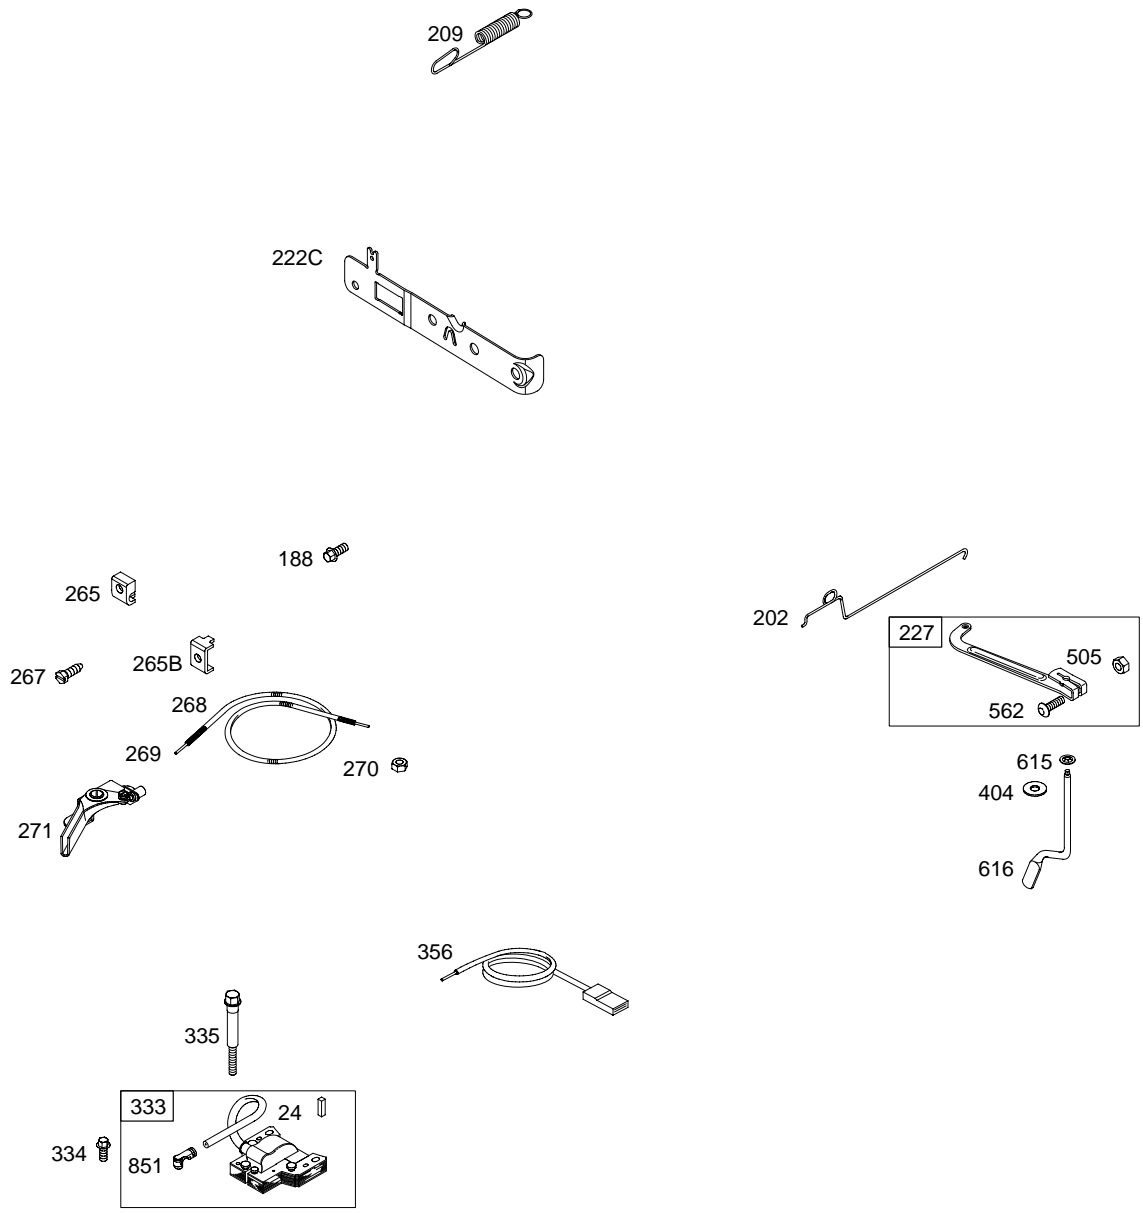



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3279-5 Assemblies include all parts shown in frames. 10/21/2004

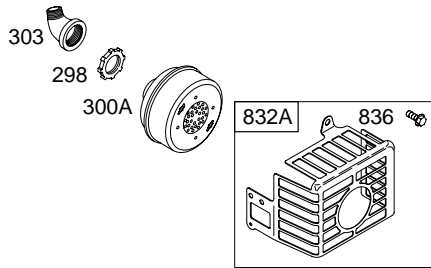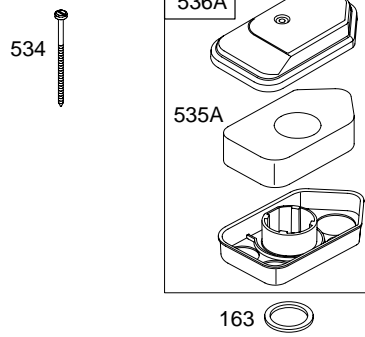

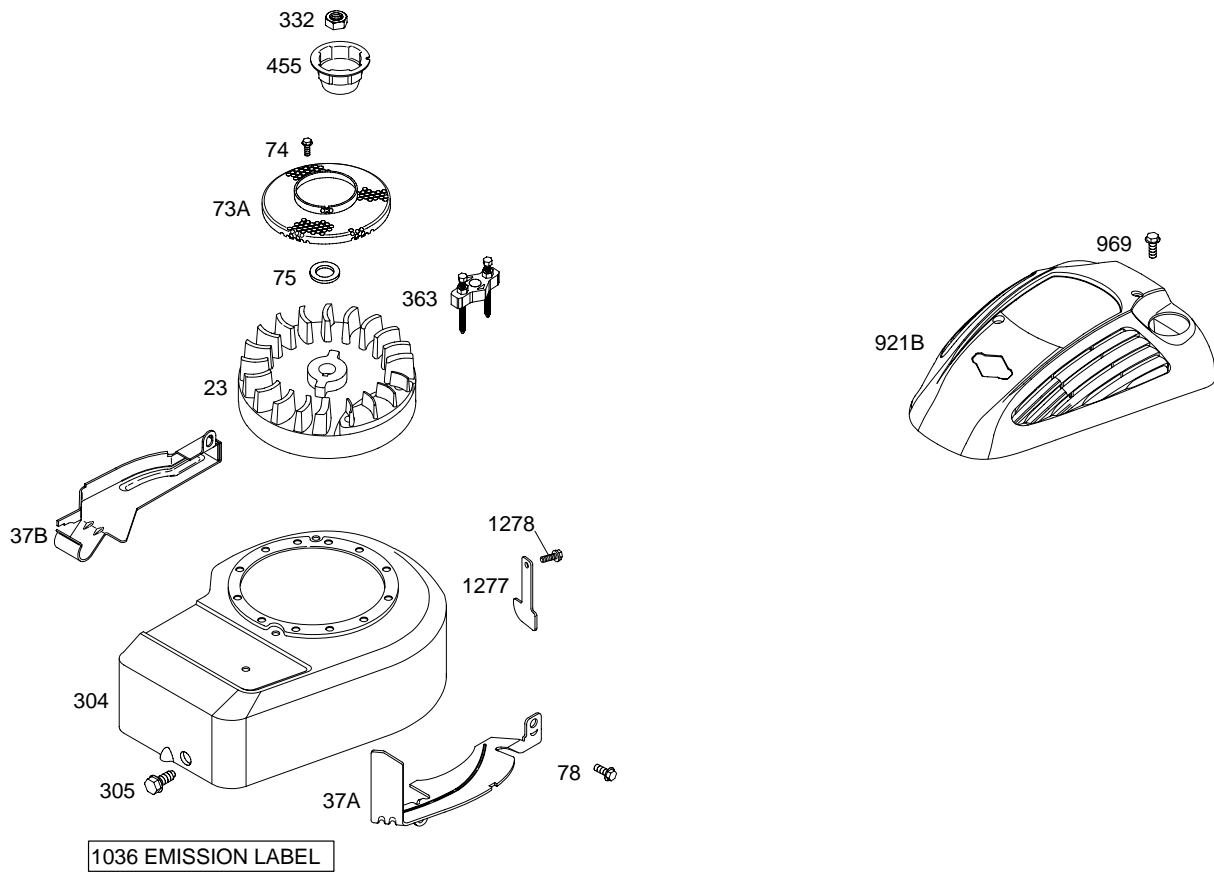

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

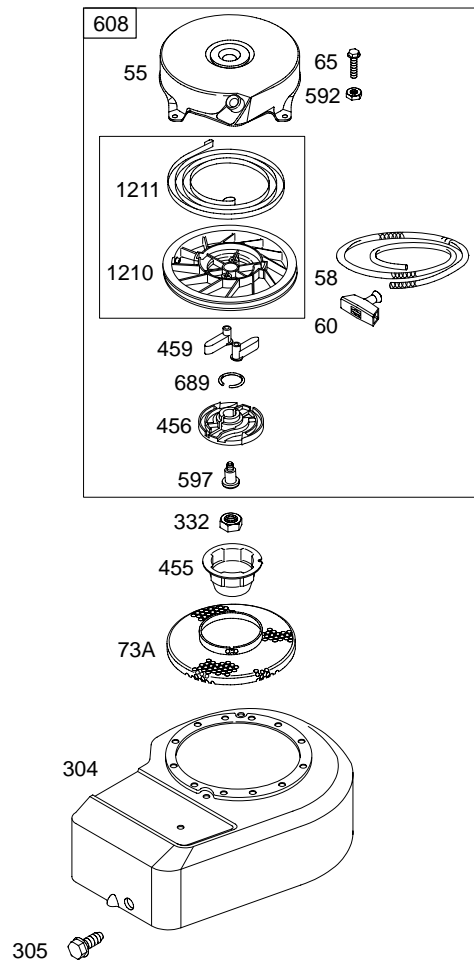

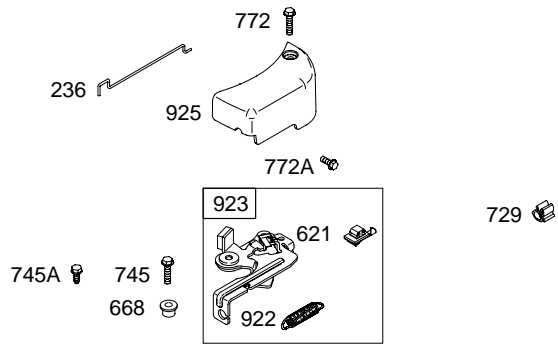

10L900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699650	Cylinder Assembly	40	692194	Retainer-Valve	209	698719	Spring-Governor
2	399269	Kit-Bushing/Seal (Magneto Side)	43	697799	Slinger-Governor/Oil			Note
3	★299819	Seal-Oil (Magneto Side)	45	691762	Tappet-Valve			698726 Spring-Governor
4B	698691	Sump-Engine	46	691998	Camshaft			Used on Type No(s). 0441.
5	690386	Head-Cylinder	50	699644	Manifold-Intake	222C	698725	Bracket-Control
7	★△692288	Gasket-Cylinder Head	51	★699649	Gasket-Intake	227	697402	Lever-Governor Control
8	699640	Breather Assembly	54	691111	Screw (Intake Manifold)	236	691867	Link-Lockout
9	★△695890	Gasket-Breather	55	692144	Housing-Rewind Starter	265	692179	Clamp-Casing
10	691666	Screw (Breather Assembly)	58	697316	Rope-Starter (Cut To Required Length)	265B	691024	Clamp-Casing (Steel With Tab)
11	691245	Tube-Breather	60	691915	Grip-Starter Rope	267	691044	Screw (Casing Clamp)
12	★692218	Gasket-Crankcase	65	690837	Screw (Rewind Starter)	268	691072	Casing-Control Wire (Cut To Required Length)
13	691640	Screw (Cylinder Head)	73A	699850	Screen-Rotating	269	691589	Wire-Control (Cut To Required Length)
15	691680	Plug-Oil Drain (Flush)	74	691627	Screw (Rotating Screen)	270	691027	Nut (Control Wire Casing)
16	691472	Crankshaft	75	691736	Washer (Flywheel)	271	691028	Lever-Control
20	★391483	Seal-Oil (PTO Side)	78	692198	Screw (Flywheel Guard)	287	691002	Screw (Dipstick Tube)
22	691662	Screw (Crankcase Cover/Sump)	90	790206	Carburetor	298	691720	Locknut-Muffler/Elbow
22A	691108	Screw (Crankcase Cover/Sump)			Note	300A	394569	Muffler (Round Lo Tone)
23	692009	Flywheel	97	697414	Shaft-Throttle	303	690291	Elbow-Exhaust
24	222698	Key-Flywheel	106	691901	Seat-Inlet	304	697411	Housing-Blower
25	699657	Piston Assembly	130	691190	Valve-Throttle	305	692198	Screw (Blower Housing)
26	699658	Ring Set	163	★271139	Gasket-Air Cleaner	306	690400	Shield-Cylinder
27	691588	Lock-Piston Pin	180	494406	Tank-Fuel (Metal)	307	690345	Screw (Cylinder Shield)
28	699659	Pin-Piston	188	692198	Screw (Control Bracket)	332	690662	Nut (Flywheel)
29	699654	Rod-Connecting	190	691640	Screw (Fuel Tank)	333	496914	Armature-Magneto
32	691664	Screw (Connecting Rod)	190A	692198	Screw (Fuel Tank)	334	691061	Screw (Magneto Armature)
33	296676	Valve-Exhaust	202	698835	Link-Mechanical Governor			
34	296677	Valve-Intake						
35	690520	Spring-Valve (Intake)						
36	690520	Spring-Valve (Exhaust)						
37A	691209	Guard-Flywheel (Muffler Side)						
37B	697403	Guard-Flywheel (Carburetor Side)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3279-10

Assemblies include all parts shown in frames.

10/21/2004

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
335	691107	Screw (Magneto Armature With Air Vane)	597	691696	Screw (Pawl Friction Plate)	847	691440	Dipstick/Tube Assembly
337	802592	Plug–Spark	608	499706	Starter–Rewind	851	493880	Terminal–Spark Plug
356	692390	Wire–Stop	612	496046	Tube–Pick Up	868	697338	Seat–Valve
358	699933	Gasket Set–Engine	615	690340	Retainer–Governor Shaft	869	699641	Seat–Valve (Intake)
363	19069	Puller–Flywheel	616	697405	Crank–Governor	870	699642	Seat–Valve (Exhaust)
365	692200	Screw (Carburetor)	617	270344	Seal–O Ring (Intake Manifold)	871	699643	Bushing–Valve Guide (Exhaust Valve)
383	89838	Wrench–Spark Plug	621	692310	Switch–Stop	Note		
390	691839	Spring–Choke Diaphragm	633	691321	Seal–Choke/Throttle Shaft	63709		Bushing–Valve Guide (Intake Valve)
393	691837	Screen–Carburetor	635	66538	Boot–Spark Plug	913	494409	Seat–Check Valve
394	495770	Diaphragm–Carburetor	668	692889	Spacer	921B	698709	Cover–Blower Housing
404	690272	Washer (Governor Crank)	670	691633	Spacer–Fuel Tank (Compliance Engines)	922	692135	Spring–Brake
455	691236	Cup–Flywheel	689	691855	Spring–Friction (Ratchet Pawl)	923	691487	Brake
456	692299	Plate–Pawl Friction	718	690959	Pin–Locating (Cylinder)	925	691349	Cover–Linkage
459	281505	Pawl–Ratchet	718A	499047	Pin–Locating (Crankshaft)	957	497929	Cap–Fuel Tank (Plastic)
505	691251	Nut (Governor Control Lever)	724	697478	Retainer–Seal	969	694046	Screw (Blower Housing Cover)
523	692040	Dipstick	729	690586	Clip–Wire	976	694394	Primer–Carburetor
523A	691913	Dipstick	741	691805	Gear–Timing	1019	699934	Kit–Label
524	★692296	Seal–Dipstick Tube	745	691146	Screw (Brake)	1036	699930	Label–Emissions
525	691320	Tube–Dipstick	745A	690859	Screw (Brake)	1058	275508	Operator's Manual
529	692189	Grommet (Breather)	772	691111	Screw (Linkage Cover)	1095	498526	Gasket Set–Valve
534	691417	Screw (Air Cleaner)	772A	690345	Screw (Linkage Cover)	1210	499901	Pulley/Spring Assembly (Pulley)
535A	698369	Filter–Air Cleaner Foam	832A	699670	Guard–Muffler	1211	499901	Pulley/Spring Assembly (Spring)
536A	698472	Cleaner–Air (Plastic)	836	690664	Screw (Muffler Guard)	1218	695866	Seal–O Ring (Carburetor)
562	691119	Bolt (Governor Control Lever)	842	★691870	Seal–O Ring (Dipstick Tube)	1277	698718	Guard–Governor Nut
592	690800	Nut (Rewind Starter)				1278	691002	Screw (Governor Guard Nut)
						1330	270962	Repair Manual

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3279–11 Assemblies include all parts shown in frames. **10/21/2004**