



Illustrated Parts List

Model Series

11C600

TYPE NUMBERS
0100 through 0110.

TABLE OF CONTENTS


Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Lubrication	2
Piston Group	2
Rewind Starter	7

PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


11C600

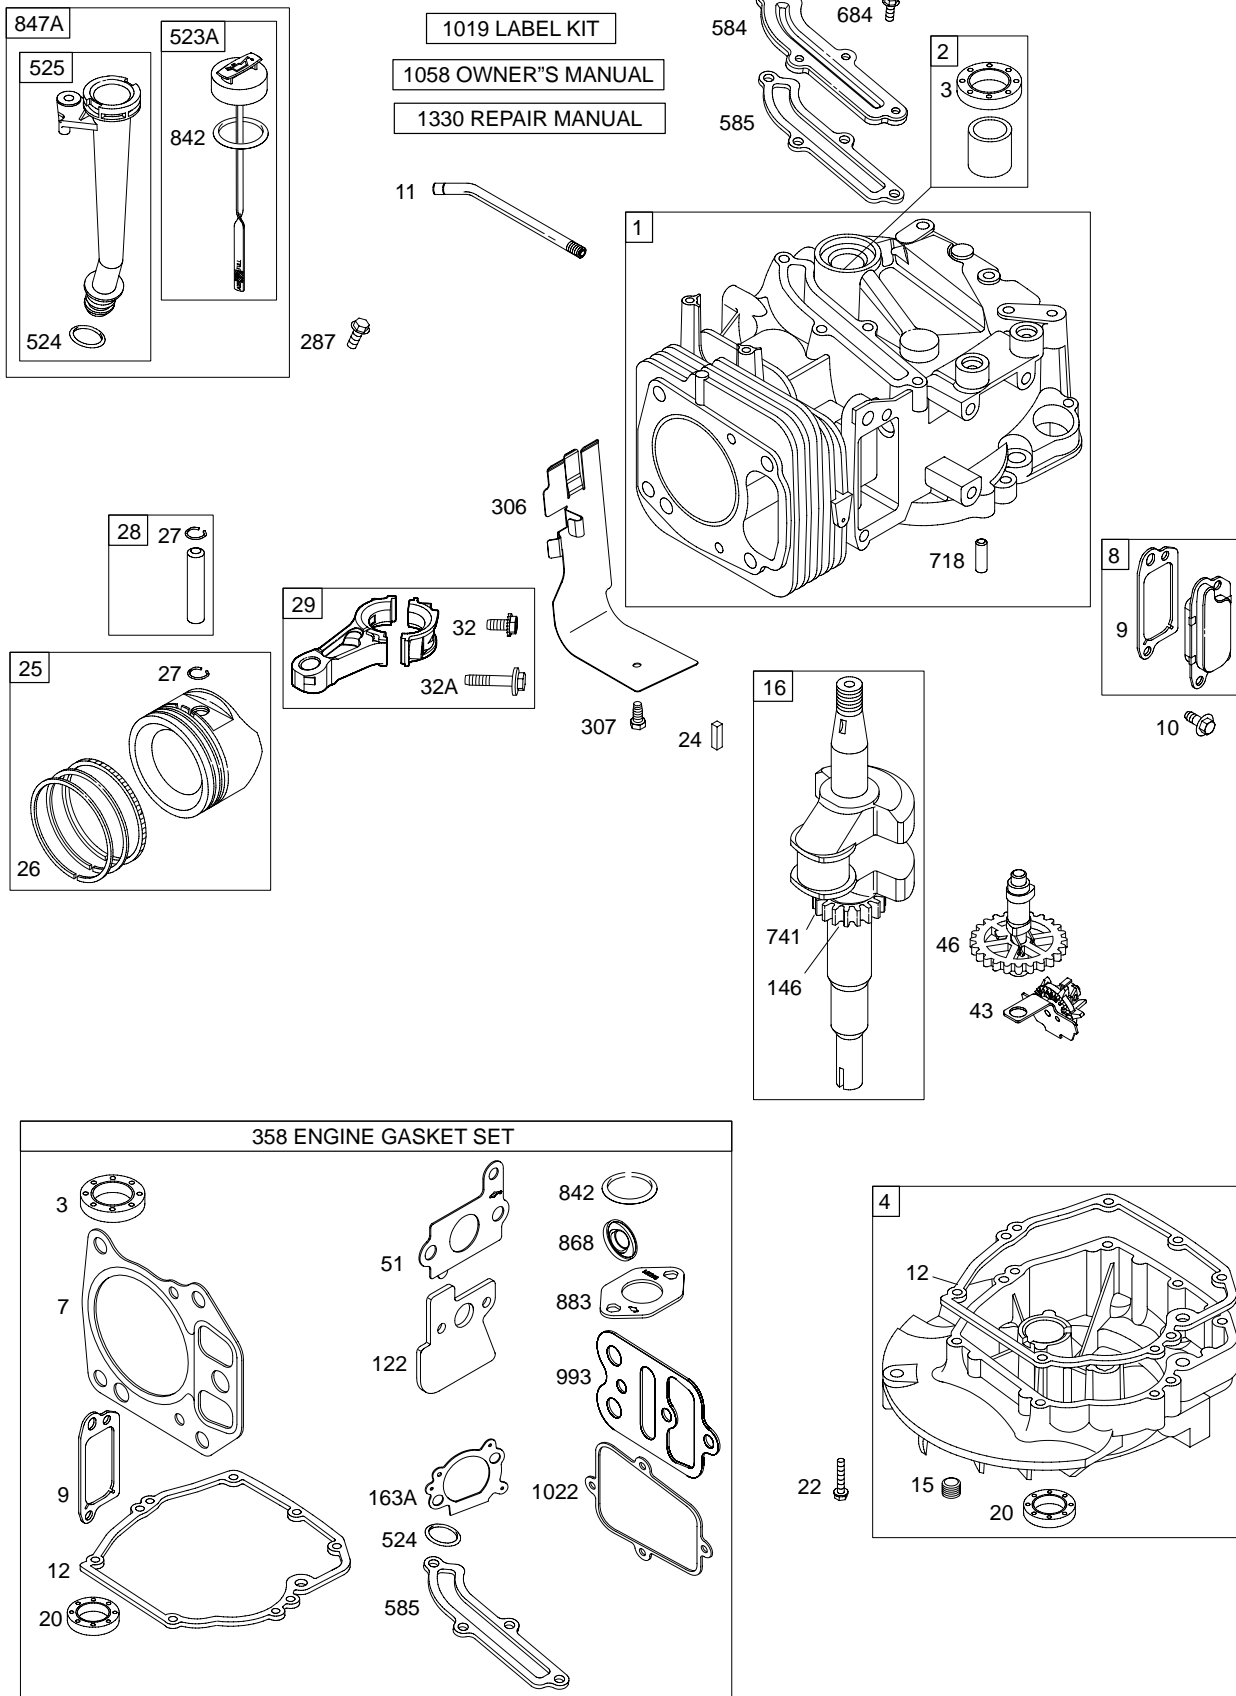







Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5051-2 Assemblies include all parts shown in frames. 10/07/2004

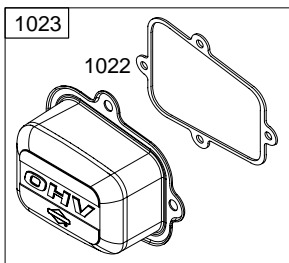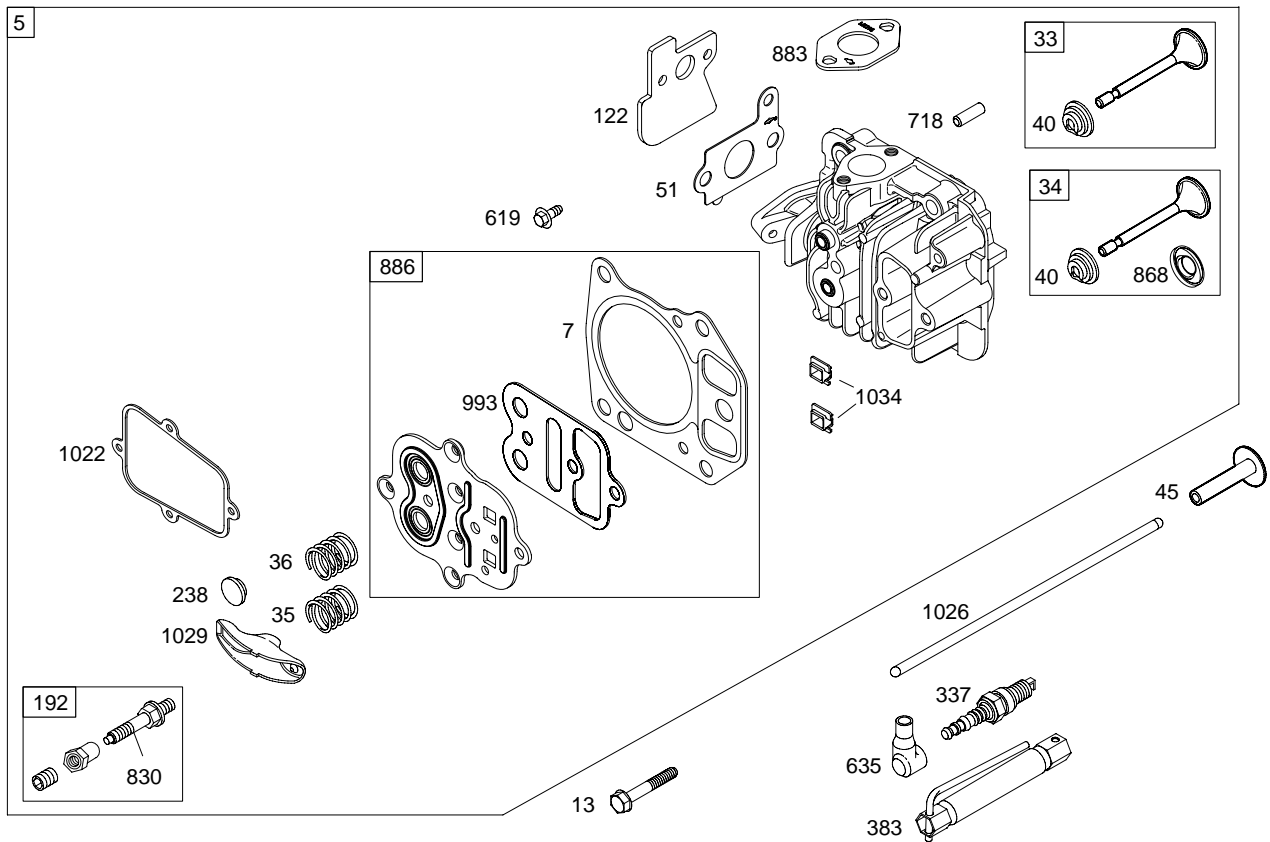




914

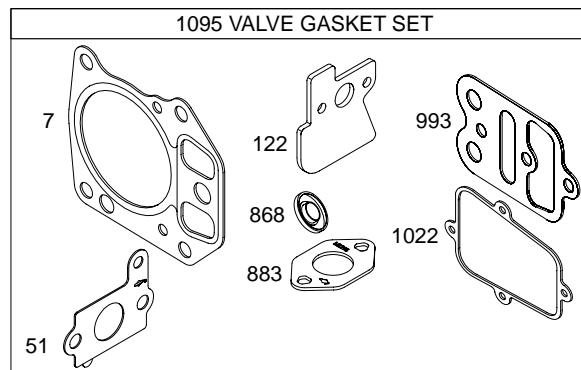




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5051-3 Assemblies include all parts shown in frames. 10/07/2004

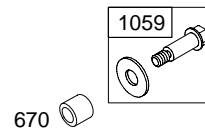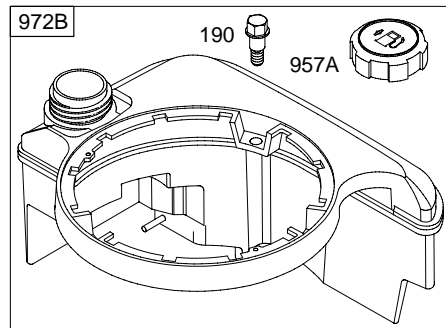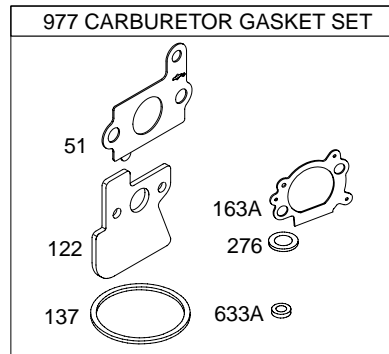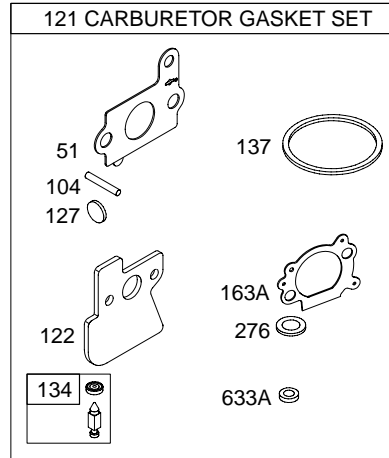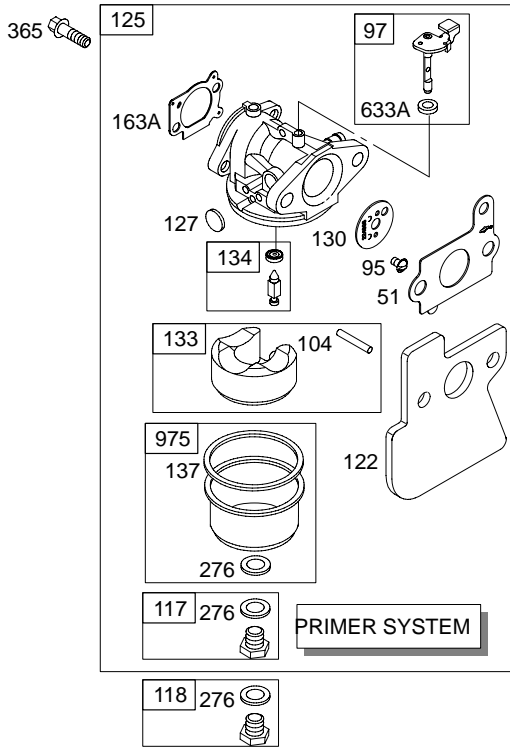


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5051-4 Assemblies include all parts shown in frames. 10/07/2004

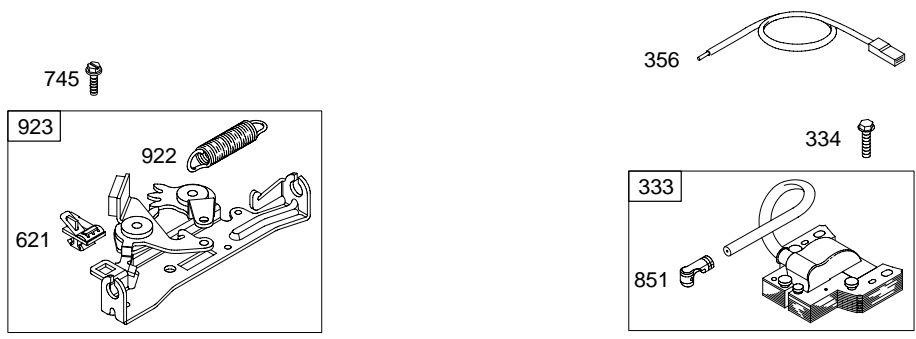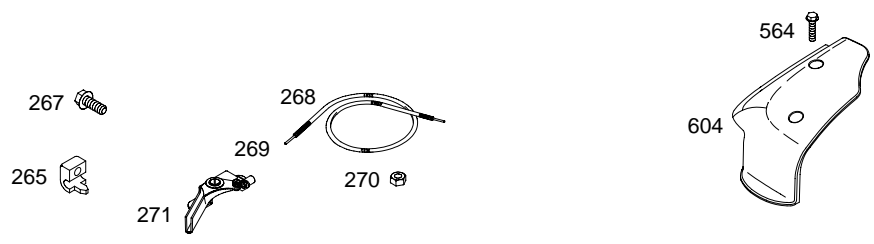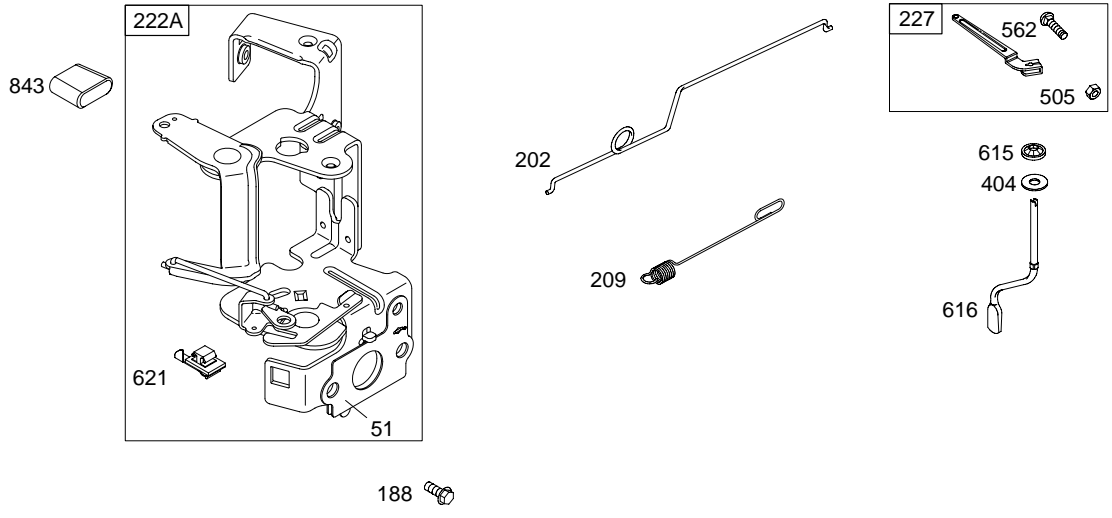

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5051-5 Assemblies include all parts shown in frames. 10/07/2004

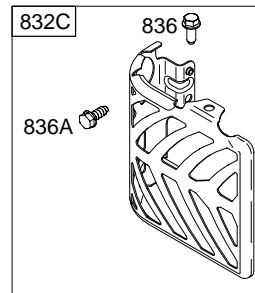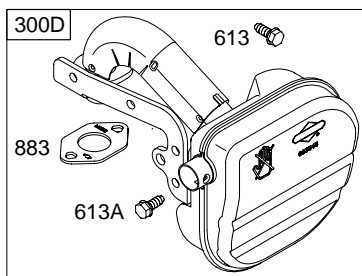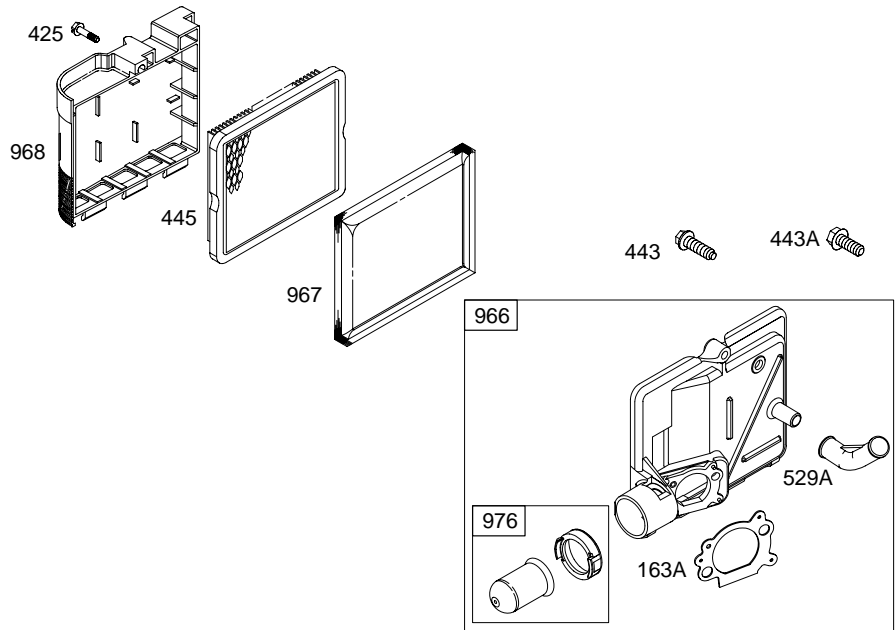

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5051-6 Assemblies include all parts shown in frames. **10/07/2004**

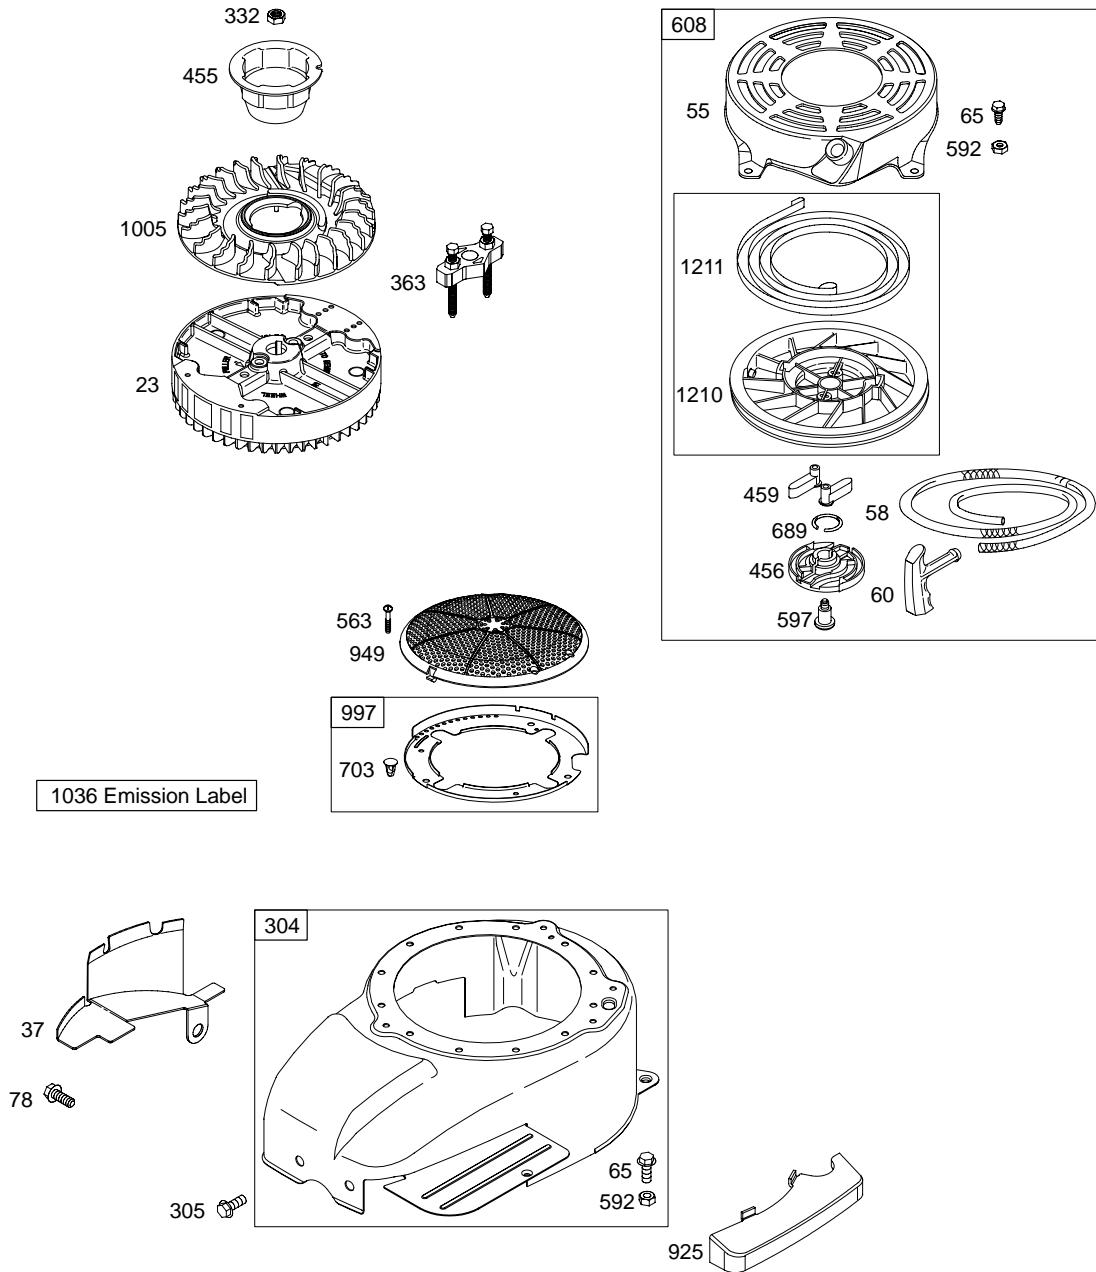

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5051-7

Assemblies include all parts shown in frames.

10/07/2004

11C600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692670	Cylinder Assembly	26	790360	Ring Set (Standard) (Used After Code Date 04040400).	97	499682	Shaft-Throttle (Metal)
2	399269	Kit-Bushing/Seal (Magneto Side)						Note
3	★299819	Seal-Oil (Magneto Side)						790121 Shaft-Throttle (Plastic)
4	493279	Sump-Engine				104	●691242	Pin-Float Hinge
5	695276	Head-Cylinder				117	498981	Jet-Main (Standard) (Used After Code Date 03110600).
7	★Δ695166	Gasket-Cylinder Head						Note
8	495786	Breather Assembly						498978 Jet-Main (Standard) (Used Before Code Date 03110700).
9	★272481	Gasket-Breather						
10	691125	Screw (Breather Assembly)						
11	499675	Tube-Breather						
12	★692232	Gasket-Crankcase						
13	691137	Screw (Cylinder Head)	27	691866	Lock-Piston Pin			
15	691680	Plug-Oil Drain (Square Socket)	28	499423	Pin-Piston	118	497466	Jet-Main (High Altitude) (Used After Code Date 03110600).
16	692676	Crankshaft	29	692671	Rod-Connecting			Note
20	★399781	Seal-Oil (PTO Side)	32	691664	Screw (Connecting Rod)			498975 Jet-Main (High Altitude) (Used Before Code Date 03110700).
22	691092	Screw (Crankcase Cover/Sump)	32A	695759	Screw (Connecting Rod)			
23	696569	Flywheel	33	499642	Valve-Exhaust			
24	222698	Key-Flywheel	34	499641	Valve-Intake			
25	790359	Piston Assembly (Standard) (Used After Code Date 04040400).	35	691304	Spring-Valve (Intake)	121	692703	Kit-Carburetor Overhaul
		Note	36	691304	Spring-Valve (Exhaust)	122★♦Δ692799		Spacer-Carburetor
		499429 Piston Assembly (Used Before Code Date 04040500). (Standard)	37	694086	Guard-Flywheel	125	694202	Carburetor
		499430 Piston Assembly (.010" Oversize)	40	692194	Retainer-Valve	127	●694468	Plug-Welch
		499431 Piston Assembly (.020" Oversize)	43	691997	Slinger-Governor/Oil	130	691203	Valve-Throttle
		499432 Piston Assembly (.030" Oversize)	45	690977	Tappet-Valve			Note
			46	694039	Camshaft			696564 Valve-Throttle (Used With Plastic Throttle Shaft)
			51★♦Δ692799		Gasket-Intake	133	398187	Float-Carburetor
			55	691421	Housing-Rewind Starter	134	●398188	Kit-Needle/Seat
			58	697316	Rope-Starter (Cut To Required-Length)	137	●♦693981	Gasket-Float Bowl
			60	281434	Grip-Starter Rope	146	690979	Key-Timing
			65	690837	Screw (Rewind Starter)	163A★♦♦692667		Gasket-Air Cleaner
			78	691108	Screw (Flywheel Guard)	187	691050	Line-Fuel (Cut To Required-Length)
			95	691636	Screw (Throttle Valve)	188	691147	Screw (Control Bracket)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5051-8

Assemblies include all parts shown in frames.

10/07/2004

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
190	690940	Screw (Fuel Tank)	306	691232	Shield-Cylinder	584	697734	Cover-Breather Passage
192	694543	Adjuster-Rocker Arm	307	690345	Screw (Cylinder Shield)	585	★691879	Gasket-Breather Passage
202	691303	Link-Mechanical Governor	332	690662	Nut (Flywheel)	592	690800	Nut (Rewind Starter)
209	691851	Spring-Governor Used on Type No(s). 0100.	333	802574	Armature-Magneto	597	691696	Screw (Pawl Friction Plate)
		———— Note ————	334	691061	Screw (Magneto Armature)	601	95162	Clamp-Hose
		690319 Spring-Governor Used on Type No(s). 0110.	337	692051	Plug-Spark	604	692669	Cover-Control
222A	693897	Bracket-Control Used on Type No(s). 0100.	356	692390	Wire-Stop	608	497680	Starter-Rewind
		———— Note ————	358	694090	Gasket Set-Engine	613	691108	Screw (Muffler)
		692672 Bracket-Control Used on Type No(s). 0110.	363	19069	Pulley-Flywheel	613A	691140	Screw (Muffler)
227	691467	Lever-Governor Control	365	691136	Screw (Carburetor)	615	690340	Retainer-Governor Shaft
238	691300	Cap-Valve	383	19374	Wrench-Spark Plug	616	698801	Crank-Governor
265	690798	Clamp-Casing	404	690272	Washer (Governor Crank)	619	691108	Screw (Cylinder Head Plate)
267	691044	Screw (Casing Clamp)	425	690670	Screw (Air Cleaner Cover)	621	692310	Switch-Stop
268	691072	Casing-Control Wire (Cut To Required Length)	443	691637	Screw (Air Cleaner Primer Base)	633A	◆691321	Seal-Choke/Throttle Shaft (Throttle Shaft)
269	691589	Wire-Control (Cut To Required Length)	443A	692523	Screw (Air Cleaner Primer Base)	635	66538	Boot-Spark Plug
270	691027	Nut (Control Wire Casing)	445	491588	Filter-Air Cleaner Cartridge	670	692294	Spacer-Fuel Tank
271	691028	Lever-Control	455	695161	Cup-Flywheel	684	690345	Screw (Breather Passage Cover)
276	◆271716	Washer-Sealing (Main Jet)	456	692299	Plate-Pawl Friction	689	691855	Spring-Friction
287	690940	Screw (Dipstick Tube)	459	281505	Pawl-Ratchet	703	696309	Clip
300D	696526	Muffler	505	691251	Nut (Governor Control Lever)	718	690959	Pin-Locating
304	697383	Housing-Blower	523A	495264	Dipstick	741	790345	Gear-Timing (Use Without Woodruff Key)
305	691108	Screw (Blower Housing)	524	★692296	Seal-Dipstick Tube			———— Note ————
			525	495265	Tube-Dipstick			691830 Gear-Timing (Uses Woodruff Key)
			529	691923	Grommet	745	691648	Screw (Brake)
			562	691119	Bolt (Governor Control Lever)	830	694544	Stud-Rocker Arm
			563	691138	Screw (Debris Guard Screen)	832C	695593	Guard-Muffler
			564	693808	Screw (Control Cover)	851	493880	Terminal-Spark Plug

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

11C600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
836	691147	Screw (Muffler Guard)	957A	397974	Cap–Fuel Tank (Plastic)	1029	691230	Arm–Rocker
836A	697551	Screw (Muffler Guard)	966	692673	Base–Air Cleaner Primer	1034	691343	Guide–Push Rod
842	★691031	Seal–O Ring (Dipstick Tube)	967	493537	Filter–Pre Cleaner	1036	790635	Label–Emission (Used After Code Date 04063000).
843	691884	Sleeve–Lever	968	692298	Cover–Air Cleaner	Note		
847A	692017	Dipstick/Tube Assembly	972B	693377	Tank–Fuel (Plastic)	696767 Label– Emission (Used Before Code Date 04063000).		
868	★Δ692044	Seal–Valve	975	493640	Bowl–Float	1058	274979	Manual–Owner’s
883	★Δ691893	Gasket–Exhaust	976	694395	Primer–Carburetor	1059	692311	Kit–Screw/Washer
886	696268	Gasket Kit–Cylinder Head/Plate	977	692704	Gasket Set–Carburetor	1095	694091	Gasket Set–Valve
914	691108	Screw (Rocker Cover)	993	★Δ694088	Gasket–Cylinder Head Plate	1210	498144	Pulley/Spring Assembly (Pulley)
922	692135	Spring–Brake	997	696310	Shield–Debris	1211	498144	Pulley/Spring Assembly (Spring)
923	695891	Brake	1005	691346	Fan–Flywheel	1330	272147	Manual–Repair
925	690595	Cover–Linkage	1019	695811	Kit–Label			
949	696306	Guard–Debris Screen	1022	★Δ691890	Gasket–Rocker Cover			
			1023	499624	Cover–Rocker			
			1026	692045	Rod–Push			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5051–10

Assemblies include all parts shown in frames.

10/07/2004