



Illustrated Parts List

Model Series

123J00

TYPE NUMBERS
0100 through 0188.

TABLE OF CONTENTS


Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	5
Electrical	4
Engine Sump	2
Exhaust System	4
Flywheel	5
Flywheel Brake	4
Fuel Supply	3
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2









PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


123J00

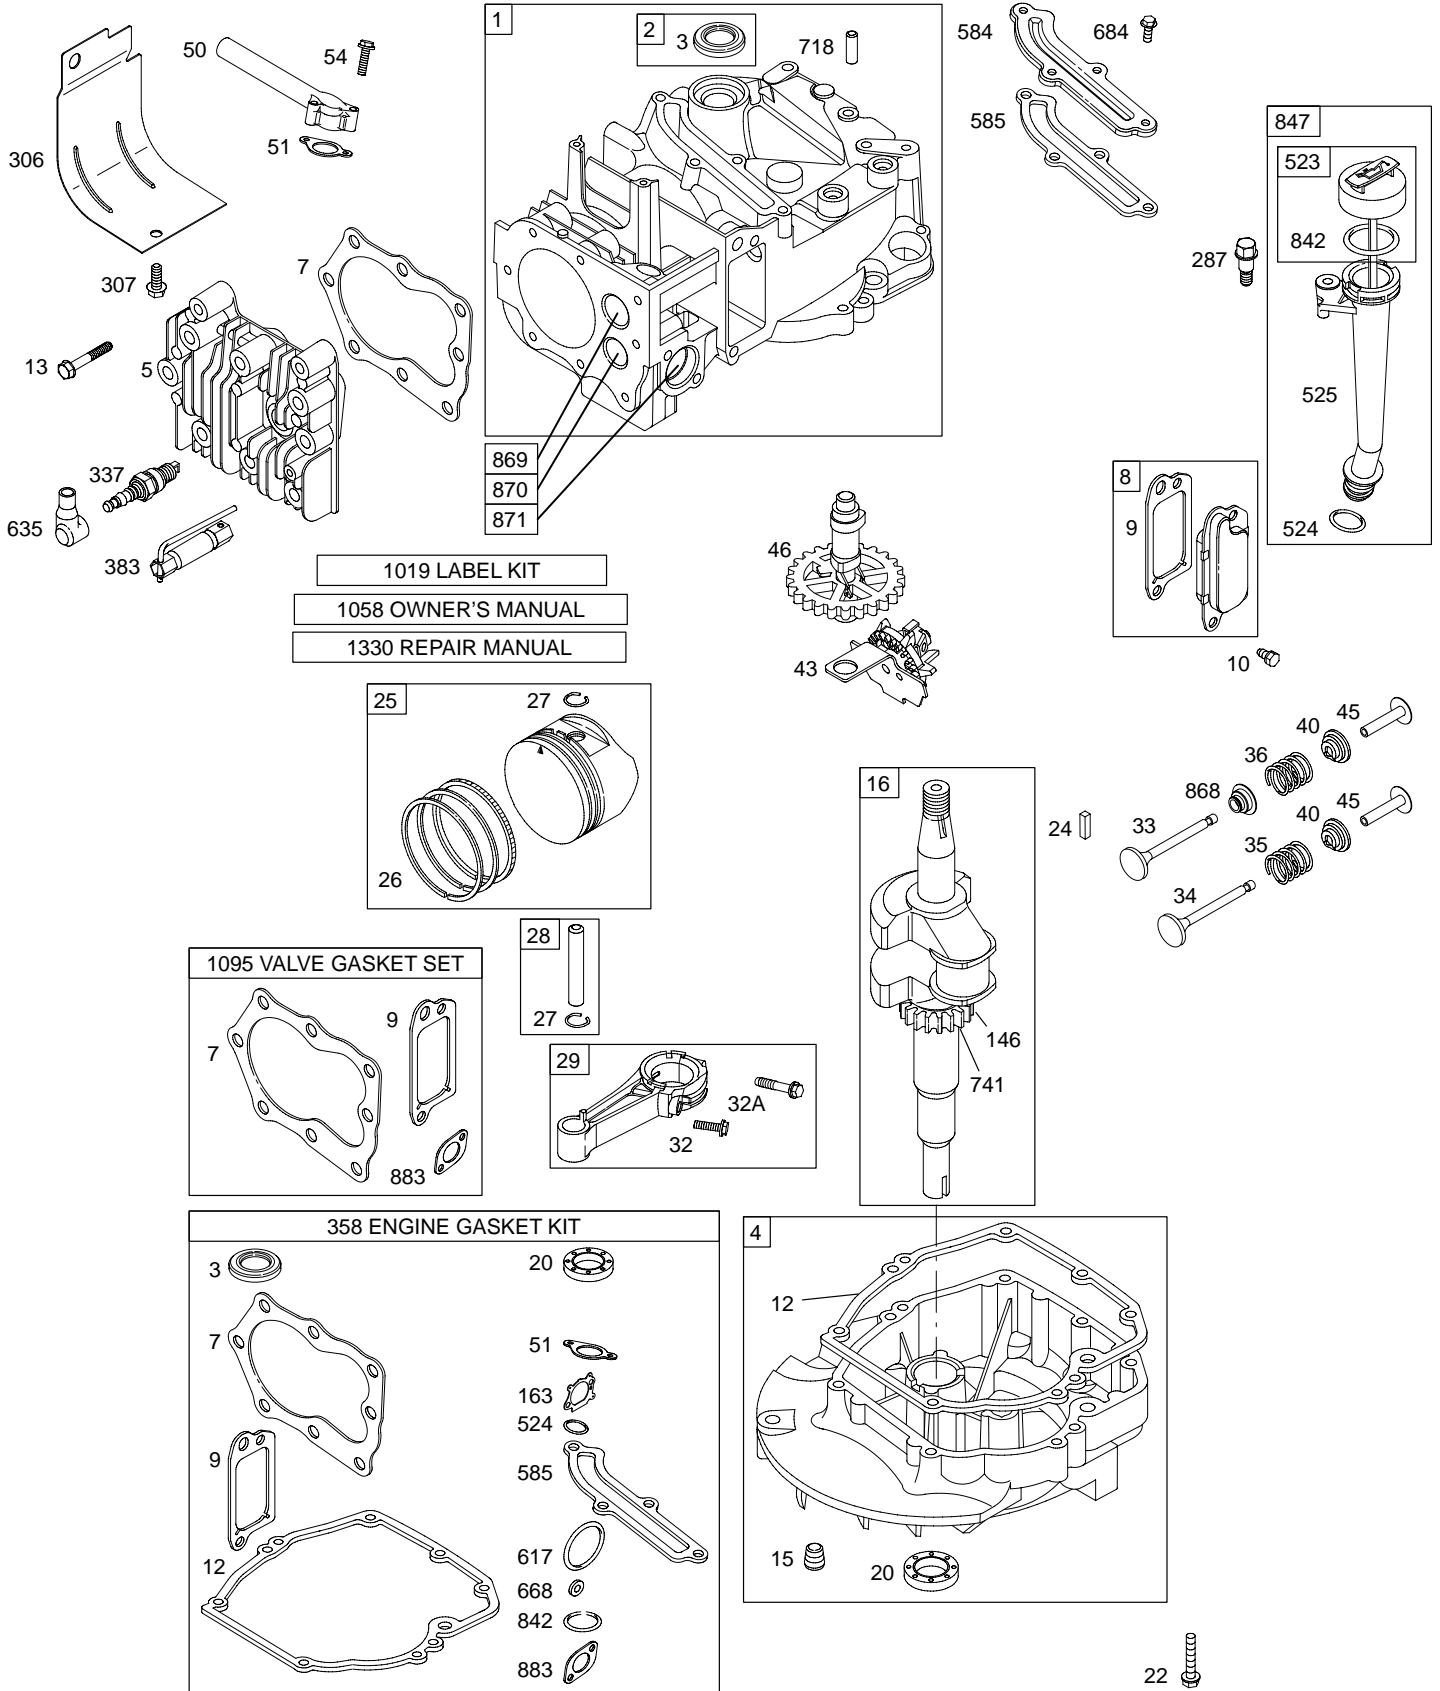






Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5117-2 Assemblies include all parts shown in frames. 09/30/2004

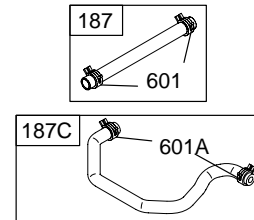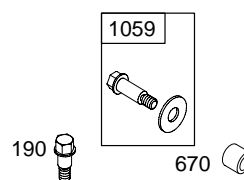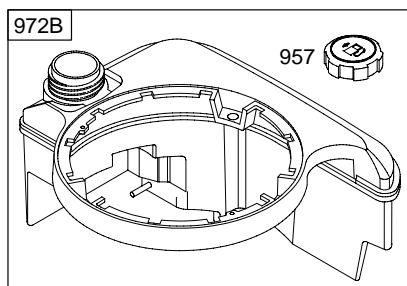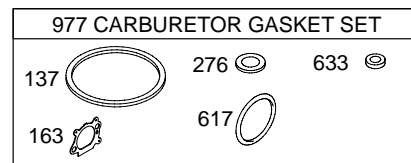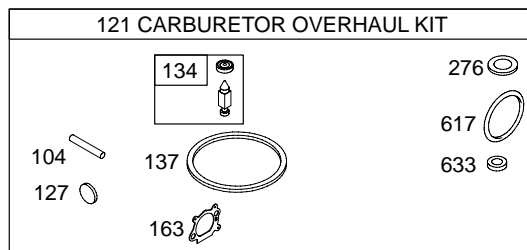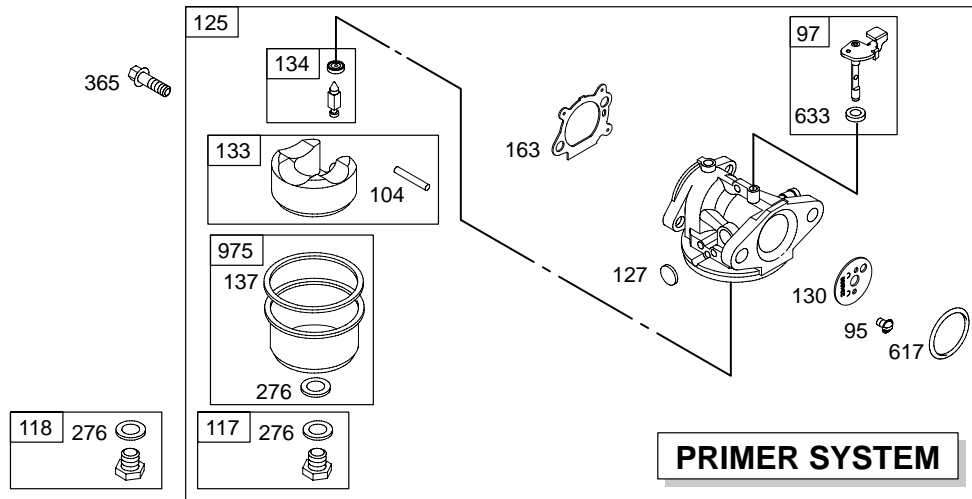

123J00

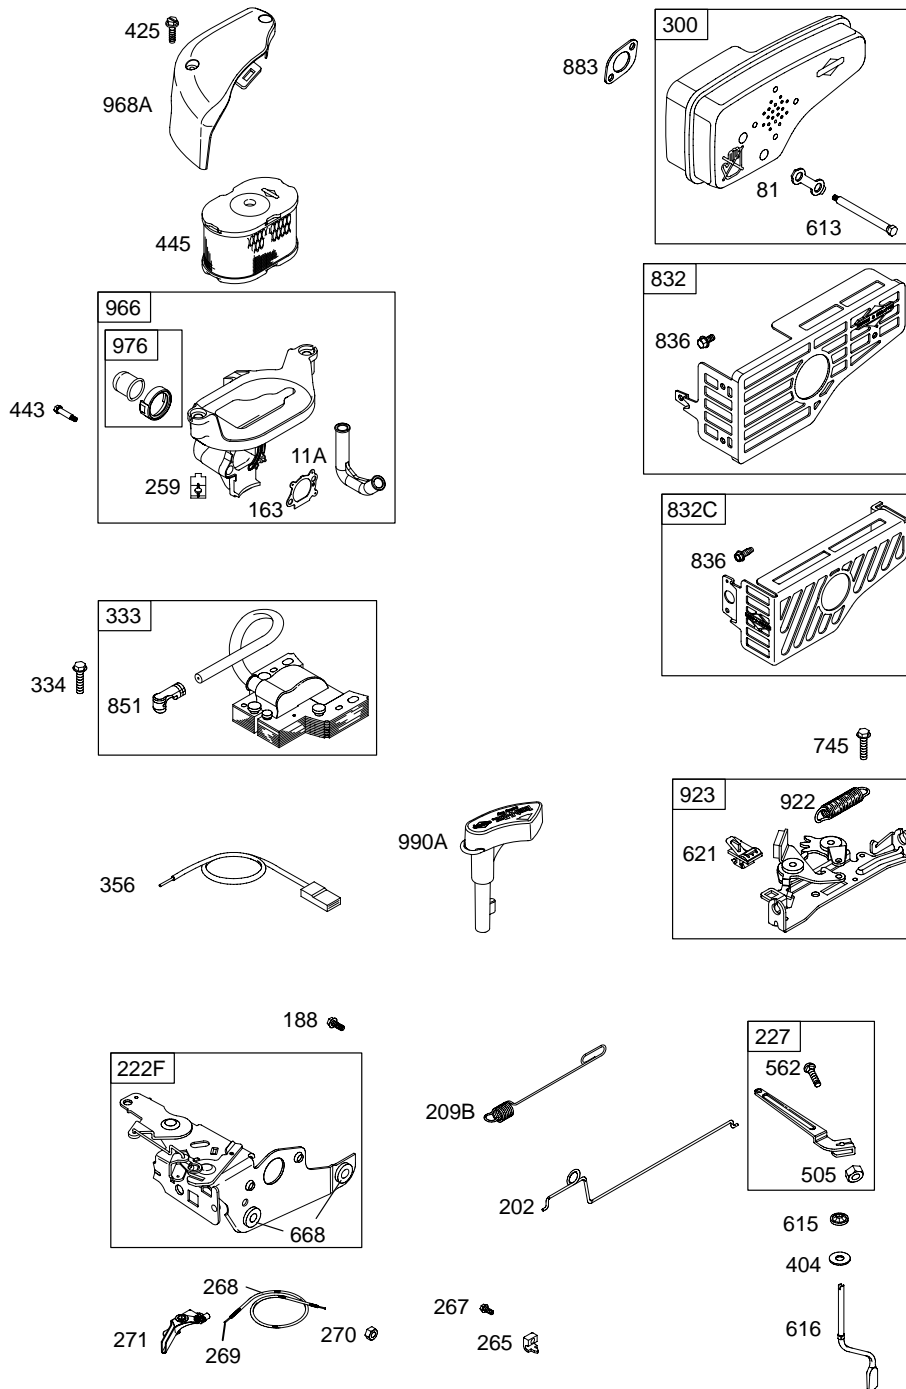

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5117-4 Assemblies include all parts shown in frames. 09/30/2004

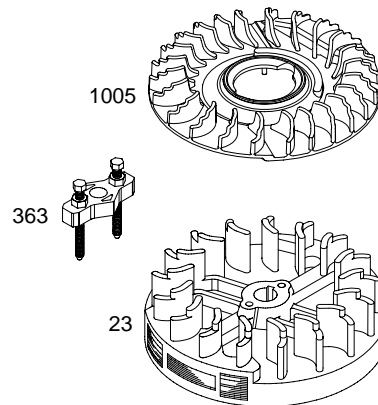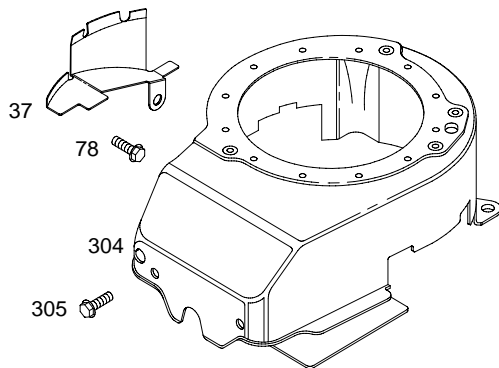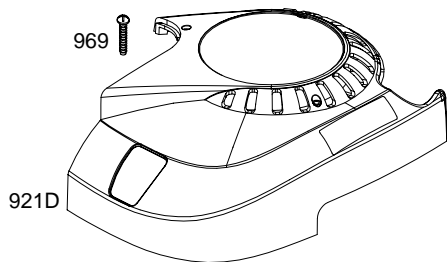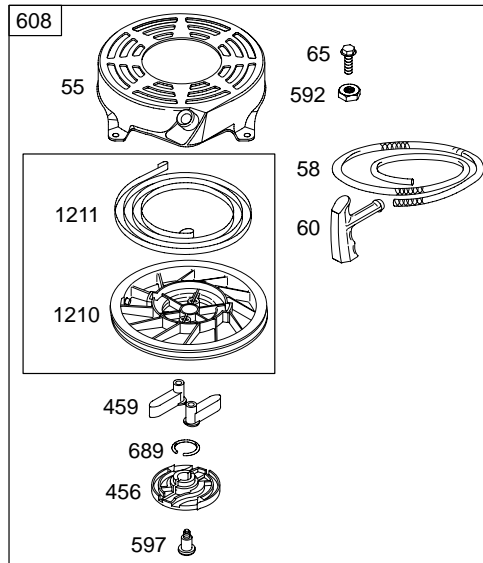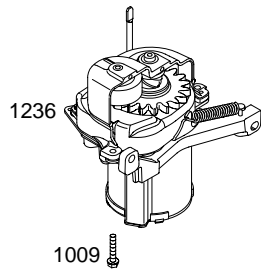

1036 EMISSION LABEL

123J00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	25	790359	Piston Assembly (Standard) (Used After Code Date 04031400).	32	691664	Screw (Connecting Rod)
2	399269	Kit-Bushing/Seal (Magneto Side)				32A	695759	Screw (Connecting Rod)
3	★299819	Seal-Oil (Magneto Side)				33	262651	Valve-Exhaust
4	493279	Sump-Engine				34	262652	Valve-Intake
		Note ——— 696294 Sump-Engine Used on Type No(s). 0188.				35	691270	Spring-Valve (Intake)
5	691160	Head-Cylinder				36	691270	Spring-Valve (Exhaust)
7	★∅692249	Gasket-Cylinder Head				37	694086	Guard-Flywheel
8	695250	Breather Assembly				40	692194	Retainer-Valve
9	★∅696125	Gasket-Breather				43	691997	Slinger-Governor/Oil
10	691125	Screw (Breather Assembly)				45	690548	Tappet-Valve
11A	691934	Tube-Breather				46	691449	Camshaft
12	★692232	Gasket-Crankcase				50	497465	Manifold-Intake
13	690912	Screw (Cylinder Head)				51	★272199	Gasket-Intake
15	691680	Plug-Oil Drain (Square Socket)	26	790360	Ring Set (Standard) (Used After Code Date 04031400).	54	691650	Screw (Intake Manifold)
16	691451	Crankshaft				55	691421	Housing-Rewind Starter
		Note ——— 691450 Crankshaft Used on Type No(s). 0100.				58	697316	Rope-Starter (Cut To Required Length)
20	★399781	Seal-Oil (PTO Side)				60	281434	Grip-Starter Rope
22	691092	Screw (Crankcase Cover/Sump)				65	690837	Screw (Rewind Starter)
23	692315	Flywheel (Rewind Start)				78	691108	Screw (Flywheel Guard)
		Note ——— 696291 Flywheel Used on Type No(s). 0188.				81	691740	Lock-Muffler Screw
24	222698	Key-Flywheel	27	691866	Lock-Piston Pin	95	691636	Screw (Throttle Valve)
			28	499423	Pin-Piston (Standard)	97	493267	Shaft-Throttle (Metal)
			29	499424	Rod-Connecting (Standard)			Note ——— 696565 Shaft-Throttle (Plastic)
						104	●691242	Pin-Float Hinge

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	494870	Jet–Main (Standard) (Used After Code Date 02092900). Note ——— 498975 Jet–Main (Standard) (Used Before Code Date 02093000).	202	691829	Link–Mechanical Governor	332	690662	Nut (Flywheel)
118	497315	Jet–Main (High Altitude) (Used After Code Date 02092900). Note ——— 496495 Jet–Main (High Altitude) (Used Before Code Date 02093000).	209B	699056	Spring–Governor	333	802574	Armature–Magneto
121	498260	Kit–Carburetor Overhaul	222F	691436	Bracket–Control (Remote/Manual Friction)(Compliance) Note ——— 698163 Bracket–Control Used on Type No(s). 0188.	334	691061	Screw (Magneto Armature)
125	698444	Carburetor (Primer System)	227	690783	Lever–Governor Control	337	802592	Plug–Spark
127	694468	Plug–Welch	259	691189	Bracket–Casing Clamp	356	692390	Wire–Stop
130	691203	Valve–Throttle Note ——— 696564 Valve–Throttle (Used With Plastic Throttle Shaft)	265	690798	Clamp–Casing	358	497316	Gasket Set–Engine
133	398187	Float–Carburetor	267	691044	Screw (Casing Clamp)	363	19069	Flywheel Puller
134	398188	Kit–Needle/Seat	268	691072	Casing–Control Wire (Cut to Required Length)	365	692524	Screw (Carburetor)
137	693981	Gasket–Float Bowl	269	691589	Wire–Control (Cut to Required Length)	383	89838	Wrench–Spark Plug
146	690979	Key–Timing	270	691027	Nut (Control Wire Casing)	404	690272	Washer (Governor Crank)
163	272653	Gasket–Air Cleaner	271	691028	Lever–Control	425	691135	Screw (Air Cleaner Cover)
187	691050	Line–Fuel (Cut to Required Length)	276	271716	Washer–Sealing (Main Jet)	443	690349	Screw (Air Cleaner Primer Base)
187C	696292	Line–Fuel (Molded)	287	690940	Screw (Dipstick Tube)	445	497725	Filter–Air Cleaner Cartridge
188	693399	Screw (Control Bracket)	300	692038	Muffler (Super Lo Tone)	455	695161	Cup–Flywheel
190	690940	Screw (Fuel Tank)	304	695892	Housing–Blower Note ——— 696298 Housing–Blower Used on Type No(s). 0188.	456	692299	Plate–Pawl Friction
			305	691108	Screw (Blower Housing)	459	281505	Plate–Ratchet
			306	690450	Shield–Cylinder	505	691251	Nut (Governor Control Lever)
			307	690345	Screw (Cylinder Shield)	523	495264	Dipstick
						524	692296	Seal–Dipstick Tube
						525	495265	Tube–Dipstick
						562	92613	Bolt (Governor Control Lever)
						584	697734	Cover–Breather Passage
						585	691879	Gasket–Breather Passage
						592	690800	Nut (Rewind Starter)
						597	691696	Screw (Pawl Friction Plate)

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123J00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
601	95162	Clamp-Hose	842	★691031	Seal-O Ring (Dipstick Tube)	975	493640	Bowl-Float
601A	691038	Clamp-Hose	847	692017	Dipstick/Tube Assembly	976	694395	Primer-Carburetor
608	497680	Starter-Rewind	851	493880	Terminal-Spark Plug	977	498261	Gasket Set-Carburetor
613	691340	Screw (Muffler)	868	697338	Seal-Valve	990A	695951	Key Set
615	690340	Retainer-Governor Shaft	869	691155	Seat-Valve (Intake)	1005	691346	Fan-Flywheel
616	698801	Crank-Governor	870	690380	Seat-Valve (Exhaust)	1009	696255	Screw (Starter Motor)
617★◆	270344	Seal-O Ring (Intake Manifold)	871	262001	Bushing-Valve Guide (Exhaust)	1019	790231	Kit-Label (Touch N Mow)
621	692310	Switch-Stop	Note _____			1036	790411	Label-Emission (Used After Code Date 04063000).
633 ◆	691321	Seal-Choke/Throttle Shaft (Throttle)	63709		Bushing-Valve Guide (Intake)	Note _____		
635	66538	Boot-Spark Plug	883 ★∅	691881	Gasket-Exhaust	697457		Label- Emission (Used Before Code Date 04070100).
668	★493823	Spacer (Includes 2)	921D	691339	Cover-Blower Housing	1058	275177	Manual-Owner's _____ Note _____
670	692294	Spacer-Fuel Tank	922	692135	Spring-Brake	275054		Manual- Owner's (Touch N Mow)
684	690345	Screw (Breather Passage Cover)	923	695891	Brake	1059	692311	Kit-Screw/Washer
689	691855	Spring-Friction	957	397974	Cap-Fuel Tank (Plastic) (Black)	1095	498528	Gasket Set-Valve
718	690959	Pin-Locating	966	691439	Base-Air Cleaner Primer	1210	498144	Pulley/Spring Assembly (Pulley)
741	790345	Gear-Timing (Use Without Woodruff Key)	968A	498997	Cover-Air Cleaner	1211	498144	Pulley/Spring Assembly (Spring)
Note _____			969	690700	Screw (Blower Housing Cover)	1236	695959	Starter-Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
745	691648	Screw (Brake)	972B	693377	Tank-Fuel (Plastic)	1330	270962	Manual-Repair
832	499034	Guard-Muffler	Note _____					
832C	691442	Guard-Muffler	695960		Tank-Fuel (Plastic) Used on Type No(s). 0188.			
836	690664	Screw (Muffler Guard)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No.1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5117-8

Assemblies include all parts shown in frames.

09/30/2004