



# 129H00

## Illustrated Parts List

### Model Series

# 129H00

TYPE NUMBERS  
0005 through 0185.

### TABLE OF CONTENTS


Alternator .....	6
Air Cleaner .....	4
Blower Housing/Shrouds .....	5
Camshaft .....	2
Carburetor .....	3
Controls .....	4
Crankshaft .....	2
Cylinder .....	2
Electric Starter .....	6
Electrical .....	6
Engine Sump .....	2
Exhaust System .....	4
Flywheel .....	5
Flywheel Brake .....	6
Fuel Supply .....	3
Governor Spring .....	4
Ignition .....	6
Kits/Gaskets .....	2 & 3
Lubrication .....	2
Piston Group .....	2
Rewind Starter .....	5
Valves .....	2







PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 129H00





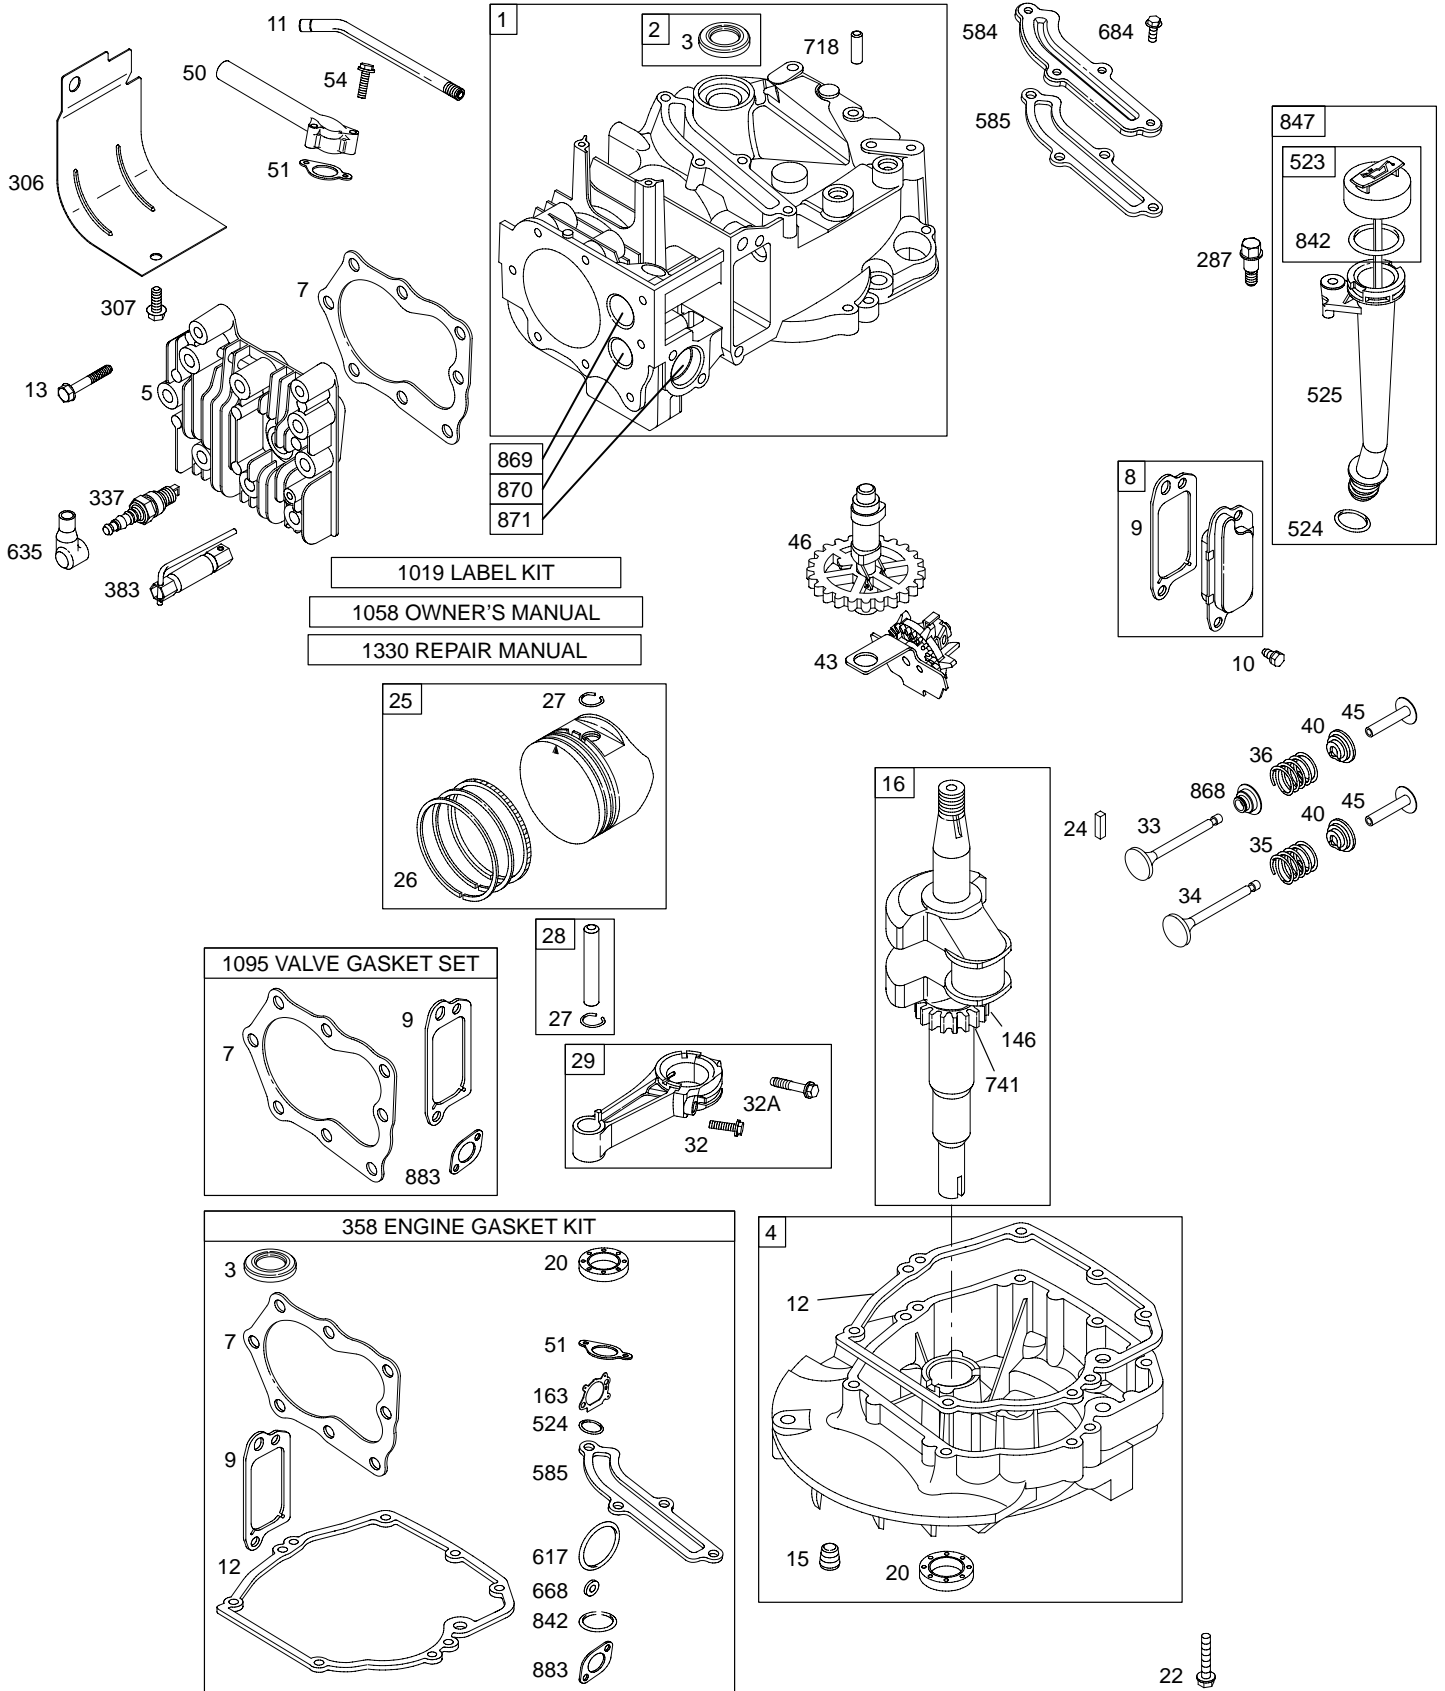


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5118-2 Assemblies include all parts shown in frames. 09/30/2004

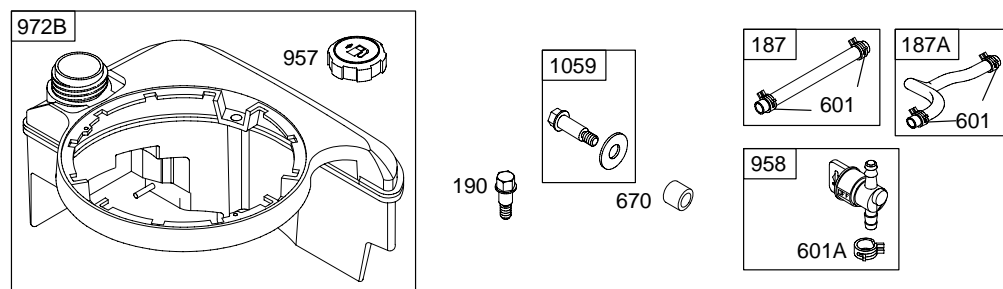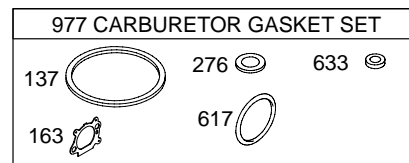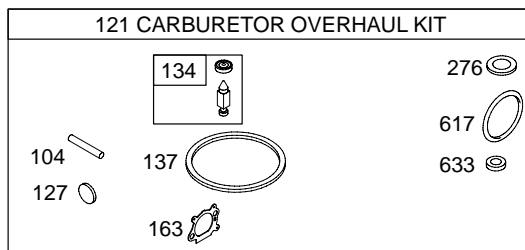
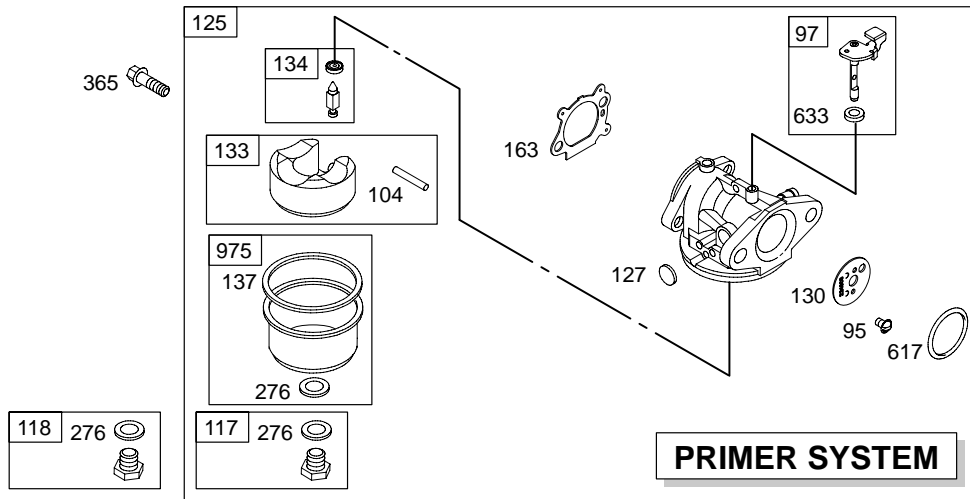


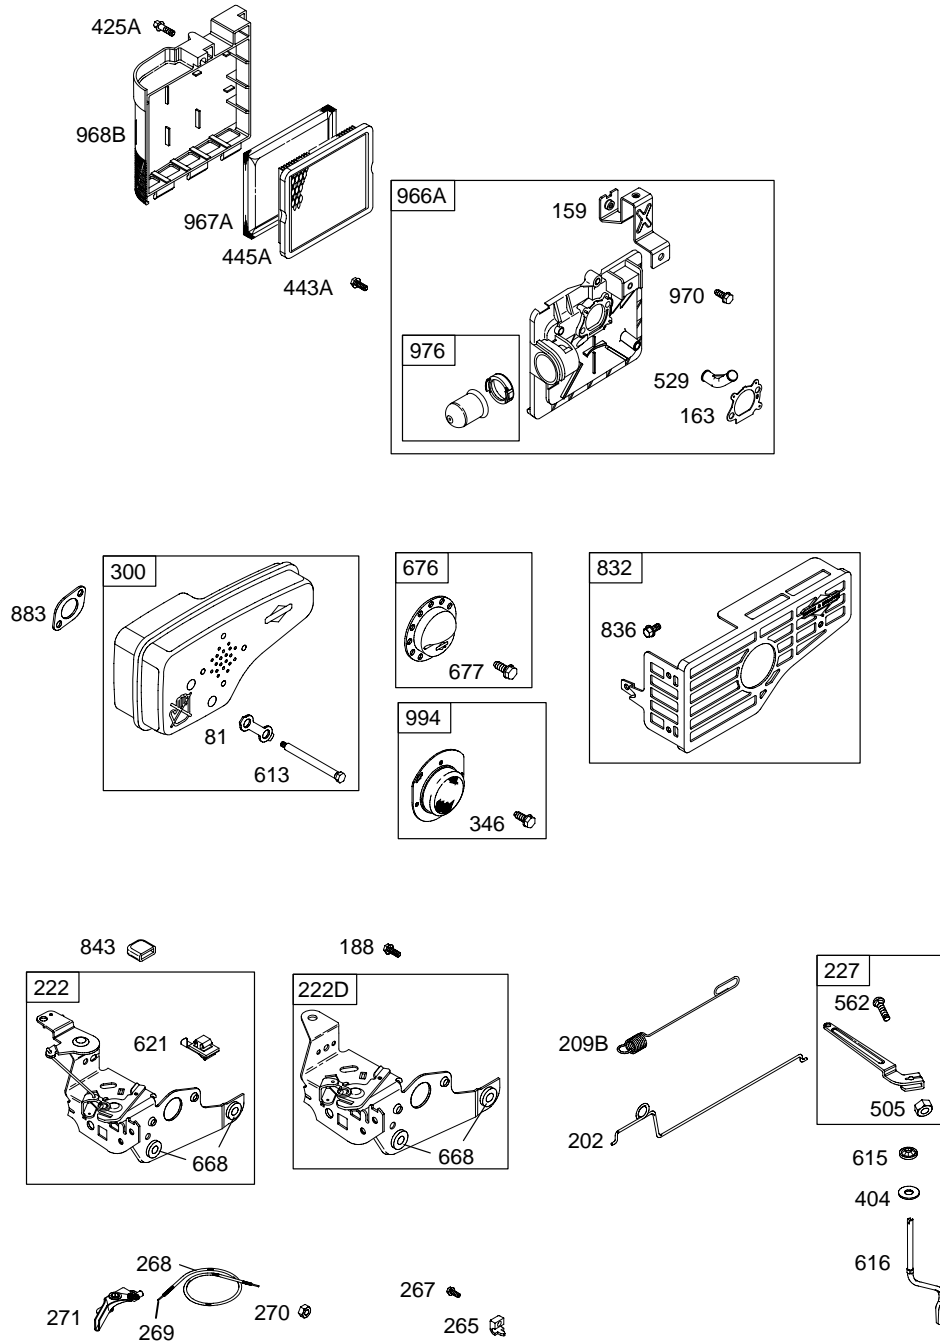

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
5118-4 Assemblies include all parts shown in frames. 09/30/2004

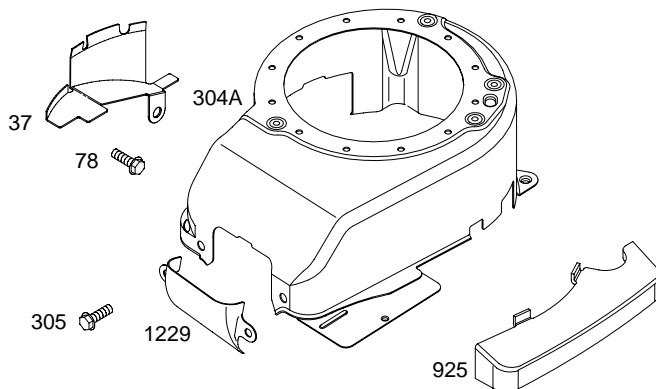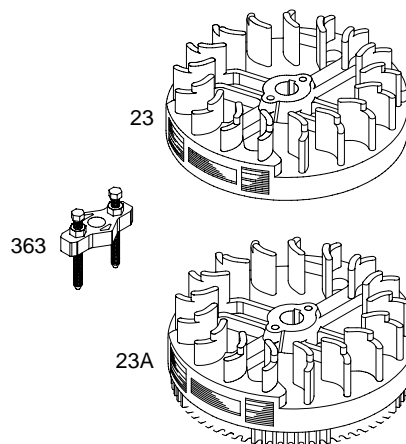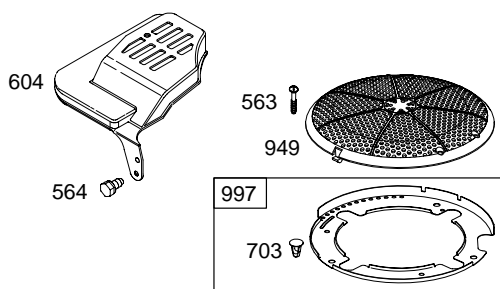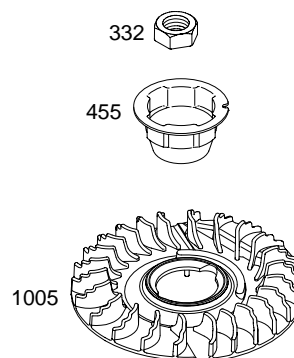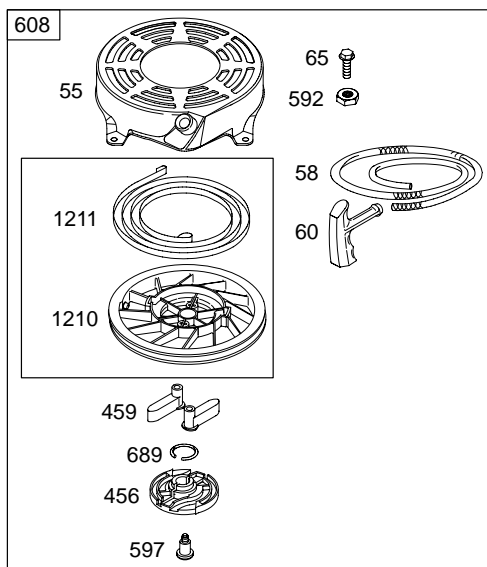

1036 EMISSION LABEL

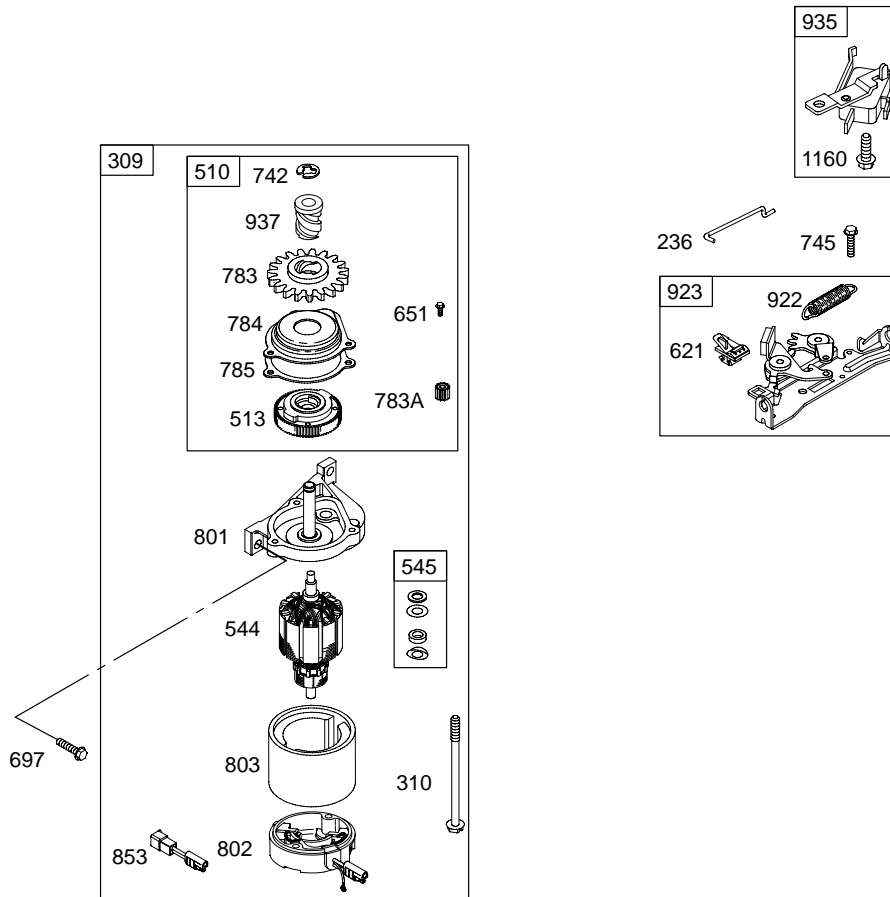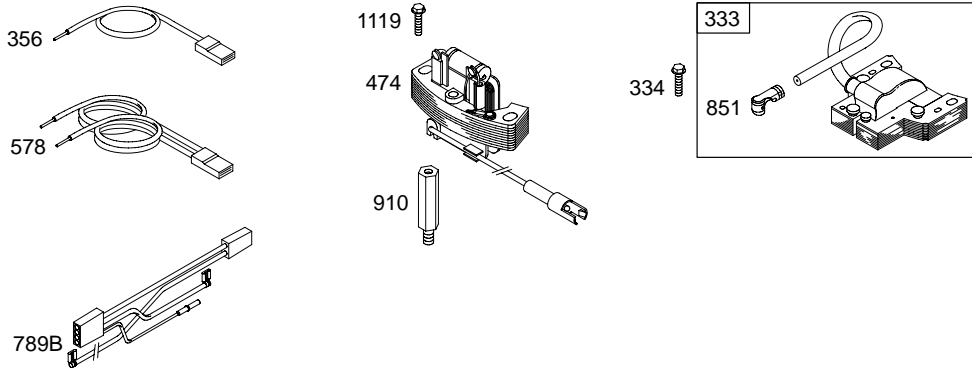

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5118-6 Assemblies include all parts shown in frames. 09/30/2004

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
1	697322	Cylinder Assembly	24	222698	Key–Flywheel	28	499423	Pin–Piston (Standard)		
2	399269	Kit–Bushing/Seal (Magneto Side)	25	790359	Piston Assembly (Standard)	29	499424	Rod–Connecting (Standard)		
3	★299819	Seal–Oil (Magneto Side)			(Used After Code Date 04031400).	32	691664	Screw (Connecting Rod)		
4	493279	Sump–Engine			————— <b>Note</b> —————	32A	695759	Screw (Connecting Rod)		
5	691160	Head–Cylinder			697339 Piston Assembly (Standard)	33	262651	Valve–Exhaust		
7	★∅692249	Gasket–Cylinder Head			(Used Before Code Date 04031500).	34	262652	Valve–Intake		
8	695250	Breather Assembly			697340 Piston Assembly (.010" Oversize)	35	691270	Spring–Valve (Intake)		
9	★∅696125	Gasket–Breather			697341 Piston Assembly (.020" Oversize)	36	691270	Spring–Valve (Exhaust)		
10	691125	Screw (Breather Assembly)			697342 Piston Assembly (.030" Oversize)	37	694086	Guard–Flywheel		
11	691781	Tube–Breather			26	790360	Ring Set (Standard)			
12	★692232	Gasket–Crankcase			(Used After Code Date 04031400).			————— <b>Note</b> —————		
13	690912	Screw (Cylinder Head)			499425 Ring Set (Standard)	50	497465	Manifold–Intake		
15	691680	Plug–Oil Drain (Square Socket)			(Used Before Code Date 04031500).	51	★272199	Gasket–Intake		
16	691451	Crankshaft			499426 Ring Set (.010" Oversize)	54	691650	Screw (Intake Manifold)		
		————— <b>Note</b> —————			499427 Ring Set (.020" Oversize)	55	691421	Housing–Rewind Starter		
		691452 Crankshaft Used on Type No(s). 0105, 0117.			499428 Ring Set (.030" Oversize)	58	697316	Rope–Starter (Cut To Required Length)		
20	★399781	Seal–Oil (PTO Side)			27	691866	Lock–Piston Pin	60	281434	Grip–Starter Rope
22	691092	Screw (Crankcase Cover/ Sump)						65	690837	Screw (Rewind Starter)
23	692315	Flywheel (Rewind Start)						78	691108	Screw (Flywheel Guard)
23A	691992	Flywheel (Electric Start)						81	691740	Lock–Muffler Screw
		————— <b>Note</b> —————						95	691636	Screw (Throttle Valve)
		691987 Flywheel (Electric Start) Used on Type No(s). 0116, 0117.								

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 129H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
97	696565	Shaft–Throttle	222	692031	Bracket–Control (Remote/Manual Friction)(Primer)	307	690345	Screw (Cylinder Shield)
104	●691242	Pin–Float Hinge				309	695550	Motor–Starter
117	498978	Jet–Main (Standard)	222D	692467	Bracket–Control (Fixed Speed)	310	690662	Bolt (Starter Motor)
118	497466	Jet–Main (High Altitude)	227	690783	Lever–Governor Control	332	690662	Nut (Flywheel)
121	498260	Kit–Carburetor Overhaul	236	691826	Link–Lockout	333	802574	Armature–Magneto
125	498170	Carburetor (Primer System)	265	690798	Clamp–Casing	334	691061	Screw (Magneto Armature)
127	●694468	Plug–Welch	267	691044	Screw (Casing Clamp)	337	802592	Plug–Spark
130	696564	Valve–Throttle	268	691072	Casing–Control Wire (Cut to Required Length)	346	690661	Screw (Spark Arrester)
133	398187	Float–Carburetor	269	691589	Wire–Control (Cut to Required Length)	356	692390	Wire–Stop
134	●398188	Kit–Needle/Seat				358	497316	Gasket Set–Engine
137	●◆693981	Gasket–Float Bowl				363	19069	Flywheel Puller
146	690979	Key–Timing	270	691027	Nut (Control Wire Casing)	365	692524	Screw (Carburetor)
159	691753	Bracket–Air Cleaner Primer	271	691028	Lever–Control	383	89838	Wrench–Spark Plug
163	★●◆272653	Gasket–Air Cleaner	276	●◆271716	Washer–Sealing (Main Jet)	404	690272	Washer (Governor Crank)
187	691050	Line–Fuel (Cut to Required Length)	287	690940	Screw (Dipstick Tube)	425A	690670	Screw (Air Cleaner Cover)
187A	691371	Line–Fuel (Molded)	300	692038	Muffler (Super Lo Tone)	443A	692523	Screw (Air Cleaner Primer Base)
188	693399	Screw (Control Bracket)	304A	696307	Housing–Blower	445A	491588	Filter–Air Cleaner Cartridge
190	690940	Screw (Fuel Tank)			<b>Note</b>	455	695161	Cup–Flywheel
202	691829	Link–Mechanical Governor			696420 Housing–Blower	456	692299	Plate–Pawl Friction
209B	691291	Spring–Governor			Used on Type No(s). 0015, 0100, 0105, 0115.	459	281505	Plate–Ratchet
		<b>Note</b>			696419 Housing–Blower	474	691991	Alternator
		691851 Spring–Governor			Used on Type No(s). 0185.	505	691251	Nut (Governor Control Lever)
		691292 Spring–Governor			Used on Type No(s). 0105.	510	494147	Drive–Starter
			305	691108	Screw (Blower Housing)	513	692358	Clutch–Drive
			306	690450	Shield–Cylinder	523	495264	Dipstick
						524	★692296	Seal–Dipstick Tube
						525	495265	Tube–Dipstick

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
529	691923	Grommet	668	★493823	Spacer (Includes 2)	836	690664	Scerw (Muffler Guard)
544	690786	Armature–Starter	670	692294	Spacer–Fuel Tank	842	★691031	Seal–O Ring (Dipstick Tube)
545	492919	Washer Set (Starter Motor)	676	396548	Deflector–Muffler	843	691884	Sleeve–Lever
562	92613	Bolt (Governor Control Lever)	677	690661	Screw (Muffler Deflector)	847	692047	Dipstick/Tube Assembly
563	691138	Screw (Debris Guard Screen)	684	690345	Screw (Breather Passage Cover)	851	493880	Terminal–Spark Plug
564	690664	Screw (Control Cover)	689	691855	Spring–Friction	853	696842	Adapter–Wire
578	398153	Wire–Assembly	703	696309	Clip	868	697338	Seal–Valve
584	697734	Cover–Breather Passage	718	690959	Pin–Locating	869	691155	Seat–Valve (Intake)
585	★691879	Gasket–Breather Passage	741	790345	Gear–Timing (Use Without Woodruff Key)	870	690380	Seat–Valve (Exhaust)
592	690800	Nut (Rewind Starter)			<b>Note</b>	871	262001	Bushing–Valve Guide (Exhaust)
597	691696	Screw (Pawl Friction Plate)	742	93941	Retainer–E Ring			<b>Note</b>
601	95162	Clamp–Hose	745	691648	Screw (Brake)			63709 Bushing–Valve Guide (Intake)
601A	691038	Clamp–Hose	783	691918	Gear–Pinion (Starter Drive) (19 Teeth)	883	★∅691881	Gasket–Exhaust
604	691757	Cover–Control				910	691094	Stud (Alternator)
608	497680	Starter–Rewind	783A	691269	Gear–Pinion (12 Teeth)	922	692135	Spring–Brake
613	691340	Screw (Muffler)						<b>Note</b>
615	690340	Retainer–Governor Shaft	784	692341	Cover–Starter Gear			691831 Spring–Brake Used on Type No(s). 0116, 0117.
616	698801	Crank–Governor	785	692352	Gasket–Starter Cover			
617	★◆270344	Seal–O Ring (Intake Manifold)	789B	696546	Harness–Wiring			
621	692310	Switch–Stop			<b>Note</b>	923	695891	Brake
633	◆691321	Seal–Choke/Throttle Shaft (Throttle)			696547 Harness– Wiring Used on Type No(s). 0116, 0117.			<b>Note</b>
635	66538	Boot–Spark Plug	801	690782	Cap–Drive	925	690595	Cover–Linkage
651	690345	Scerw (Starter Gear Cover)	802	695267	Cap–End	935	499421	Switch–Interlock
			803	695266	Housing–Starter	937	691325	Spline–Starter
			832	499034	Guard–Muffler	949	696306	Guard–Debris Screen

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

# 129H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
957	397974	Cap–Fuel Tank (Plastic)	977	498261	Gasket Set–Carburetor	1095	498528	Gasket Set–Valve
958	698183	Valve–Fuel Shut Off (Plastic)	994	398067	Arrestor–Spark	1119	691648	Screw (Alternator)
966A	496116	Base–Air Cleaner Primer	997	696310	Shield–Debris	1160	691627	Screw (Interlock Switch)
967A	493537	Filter–Pre Cleaner	1005	691346	Fan–Flywheel	1210	498144	Pulley/Spring Assembly (Pulley)
968B	692298	Cover–Air Cleaner	1019	696438	Kit–Label	1211	498144	Pulley/Spring Assembly (Spring)
970	691669	Screw (Air Cleaner Primer Bracket)	1036	790411	Label–Emission (Used After Code Date 04063000). ———— <b>Note</b> ———— <b>697457</b> Label–Emission (Used Before Code Date 04070100).	1229	696308	Extension–Blower Housing
972B	693377	Tank–Fuel (Plastic)	1058	275177	Manual–Owner’s	1330	270962	Manual–Repair
975	493640	Bowl–Float	1059	692311	Kit–Screw/Washer			
976	694395	Primer–Carburetor						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*