



# Illustrated Parts List

## Model Series

# 12A600

TYPE NUMBERS  
0100 through 0112.

### TABLE OF CONTENTS


Air Cleaner .....	6
Blower Housing/Shrouds .....	7
Camshaft .....	2
Carburetor .....	4
Controls .....	5
Crankshaft .....	2
Cylinder .....	2
Cylinder Head .....	3
Engine Sump .....	2
Exhaust System .....	6
Flywheel .....	7
Flywheel Brake .....	5
Fuel Supply .....	4
Governor Spring .....	5
Ignition .....	5
Lubrication .....	2
Piston Group .....	2
Rewind Starter .....	7

PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


# 12A600

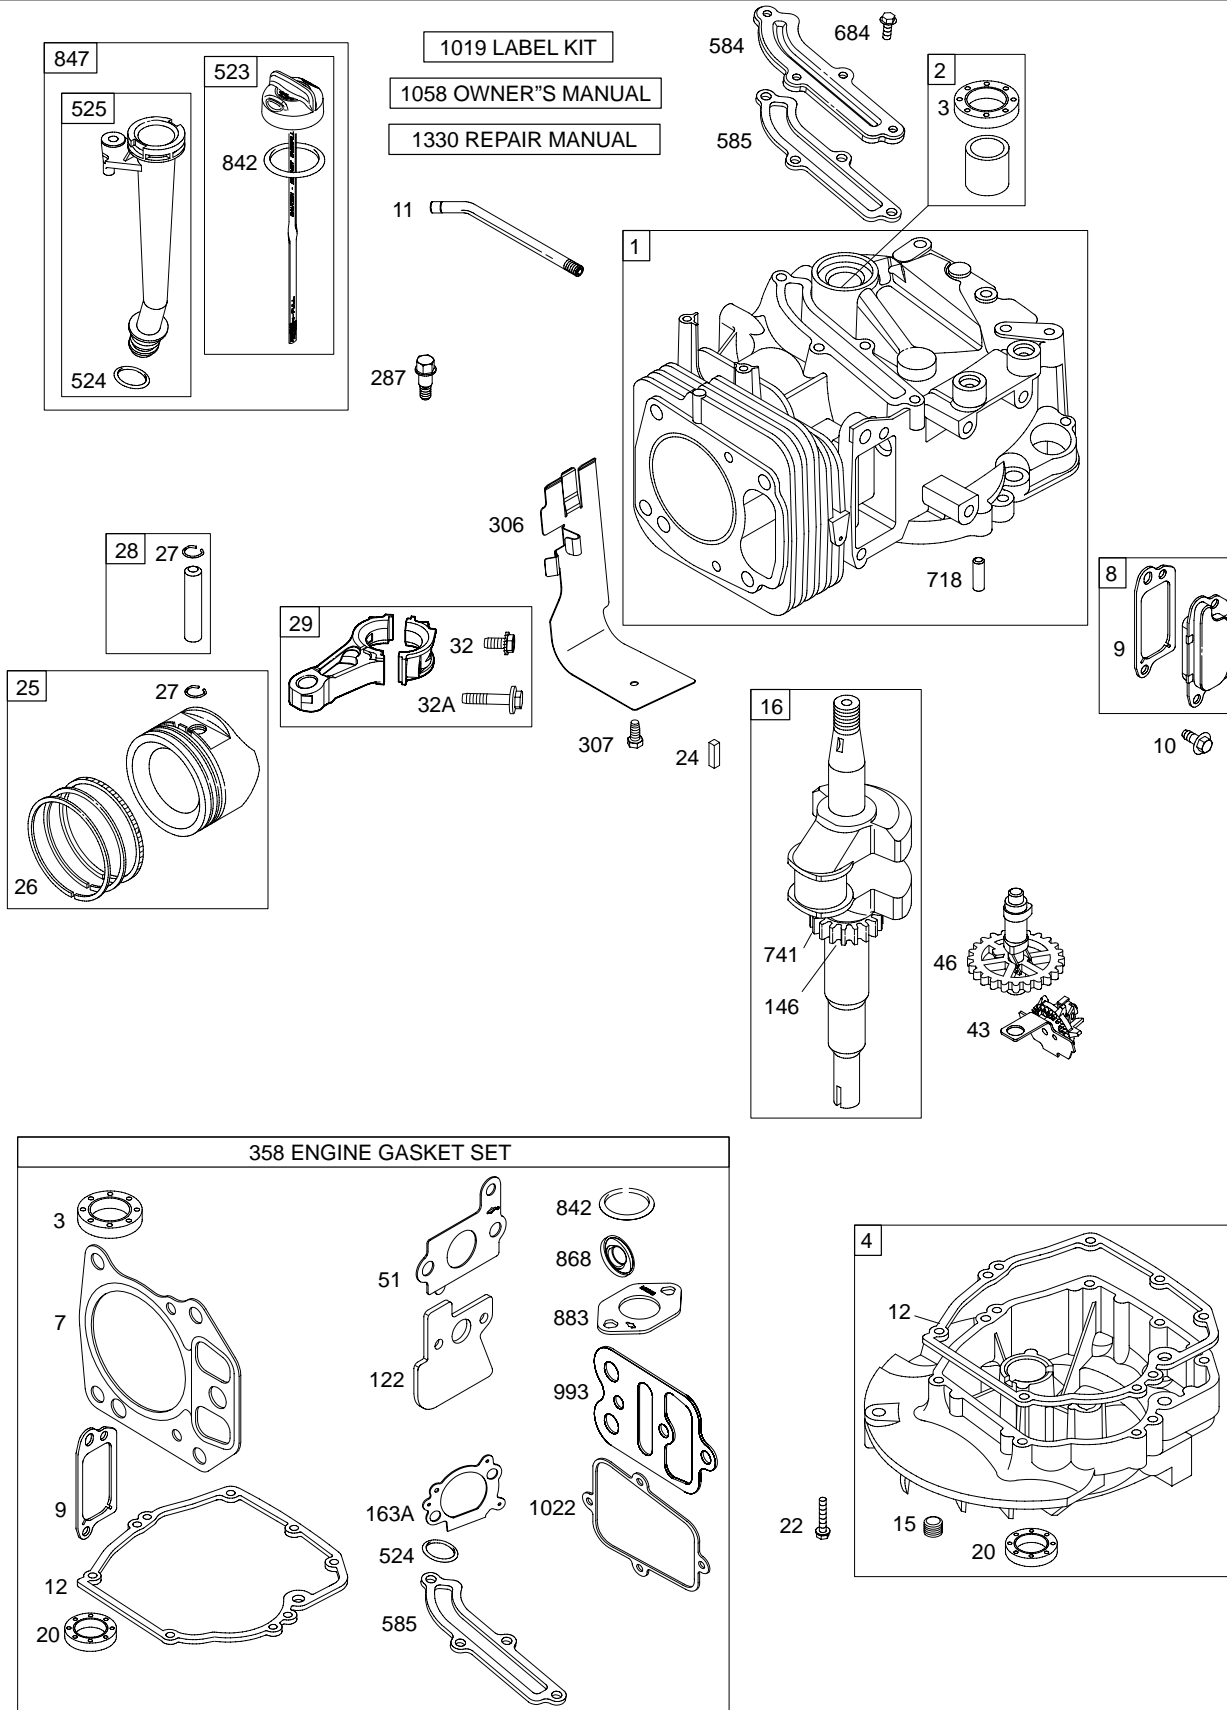






Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6739-2 Assemblies include all parts shown in frames. 10/08/2004

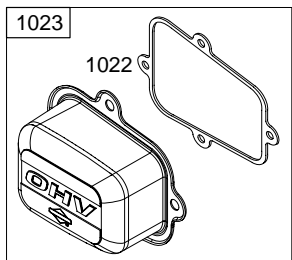
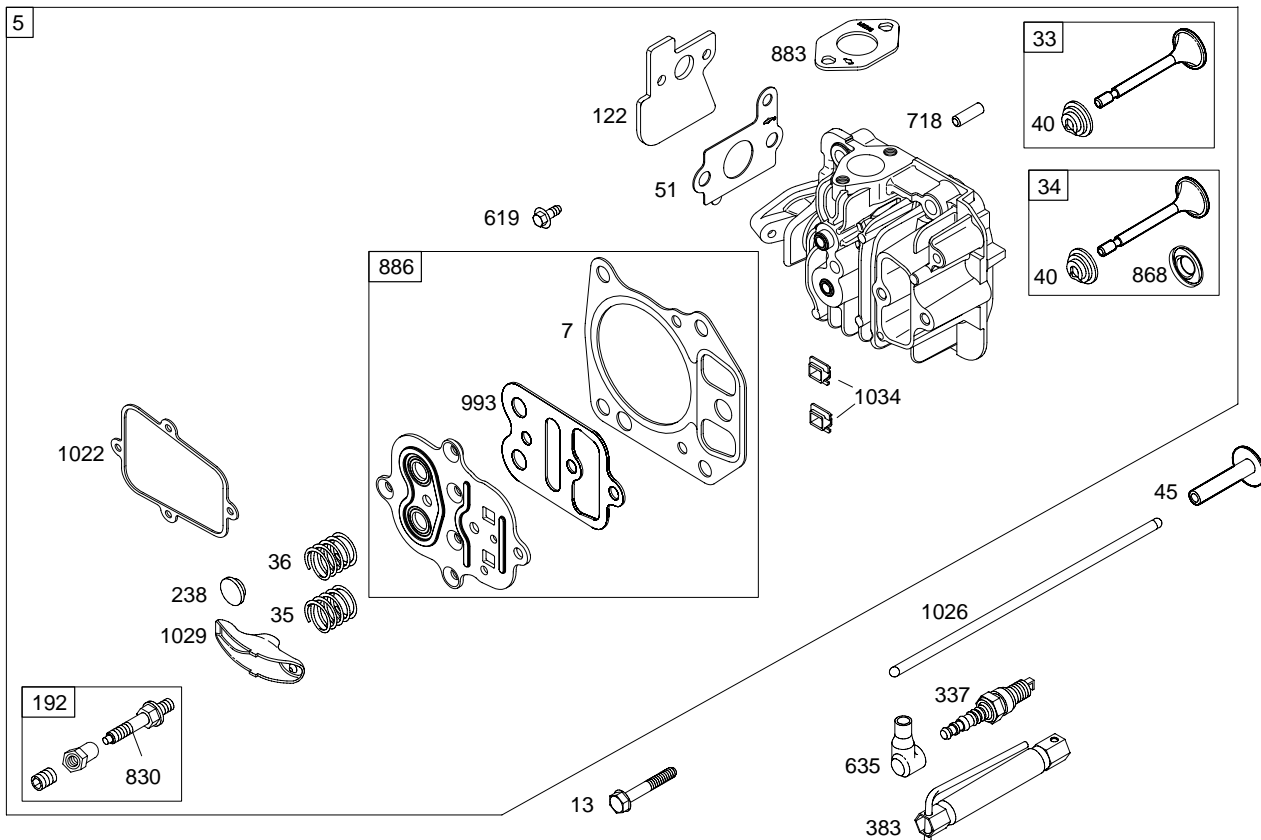


914

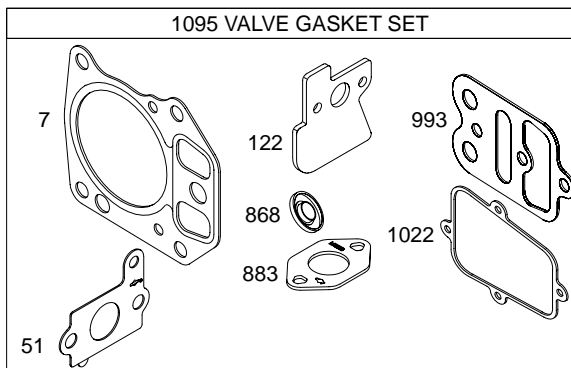




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 6739-3 Assemblies include all parts shown in frames. 10/08/2004

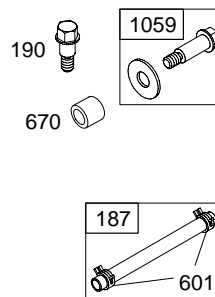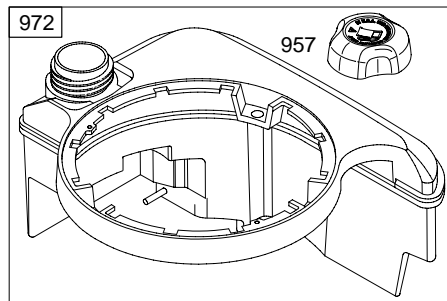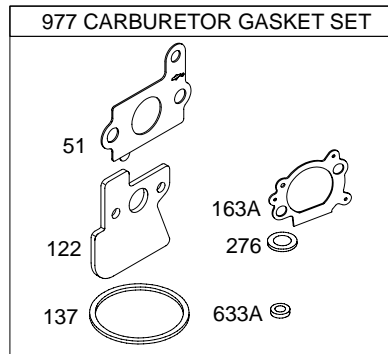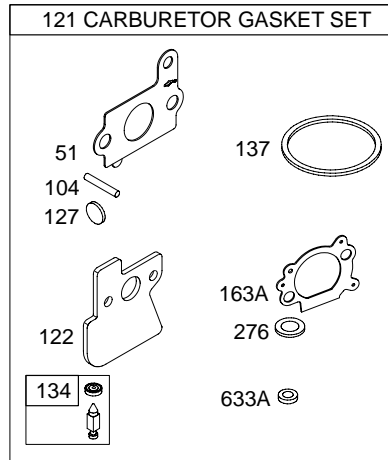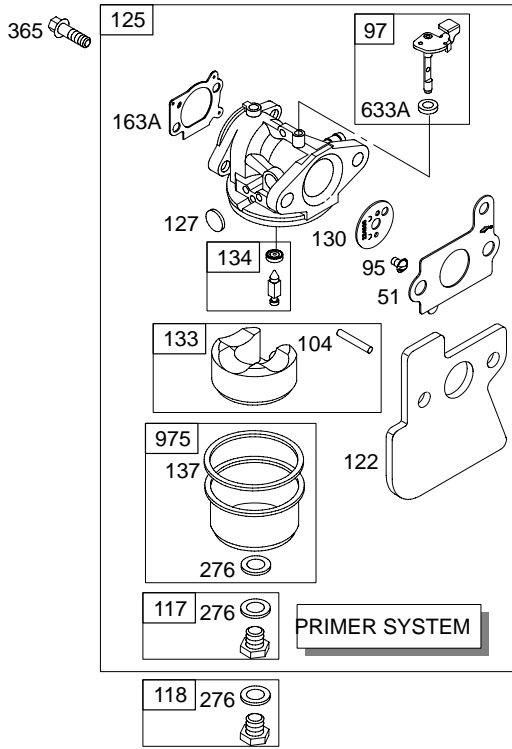

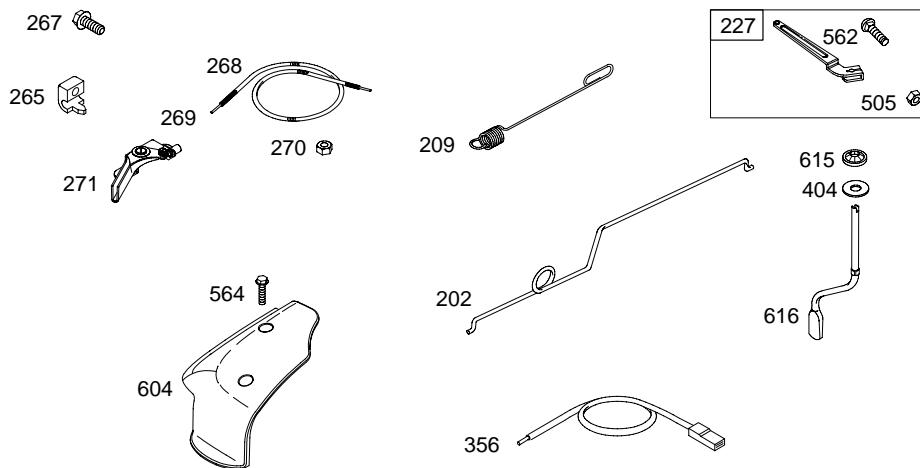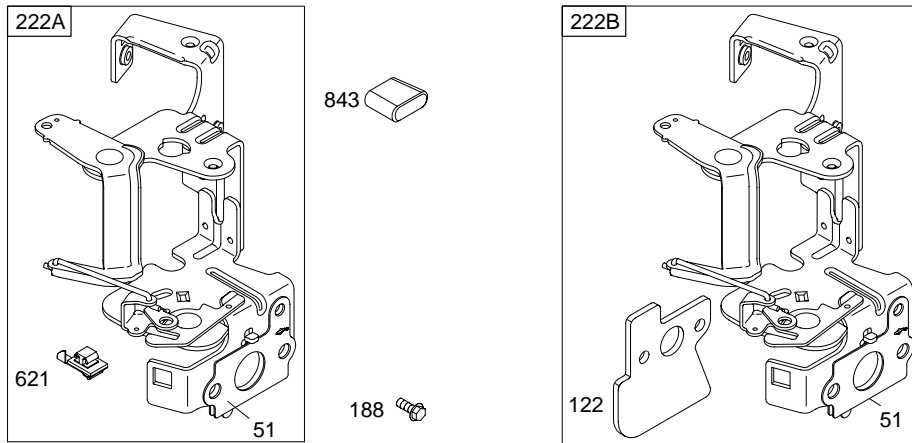







Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 6739-5 Assemblies include all parts shown in frames. 10/08/2004

# 12A600

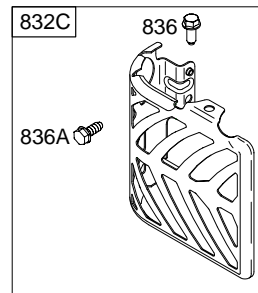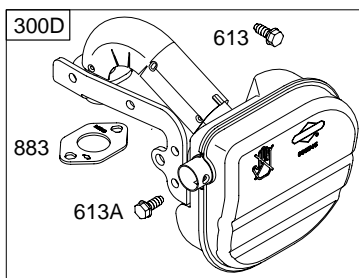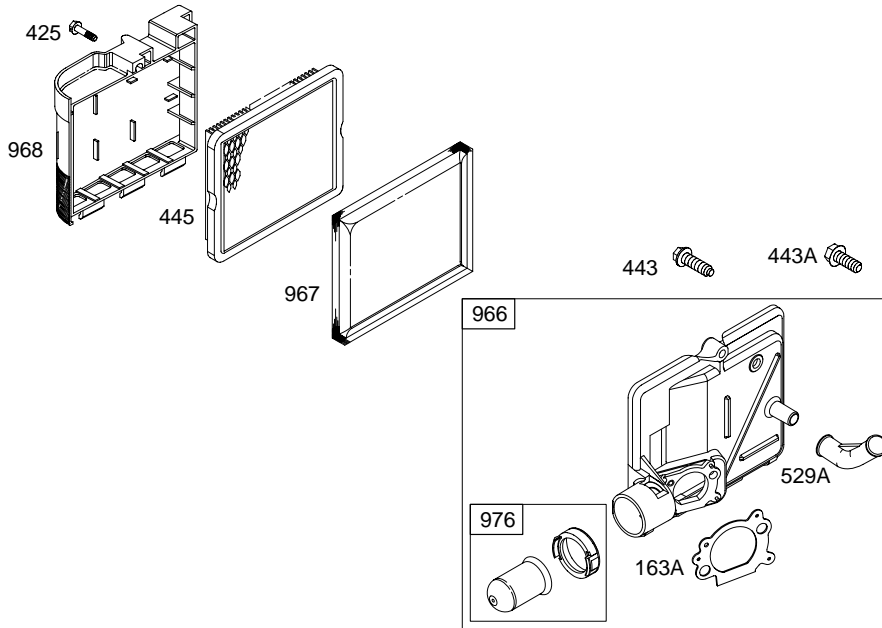

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
6739-6 Assemblies include all parts shown in frames. 10/08/2004

1036 Emission Label

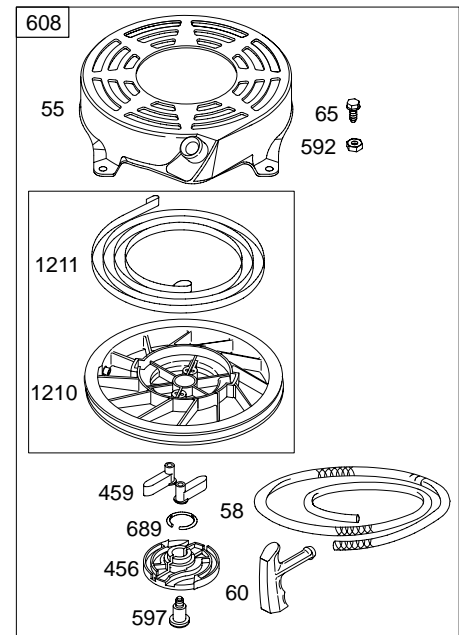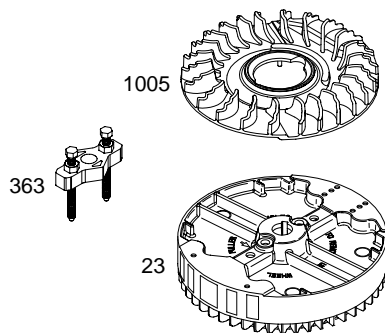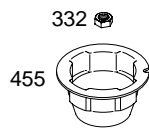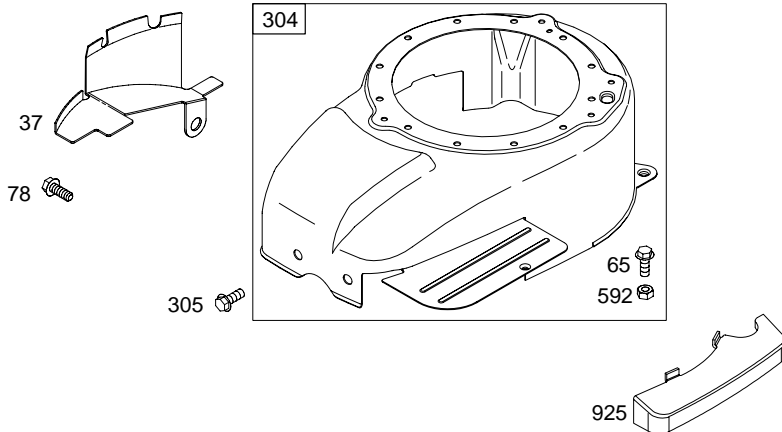

# 12A600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692670	Cylinder Assembly	25	790359	Piston Assembly (Standard) (Used After Code Date 04040400).	36	691304	Spring-Valve (Exhaust)
2	399269	Kit-Bushing/Seal (Magneto Side)			<b>Note</b>	37	694086	Guard-Flywheel
3	★299819	Seal-Oil (Magneto Side)			690021	40	692194	Retainer-Valve
4	493279	Sump-Engine			Assembly (Standard)	43	691997	Slinger-Governor/Oil
5	695276	Head-Cylinder			(Used Before Code Date 04040500).	45	690977	Tappet-Valve
7	★△695166	Gasket-Cylinder Head			694167	46	694039	Camshaft
8	495786	Breather Assembly			Assembly (.010" Oversize)	51★♦△692799	692799	Gasket-Intake
9	★272481	Gasket-Breather			694168	55	691421	Housing-Rewind Starter
10	691125	Screw (Breather Assembly)			Assembly (.020" Oversize)	58	697316	Rope-Starter (Cut To Required Length)
11	499675	Tube-Breather			694169	60	281434	Grip-Starter Rope
12	★692232	Gasket-Crankcase			Assembly (.030" Oversize)	65	690837	Screw (Rewind Starter)
13	691137	Screw (Cylinder Head)			Ring Set (Standard)	78	691108	Screw (Flywheel Guard)
15	691680	Plug-Oil Drain (Square Socket)			(Used After Code Date 04040400).	95	691636	Screw (Throttle Valve)
16	691457	Crankshaft	26	790360	<b>Note</b>	97	499682	Shaft-Throttle (Metal)
20	★399781	Seal-Oil (PTO Side)			499631			790121
22	691092	Screw (Crankcase Cover/Sump)			Ring Set (Standard)			(Plastic)
23	692693	Flywheel			(Used Before Code Date 04040500).	104	●691242	Pin-Float Hinge
		<b>Note</b>			692785	117	498981	Jet-Main (Standard)
		696569			Ring Set (.010" Oversize)			(Used After Code Date 03110600).
		Used on Type No(s) 0112.			692786			<b>Note</b>
24	222698	Key-Flywheel			Ring Set (.020" Oversize)			498978
					692787			Jet-Main (Standard)
					Lock-Piston Pin (.030" Oversize)			(Used Before Code Date 03110700).
			27	691866		118	497466	Jet-Main (High Altitude)
			28	499423				(Used After Code Date 03110600).
			29	499424				<b>Note</b>
			32	691664				498975
								Jet-Main (High Altitude)
			32A	695759				(Used Before Code Date 03110700).
			33	499642				
			34	499641				
			35	691304				

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

6739-8

Assemblies include all parts shown in frames.

10/08/2004



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
127	●694468	Plug–Welch	268	691025	Casing–Control Wire (Cut To Required Length)	383	19374	Wrench–Spark Plug
130	691203	Valve–Throttle				404	690272	Washer (Governor Crank)
		————— <b>Note</b> —————	269	691026	Wire–Control (Cut To Required Length)	425	690670	Screw (Air Cleaner Cover)
		696564 Valve–Throttle (Used With Plastic Throttle Shaft)	270	691027	Nut (Control Wire Casing)	443	691637	Screw (Air Cleaner Primer Base)
133	398187	Float–Carburetor	271	691028	Lever–Control	443A	692523	Screw (Air Cleaner Primer Base)
134	●398188	Kit–Needle/Seat	276	◆271716	Washer–Sealing	445	491588	Filter–Air Cleaner Cartridge
137	◆693981	Gasket–Float Bowl	287	690940	Screw (Dipstick Tube)	455	695161	Cup–Flywheel
146	690979	Key–Timing	300D	696526	Muffler–Exhaust	456	692299	Plate–Pawl Friction
163A	◆692667	Gasket–Air Cleaner	304	696527	Housing–Blower	459	281505	Ratchet–Pawl
187	691050	Line–Fuel (Cut to Required Length)			————— <b>Note</b> —————	505	691251	Nut (Governor Control Lever).
		127 ●694468 Plug–Welch			697383 Housing–Blower Used on Type No(s). 0112.	523	499621	Dipstick
		130 691203 Valve–Throttle			————— <b>Note</b> —————	524	★692296	Seal–Dipstick Tube
		————— <b>Note</b> —————	305	691108	Screw (Blower Housing)	525	495265	Tube–Dipstick
		696564 Valve–Throttle (Used With Plastic Throttle Shaft)			691138 Screw (Blower Housing)	529A	691923	Grommet
133	398187	Float–Carburetor	306	691232	Shield–Cylinder	562	691119	Bolt (Governor–Control Lever)
134	●398188	Kit–Needle/Seat	307	690345	Screw (Cylinder Shield)	563	691138	Screw (Debris Guard Screen)
137	◆693981	Gasket–Float Bowl			————— <b>Note</b> —————	564	693808	Screw (Control Cover)
146	690979	Key–Timing			692720 Plug–Spark (EMS)	584	697734	Cover–Breather Passage
163A	◆692667	Gasket–Air Cleaner	332	690662	Nut (Flywheel)	585	★691879	Gasket–Breather Passage
187	691050	Line–Fuel (Cut to Required Length)	334	691061	Screw (Magneto Armature)	592	690800	Nut (Rewind Starter)
		188 691147 Screw (Control Bracket)	337	692051	Plug–Spark (Resistor)	597	691696	Screw (Pawl Friction Plate)
		190 690940 Screw (Fuel Tank)			————— <b>Note</b> —————			
		192 694543 Adjuster–Rocker Arm			692390 Wire–Stop			
222A	693378	Bracket–Control	356	692390	Wire–Stop			
222B	692672	Bracket–Control	358	694090	Gasket Set–Engine			
227	691467	Lever–Governor Control	363	19069	Puller–Flywheel			
238	691300	Cap–Valve	365	691136	Screw (Carburetor)			
265	690798	Clamp–Casing						
267	691044	Screw (Casing Clamp)						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

# 12A600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
601	95162	Clamp-Hose	832C	695593	Guard-Muffler	993	★△694088	Gasket-Cylinder Head Plate
604	692669	Cover-Control	836	691147	Screw (Muffler Guard)	997	696310	Shield-Debris
608	497680	Starter-Rewind				1005	691346	Fan-Flywheel
613	691108	Screw (Muffler)	836A	697551	Screw (Muffler Guard)	1019	696438	Kit-Label
613A	691140	Screw (Muffler)	842	★691031	Seal-O Ring (Dipstick Tube)	1022	★△691890	Gasket-Rocker Cover
615	690340	Retainer-Governor Shaft	843	691884	Sleeve-Lever	1023	499624	Cover-Rocker Arm
616	698801	Crank-Governor	847	692047	Dipstick/Tube Assembly	1026	692045	Rod-Push
619	691108	Screw (Cylinder Head Plate)	851	493880	Terminal-Spark Plug	1029	691230	Arm-Rocker
621	692310	Switch-Stop	868	★△692044	Seal-Valve	1034	691343	Guide-Push Rod
633A◆◆691321		Seal-Choke/Throttle Shaft (Throttle Shaft)	883	★△691893	Gasket-Exhaust	1036	790635	Label-Emission (Used After Code Date 04063000).
635	66538	Boot-Spark Plug	886	696268	Gasket Set-Cylinder Head/Plate			<b>Note</b> ——— 696767 Label-Emission (Used Before Code Date 04070100 and After Code Date 01070100).
670	692294	Spacer-Fuel Tank	914	691108	Screw (Rocker Cover)			695109 Label-Emission (Used Before Code Date 01070200).
684	690345	Screw (Breather Passage Cover)	922	692135	Spring-Brake	1058	274979	Manual-Owner's
689	691855	Spring-Friction	923	695891	Brake	1059	692311	Kit-Screw/Washer
703	696309	Clip	925	690595	Cover-Linkage	1095	694091	Gasket Set-Valve
718	690959	Pin-Locating	949	696306	Guard-Debris Screen	1210	498144	Pulley/Spring Assembly (Pulley)
741	790345	Gear-Timing (Use Without Woodruff Key)	957	692046	Cap-Fuel Tank (Plastic)	1211	498144	Pulley/Spring Assembly (Spring)
		<b>Note</b> ——— 691830 Gear-Timing (Uses Woodruff Key)	966	692673	Base-Air Cleaner Primer	1330	272147	Manual-Repair
745	691648	Screw (Brake)	967	493537	Filter-Pre Cleaner			
830	694544	Stud-Rocker Arm	968	692298	Cover-Air Cleaner			
			972	693377	Tank-Fuel (Plastic)			
			975	493640	Bowl-Float			
			976	694395	Primer-Carburetor			
			977	692704	Gasket Set-Carburetor			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

6739-10

Assemblies include all parts shown in frames.

10/08/2004