

**12E600**

# Illustrated Parts List

## Model Series

# 12E600

TYPE NUMBERS  
0135

### TABLE OF CONTENTS


Air Cleaner .....	5
Blower Housing/Shrouds .....	6
Camshaft .....	2
Carburetor .....	4
Controls .....	5
Crankshaft .....	2
Cylinder .....	2
Cylinder Head .....	3
Engine Sump .....	2
Exhaust System .....	5
Flywheel .....	6
Flywheel Brake .....	5
Fuel Supply .....	4
Governor Spring .....	5
Ignition .....	5
Lubrication .....	2
Piston Group .....	2
Rewind Starter .....	6






PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.





# 12E600

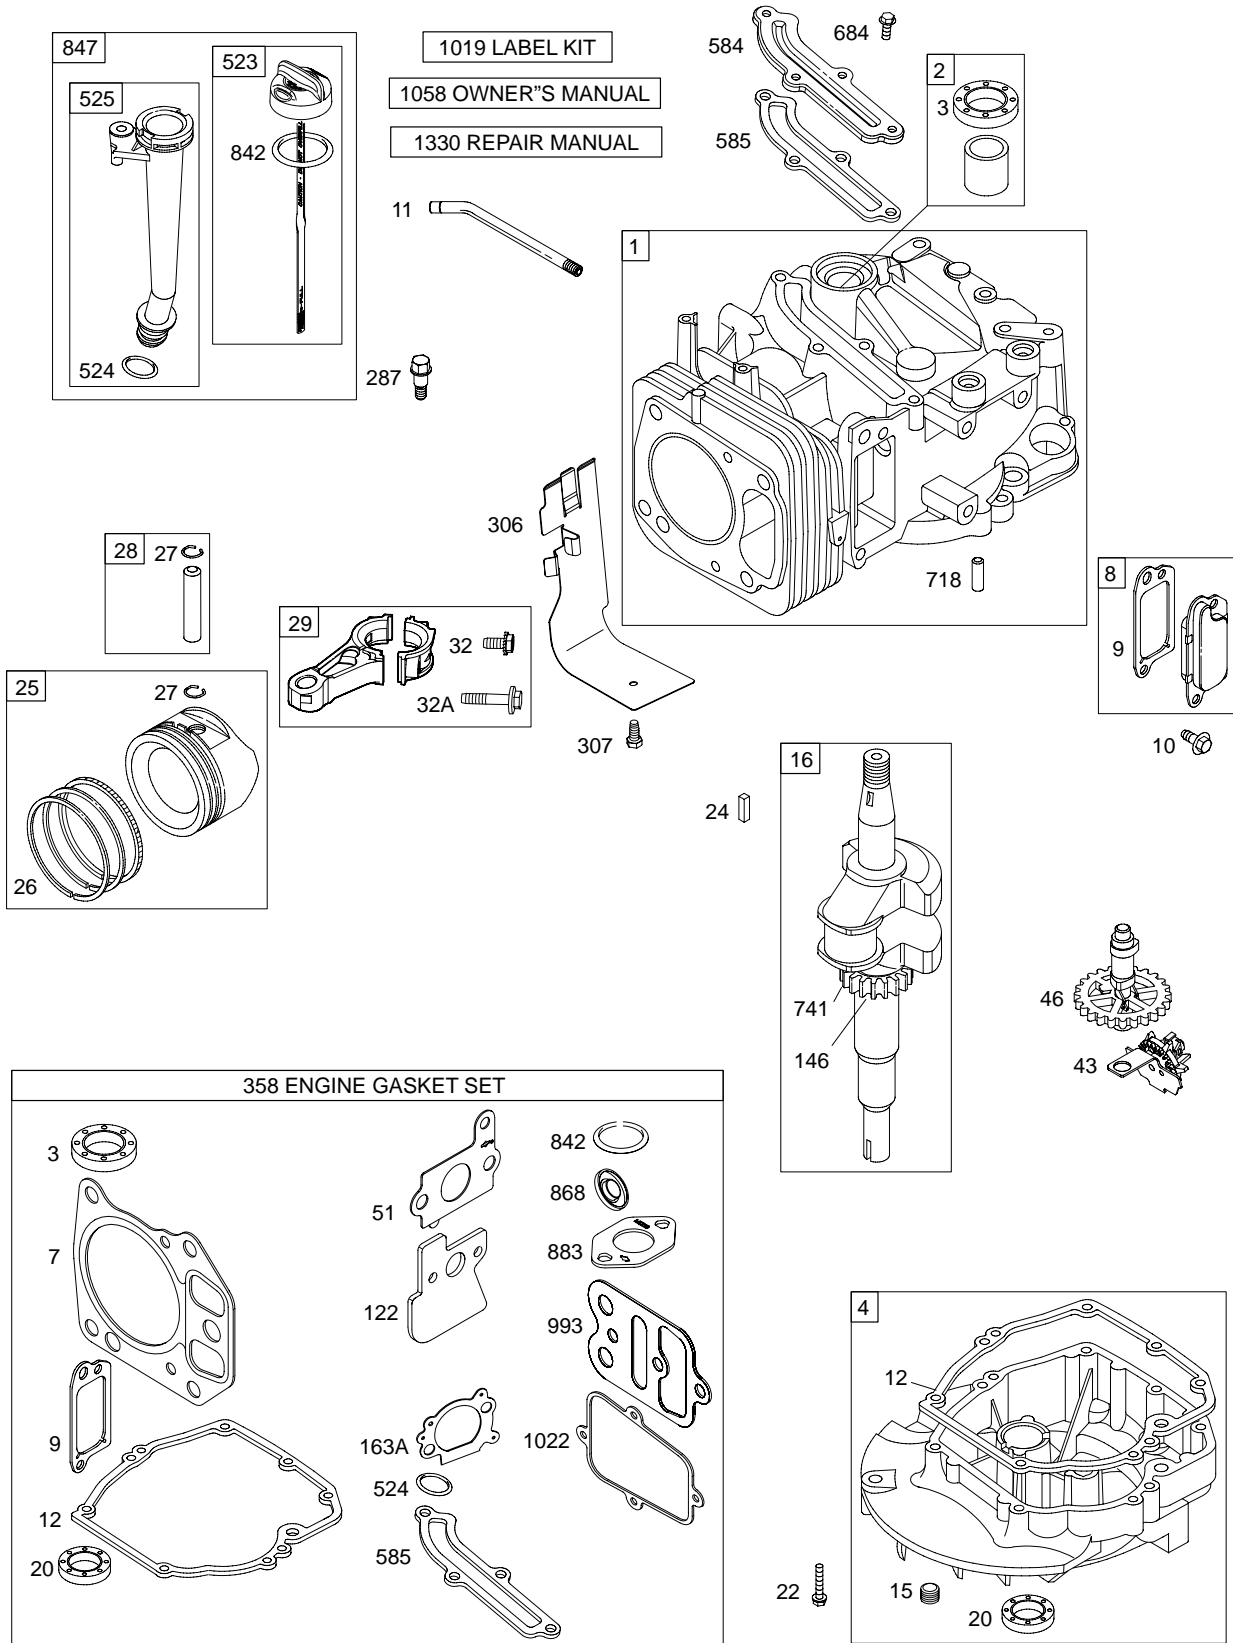













Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3246-2 Assemblies include all parts shown in frames. 10/08/2004

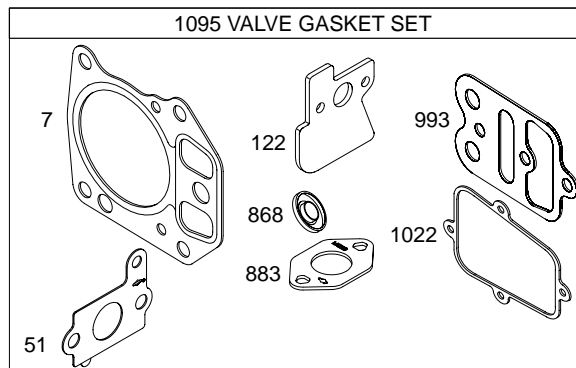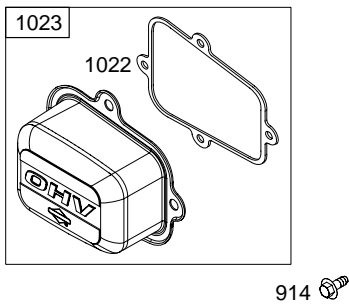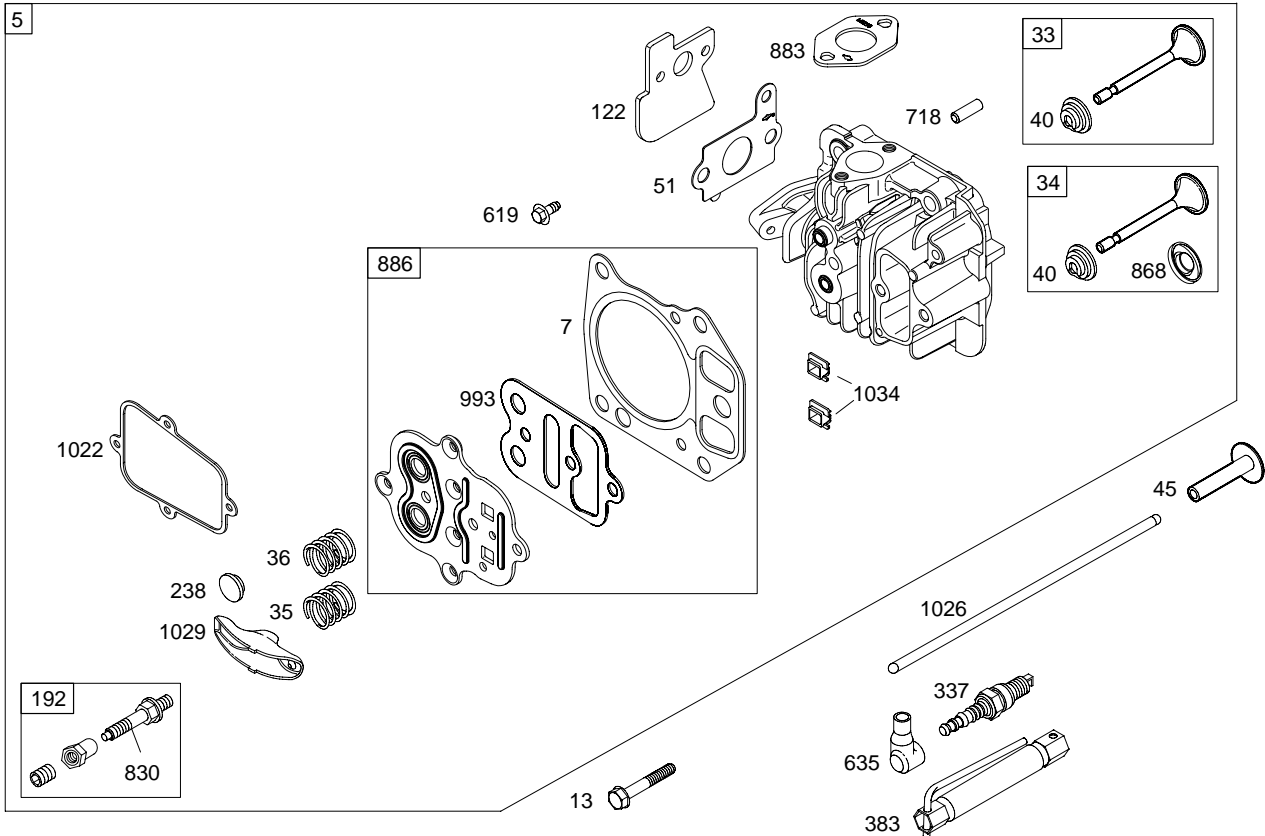





# 12E600

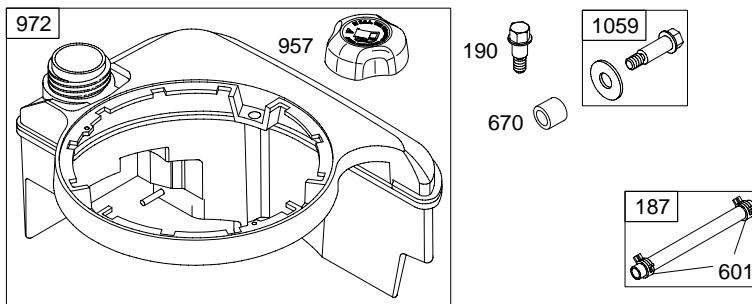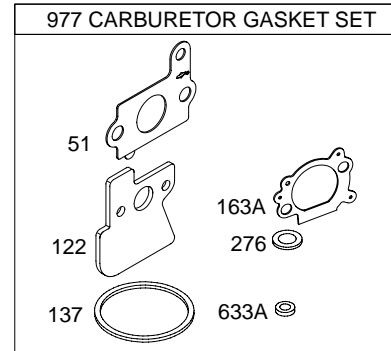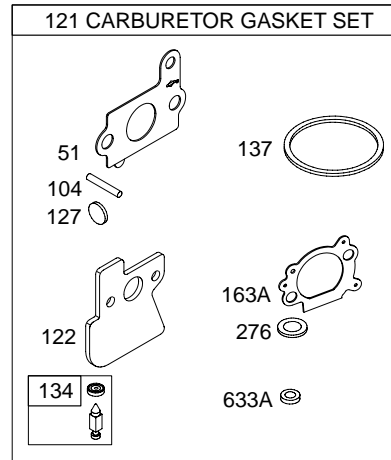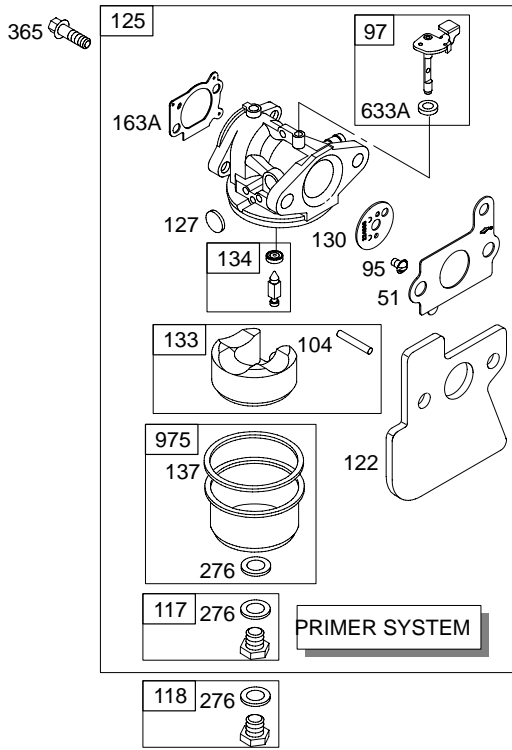

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3246-4 Assemblies include all parts shown in frames. 10/08/2004

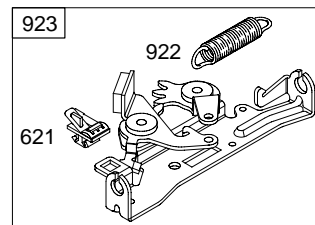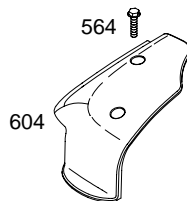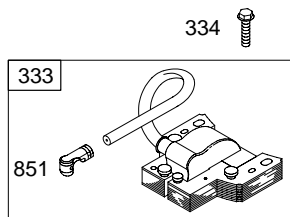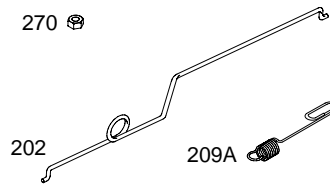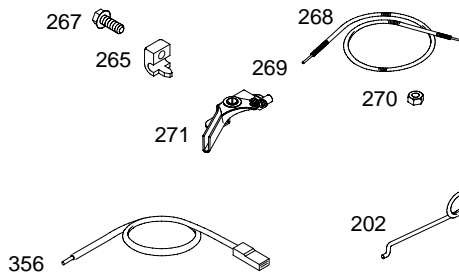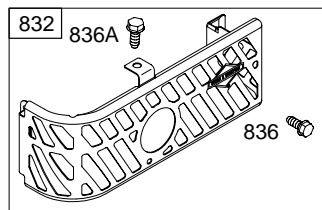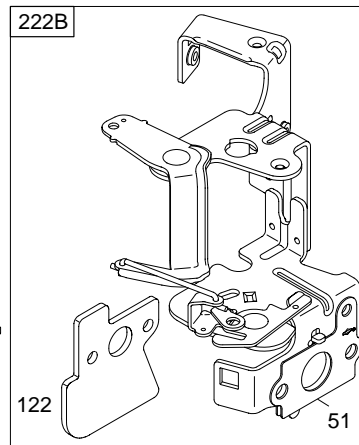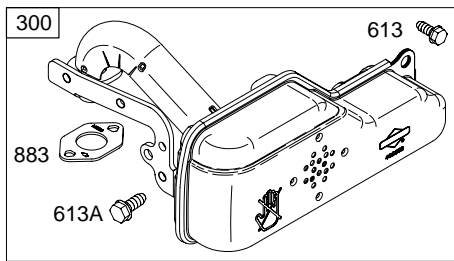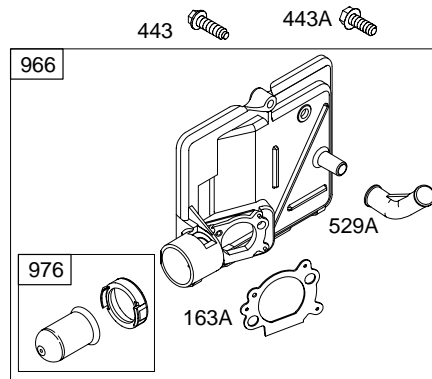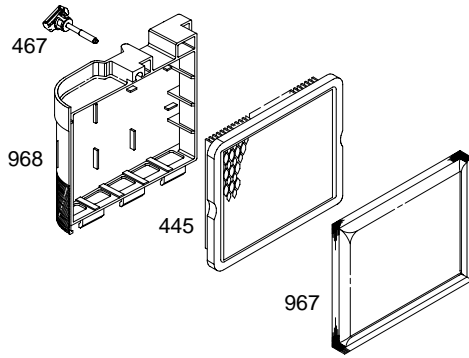

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
**3246-5** Assemblies include all parts shown in frames. **10/08/2004**

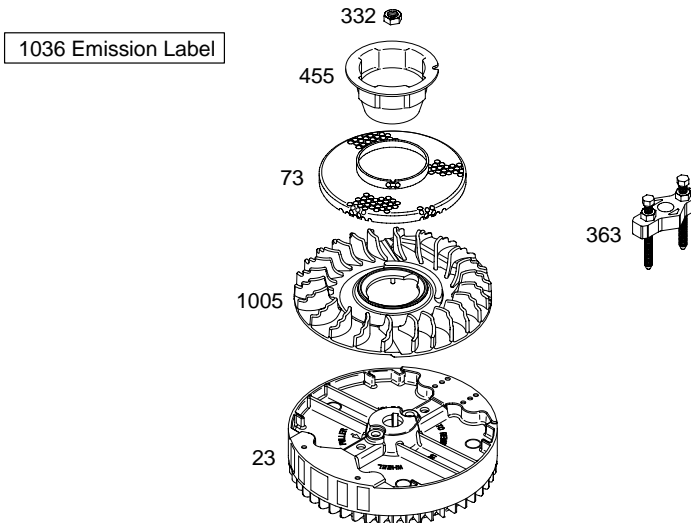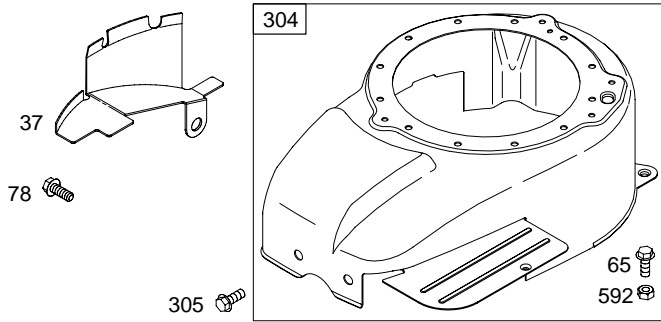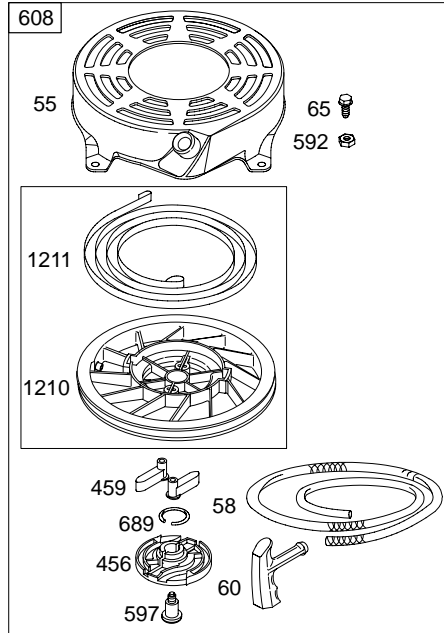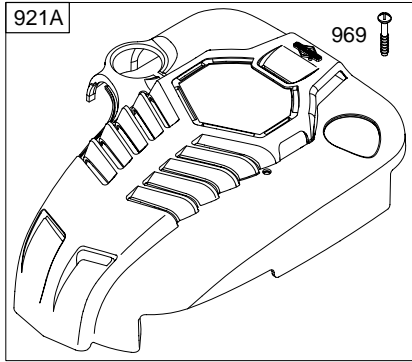

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	790363	Cylinder Assembly	33	499642	Valve-Exhaust	133	398187	Float-Carburetor
2	399269	Kit-Bushing/Seal (Magneto Side)	34	499641	Valve-Intake	134	●398188	Kit-Needle/Seat
3	★299819	Seal-Oil (Magneto Side)	35	691304	Spring-Valve (Intake)	137	●●693981	Gasket-Float Bowl
4	493279	Sump-Engine	36	691304	Spring-Valve (Exhaust)	146	690979	Key-Timing
5	695276	Head-Cylinder	37	694086	Guard-Flywheel	163A	★●692667	Gasket-Air Cleaner
7	★Δ695166	Gasket-Cylinder Head	40	692194	Retainer-Valve	187	691050	Line-Fuel (Cut To Required Length)
8	495786	Breather Assembly	43	691997	Slinger-Governor/Oil	188	691147	Screw (Control Bracket)
9	★272481	Gasket-Breather	45	690977	Tappet-Valve	190	690940	Screw (Fuel Tank)
10	691125	Screw (Breather Assembly)	46	694039	Camshaft	192	694543	Adjuster-Rocker Arm
11	499675	Tube-Breather	51	★●Δ692799	Gasket-Intake	202	691303	Link-Mechanical Governor
12	★692232	Gasket-Crankcase	55	691421	Housing-Rewind Starter	209A	691291	Spring-Governor
13	691137	Screw (Cylinder Head)	58	697316	Rope-Starter (Cut To Required Length)	222B	692672	Bracket-Control
15	691680	Plug-Oil Drain (Square Socket)	60	281434	Grip-Starter Rope	227	691467	Lever-Governor Control
16	691456	Crankshaft	65	690837	Screw (Rewind Starter)	238	691300	Cap-Valve
20	★399781	Seal-Oil (PTO Side)	73	691222	Screen-Rotating	265	690798	Clamp-Casing
22	691092	Screw (Crankcase Cover/Sump)	78	691108	Screw (Flywheel Guard)	267	691044	Screw (Casing Clamp)
23	696569	Flywheel	95	691636	Screw (Throttle Valve)	268	691025	Casing-Control Wire (Cut To Required Length)
24	222698	Key-Flywheel	97	499682	Shaft-Throttle (Metal)	269	691026	Wire-Control (Cut To Required Length)
25	499627	Piston Assembly (Standard)	<b>Note</b>			270	691027	Nut (Control Wire Casing)
		<b>Note</b>	104	●691242	Pin-Float Hinge	271	691028	Lever-Control
		692789	117	498981	Jet-Main (Standard)	276	●●271716	Washer-Sealing
		Piston Assembly (.020" Oversize)	118	497466	Jet-Main (High Altitude)	287	690940	Screw (Dipstick Tube)
26	499631	Ring Set (Standard)	121	692703	Kit-Carburetor Overhaul	300	694248	Muffler
		<b>Note</b>	122	★●Δ692799	Spacer-Carburetor	304	695976	Housing-Blower
		692786	125	694202	Carburetor	305	691108	Screw (Blower Housing)
		Ring Set (.020" Oversize)	127	●694468	Plug-Welch	306	691232	Shield-Cylinder
27	691866	Lock-Piston Pin	130	691203	Valve-Throttle	307	690345	Screw (Cylinder Shield)
28	499423	Pin-Piston	<b>Note</b>			332	690662	Nut (Flywheel)
29	499424	Rod-Connecting			696564			
32	691664	Screw (Connecting Rod)			Valve-Throttle (Used With Plastic Throttle Shaft)			
32A	695759	Screw (Connecting Rod)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

# 12E600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333	802574	Armature–Magneto	601	95162	Clamp–Hose	886	696268	Gasket Kit–Cylinder Head/Plate
334	691061	Screw (Magneto Armature)	604	791054	Cover–Control	914	691108	Screw (Rocker Cover)
337	692051	Plug–Spark (Resistor)	608	497680	Starter–Rewind	921A	699633	Cover–Blower Housing
356	692390	Wire–Stop	613A	691140	Screw (Muffler)	922	692135	Spring–Brake
358	694090	Gasket Set–Engine	615	690340	Retainer–Governor Shaft	923	695891	Brake
363	19069	Puller–Flywheel	616	698801	Crank–Governor	957	692046	Cap–Fuel Tank (Plastic)
365	691136	Screw (Carburetor)	619	691108	Screw (Cylinder Head Plate)	966	692673	Base–Air Cleaner Primer
383	19374	Wrench–Spark Plug	621	692310	Switch–Stop	967	493537	Filter–Pre Cleaner
404	690272	Washer (Governor Crank)	633A◆	691321	Seal–Choke/Throttle Shaft (Throttle Shaft)	968	692298	Cover–Air Cleaner
443	692523	Screw (Air Cleaner Primer Base)	635	66538	Boot–Spark Plug	969	691138	Screw (Blower Housing Cover)
443A	691637	Screw (Air Cleaner Primer Base)	670	692294	Spacer–Fuel Tank	972	693377	Tank–Fuel (Plastic)
445	491588	Filter–Air Cleaner Cartridge	684	690345	Screw (Breather Passage Cover)	975	493640	Bowl–Float
455	695161	Cup–Flywheel	689	691855	Spring–Friction	976	694395	Primer–Carburetor
456	692299	Plate–Pawl Friction	718	690959	Pin–Locating	977	692704	Gasket Set–Carburetor
459	281505	Ratchet–Pawl	741	790345	Gear–Timing (Use Without Woodruff Key)	993	★△694088	Gasket–Cylinder Head Plate
467	790842	Knob–Air Cleaner	<b>Note</b> _____			1005	691346	Fan–Flywheel
505	691251	Nut (Governor Control Lever)	745	691648	Screw (Brake)	1019	695247	Kit–Label
523	499621	Dipstick	830	694544	Stud–Rocker Arm	1022	★△691890	Gasket–Rocker Cover
524	★692296	Seal–Dipstick Tube	832	691466	Guard–Muffler	1023	499624	Cover–Rocker
525	495265	Tube–Dipstick	836	691147	Screw (Muffler Guard)	1026	692045	Rod–Push
529A	691923	Grommet	836A	697551	Screw (Muffler Guard)	1029	691230	Arm–Rocker
562	691119	Bolt (Governor Control Lever)	842	★691031	Seal–O Ring (Dipstick Tube)	1034	691343	Guide–Push Rod
564	693808	Screw (Control Cover)	847	692047	Dipstick/Tube Assembly	1036	790635	Label–Emission
584	697734	Cover–Breather Passage	851	493880	Terminal–Spark Plug	1058	274979	Manual–Owner’s
585	★691879	Gasket–Breather Passage	868	★△692044	Seal–Valve	1059	692311	Kit–Screw/Washer
592	690800	Nut (Rewind Starter)	883	★△691893	Gasket–Exhaust	1095	694091	Gasket Set–Valve
597	691696	Screw (Pawl Friction Plate)				1210	498144	Pulley/Spring Assembly (Pulley)
						1211	498144	Pulley/Spring Assembly (Spring)
						1330	272147	Manual–Repair

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No.1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*